


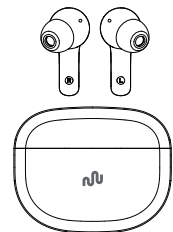


User Manual

Noise Cancelling True Wireless Earphones Flow




FCC ID:2BK3OATTG99B
IC:28743-G99B

Package Contents



2 x earphones



1 x charging case



1 x USB-C
to USB-C cable



1 x user manual

Warning

Special note:
Before using the earphones for the first time, place them in the charging case once, then remove them. The touch function only works after you complete this step.

Please read the warnings below carefully. Store this manual with the product packaging. Following the safety precaution manual will reduce the risk of fire and injury.

To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of battery pack in fire.
- Do not allow metal objects to touch the battery on the device.
- Do not expose battery pack to excessive heat.
- Do not use a high-current charger, as it will cause the charging cable to overheat.
- Use a 5 V DC adapter (not included).

Product Specifications

Product model:	G99B
Bluetooth chipset:	JL7016
Bluetooth version:	6.0
Wireless support protocol:	A2DP, AVRCP, HSP, HFP
Earbud battery capacity:	50 mAh
Charging case battery capacity:	400 mAh with protection board
Playing time:	4–5 hours (listening to high-quality or loud audio can drain the battery faster)
Effective distance:	10 m
Speaker size:	10 mm
Sensitivity (speaker driver unit):	105 ± 1.5 dB SPL at 1 kHz
Speaker impedance (speaker driver unit):	32 Ω ± 15% at 1 mW / 1 Hz
Mic sensitivity:	-38 ± 1 dB
Earbud charging time:	About 1 h
Charging case charging time:	About 2 h

Pairing

1. Auto pairing

Take the earbuds out of the charging case. The earbuds will automatically turn on, sync, and enter Pairing mode. Go to the Bluetooth settings on your smart device and scan for “Mellow Earphones”

Operation

1. Power on / off

The earbuds will turn on automatically when you take them out of the charging case. They will turn off automatically when you put them back into the charging case. You can also long press for 5 seconds to turn them off.

2. Play/Pause music

When listening to music, tap the left or right earbud once to play or pause audio.

3. ANC mode

When you take the earbuds out of the charging case, they will default to standard Bluetooth mode.

- Quickly tap the right earbud twice to enter Transparent mode.
- Quickly tap the right earbud twice to enter Noise Cancellation mode.
- Quickly tap the right earbud twice to enter standard Bluetooth mode.

Once adaptive noise cancellation is activated, the earbuds will scan the ear canal and determine your hearing profile, automatically adjusting noise-cancelling parameters to optimize your listening experience.

4. Previous/Next Track

When listening to music:

- Long press the left earbud for 2 seconds to jump to the previous track.
- Long press the right earbud for 2 seconds to jump to the next track.

5. Spatial Sound Effects

When listening to music:

- Quickly tap the left earbud twice to turn on spatial sound effects.
- Quickly tap the left earbud twice to turn off spatial sound effects.

6. Answer/Hang Up

When there is an incoming call:

- Tap the left or right earbud once to answer the call.
- Tap the left or right earbud again to end the call.

7. Reject a Call

When there is an incoming call:

Long press the left or right earbud for 3 seconds to reject the call.

8. Voice Assistant

Quickly tap the left or right earbud 3 times to activate the voice assistant.

Charging Function

Fully charge the case and earbuds before using them for the first time.

1. Charging the charging case

The case comes with a USB-C cable included in the packaging. To charge your case, connect one end of the cable to the USB-C charging port and the other end to a USB power source.

The white light will flash to indicate that charging has begun. Once the case is fully charged, the white light will remain steady.

2. Charging earphones

When the battery is low, the white light on each earbud will flash once every 5 seconds. At the same time, you will hear a warning tone. The earbuds will turn off when the battery is completely depleted.

a. Place the earbuds into the charging case to charge them.

b. The white light on the earbuds will turn on when charging begins and will turn off when charging is complete.

This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences, (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the device and receiver.
—Connect the device into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




Mode d'emploi

Écouteurs sans fil à réduction de bruit


Flow

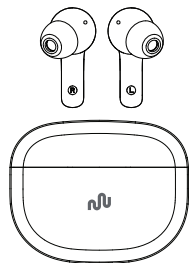

Contenu de l'emballage



2 écouteurs



1 étui de recharge



1 câble
USB-C vers USB-C



1 mode d'emploi

Avertissement

Remarque :

Avant d'utiliser les écouteurs pour la première fois, placez-les dans l'étui de recharge, puis retirez-les. La fonction tactile ne fonctionne qu'une fois cette étape terminée.

Veillez lire attentivement les avertissements ci-dessous. Conservez ce mode d'emploi avec l'emballage de votre produit. Le respect des consignes de sécurité réduit les risques d'incendie et de blessures.

Pour réduire le risque de blessure :

- Gardez les piles hors de portée des enfants.
- Ne chauffez pas, n'ouvrez pas et ne jetez pas la pile au feu.
- Ne laissez pas d'objets métalliques toucher la pile.
- N'exposez pas la pile à une chaleur excessive.
- N'utilisez pas de chargeur à tension élevée, car le câble de recharge pourrait surchauffer.
- Utilisez un adaptateur de 5 V CC (non inclus).

Caractéristiques du produit

Modèle :	G99B
Jeu de puces Bluetooth :	JL7016
Version Bluetooth :	6,0
Protocole sans fil :	A2DP, AVRCP, HSP, HFP
Capacité de la pile des écouteurs :	50 mAh
Capacité de la pile de l'étui de recharge :	400 mAh avec carte de protection
Autonomie :	4 à 5 heures (un son de haute qualité ou un volume élevé peut décharger la batterie plus rapidement)
Distance de fonctionnement :	10 m
Taille du haut-parleur :	10 mm
Sensibilité (haut-parleur) :	105 ± 1,5 dBnps à 1 kHz
Impédance du haut-parleur :	532 Ω ± 15 % à 1 MW/1 Hz
Sensibilité du micro :	-38 ± 1 dB
Temps de recharge des écouteurs :	Environ 1 h
Temps de recharge de l'étui :	Environ 2 h

Jumelage

1. Jumelage automatique

Sortez les écouteurs de l'étui de recharge. Ils s'allument, se synchronisent et entrent en mode de jumelage automatiquement.

Ouvrez les paramètres Bluetooth de votre appareil et recherchez « Mellow Earphones ».

Fonctionnement

1. Mise sous/hors tension

Les écouteurs s'allument automatiquement lorsque vous les sortez de l'étui de recharge. Ils s'éteignent automatiquement lorsque vous les remettez dans l'étui de recharge. Vous pouvez aussi appuyer longuement pendant 5 secondes pour les éteindre.

2. Lecture ou mise en pause

Appuyez une fois sur l'écouteur gauche ou droit pour faire jouer ou mettre en pause la musique.

3. Mode SAB

Lorsque vous retirez les écouteurs de l'étui de recharge, ils passent par défaut en mode Bluetooth standard.

- Appuyez deux fois rapidement sur l'écouteur droit pour passer en mode Transparent.
- Appuyez deux fois rapidement sur l'écouteur droit pour passer en mode Suppression des bruits.
- Appuyez deux fois rapidement sur l'écouteur droit pour passer en mode Bluetooth standard.

Une fois la fonction de suppression active du bruit activée, les écouteurs analysent le conduit auditif et déterminent votre profil d'audition pour ensuite ajuster automatiquement les paramètres de suppression du bruit pour optimiser votre expérience d'écoute.

4. Passer à la chanson précédente/suivante

Lorsque vous écoutez de la musique :

- Appuyez sur l'écouteur gauche et maintenez-le enfoncé pendant 2 secondes pour passer à la piste précédente.
- Appuyez sur l'écouteur droit et maintenez-le enfoncé pendant 2 secondes pour passer à la piste suivante.

5. Effets sonores spatiaux

Lorsque vous écoutez de la musique :

- Appuyez deux fois rapidement sur l'écouteur gauche pour activer les effets sonores spatiaux.
- Appuyez deux fois rapidement sur l'écouteur gauche pour désactiver les effets sonores spatiaux.

6. Répondre ou mettre fin à un appel

Lorsque vous recevez un appel entrant :

- Appuyez une fois sur l'écouteur gauche ou droit pour répondre à l'appel.
- Appuyez de nouveau sur l'écouteur gauche ou droit pour mettre fin à l'appel.

7. Refuser un appel

Lorsque vous recevez un appel entrant :

Appuyez sur l'écouteur gauche ou droit et maintenez-le enfoncé pendant 3 secondes pour le refuser.

8. Assistant vocal

Appuyez trois fois rapidement sur l'écouteur gauche ou droit pour activer l'assistant vocal.

Fonction de recharge

Rechargez complètement l'étui et les écouteurs avant de les utiliser pour la première fois.

1. Recharge de l'étui

L'étui est accompagné d'un câble USB-C inclus dans l'emballage. Pour charger votre étui, branchez une extrémité du câble au port de chargement USB-C et l'autre extrémité à une source d'alimentation USB. Le voyant blanc clignotera pour indiquer que la charge a commencé. Une fois que l'étui est complètement chargé, le voyant blanc reste allumé, sans clignoter.

2. Recharge des écouteurs

Lorsque la pile est faible, le voyant blanc de chaque écouteur se met à clignoter toutes les 5 secondes. Au même moment, un signal d'avertissement se fait entendre. Les écouteurs s'éteignent lorsque la pile est complètement épuisée.

- Placez les écouteurs dans l'étui de recharge pour les charger.
- Le voyant blanc sur les écouteurs s'allume lorsque la charge commence et s'éteint lorsque la charge est terminée.