KB885L USER'S MANUAL

Keyboard Specification:

Interface Type: USB
Size: 387*140*45mm
key number: 95
Operating Voltage: 5V±0.5V
Operating Current: ≤350mA
Key Life: 50,000,000 times
Cable Length: 1800mm
Compatible with Windows 2000/XP/Vista/Win7/Win8/Win10

Connecting With Your Computer

1.Turn on your computer.
2.Insert the USB interface of keyboard into a USB port of your computer (better choose the USB port locating on the back of the chassis instead of those on the front)
3.Wait for 1 minute, and your keyboard will automatically read by your computer with no extra driver needed.

(Note: This is a plug & play keyboard no need of any driver.)

Status Indicator："Caps Lock","Num lock","Scroll lock","Win lock"

LED Backlit Adjustment:

1.FN+Backspace: 21 Lighting modes switch
2.FN+DEL: Backlight color switching
3.FN+|\: LOGO backlit(8 Lighting modes switch)
5.FN+Shift: LOGO four brightness cycle
6.FN+ESC: Restore keyboard factory settings(Long press for 3 seconds)

FN+:↑:Backlit brightness increasing,there are 5 grades of backlight brightness.
FN+:↓:Backlit brightness decreasing,there are 5 grades of backlight brightness include 1grade to turn it off.
FN+→:Backlit movement speed increasing,there are 5 grades of backlight movement speeds.
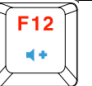FN+←:Backlit movement speed decreasing,there are 5 grades of backlight movement speeds.

Dual System Support

When the system toggle switch is dialed to MAC, it is Apple system, when dialed to WIN, it is Microsoft system.

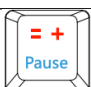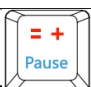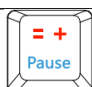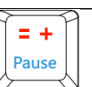| MAC OS				WIN OS			
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
F1 ☼	Screen brightness reduction	FN+ F1 ☼	F1	F1 ☼	F1	FN+ F1 ☼	Screen brightness reduction
F2 ☼	Screen brightness plus	FN+ F2 ☼	F2	F2 ☼	F2	FN+ F2 ☼	Screen brightness plus
F3	Open task control	FN+ F3	F3	F3	F3	FN+ F3	Task View
F4	Open the starter board	FN+ F4	F4	F4	F4	FN+ F4	My computer
F5	Short press to search,long press to SIRI	FN+ F5	F5	F5	F5	FN+ F5	Search
F6	Screenshot	FN+ F6	F6	F6	F6	FN+ F6	Screenshot
F7 ◄◄	Previous	FN+ F7 ◄◄	F7	F7 ◄◄	F7	FN+ F7 ◄◄	Previous
F8 ►II	Play/Pause	FN+ F8 ►II	F8	F8 ►II	F8	FN+ F8 ►II	Play/Pause
F9 ►►I	Next	FN+ F9 ►►I	F9	F9 ►►I	F9	FN+ F9 ►►I	Next
F10 ◄×	Mute	FN+ F10 ◄×	F10	F10 ◄×	F10	FN+ F10 ◄×	Mute
F11 ◄−	Volume -	FN+ F11 ◄−	F11	F11 ◄−	F11	FN+ F11 ◄−	Volume -

F12 ◄×	Volume +	FN+ F12 ◄×	F12	F12 ◄×	F12	FN+ F12 ◄×	Volume +
0) PrtSc	0)	FN+ 0) PrtSc	/	0) PrtSc	0)	FN+ 0) PrtSc	PrtSc
- _ ScrLk	-_	FN+ - _ ScrLk	/	- _ ScrLk	-_	FN+ - _ ScrLk	Scroll
= + Pause	=+	FN+ = + Pause	/	= + Pause	=+	FN+ = + Pause	Pause

Keyboard lock function

Fn + Win lock/unlock Win key

DIY parts:

Removable acrylic sheet LOGO

For more functions, please enter **"http://www.havit.hk/downloads/"** to download the driver.
Note:
1.Driver support music rhythm (keyboard and computer match, in the driver set to music rhythm mode, the keyboard lights will move with the rhythm of the music in the computer)
2.The driver software model is "KB885L"

Troubleshooting steps:

1.Insert the USB cable into another USB port of the computer.
2.If you were using a USB hub, try to connect the keyboard directly with your computer.
3.It would be better to plug it into USB ports locating on the back of the chassis instead of those on the front
4.Check USB hub for foreign objects or dust
5.Unplug and reinsert the USB connector
6.Restart the computer.