



Product Guide - NL/EN

HappyBag - The sensory swing for kids!

Congratulations

on your amazing purchase!

Welcome to the HappyKido Family!

We hope the HappyBag will provide your family hours of fun...

A little but about us!

Our mission is to empower every child on the planet to achieve more through self-development.

We want to give children both with and without special needs the power to move forward in life and learn that self-development is the key to doing so.

With our products, informative blogs, digital courses, and community, we help find more peace at home, more focus in the classroom and more growth, development and fun.



Our promise to you!

At HappyKido we stand behind our products. Because we find it important that as many people as possible experience the benefits of our products, you can try the HappyBag for 14 days. Without any small print!

As a young company we really listen to your feedback and are always working to improve everything we do. In a few days you will receive an email where we invite you to write a review about the whole experience with HappyKido. We would really appreciate it if you would take the time to do so :)

Contact with our Happiness Team

If you are not satisfied in any way, please do not hesitate to contact us so that our Happiness Team can help you here! We value our customers and will provide a quick, right solution.

Dutch Team	info@happykido.nl
German Team	info@happykido.de
English Team	info@happykido.co



Some of the many benefits...

Everyone can benefit from the vestibular input and deep pressure that the HappyBag sensory swing has to offer. Some of the many benefits:

- The swing creates an embracing feeling. As a result, a child experiences the swing as a safe and private place to unwind.
- Rocking is challenging for children and contributes to the development and stimulation of the vestibular sensory system.
- The swing's unique design offers numerous opportunities for a child to fully indulge, for example, a child can practise balance in a safe but challenging way.
- The HappyBag helps a child understand his or her body better by improving stimulus processing.

Washing instructions

To clean the HappyBag, we recommend using a damp cloth and mild soap. A fine wash program with cold water is also possible. Then allow to dry by hanging the HappyBag. Do not bleach.

Hoe te installeren? - How to install ?



Het is gemakkelijker dan het lijkt, dit beloven we!

Op de volgende pagina's zijn de geschreven instructies te vinden. We weten dat geschreven instructies niet voor iedereen is weggelegd, daarom hebben wij een super eenvoudige instructievideo voor je gemaakt die je kunt bekijken door de link via internet op te zoeken of de QR-code te scannen!

Naast de video raden we je voor alsnog aan om de volgende instructiepagina's aandachtig door te nemen en te lezen!

Bezoek de website of scan de QR-code
happykido.nl/happybag-video



Scan here!



It's easier than it looks, we promise!

On the following pages you will find the written instructions. We know that written instructions are not for everyone, so we have created a super simple instructional video for you that you can watch by looking up the link on the internet or scanning the QR code!

Besides the video, we still recommend that you read the instruction pages carefully!

Visit our website or scan the QR-code
happykido.co/happybag-video





Specificaties

Materiaal:	95% Fleece + 5% Spandex
Grootte:	90 cm x 150 cm
Draagkracht:	Tot maximaal 90 kilogram

- 1 - Daisy chain voor het gemak vooraf aan de schommel bevestigd met 6 lussen om de hoogte aan te passen.
- 1 - Vergrendelingskarabijnhaak van hoge kwaliteit
- 1 - U-hook inclusief 4 houtschroeven en 4 keilbouten



Specifications

Material:	95% Fleece + 5% Spandex
Size:	90 cm x 150 cm
Carrying capacity:	Up to 90 kilograms

- 1 - Daisy chain for convenience preattached to the swing with 6 loops to adjust the height.
- 1 - Locking carabiner from high quality
- 1 - U-hook including 4 wood screws and 4 concrete bolts

Veiligheidsinformatie & Waarschuwingen

HappyKido is niet verantwoordelijk voor enig letsel als gevolg van onjuiste opstelling of onjuist gebruik van de schommel.

Waarschuwing: Niet geschikt voor kinderen jonger dan 36 maanden. Wurgingsgevaar.



Waarschuwing: Uitsluitend voor huishoudelijk gebruik. Maximumgewicht van de gebruiker is 90 kilogram.



1. De maximale aanbevolen schommelhoogte is 60cm (gemeten vanaf de grond tot de onderkant van de schommel). De schommel is bedoeld voorzichtig te schommelen. Slingeren wordt alleen aanbevolen bij gebruik van onze 360° Twister (apart verkrijgbaar).
2. Wijzigingen die door de consument worden aangebracht moeten volgens de instructies van de fabrikant worden uitgevoerd.
3. Voor zowel binnen als buiten. De schommel mag niet boven beton, asfalt of een ander hard oppervlak worden geïnstalleerd.
4. Bewaar de montage- en installatie-instructies voor verdere raadpleging.
5. Hang de schommel ten minste 2 meter van een structuur of obstakels zoals een hek, meubel, waslijn of elektriciteitskabels.
6. Controleer of alle bouten en moeren goed vastzitten en ze indien nodig aandraaien voor gebruik.
7. Controleer alle onderdelen en bevestigingsmiddelen op scherpe randen en op tekenen van verslechtering. Laat indien nodig vervangen.

Safety Information / Warnings

HappyKido is not responsible for any injury resulting from improper setup or use of the swing.

Warning: Not suitable for children under 36 months. Strangulation hazard.



Warning: For domestic use only. Maximum user weight is 90 kilograms.



1. Maximum recommended swing height is 60cm (measured from the ground to the bottom of the swing). The swing is intended to hang still and swing gently. Swaying is recommended only when using our 360° Twister (sold separately).
2. Modifications made by the consumer must be made according to the manufacturer's instructions.
3. For both indoor and outdoor use. The swing should not be installed over concrete, asphalt or any other hard surface.
4. Keep the assembly and installation instructions for further reference.
5. Hang the swing at least 2 feet from any structure or obstacles such as a fence, furniture, clothesline or power lines.
6. Check that all nuts and bolts are tight and tighten as necessary before use.
7. Check all parts and fasteners for sharp edges and signs of deterioration. Have replaced if necessary.



1. Installeren van de u-hook aan het plafond

1a. Zoek een draagbalk in het plafond. Als je een leidingzoeker hebt, kun je die gebruiken om leidingen te spotten en de plek voor de draagbalk goed en nauwkeurig te bepalen.

Als je geen leidingzoeker hebt, volgen hier enkele tips om de juiste plek te vinden:

In de meeste moderne huizen liggen de balken 40 of 60 cm uit elkaar. Meet vanaf de rand van waar de muur het plafond raakt, 40 cm uit en klop op het plafond. De ruimte tussen de balken zal een hol, resonerend geluid maken en de balken een korter, steviger geluid.

Als het kloppen kort en stevig klinkt, heb je een draagbalk gevonden. Als het hol klinkt, meet dan 60 cm vanaf de rand van je plafond en bepaal of daar een balk zit. Als dat niet het geval is, kan je de andere richting van het plafond proberen omdat de balken maar in één richting lopen.

Als je eenmaal een draagbalk hebt gevonden, je weet hoe ver ze uit elkaar liggen en hoe ze zijn geplaatst kan je snel de volgende vinden door een meetlint te gebruiken en 40 of 60 cm te meten. Zoek en kies een draagbalk die het meest geschikt is voor de gewenste ruimte.

Toppie! Ga nu verder op de volgende pagina...



1. Installing the u-hook on the ceiling

1a. Locate a joist in the ceiling. If you have a stud finder, you can use it to spot pipes and properly and accurately determine the location for the joist.

If you don't have a stud finder, here are some tips for finding the right spot:

In most modern homes, the beams are 40 or 60 cm apart. From the edge of where the wall meets the ceiling, measure out 40 cm and tap on the ceiling. The space between the beams will make a hollow, resonant sound and the beams a shorter, firmer sound.

If the knocking sounds short and firm, you have found a joist. If it sounds hollow, measure 60 cm from the edge of your ceiling and determine if there is a joist there. If not, you can try the other direction of the ceiling because the beams only run in one direction.

Once you have found a joist, you know how far apart they are and how they are placed you can quickly find the next one by using a tape measure and measuring 40 or 60 cm. Find and choose a joist that is most appropriate for the space you want.

Great work! Now move on to the next page...



Let op: Sommige balken zijn niet breed genoeg om alle vier de bouten te laten passen. Als dit het geval is, lijn dan ten minste twee van de bouten langs de draagbalk, deze twee bouten zullen voldoende zijn om de HappyBag te ondersteunen.

1. Installeer de u-hook aan het plafond (vervolg)

1b. Gebruik de u-hook om te meten waar de gaten geboord moeten worden. Markeer de gaten met een stift.

1c. Gebruik een elektrische boor om voorboorgaten in de plafondbalk te boren waar de potlood markeringen staan. Kies een boor die iets kleiner is dan de bout. Boor in de markering die je hebt gemaakt. Dit kan iets dieper dan de lengte van de schroefdraad van de bout. Het voorgeboorde gat zorgt ervoor dat je de bout gemakkelijk met de hand in het plafond kunt draaien zonder dat hij vastloopt of breekt. Als het gat te breed is, heeft de schroefdraad van de bout niets om zich aan vast te houden. Als het te ondiep is, zal het moeilijk zijn om de bout er helemaal in te draaien.

1d. Maak de gaten schoon met een borstel, stofzuiger of door erin te blazen. Bescherm je ogen tijdens het verwijderen van het stof.

1e. Druk de u-hook tegen het plafond, uitgelijnd met de gaten. Schroef dan de bouten door de u-hook in het geboorde gat.

1f. Gebruik een moersleutel om de bouten vast te draaien.



Note: Some beams are not wide enough for all four bolts to fit. If this is the case, align at least two of the bolts along the joist, these two bolts will be sufficient to support the HappyBag.

1. Install the u-hook on the ceiling (continued)

1b. Use the u-hook to measure where to drill the holes. Mark the holes with a marker.

1c. Use an electric drill to drill pilot holes in the ceiling joist where the pencil marks are. Choose a drill bit that is slightly smaller than the bolt. Drill into the mark you have made. This can be slightly deeper than the length of the bolt's threads. The pre-drilled hole will allow you to easily screw the bolt into the ceiling by hand without it jamming or breaking. If the hole is too wide, the bolt's thread will have nothing to hold on to. If it is too shallow, it will be difficult to screw the bolt all the way in.

1d. Clean the holes with a brush, vacuum cleaner or by blowing into them. Protect your eyes while removing the dust.

1e. Press the u-hook against the ceiling, aligned with the holes. Then screw the bolts through the u-hook into the drilled hole.

1f. Use a wrench to tighten the bolts.



Let op: Deze stap is bij aanschaf van de HappyBag al gedaan en dus niet meer nodig! In dit geval kan je verder naar stap 3. Echter is dit handig om te weten wanneer je de schommel bijvoorbeeld mee neemt en opnieuw moet installeren.

2. Bevestig de Daisy Chain aan de HappyBag

2a. Leg de schommel plat op de grond. Verzamel en bundel de lange zijde van de stof van de schommel met de genaaide naad en het HappyKido label. Zoek het midden. Belangrijk: zorg er absoluut voor dat het genaaide naaduiteinde, met het HappyKido label het bovenste gedeelte word van de schommel.

2b. Haal nu een kant van de daisy chain langs de onderkant door om vervolgens de andere kant van de daisy chain door de eerste lus te trekken.

2c. Haal nu ongeveer 20 cm stof terug. Dit zal zorgen voor een extra ondersteuning.

2d. Trek hard aan de daisy chain zodat er een strakke knoop ontstaat. Dit zorgt voor een veilige bevestiging en een extra ondersteuning tijdens het hangen.

Let op: Zie de geïllustreerde instructies op de volgende pagina.



Note: This step has already been done when you purchased the HappyBag and is therefore no longer necessary! In this case you can proceed to step 3. However, this is useful to know when you, for example, take the swing with you and need to reinstall it.

2. Attach the Daisy Chain to the HappyBag

2a. Lay the swing flat on the ground. Gather and bunch the long side of the swing's fabric with the sewn seam and the HappyKido label. Locate the center. Important: Make absolutely sure that the sewn seam end, with the HappyKido label becomes the top part of the swing.

2b. Now pull one end of the daisy chain through along the bottom to then pull the other end of the daisy chain through the first loop.


2c. Now pull back about 20 cm of fabric. This will provide additional support.

2d. Pull hard on the daisy chain to create a tight knot. This provides a secure attachment and added support while hanging.

Note: See the illustrated instructions on the next page.

Geïllustreerde instructies voor stap 2 - Illustrated instructions for step 2


2a.

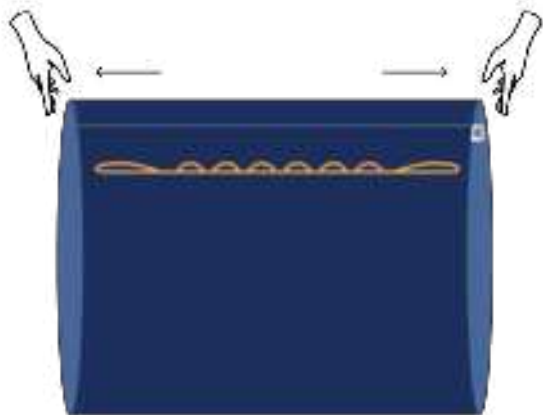


2b.



2c.

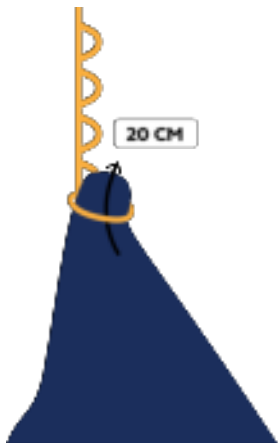

2d.

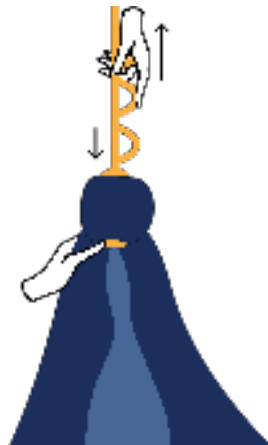




3. Bevestig de HappyBag aan de u-hook

3a. Klik de karabijnhaak aan de bovenste cirkel van de daisy chain.

3b. Verbind de karabijnhaak met de u-hook. Belangrijk: vergrendel de karabijnhaak door het kleine mechanisme tegen de klok in te draaien. Wanneer de karabijnhaak volledig vergrendeld is, zal de opening gesloten blijven wanneer er druk wordt uitgeoefend.

3c. Afhankelijk van de hoogte van het plafond en de ruimte kan de schommel hoogte aangepast worden. Wij raden een maximale schommelhoogte van 60 cm aan (gemeten vanaf de grond tot de onderkant van de schommel).

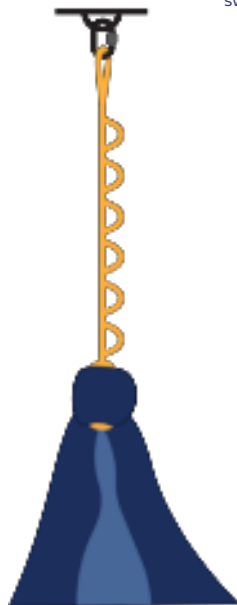

3. Attach the HappyBag to the u-hook

3a. Snap the carabiner to the top loop of the daisy chain.

3b. Connect the carabiner to the u-hook. Important: Lock the carabiner by turning the small mechanism counterclockwise. When the carabiner is fully locked, the opening will remain closed when pressure is applied.

3c. Depending on the height of the ceiling and the space, the swing height can be adjusted. We recommend a maximum swing height of 60 cm (measured from the ground to the bottom of the swing).



4. Hoogte aanpassen van de HappyBag

Er zijn verschillende hanghoogten mogelijk met behulp van de karabijnhaak en de daisy chain. Hieronder leggen wij uit hoe je dit het beste kunt doen!

4a. Maak de karabijnhaak los van de u-hook en klik hem door een van de zes lussen van de daisy chain.

4b. Klik vervolgens dezelfde karabijnhaak door de u-hook. Dit zorgt ervoor dat de schommel hoger komt te hangen. Ook hier is het weer belangrijk: vergrendel de karabijnhaak door het kleine mechanisme tegen de klok in te draaien. Wanneer de karabijnhaak volledig vergrendeld is, zal de opening gesloten blijven wanneer er druk wordt uitgeoefend.



4. Adjusting the height of the HappyBag

Different hanging heights are possible using the carabiner and daisy chain. Below we explain the best way to do this!

4a. Detach the carabiner from the u-hook and snap it through one of the six other loops of the daisy chain.

4b. Then snap the same carabiner through the u-hook. This will cause the swing to hang higher. Again, the key here is to lock the carabiner by turning the small mechanism counterclockwise. When the carabiner is fully locked, the opening will remain closed when pressure is applied.





5. Gebruik maken van de Schommel Twister (apart verkrijgbaar)

Het is mogelijk om apart de Schommel Twister te bestellen via onze website. Deze Twister zorgt ervoor dat de HappyBag moeiteloos 360° kan draaien zonder dat de Daisy Chain in de knoop zal komen.

5a. Steek de Daisy Chain door de onderzijde van de Schommel Twister.

5b. Haal vervolgens één van de Daisy Chain lussen (afhankelijk van de hanghoogte, zie stap 4) langs de bovenzijde. Trek de Daisy Chain nu stevig aan zodat er een knoop ontstaat.

5c. Klik tot slot de karabijnhaak aan de Schommel Twister en verbind het geheel aan de u-hook. Let op hier weer op: vergrendel de karabijnhaak door het kleine mechanisme tegen de klok in te draaien. Wanneer de karabijnhaak volledig vergrendeld is, zal de opening gesloten blijven wanneer er druk wordt uitgeoefend.



5. Using the Swing Twister (sold separately)

It is possible to order the Swing Twister separately via our website. This Twister ensures that the HappyBag can effortlessly rotate 360° without the Daisy Chain getting tangled.

5a. Insert the Daisy Chain through the bottom of the Swing Twister.

5b. Then pull one of the Daisy Chain loops (depending on the hanging height, see step 4) along the top. Now pull the Daisy Chain firmly so that a knot is formed.

5c. Finally, snap the carabiner to the Swing Twister and connect it all to the u-hook. Note here once again: lock the carabiner by turning the small mechanism counterclockwise. When the carabiner is fully locked, the opening will remain closed when pressure is applied.





6. Test het gewicht van de HappyBag

Neem alle informatie in deze productgids serieus voordat de HappyKido sensorische schommel gebruikt gaat worden. Test voordat de schommel gebruikt gaat worden het gewichtslimiet handmatig om zeker te zijn dat de schommel veilig en correct is geïnstalleerd. Gebruik de schommel pas nadat de montage en ophanging op veiligheid is getest.

Let op: Neem contact op met een professionele bouwver, aannemer of ervaren installateur om te kijken wat de beste opties zijn voor het een correcte installatie van de HappyKido in jouw situatie en om veilig gebruik van de schommel te garanderen.

De veiligheid is altijd de primaire zorg en mag nooit lichtvaardig worden genomen. **HappyKido is niet verantwoordelijk voor enig letsel door onjuiste opstelling en gebruik van de schommel.**

Bezoek de website of scan de QR-code

happykido.nl/happybag-video



6. Test the weight of the HappyBag

Take all the information in this product guide seriously before using the HappyKido sensory swing. Before using the swing, test the weight limit manually to ensure that the swing is installed safely and correctly. Do not use the swing until the assembly and suspension have been tested for safety.

Note: Contact a professional builder, contractor, or experienced installer to see what the best options are for a properly installation of the HappyKido in your situation and ensuring safe use of the swing.

Safety is always the primary concern and should never be taken lightly. **HappyKido is not responsible for any injury caused by improper setup and use of the swing.**

Visit our website or scan the QR-code

happykido.co/happybag-video



Scan here!

HappyBag activities

Once you have followed the installation instructions on the previous page and are absolutely sure that the HappyBag is installed correctly and safely, we share our favorite swing activities for you and your child to start using the HappyBag today!

The Superman!

The Superman pose is an excellent way to train upper body strength. Lie flat on your stomach in the swing and start rocking. While swinging, try stretching your arms and legs like Superman. This way, you will train the muscles in your upper body and get extra strong!

Hanging upside down

Hanging upside down is also one of the best activities you can do to train your vestibular system. First, try hanging upside down in the swing and try to get used to your body moving and looking around you. The next step is rocking. This activity is a step up from simply rocking upright. Rocking upside down is super fun and gives a huge thrill and also so is a great way to train your vestibular system.

Just chilling out

Chilling yourself out in the swing is also one of our favourite activities. The sensory swing exerts a constant pressure on your body, this feels like an endless hug that allows you to unwind. For example, read a book in the swing or take a nap.

Want more tips & tricks? Visit our blogs to find out more!



We think it's **super fun** to see how customers
enjoy our products. If you share a post on
Instagram, please **tag us!**

@happykidoofficial



@happykidoofficial



facebook.com/happykido



help@happykido.co