


HUSTILKA VELKÁ FORCE AIR TANK BOOS FLOOR PUMP FORCE AIR TANK BOOSTER 18 BAR, BLACK

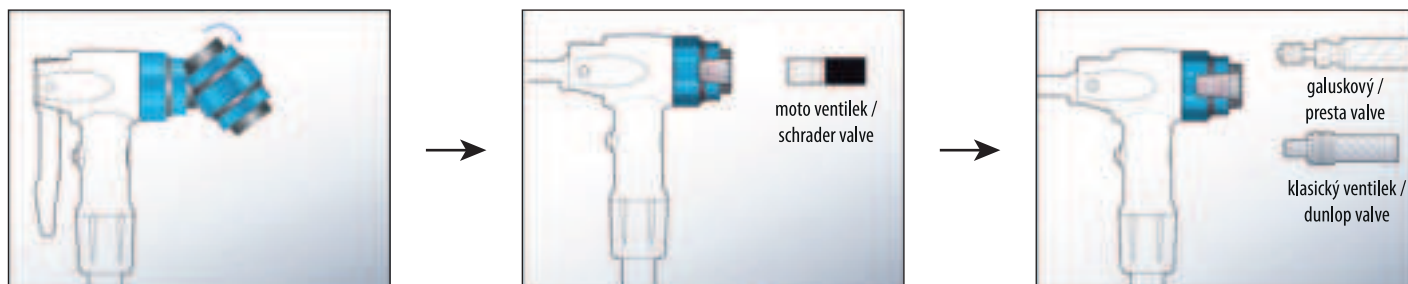


CZ

HUSTILKA VELKÁ FORCE AIR TANK BOOSTER 18 BAR - ČERNÁ

Al hliníkové tělo hustilky s kovovou spodní částí
S oboustrannou hlavici na všechny typy ventilek
(AV - moto, FV - galuskový, DV - klasický)
S manometrem do 18 BAR/260 PSI
Se zásobníkem pro rychlé huštění TUBELESS plášťů
Možnost volby huštění zásobníku/pláště pomocí uzávěru
Výška: 69 cm
Určeno pro PROFI použití


NÁVOD K POUŽITÍ

Sundejte z ventilků čepičku
Zvolte správný typ ventilků a nasadte hlavici hustilky na ventilek
Uzamkněte hlavici pomocí aretační páčky
Pomocí malé páčky zvolte typ huštění (For Tire / For Tank)
Nahustěte na požadovaný tlak

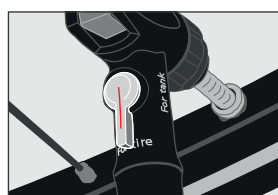


PŘÍMÉ HUŠTĚNÍ

- (1) Otočte páčku do pozice "For Tire"
- (2) Nahustěte duši do žádoucí úrovně tlaku

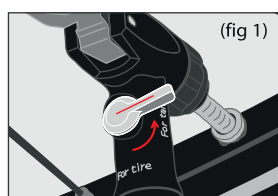

HUŠTĚNÍ BEZDUŠOVÝCH PLÁŠŤŮ

- (1) Otočte páčku do pozice "For Tank" - viz (fig 1)
- (2) Nahustěte zásobník na doporučený tlak 15-18 BAR/220-250 PSI
- (3) Otočením páčky do pozice "For Tire" (fig 2) uvolníte vzduch ze zásobníku
- (4) Nahustěte plášť na žádoucí úroveň tlaku

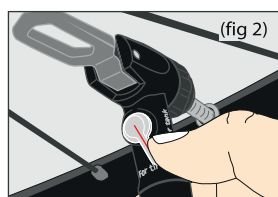

EN

FLOOR PUMP FORCE AIR TANK BOOSTER 18 BAR - BLACK

Alloy pump with steel base
REVERSIBLE head designed for all valve types
(AV - schrader, FV - presta, DV - dunlop)
AIR TANK specially designed for TUBELESS tire inflation
Managed by using switchable lever
With gauge up to 18 BAR/260 PSI
Height: 69 cm
Designed for PROFI use

INSTRUCTIONS

Remove the cap from valve
Fix a pump head on valve using a correct side
Lock the head by locking lever
Choose type of inflation by little lever (For Tire / For Tank)
Inflate the tire to required pressure

FOR TIRE

- (1) Switch little lever to "For Tire" position
- (2) Inflate the tyre to desired pressure

FOR TUBELESS

- (1) Switch little lever to "For Tank" position - (fig 1)
- (2) Inflate to TANK on pump and recommended inflating to 15-18 BAR/220-250 PSI
- (3) Switch little lever back to "For Tire" (fig 2) then release all air in one-shot to the tubeless tire
- (4) Inflate to desired pressure

