


MEREDO USER MANUAL

D40AH-7M

2.1 Channel Soundbar System

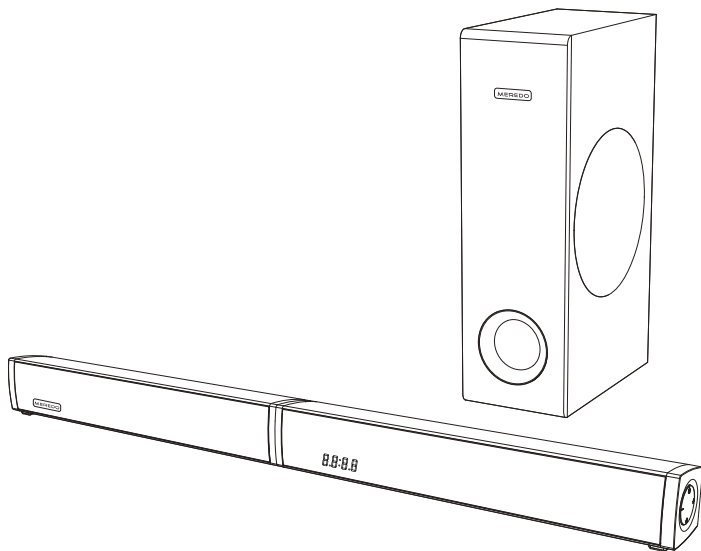

Feel Free to Contact Us:

support@meredo.net

IMPORTANT

Please read this manual carefully before operating the soundbar, keep this user manual for further reference.

CONTENT

EN :

SAFETY INSTRUCTIONS	1.1
WHAT'S IN THE BOX	1.1
DIAGRAM (BUTTONS, PORTS & INDICATOR)	1.1
DESCRIPTION OF INDICATOR LIGHTS	1.2
USING REMOTE CONTROL	1.2 – 1.3
PLACE YOUR SOUNDBAR	1.3 – 1.4
USING YOUR SOUNDBAR	1.5 – 1.7
TROUBLESHOOTING	1.7
SPECIFICATION	1.8

FR :

CONSIGNES DE SÉCURITÉ	2.1
QU'Y A-T-IL DANS LA BOÎTE	2.1
SCHÉMA (BOUTONS, PORTS ET INDICATEUR)	2.1
DESCRIPTION DES TÉMOINS LUMINEUX	2.2
UTILISATION DE LA TÉLÉCOMMANDE	2.2 – 2.3
PLACEZ VOTRE BARRE DE SON	2.3 – 2.4
UTILISATION DE VOTRE BARRE DE SON	2.5 – 2.7
LE DIAGNOSTIC DES ANOMALIES	2.7
SPÉCIFICATION	2.8


SAFETY INSTRUCTIONS

1. Please avoid dropping.
2. Please do not disassemble.
3. Please avoid extreme temperatures.
4. Please don't use the device outdoors during thunderstorms.
5. Please use original or certified cables.
6. Please don't use any corrosive cleaner/oil to clean.
7. The device should not be exposed to dripping or splashing water.

Thank you for purchasing MEREDO Soundbar. This manual aims to offer you details on setting up this soundbar so that you can enjoy the ultimate sound experience.

We provide 1-year warranty from the original date of purchase. If there is any fault please contact us via support@meredo.net and do not repair it by nonprofessionals.

WHAT'S IN THE BOX



MEREDO
2.1 Soundbar




Remote Control




User Manual




Setup Guide




Power Adapter




AUX Audio Cable




Optical Cable




3.5mm
Audio Cable



Soundbar Extension
Connection Cables



HDMI Cable




Mounting Screws




Soundbar Stands

DIAGRAM (BUTTONS, PORTS & INDICATOR)

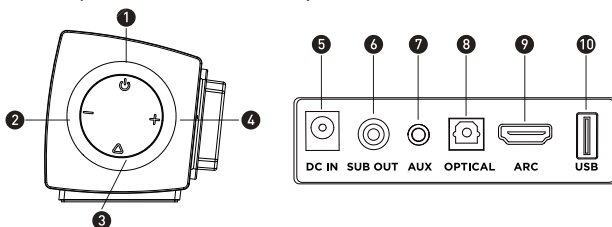

- 1 Short press to turn on, long press to turn off; short press to switch modes when it is turned on.
- 2 Short press , volume - 1; long press to decrease continuously.
- 3 Short press to play or pause the music in Bluetooth or USB mode;
Long press for 5s to reserve the soundbar to factory settings (Volume: 15 levels; BASS+/-: 0; TREB+/-: 0; Bluetooth needs to be reconnected; Resume 5 seconds automatic screen break; The working mode is changed to ARC mode).
- 4 Short press , volume + 1; long press to increase continuously.
- 5 DC 18V IN Jack.
- 6 SUB OUT: Subwoofer Output Jack.
- 7 AUX IN: Connect to the compatible devices via the AUX Audio Cable or 3.5mm Audio Cable(provided).
- 8 OPTICAL IN: Connect to the compatible devices via an optical cable(provided).
- 9 ARC IN: Connect to the compatible devices via a HDMI cable(provided).
- 10 USB IN: Connect to the flash drive for playing MP3/WAV/WMA/APE/FLAC files(64GB max, U stisk file system format is recommended to use FAT32).


DESCRIPTION OF INDICATOR LIGHTS

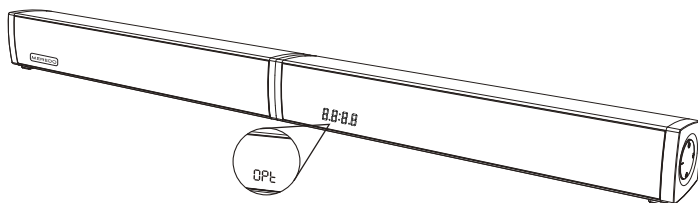


ARC	HDMI(ARC) Mode	bt	Bluetooth Mode
OPT	Optical Mode	AUX	AUX Mode
USB	USB Mode	EQ 1	Music Mode
EQ 2	Movie Mode	EQ 3	News Mode
b 0	Treble Value 0	b 0	Bass Value 0

USING REMOTE CONTROL


A. Battery installation (Battery AAAx2 are not included)

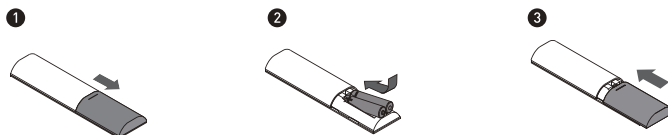

B. The working range of the remote is +/-30° in both vertical and horizontal directions

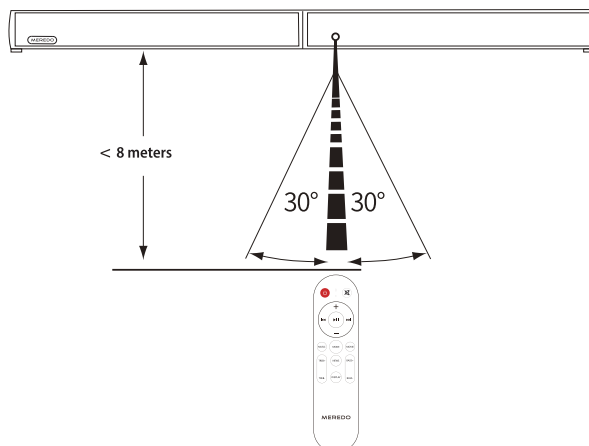

C. Diagram of remote control

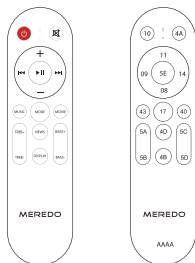

Button	Function	Button	Function	Button	Function
	Power on or off		Mute/recover the volume		Volume turning up
	Volume turning down		Play/Pause ❶		Previous Track
	Next Track		Shifting into Music mode		Switch between OPT/HDMI(ARC)/BT/USB/AUX
	Shifting into Movie mode		The treble will increase 1dB by pressing		The treble will decrease 1dB by pressing
	Shifting into News mode		Turn on/off LED display ❷		The bass will increase 1dB by pressing
	The bass will decrease 1dB by pressing				

❶ Short press this button to play or pause the music in Bluetooth or USB mode; long press for 5s to reserve the soundbar to factory settings (Volume: 15 levels; BASS+/-: 0; TREB+/-: 0; Bluetooth needs to be reconnected; Resume 5 seconds automatic screen break; The working mode will be changed to ARC mode).

❷ The LED display of the soundbar will automatically turn itself off after 5S by default.


Turn On Display: The LED display will always be on;

Turn Off Display: The LED display will automatically turn off after 5S.

PLACE YOUR SOUNDBAR


A. Install the Host

1. Table Placement

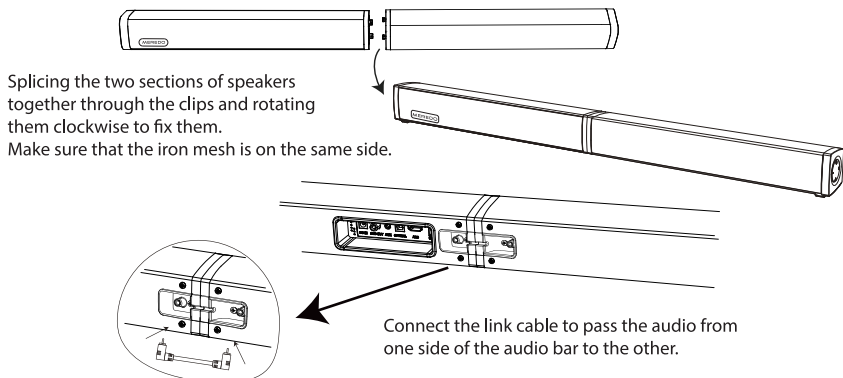


To ensure sound effects, place the soundbar on a solid surface.

2. Wall Mounted

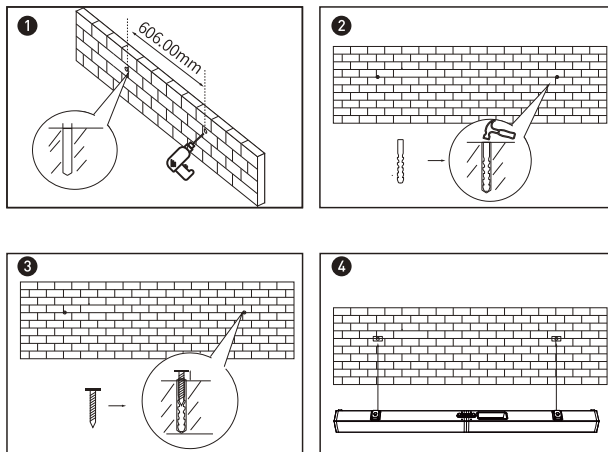


3. Split Audio Tower

Docking the corresponding base, divide the left and right channel speakers into two audio towers. Connect the link cable to pass the audio from one side of the audio bar to the other.

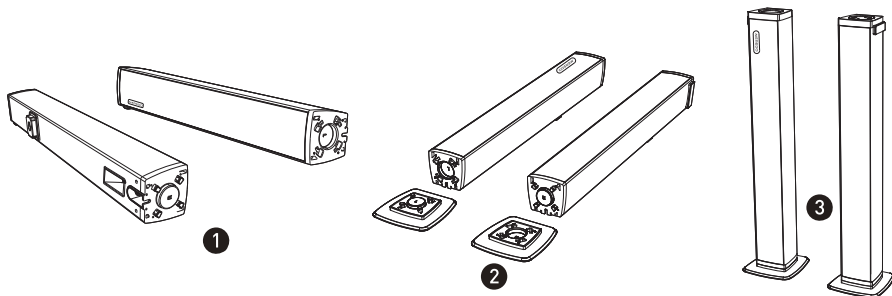


B. Install the subwoofer

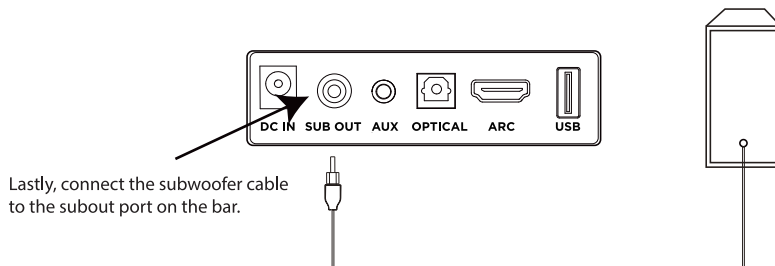


USING YOUR SOUNDBAR


Step 1: Short press power button to power on;

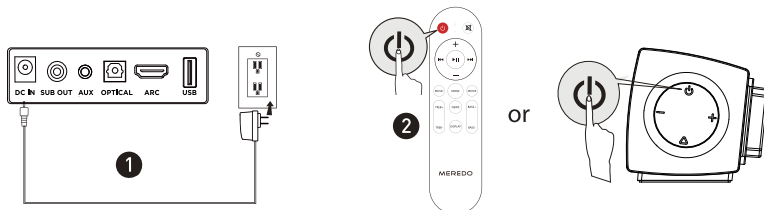

Step 2: Short press mode button to choose the input mode (Note: Please insert the USB stick before entering the USB mode);



Step 3: Connect the soundbar;

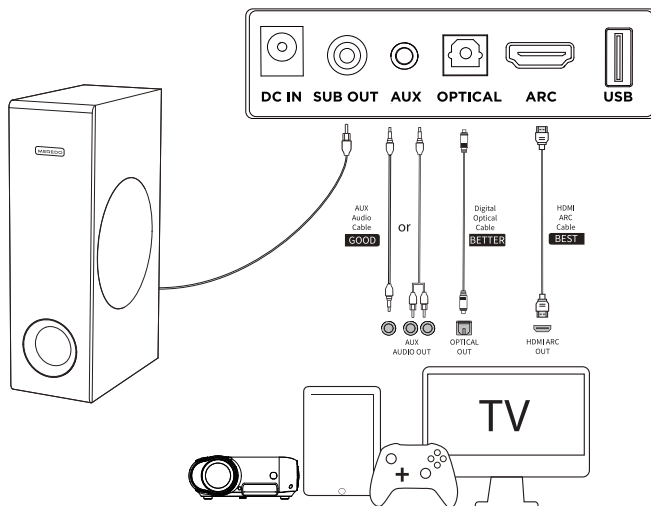

A. Connect to TV

HDMI(ARC) Mode:

1. Prior to usage, please make sure your TV has HDMI(ARC) OUT port.
2. Due to the different driving capabilities of multiple TV HDMI interfaces, it is recommended to use the HDMI ARC cable, which is achieve 30AWG or above, 2 meters or less, and supports 4K/60Hz. If the HDMI cable is too long or too thin, may cause no sound output due to signal attenuation.
3. Setting your TV(may vary due to different brand, for more details please read our attached setup guide):
 - (1) Turn off the TV Speaker.
 - (2) Change the TV audio output setting to PCM.
 - (3) You'll also probably have to enable a feature called HDMI-CEC on your TV(This is called something different on different TV - Samsung calls it AnyNet+, while Sony calls it Bravia Sync and LG calls it SimpLink).

Optical/AUX Mode:

1. Using the provided optical cable connect to the TV.
2. Setting your TV(may vary due to different brand, more details please read our attached setup guide):
 - (1) Turn off the TV Speaker.
 - (2) Change the TV audio output setting to PCM.

If you are using Smart TV apps:

Apps such as Netflix are setted default audio output is Dolby and DTS for the movie, but this sound bar did no support Dolby and DTS, so you will hear crack sound or no sound, please kindly disable the Dolby and DTS on Netflix. Here is the method in below:

Step 1: Launch the Netflix app.

Step 2: Select a TV show or movie.

Step 3: While your TV show or movie is playing, press the Down arrow on your remote.

Step 4: Select Audio & Subtitles.

Step 5: Select your preferred audio or subtitle options(disable the Dolby and DTS).

Step 6: Save the settings.

Step 7: Play the video test the sound.


For more details about the setting, here is a link from Netflix, please kindly check:

<https://help.netflix.com/en/node/372>

Also, for the Amazon prime video app and Hulu, also please kindly disable the Dolby and DTS, the method is similar to the Netflix, please kindly try.


B. Connect to Bluetooth Device

1. Let the soundbar enters the pairing mode, and the LED display starts to flash.
2. Pair to the soundbar and your Bluetooth device(Bluetooth Pairing Name: MEREDO D40), when pairing is successful, the voice prompt "Connected".

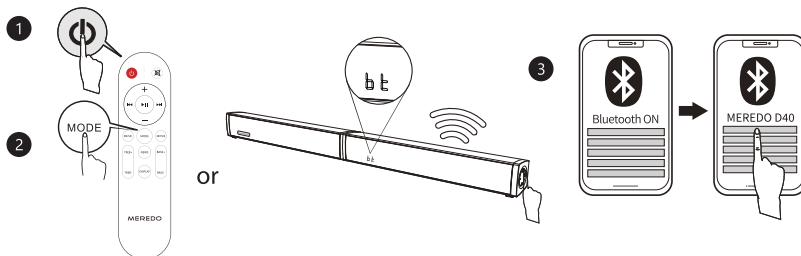

C. Connect to USB

1. Insert the USB stick into the soundbar (Note: support maximal 64GB, supported music format are mp3, wma, wav, ape, flac, USB stick file system format is recommended to use FAT32).
2. Press MODE button and switch to the USB Mode.



D. Connect to Other Devices

According to the output audio interface supported by the connected device, select the corresponding mode and connect.

TROUBLESHOOTING

Q: No sound comes out after connect to TV using ARC/Optical (Common).

- A:**
1. Please make sure your TV support ARC output. Then go to Setting in your TV setting:
May vary due to different brand;
 2. Please turn off TV speaker:
Setting>Sound>Select Speaker to: external speaker (optical mode)/ turn off TV Speaker;
 3. Please set TV audio output to PCM:
Setting>Sound(audio)>advanced Audio>digital audio output>PCM Setting>Sound(audio)> audio output format> PCM/Dolby off;

Note: The setting of Sony TV is a little different from other brand, please read the attached setup guide carefully. Some TVs HDMI ports do not have automatic access or adjustment functions. If there is no sound when connected to HDMI, but the volume adjustment can be synchronized, it is recommended to restore the TV to factory settings or disconnect all HDMI devices on the TV, and then connect the soundbar after the TV is turned off and restarted.

Q: Why watching Netflix, Disney+, Amazon prime has no sound or noise, some shows have sound on Smart TV?

- A:** Because this soundbar does not support Dolby Sound and DTS, please kindly disable the Dolby and DTS on Netflix, and you need to find the Audio setting option and select Stereo instead of Dolby.

Q: What should I do if have noise from the speaker?

- A:** It may be caused by electromagnetic interference (like internet modem) in the environment where the soundbar is used and you need to gradually eliminate the source of interference before using it.

Q: What should I do if I follow the setup steps above but the problem is still not resolved?

- A:** Please direct contact our after sales support email: support@meredo.net, we provide effective warranty and will solve your problem.

Q: Can I use a universal remote?

- A:** Yes, please make sure to follow your universal remote step to set up. We have provided our remote code on previous pages (AAAA). Only support universal remote with learning function with 4-digit coding. We HIGHLY recommend you use our included remote for the best compatibility.

Q: Remote control is not working.

- A:**
- 1: Double check if the batteries are correctly installed in the battery slot.
 - 2: Replace two brand new AAA batteries.
 - 3: Point the remote to the center of the sound bar (IR is built in the front of the box). If the issue still exists after you did the above steps, please contact us: support@meredo.net, we will provide you with free replacement.

SPECIFICATIONS

Model	D40AH-7M
Power Supply	DC18V
Peak Power	180W
Sound Channel	2.1CH
Driver	45100 Speaker x2 + 5.25" Subwoofer x1
Volume Level	1-32
Connection Jacks	Optical x1, HDMI(ARC) x1, USB x1, AUX x1
BT Version	5.0
Distortion	<0.5%
Product Weight	5.0kg
Product Dimension	Soundbar: 940(L) x 62(D) x 60(H)mm Subwoofer: 131(L) x 221(D) x 390(H)mm

CONSIGNES DE SÉCURITÉ

1. Veuillez éviter de le faire tomber par terre.
2. Veuillez ne pas le démonter.
3. Veuillez éviter les températures extrêmes.
4. Veuillez ne pas utiliser l'appareil à l'extérieur pendant les orages.
5. Veuillez utiliser des câbles d'origine ou certifiés.
6. Veuillez ne pas utiliser de nettoyant/huile corrosif pour nettoyer.
7. L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures d'eau.

Merci d'avoir acheté la barre de son MEREDO. Ce manuel vise à vous offrir des détails sur la configuration de cette barre de son afin que vous puissiez profiter de l'expérience sonore ultime.

Nous vous offrons une garantie d'un an à compter de la date d'achat d'origine. En cas de défaut de fabrication ou de dysfonctionnement, veuillez contacter notre service après-vente via support@meredo.net et ne le réparez pas par des non-professionnels.

QU'Y A-T-IL DANS LA BOÎTE




Barre De Son
MEREDO 2.1



Télécommande



Manuel De
l'Utilisateur



Guide
D'installation




Adaptateur
Secteur




Câble
Audio Auxiliaire




Cable
Optique



Câble
Audio 3,5 mm



Câbles De Connexion
D'extension De
Barre De Son



Câble HDMI




Vis De Montage




Supports De
Barre De Son

SCHÉMA (BOUTONS, PORTS ET INDICATEUR)

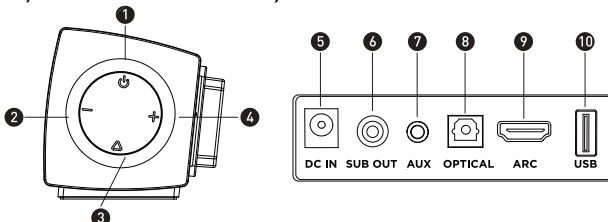


- 1 Appuyez brièvement sur pour allumer, appuyez longuement sur pour éteindre; appuyez brièvement sur pour changer de mode lorsqu'il est allumé.
- 2 Appuyez brièvement sur , volume - 1; appuyez longuement sur pour diminuer en continu.
- 3 Appuyez brièvement sur pour lire ou mettre en pause la musique en mode Bluetooth ou USB; Appuyez longuement sur pendant 5 secondes pour réserver la barre de son aux réglages d'usine (Volume: 15 niveaux; BASS+/- 0; TREB+/- 0; Bluetooth doit être reconnecté; Reprendre 5 secondes de pause automatique de l'écran; Le mode de fonctionnement est changé en ARC mode).
- 4 Appuyez brièvement sur , volume + 1; appuyez longuement sur pour augmenter en continu.
- 5 Prise d'entrée CC 18 V.
- 6 SUB OUT : Prise de sortie du caisson de basses.
- 7 AUX IN : connectez-vous aux appareils compatibles via le câble audio AUX ou le câble audio 3,5 mm (fourni).
- 8 OPTICAL IN : Connectez-vous aux appareils compatibles via un câble optique (fourni).
- 9 ARC IN : Connectez-vous aux appareils compatibles via un câble HDMI (fourni).
- 10 USB IN : connectez-vous au lecteur flash pour lire des fichiers MP3/WAV/WMA/APE/FLAC (64 GB max, il est recommandé d'utiliser le format de système de fichiers U stisk pour utiliser FAT32).

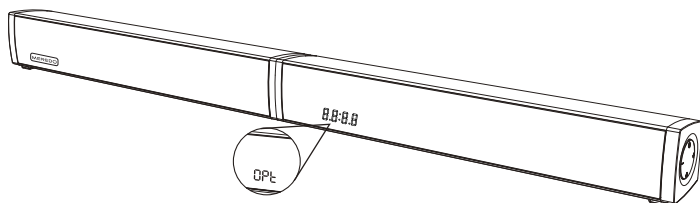


ARC	Mode HDMI (ARC)	bt	Mode Bluetooth
OPT	Mode optique	AUX	Mode auxiliaire
USB	Mode USB	EQ 1	Mode Musique
EQ 2	Mode film	EQ 3	Mode Actualités
b 0	Valeur Des Aigus 0	b 0	Valeur Des Basses 0

UTILISATION DE LA TÉLÉCOMMANDE


A. Installation des piles (deux piles LR03 non fournis)

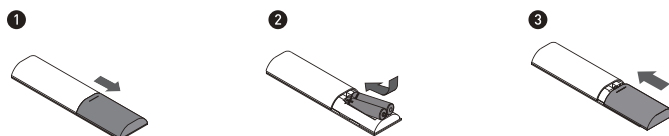

B. La plage de travail de la télécommande est de $\pm 30^\circ$ dans les deux sens, vertical et horizontal

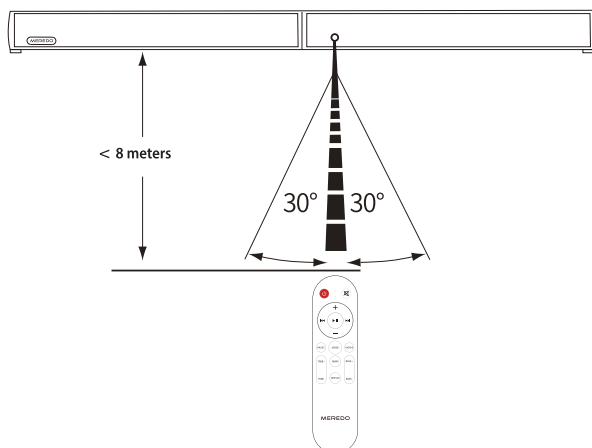

C. Schéma de la télécommande

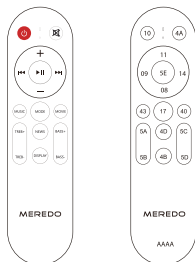


Button	Fonction	Button	Fonction	Button	Fonction
	Allumer ou éteindre		Muet /récupérer le son		Augmenter Le volume
	Baisser le volume		Lancer/Pause ❶		Piste précédente
	Piste suivante		Passer en mode Musique		Basculer entre OPT/ HDMI(ARC)/BT/USB/AUX
	Passer en mode Film		Les aigus augmenteront de 1 dB en appuyant sur		Les aigus diminueront de 1 dB en appuyant sur
	Passer en mode Actualités		Activer/désactiver la LED ❷		Les basses augmenteront de 1 dB en appuyant sur
	Les basses diminueront de 1 dB en appuyant sur				

- Appuyez sur ce bouton pour jouer ou mettre en pause la musique en mode Bluetooth ou USB; Appuyez sur Long pour 5s pour réserver la barre de son vers les paramètres d'usine (volume: 15 niveaux; basse +/- 0; Treb +/- 0; Bluetooth doit être reconnecté; reprendre 5 secondes de rupture d'écran automatique; le mode de travail sera changé en arc mode).
- L'affichage LED de la barre de son s'éteindra automatiquement après 5S par défaut.
Allumer l'affichage : l'affichage LED sera toujours allumé;
Désactiver l'affichage : l'affichage LED s'éteint automatiquement après 5S.

PLACEZ VOTRE BARRE DE SON


A. Installer l'hôte

1. Placement des tables

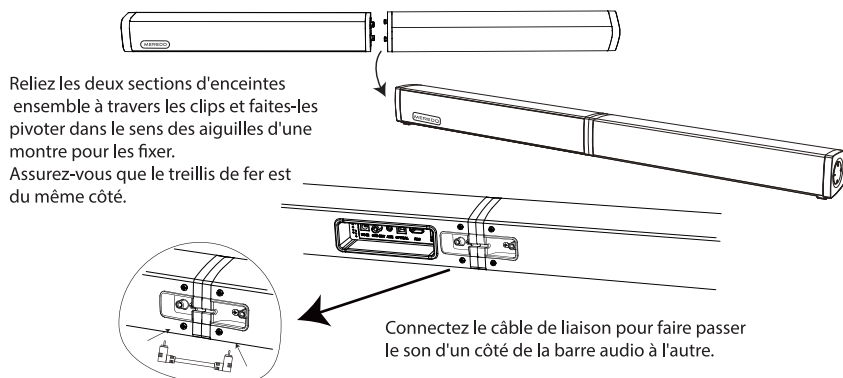


Pour garantir des effets sonores, placez la barre de son sur une surface solide.

2. Fixé au mur

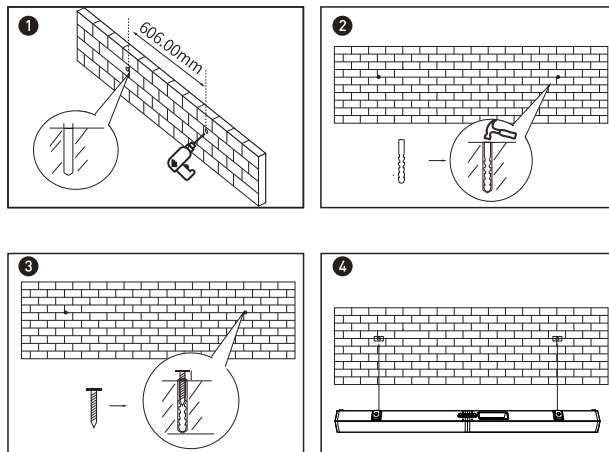


3. Tour audio divisée

En connectant la base correspondante, divisez les haut-parleurs des canaux gauche et droit en deux tours audio. Connectez le câble de liaison pour faire passer le son d'un côté de la barre audio à l'autre.

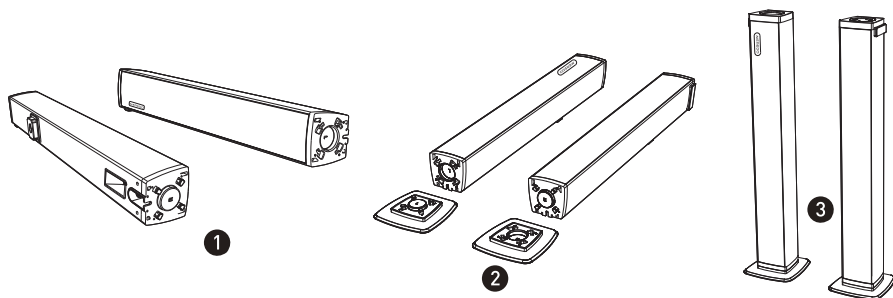


B. Installez le caisson de basses

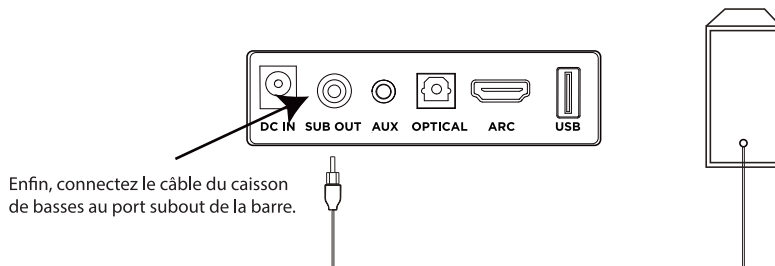


UTILISATION DE VOTRE BARRE DE SON


Étape 1: Appuyez brièvement sur le bouton d'alimentation pour allumer ;

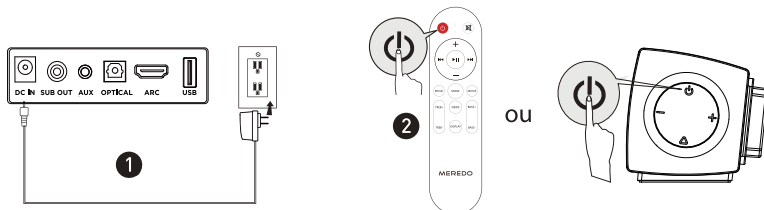

Étape 2: Appuyez brièvement sur le bouton de mode pour choisir le mode d'entrée
(Remarque : veuillez insérer la clé USB avant d'entrer en mode USB) ;



Étape 3: Connectez la barre de son ;

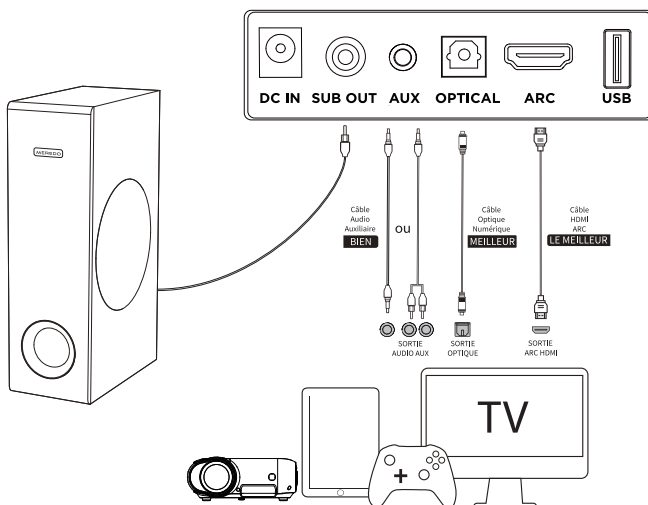

A. Se connecter au téléviseur

Mode HDMI (ARC):

1. Avant d'utiliser, assurez-vous que votre téléviseur dispose d'un port HDMI (ARC) OUT.
2. En raison des différentes capacités de conduite de plusieurs interfaces HDMI TV, il est recommandé d'utiliser le câble d'arc HDMI, qui est atteint 30AWG ou plus, 2 mètres ou moins, et prend en charge 4k / 60Hz. Si le câble HDMI est trop long ou trop mince, ne peut provoquer aucune sortie sonore en raison de l'atténuation du signal.
3. Réglage de votre téléviseur(peut varier en fonction de la marque, pour plus de détails, veuillez lire notre guide de configuration ci-jointe):
 - (1) Éteignez le haut-parleur du téléviseur.
 - (2) Modifiez le paramètre de sortie audio du téléviseur sur PCM.
 - (3) Vous devrez également activer une fonctionnalité appelée HDMI-CEC sur votre téléviseur (cela se nomme différemment sur chaque téléviseur EX: Samsung l'appelle AnyNet +, tandis que Sony l'appelle Bravia Sync et LG l'appelle SimpLink).

Mode Optique/AUX:

1. À l'aide du câble optique fourni, connectez-vous au téléviseur.
2. Réglage de votre téléviseur(peut varier en fonction de la marque, pour plus de détails, veuillez lire notre guide de configuration ci-jointe):
 - (1) Éteignez le haut-parleur du téléviseur.
 - (2) Modifiez le paramètre de sortie audio du téléviseur sur PCM.

Si vous utilisez des applications Smart TV:

Des applications comme Netflix ont défini la sortie audio par défaut sur Dolby et DTS pour le film, mais cette barre de son ne prend pas en charge Dolby et DTS, vous entendrez donc un son de crackement ou aucun son, veuillez désactiver Dolby et DTS sur Netflix. voici la méthode ci-dessous:

Étape 1: Lancez Netflix.

Étape 2: Sélectionnez une émission de série (ou chaîne de TV) ou un film.

Étape 3: Pendant la lecture de votre émission de série (ou chaîne de TV) ou de votre film, appuyez sur la flèche vers le bas de votre télécommande.

Étape 4: Sélectionnez Audio et sous-titres.

Étape 5: Sélectionnez vos options audio ou de sous-titres préférées(désactiver le Dolby et le DTS).

Étape 6: Enregistrez les paramètres.

Étape 7: Lisez la vidéo et testez le son.


Et plus de détails sur le réglage, voici un lien de Netflix, veuillez vérifier:

<https://help.netflix.com/en/node/372>

De plus, pour l'application vidéo Amazon Prime et Hulu, veuillez également désactiver Dolby et DTS, la méthode est similaire à Netflix, veuillez essayer.


B. Se connecter au périphérique Bluetooth

1. Laissez la barre de son entrer en mode d'appairage et l'affichage LED va commencer à clignoter.
2. Associez la barre de son et votre appareil Bluetooth (Nom d'appariement Bluetooth: MEREDO D40), lorsque l'appairage est réussi, l'invite vocale "Connected".

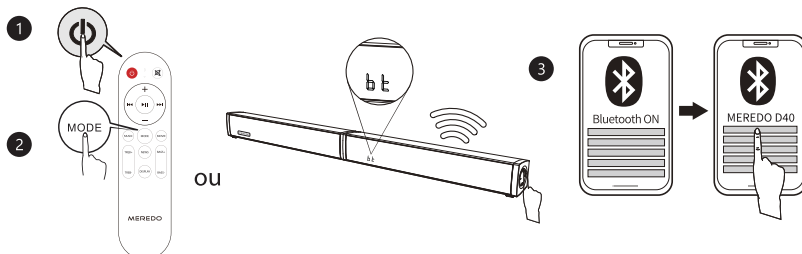

C. Connectez-vous à USB

1. Insérez la clé USB dans la barre de son (Remarque: maximum de 64GB, les formats de musique que mp3, wma, ape, flac, Le format de système de fichiers de disque USB est recommandé d'utiliser FAT32).
2. Appuyez sur le bouton de MODE et passez en mode USB.



D. Se connecter à d'autres appareils

Selon l'interface audio de sortie prise en charge par l'appareil connecté, sélectionnez le mode correspondant et connectez-vous.

LE DIAGNOSTIC DES ANOMALIES

Q: Aucun son ne sort après la connexion à la télévision en utilisant ARC/ Optical (basic).

- R:** 1. Assurez-vous que votre téléviseur supporte la sortie ARC. Ensuite, allez dans la rubrique Paramètres de votre téléviseur: peut varier en fonction de la marque.
2. Désactivez le haut-parleur du téléviseur:
Réglage>Son>Sélectionner le haut-parleur pour : haut-parleur externe (mode optique)/désactiver le haut-parleur du téléviseur;
3. Veuillez régler la sortie audio du téléviseur sur PCM:
Réglage>Son(audio)>Audio avancé>Sortie audio numérique>PCM Réglage>Son(audio)>Format de sortie audio> PCM/Dolby off;

Remarque : le réglage de la télévision Sony est un peu différent de celui des autres marques, veuillez lire attentivement le guide de configuration ci-jointe.

Certains ports HDMI du téléviseur n'ont pas de fonctions d'accès ou de réglage automatiques. S'il n'y a pas de son lorsqu'il est connecté à HDMI, mais que le réglage du volume peut être synchronisé, il est recommandé de restaurer les paramètres d'usine du téléviseur ou de déconnecter tous les appareils HDMI du téléviseur, puis connectez la barre de son une fois le téléviseur éteint et redémarré.

Q: Pourquoi lorsque je regarde Netflix, Disney+, Amazon prime il n'y a pas de son ou de bruit, alors que certaines émissions ont du son sur Smart TV?

R: Parce que cette barre de son ne supporte pas le son Dolby et DTS, veuillez désactiver le Dolby et le DTS sur Netflix, et vous devez trouver l'option de réglage audio et sélectionner Stéréo au lieu de Dolby.

Q: Que dois-je faire si le haut-parleur émet du bruit?

R: Cela peut être causé par des interférences électromagnétiques (comme un modem Internet) dans l'environnement où la barre de son est utilisée, et vous devez éliminer progressivement la source d'interférence avant de l'utiliser.

Q: Que puis-je faire si je suis les étapes de configuration ci-dessus mais que le problème n'est toujours pas résolu?

R: Veuillez contacter directement notre service après-vente par e-mail: support@meredo.net, nous vous fournissons une garantie efficace et nous résoudrons votre problème.

Q: Puis-je utiliser une télécommande universelle?

R: Oui, assurez-vous de suivre les étapes de configuration de votre télécommande universelle. Nous avons fourni le code de notre télécommande dans les pages précédentes (AAAA). Ne supporte que les télécommandes universelles avec fonction d'apprentissage et codage à 4 chiffres. Nous vous recommandons vivement d'utiliser la télécommande fournie pour une meilleure compatibilité.

Q: La télécommande ne fonctionne pas.

R: 1 : Vérifiez que les piles soient correctement installées dans leur emplacement.

2 : Remplacez les piles existantes par deux piles LR03 neuves.

3 : Dirigez la télécommande vers le centre de la barre de son (l'IR est intégré à l'avant du boîtier).


Si le problème persiste après avoir effectué les étapes ci-dessus, veuillez nous contacter: support@meredo.net, nous vous fournirons un remplacement gratuit.

SPÉCIFICATION

Modèle	D40AH-7M
Alimentation	DC18V
Puissance De Crête	180W
Canal Sonore	2.1CH
Pilote	45100 Haut-parleur x2 + Caisson De Basses 5.25" x1
Niveau De Volume	1-32
Prises De Connexion	Optique x1, HDMI(ARC) x1, USB x1, AUX x1
BT Version	5.0
Distorsion	<0.5%
Poids Du Produit	5.0kg
Dimensions Du Produit	Barre de son : 940(L) x 62(P) x 60(H)mm Caisson de basses : 131(L) x 221(D) x 390(H)mm

Based on legislative decree no. 49 dated 14th March, 2014

"Execution of Directive 2012/19/UE about electrical and electronic equipment waste (RAEE)"



This marking indicates that this product should not be disposed with other household wastes, but it should be disposed separately from other wastes. Therefore, the user should bring the product with all essential components to recycling centers for electrical and electronic wastes, or return to retailer before to buy a new product as equivalent type, in the ratio of 1 to 1, or 1 to 0 for products that have larger side lesse of 25cm. Correct disposal of your old appliance will help to prevent potential damage to the environment and to human health and support materials recycling. The unlawful disposal of the product should involve for users' administrative sanctions based on Legislative Decree no. 49 dated 14th March, 2014.

Correct disposal of the batteries in this product
(Applicable in countries with separate collection systems)



This marking on battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

CAUTION:



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Environmental Considerations

Operating Temperature: 5°C -35°C (41°F-95°F)

Operating Humidity: 20%-75%, non-condensing

Storage Temperature: -15°C -45°C (5°F-113°F)

Storage Humidity: 10%-90%, non-condensing

BT max transmitter power: 100mW at 2.4GHz-2.4835GHz

Wi-Fi max transmitter power: 100mW at 2.4GHz-2.4835GHz, 200mW at 5.15GHz-5.25GHz, 100mW 5.25GHz-5.35GHz & 5.47GHz-5.725GHz

The 5GHz WLAN(Wi-Fi) function of this equipment may only be operated indoors.

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	UK

MEREDO

www.meredo.net
support@meredo.net