


GET TO KNOW YOUR CURLING IRON

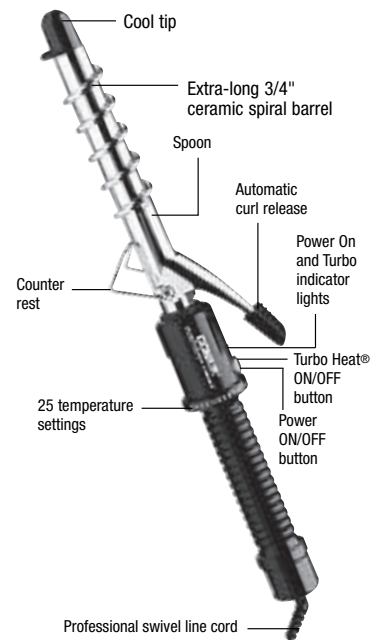

WARNING: The iron's barrel will get very hot within a few seconds and should not be placed in contact with skin after the curling iron is turned on.

USER MAINTENANCE

Your curling iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

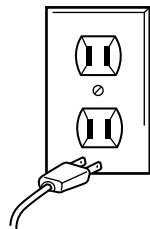

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back that is nearest you, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



Please register this product at:
www.conair.com/registration

Service Centers
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2013 CONAIR CORPORATION
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

13PA144049

IB-12363

HOT STICKS® INSTANT HEAT



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Model CD88TCSR

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

- To reduce the risk of death by electric shock:
1. **Always unplug appliance immediately after using.**
 2. Do not use while bathing or in a shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into, water or other liquids.
 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap cord around appliance, even during storage.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate appliance.
11. This curling iron is hot when in use. Do not let heated surfaces touch eyes or skin.
12. **Do not place the heated curling iron directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.**
13. Do not touch hot surface of the appliance; use handles or knobs.
14. Before plugging in, read the information about dual voltage contained in the Operating Instructions of this manual.
15. Do not operate with a voltage converter.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This curling appliance is intended for household use. Use on Alternating Current (50/60 hertz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE
This curling iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

GETTING STARTED
The iron's 25 temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

SUPER STYLING GUIDE
Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

CURLING BASICS
1. Plug the curling iron cord into a standard household electrical outlet (120/240V). Press the ON/OFF button and the red indicator light will blink. When ready to use, the red indicator light will remain on. Press the Turbo button and the green indicator light will come on. Press ON/OFF button again and the red and green lights will go off.
Never leave your curling iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically in approximately 60 minutes.

2. To create spiral curls and ringlets, work with 1 inch sections of hair, one at a time. Hold iron horizontally, press the automatic curl release, and place the ends of your hair under the shortened iron spoon. Release the automatic curl release to clamp hair in place. Wrap hair in between spiral grooves on barrel, twisting upward toward the hair roots. Leave hair wrapped for approximately 5–7 seconds. Unwind hair from barrel; open the automatic curl release to unclamp hair. Repeat procedure, styling small sections at a time, layering the spiral curls as you go, until all hair is curled.

3. To achieve faster styling, these units feature a unique optional Turbo Heat® burst. Press the Turbo button to deliver up to 20°C/36°F more heat in the highest setting for maximum styling performance.

STYLING WITH THE EASY-GLIDE CERAMIC-COATED BARREL
The barrel of your new curling iron has an Easy-Glide ceramic-coated surface, the newest technology.

This means you'll find that hair glides easily over the surface of the barrel as you're curling it and the ceramic-coated surface also helps smooth down flyaways and frizzies. As you wind each strand around the barrel, it evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair also slips right off the barrel after it's curled. The new ceramic technology is a pleasure to work with and makes styling your hair easier and the results more professional. Plus, it's simpler to clean off styling product residue, etc., after each use.

USING INSTANT HEAT, THE 25 VARIABLE TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features Conair's Instant Heat technology, which includes 25 variable temperature settings for every type of hair, from the finest to the curliest and most resistant. Select the temperature range that's suitable for your hair type to help you create the look you want.

Temperature Setting Guide	
Temp. Control	Hair Type
Low 1–8	Delicate, thin, easy-to-curl hair
Medium 9–14	Average to thick or treated hair
Med-High 15–20	Thick or wavy hair
High 21–25	Hard-to-curl hair
Turbo Heat®	Up to 20°C/36°F burst of heat for difficult styling spots

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the iron at constant temperatures.

There is a constant flow of power to ensure that heat is continuously delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

FAMILIARÍCESE CON SU TENAZA



ADVERTENCIA: El tubo se pondrá muy caliente en segundos. Evite el contacto con la piel después de encender el aparato.

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que enfíe y limpie la superficie exterior con un paño. En caso de mal funcionamiento, desconecte el aparato, permita que enfíe y regréselo a un centro de servicio autorizado. No trate de repararlo.

PRECAUCIÓN


NUNCA jale, tuerza ni retuerza el cable eléctrico. Nunca lo enrolle alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Después de usar el aparato, desconéctelo, permita que enfíe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tirenee ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

**ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO,
ESTÁ EQUIVOCADO**

MANTÉNGALO ALEJADO DEL AGUA

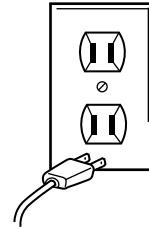

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

**SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS**

GARANTÍA LIMITADA DE DOS AÑOS
Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$7.50 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que

las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.



Para registrar su producto, visítenos en:
www.conair.com/registration

Centros de servicio
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2013 CONAIR CORPORATION
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

13PA144049

IB-12363

HOT STICKS® CALENTAMIENTO INSTANTÁNEO



Instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

Modelo CD88TCSR

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.

Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje el aparato desatendido mientras esté conectado.**
2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. **No utilice este aparato si el cable o la clavija estuviesen dañados, si no funcionase debidamente, si estuviese dañado, o después de que se hubiese caído al piso o al agua. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.**
5. Mantenga el cable alejado de las superficies calientes. **No jale, retuerza ni enrolle el cable alrededor del aparato, incluso para almacenarlo.**
6. Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
7. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.
8. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.
9. No utilice el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

10. No utilice una extensión con este aparato.
11. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.
12. **No coloque la tenaza sobre ninguna superficie mientras esté caliente o conectada. Manténgala alejada del cable eléctrico. Utilice el soporte incluido.**
13. No toque las partes calientes de este aparato. Utilice el mango y los botones o perillas.
14. Lea la información relativa al doble voltaje que se encuentra a continuación antes de enchufar el aparato en la toma de corriente.
15. No utilice este aparato con un convertidor de voltaje.

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (50/60 Hz). El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invíértela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

DOBLE VOLTAJE
Este aparato es bitensión. Se adaptará automáticamente al voltaje adecuado. Puede que sea necesario emplear un adaptador de enchufe (no se incluye) para utilizarlo fuera de los Estados Unidos.

FUNCIONAMIENTO BÁSICO
Su aparato le permite escoger entre 25 niveles de temperatura, según su tipo de cabello. Si su cabello es fino, le recomendamos que utilice un nivel de temperatura bajo. Si su cabello es espeso, grueso, ondulado o resistente, le recomendamos que utilice el nivel de temperatura alto. ¡Personalice la temperatura, según su tipo de cabello!

GUÍA PARA UN SÚPER PEINADO
La mejor apariencia empieza por un corte de cabello bien mantenido. Siempre cuide su cabello con champúes, acondicionadores y productos de peinado de calidad superior.

FUNDAMENTOS DEL RIZADO
1. Enchufe el aparato en una toma de corriente de 120/240V.

Oprima el botón ON/OFF. El indicador luminoso rojo empezará a parpadear. Cuando el aparato alcance el nivel de temperatura deseado, la luz roja dejará de parpadear y permanecerá encendida. Oprima el botón turbo; la luz verde se encenderá. Para apagar el aparato, oprima el botón ON/OFF. Las luces se apagarán.

Nunca deje el aparato desatendido después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

2. Para crear tirabuzones y rizos apretados, trabaje con secciones de cabello de 1 pulgada (2.5 cm). Sostenga el aparato en forma horizontal, oprima la manija para abrir la tenaza y coloque las puntas debajo de la pequeña pinza. Afloje la manija para sujetar el cabello. Enrolle el cabello alrededor del tubo, hacia la raíz. Espere durante 5–7 segundos. Desenrolle lentamente el cabello y oprima la manija para aflojar el cabello. Repita estos pasos con cada sección de cabello, hasta que todo el cabello esté rizado.

3. Para poner el cabello en forma más rápidamente, utilice la función opcional Turbo Heat®. Simplemente oprima el botón turbo durante el uso para aumentar la temperatura

de las placas de 20 °C/36 °F y conseguir resultados óptimos.

REVESTIMIENTO DE CERÁMICA
El tubo de su nueva tenaza está cubierto de un revestimiento cerámico increíblemente suave, el resultado de una tecnología de punta.

Notará que el cabello se desliza fácilmente sobre el tubo. Además, la cerámica ayuda a suavizar el frizz y los pelos sueltos. Distribuye el calor uniformemente, para resultados de salón sedosos y brillantes. Además, no retiene el cabello después de rizarlo. Es un placer trabajar con esta nueva tecnología, pues facilita el peinado y logra resultados óptimos. También hace que sea muy fácil limpiar el aparato después de cada uso.

CALENTAMIENTO INSTANTÁNEO, 25 AJUSTES DE TEMPERATURA & SISTEMA DE CONSERVACIÓN DEL CALOR

Este aparato cuenta con 25 opciones de temperatura, para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más resistente. Simplemente elija la temperatura adecuada para su tipo de cabello y cree el peinado de su elección.

Guía de temperatura	
Ajuste de temperatura	Tipo de cabello
Bajo 1–8	Cabello delicado, fino o dócil
Medio 9–14	Cabello normal a grueso, o tratado
Medio-Alto 15–20	Cabello grueso u ondulado
Alto 21–25	Cabello resistente
Turbo Heat®	Aumenta la temperatura de 20 °C (36 °F) para lograr resultados más rápidos en áreas resistentes

Y esto no es todo... Su aparato también disfruta de los mismos estándares de calidad e ingeniería que los aparatos profesionales y cuenta con un sistema de recuperación del calor.

A diferencia de otras herramientas cuya temperatura baja durante el uso, este sistema mantiene la temperatura constante, sin pérdida de calor. Cada sección de cabello está peinada usando la misma temperatura, lo que permite obtener resultados uniformes y peinados perfectos.