GAMESIR

GAMESIR GALILEO +

Wireless Mobile Gaming Controller

[ENGLISH]

https://www.gamesir.hk/pages/manuals-gamesir-g8+

PACKAGING CONTENTS

Main Controller ×1 Type-C Charging Cable ×1 Reinforcement Thumbstick ×1 Round Thumbstick ×1
Instruction Manual ×1 Quick Start Guide ×1 Thank You & After-sale Service Card ×1
Standard Thumbstick ×1 Warranty Card ×1

COMPATIBILITY

- Android 10.0 or later versions
- iOS 14 or later versions
- iPad OS 14 or later versions

DEVICE LAYOUT

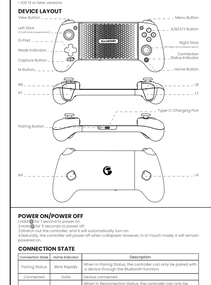

POWER ON/POWER OFF

1.Press the ⏻ button to power on.
2.Press and hold the ⏻ button for 3 seconds to power off.
3.Short-out the controller, and it will automatically turn on.
4.Connect to the controller will power off when collapsed; however, in G-Touch mode, it will remain activated.

CONNECTION STATE

Connection State	Home Indicator	Description
Pairing Status	Blue Rapidly	When in Pairing Status, the controller can only be paired with a device through the Bluetooth function.
Connected Status	Solid	Connected successfully.
Reconnection Status	Slow Slowly	When in Reconnection Status, the controller can only be reconnected to the last connected device by short-press. Press and hold the Pairing Button for 3 seconds, it can be forcibly change to Pairing Status.

MODE DESCRIPTION

Mode	Home Indicator	Connection Method	Compatible Platform
Android	Green	ⓐ+Ⓗ+Ⓧ	Android 9.0 or newer
iOS	Blue	ⓐ+Ⓗ+Ⓨ	Android/iOS
Switch	Red	ⓐ+Ⓗ+Ⓑ	Switch/iOS
G-Touch	Cyan	ⓐ+Ⓗ+Ⓐ	Gamesir App

*Starting status, press corresponding key combination to switch to the desired mode.
*After successfully connecting to iOS in D4 mode, the default color changes to light green.

CONNECT TO THE ANDROID DEVICE THROUGH BLUETOOTH

1.With the controller power off, hold Ⓗ+Ⓧ to power on, and the Home Indicator will blink yellow rapidly.
2.Turn the Bluetooth list on your phone, select "GameSir-G8+", and click it to connect.
3.Add pattern Home Indicator lightens a constant green, connection succeeds.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

CONNECT TO THE IOS DEVICE THROUGH BLUETOOTH

1.With the controller power off, hold Ⓗ+Ⓨ to power on, and the Home Indicator will blink blue rapidly.
2.Open the Bluetooth list on your phone, select "DUOSHOCK 4 Wireless Controller", and click it to connect.
3.Add pattern Home Indicator lightens a constant blue, connection succeeds. (Or click "Settings" - "General" - "Software Update" - "Bluetooth Accessories" under this mode in "Configuration" on your phone. When holding down the M button, it will be blue.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

PLAY MAPPING GAMES ON ANDROID VIA BLUETOOTH CONNECTION IN G-TOUCH MODE

1.With the controller power off, hold Ⓗ+Ⓐ to power on, and the Home Indicator will blink cyan rapidly.
2.Add pattern Home Indicator lightens a constant cyan, enter G-Touch mode.
3.A solid cyan home indicator signifies a successful connection.
*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

CONNECT TO SWITCH THROUGH BLUETOOTH

1.Go to Switch's Home Menu, select "CONTROLLERS" - "Change Grip/Order" to enter the pairing interface.
2.Press the controller power off, hold Ⓗ+Ⓑ to power on, and the Home Indicator will blink red rapidly.
3.A solid red home indicator signifies a successful connection.
*After successful connection, when powered off, press the home button briefly to power on and automatically reconnect.

CONNECT TO A DEVICE THROUGH WIRED CONNECTION

1.Connect the controller to the device, and the device will automatically recognize the controller.
2.After connecting to the device, the controller will automatically switch to the corresponding mode. (Android/iOS/Switch mode is default to Android, iOS/Switch mode will change between iOS/Switch/D4 modes in consecutive.)
*For Switch device: After connecting to the Switch with cable, please open the "Configuration" - "Controller communication" - "Wired communication" - "Supported in Reviews and Wired mode only".

BACK BUTTON SETTING



TURBO FUNCTION SETTING

Four-speed adjustment: Slow gear with 5Hz, Medium gear with 12Hz, Fast gear with 20Hz, Off gear with 0Hz. Press and hold the Mode Button for 3 seconds, then press the corresponding key combination, 4 indicators successful activation. Repeat the operation to cycle through the gears.
2.Clear Turbo Function: Double-click the M button to clear all Turbo setting. The Home light flashes green twice to indicate a successful operation.

KEY COMBINATION

Function	Mode	Operation	Description
Interchange key value	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+corresponding key	Interchange the face button layout and the key value. *Interchange the A/B, X/Y key value. *The setting will be saved after restart.
Switch trigger mode	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓛ+Ⓡ	Enable/Disable hair trigger. *Enable hair trigger mode, when pressing the LT/RT button, the Home indicator will blink white slowly. *The setup will be saved after restart.
Adjust vibration intensity	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓛ/Ⓡ	Adjust the vibration intensity. *Total of five levels, Level 0: vibration off; Level 1: 25% vibration; Level 2: 50% vibration; Level 3: 75% vibration;Level4: 100% vibration (default). *The setup will still be saved after restart.
Adjust volume	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓓ-pad/Ⓓ-pad↑	Increase/Decrease volume. *Volume is not adjustable in G-Touch and D54 mode.
Function reset	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Hold for 8 seconds	After disconnecting, restore the controller functions will be restored to factory settings. *After clearing the function settings, you will need to reconfigure the settings.

CHARGING

1.Only the light battery changes when the controller is in the stretched state.
2.The light battery changes when the controller is in the folded state.
*The controller does not automatically power off when folded during charging.
*In charging mode, the Mode Indicator breathes to indicate the current battery level.

A/B, X/Y BUTTON POSITIONS CAN BE SWAPPED

1.Press and hold the Ⓗ button, then press the corresponding key on the vertical group of button to switch according to personal preference.
2.Remove the top cover. On the left side of ABXY keycaps, there is a ◀ symbol, and on the right side, there is a ▶ symbol. You can gently pry out the ABXY keycap out from the left groove ◀.
3.With the removed keycap position the ABXY keycaps with the ▶ symbol facing left and insert them into the left groove. Ensure they are properly aligned and that the installation is symmetrical.
*There are two layouts available: Xbox button layout (Up-Y, Left-X, Down-A, Right-B) and PlayStation button layout (Up-△, Left-□, Down-✕, Right-○).
*The default layout is the Xbox button layout.

STICKS & TRIGGERS CALIBRATION

*Current color shown in the controller: Hold the L3+R3 buttons for 3s until the Home Indicator and Mode Indicator blink white slowly, indicating that the calibration mode is entered.
1.Move the sticks in a circular motion at least three times to calibrate.
2.Rotate the sticks at their maximum angles 3 times and let them return to the initial position naturally.
3.Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
4.Press the Ⓗ button to exit calibration mode, indicating successful calibration.
*Calibration should be kept at a constant speed and gentle operation to avoid errors while collecting data.

GYROSCOPE CALIBRATION

1.Place the controller on a flat surface, then hold Ⓛ+Ⓡ buttons. The Home Indicator flashes rapidly.
2.Release the buttons when the Home Indicator flashes slowly, indicating that the calibration is successful.

CUSTOMIZE THE TRIGGER VIA GAMESIR APP

1.Download the GameSir App from the App Store or search for GameSir on Google Play and install it on the right. Use the GameSir App for firmware upgrade, stick & trigger zones adjustment, vibration intensity adjustment, button testing, etc.



⚠ PLEASE READ THIS PRECAUTIONS CAREFULLY

- Keep this device (battery, charger, and accessories) out of the reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT expose to water or moisture.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT use the product near heat sources, fire, or in areas with flammable substances.
- DO NOT use the product during electrical storms to avoid risk of electrocution.
- DO NOT strongly bend or pull cable ports.
- DO NOT drop or subject to impact.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use the product for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

Note: If the crossed-out wheel bin symbol (see illustration) is printed on your product, battery, literature or packaging, this mark on the product or accompanying documents means that it should not be mixed with unsorted household waste. Please separate this from other types of waste and recycle it responsibly to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the correct treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FC FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

CE STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G8+ wireless controller is in compliance with Directive 2014/30/EU, 2014/35/EU & 2011/65/EU and its amendment (EU) 2015/863.

[日本語]

https://www.gamesir.hk/pages/manuals-gamesir-g8+

パッケージ内容

本体コントローラー ×1 USB-Cケーブル ×1 補強用スティック ×1 ラウンドスティック ×1
取扱説明書 ×1 クイックスタートガイド ×1 ご購入とアフターサービスカード ×1
標準スティック ×1 保証書 ×1

互換性

- Android 10.0 バージョン以降
- iOS 14 バージョン以降
- iPad OS 14 バージョン以降

デバイスのレイアウト

電源オン/電源オフ

1.⏻ボタンを押して電源をオンにします。
2.⏻ボタンを3秒間長押しして電源をオフにします。
3.コントローラーをショートさせると、自動的にオンになります。
4.折りたたむとコントローラーの電源がオフになりますが、G-Touchモードでは、電源はオンの状態のままです。

接続状態のインジケーター

接続状態下で	ホームインジケーター	説明
ペアリング状態	青色の点滅	ペアリング状態にあるとき、コントローラーはBluetooth機能を通じてのみデバイスとペアリングできます。
接続済み	点灯	接続が正常に完了しました。
再接続状態	青い点滅	再接続状態にあるとき、コントローラーは最後に接続されたデバイスとのみ再接続でき、短押しで操作します。ペアリングボタンを3秒間長押しすると、強制的にペアリング状態に変更できます。

モード説明

モード	ホームインジケーター	接続方法	互換性のあるプラットフォーム
Android	緑色点灯	ⓐ+Ⓗ+Ⓧ	Android 9.0 以降
iOS	青色	ⓐ+Ⓗ+Ⓨ	Android / iOS
Switch	赤色	ⓐ+Ⓗ+Ⓑ	Switch/iOS
G-Touch	青緑	ⓐ+Ⓗ+Ⓐ	Gamesir アプリ

*動作していない状態で、電源をオンにするボタンの組み合わせを押し、目的モードに切り替えてください。
*iOS モードで iOS に接続できたら、デフォルトの色が薄い緑色に変わります。

コントローラーを Bluetooth 経由で Android デバイスに接続する方法

1.コントローラーの電源がオフの状態で、Ⓗ+Ⓧ を押してコントローラーをオンにします。ホームインジケーターが黄色く速く点滅します。
2.スマートフォンの Bluetooth 設定画面で「GameSir-G8+」を選択して接続します。
3.ホームインジケーターが緑色に点灯すると、接続が完了します。
*接続が完了したら、次回からはホームボタンを短く押すだけで自動的に再接続します。

iOS デバイスを Bluetooth 経由で接続する方法

1.コントローラーの電源がオフの状態で、Ⓗ+Ⓨ を押してコントローラーをオンにします。ホームインジケーターが青く速く点滅します。
2.スマートフォンの Bluetooth 設定画面で「DUALSHOCK 4 Wireless Controller」を選択して接続します。
3.ホームインジケーターが青色に点灯すると、接続が完了します。(または、ホームページ→設定→一般→ソフトウェアアップデート→Bluetooth アクセサリ→設定画面で「コントローラー」から「iOS」モードを選択します。M ボタンを長押しすると青色に変わります。)
*接続が完了したら、次回からはホームボタンを短く押すだけで自動的に再接続します。

Bluetooth 経由で Switch に接続する

1.Switch のホームメニューから「コントローラー」→「グリップ/オーダーを変える」を選択してペアリング待機状態にします。
2.コントローラーの電源がオフの状態で、Ⓗ+Ⓑ を押してコントローラーをオンにします。ホームインジケーターが赤く速く点滅します。
3.接続が完了すると、ホームインジケーターが赤色に点灯します。
*接続が完了したら、次回からはホームボタンを短く押すだけで自動的に再接続します。



有線接続で接続する方法

1.コントローラーをデバイスに接続すると、デバイスがコントローラーを自動的に認識します。
2.デバイスに接続すると、コントローラーが対応するモードに自動的に切り替わります。(Android/iOS/Switch モードがデフォルトです。iOS/Switch モードは連続して接続すると、iOS/Switch/D54 モードに切り替わります。)
*Switch デバイスの場合：Switch にケーブルで接続した後、「設定」→「コントローラー」→「有線通信」→「Reviews and Wired mode only」をオンにしてください。

背面ボタンの設定

ターボ機能設定

1.4 段階の速度調整：5Hz / 12Hz / 20Hz / Off
4 段階調整：低速ギア 5Hz、中速ギア 12Hz、高速ギア 20Hz、OFF
ターボ機能を設定するには、モードボタンを 3 秒間長押しし、対応するボタンの組み合わせを押します。4 つのインジケーターが点灯すると、設定が完了します。ボタンを押すたびにギアが切り替わります。
2.ターボ機能をクリアするには、M ボタンをダブルクリックします。ターボ機能がクリアされると、ホームライトが 2 回緑色に点滅します。

キーの組み合わせ

機能	モード	操作	説明
ボタンの値を入れ替え	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+対応するボタン	対応するボタンレイアウトとボタン値を切り替えます。 *設定はリスタート後も保存されます。
モードボタンを切り替え	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓛ+Ⓡ	トリガーロック機能を有効化/無効化します。 *有効にすると、LT/RT ボタンを押すと緑色ゆっくり点滅します。 *設定はリスタート後も保存されます。
振動強度を調整	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓛ/Ⓡ	振動強度を調整します。 *全部で 5 段階、レベル 0：振動なし、レベル 1：振動 25%、レベル 2：振動 50%、レベル 3：振動 75%、レベル 4：振動 100%（デフォルト）。 *設定はリスタート後も保存されます。
音量を調整	Ⓧ/Ⓨ/Ⓑ/Ⓐ	Ⓗ+Ⓓ-pad/Ⓓ-pad↑	音量を上げる/下げる。 *G-Touch 及び D54 モードでは調整できません。
機能リセット	Ⓧ/Ⓨ/Ⓑ/Ⓐ	8 秒長押し	切断後、コントローラーの機能は工場出荷時設定に戻ります。 *機能設定をクリアした後、設定を再度設定する必要があります。

充電

1.コントローラーが展開された状態では、色が変化した充電ライトが表示されます。
2.コントローラーが折りたたまれた状態では、色が変化した充電ライトが表示されます。
*充電中にコントローラーが折りたたんでも自動的に電源がオフになることはありません。
*充電モード：モードインジケーターが現在の電池残量を表示します。

A / B、X / Y ボタン配置が入替え可能

1.Ⓗボタンを長押しし、縦方向のボタングループの対応するボタンを押して、個人の好みに応じて切り替えます。
2.トップカバーを取り外すと、ABXY キーキャップの左側に◀記号があり、右側に▶記号があります。ABXY キーキャップを左の溝◀から慎重にこじ開けます。
3.取り外したキーキャップの▶記号を左側に向けて、左の溝に挿入します。位置合わせと取り付けが対称であることを確認してください。
*2 種類のレイアウトをご利用いただけます：Xbox ボタンレイアウト（上：Y、左：X、下：A、右：B）および PlayStation ボタンレイアウト（上：△、左：□、下：✕、右：○）。
*デフォルトは Xbox ボタンレイアウトです。

スティック&トリガーの補正

*コントローラー内の現在の色：L3+R3 ボタンを 3 秒間長押しして、ホームインジケーターとモードインジケーターがゆっくりと白く点滅し、キャリブレーションモードに入ったことを示します。
1.スティックを円を描くように少なくとも 3 回回転させます。
2.スティックを最大限の位置まで 3 回傾け、自然に元の位置に戻します。
3.トリガーを最大限の位置まで 3 回押し、自然に元の位置に戻します。
4.Ⓗボタンを押してキャリブレーションモードを終了します。キャリブレーションが成功したことを示します。
*スティックとトリガーは、最適に使用できる様に調整してください。

ジャイロスコープの補正

1.コントローラーを平らな面に置き、Ⓛ+Ⓡ ボタンを長押しします。ホームインジケーターが速く点滅します。
2.ホームインジケーターがゆっくり点滅したらボタンを離します。キャリブレーションが成功したことを示します。

GAMESIR アプリを通したカスタマイズ

1.App Store で GameSir アプリをダウンロードするか、Google Play で GameSir を検索してインストールします。GameSir アプリを使用して、ファームウェアのアップグレード、スティックとトリガーのゾーン調整、振動強度の調整、ボタンのテストなどを行います。

⚠ この安全上の注意点をよくお読みください

- 本製品（バッテリー、充電器、アクセサリーを含む）は、3 歳未満のお子様の手の届かない場所に保管してください。誤って飲み込んだり、吸い込んだりした場合は、すぐに医師の診断を受けてください。
- 水や湿気にさらさないでください。
- 直射日光や高温環境にさらさないでください。
- 本製品を湿度の高い環境や埃っぽい場所に保管しないでください。
- 本製品を可燃性物質のある場所や火気の近くで使用しないでください。
- 感電のリスクを避けるため、雷雨の際には本製品を使用しないでください。
- ケーブルポートを強く曲げたり、引っ張ったりしないでください。
- 落下させたり、衝撃を与えたりしないでください。
- ガソリンやシンナーなどの揮発性物質を使用しないでください。
- 分解、修理、改造を行わないでください。
- 本製品を本来の目的以外の用途で使用しないでください。本来の目的以外の目的で使用した場合の事故や損害については、当社は一切の責任を負いません。
- 光学光源を直視しないでください。視力を損傷する恐れがあります。
- 品質に関する疑問や改善提案がありましたら、GameSir または現地の代理店までお問い合わせください。

廃電気電子機器（WEEE）に関する情報

本製品の正しい廃棄方法（廃電気電子機器（WEEE）に関する情報）

注：製品、バッテリー、説明書、または包装に取り消し線付きのゴミ箱のシンボル（図を参照）が印刷されている場合、製品または付属書類のこのマークは、他の未分別の家庭ゴミと混ぜてはならないことを意味します。本製品を他の種類のゴミから分別し、指定された回収場所で責任を持ってリサイクルしてください。指定された回収場所では、無料で回収されます。あるいは、一部の国では、購入時に同等の新製品を販売店に返却することもできます。本製品を正しく廃棄することで、貴重な資源の節約に役立ち、人間の健康や環境に対する潜在的な悪影響を防ぐことができます。これらの悪影響は、不適切なゴミの処理によって生じる可能性があります。家庭ユーザーは、本製品を購入した販売店または地方自治体の事務所に連絡して、環境に安全なリサイクルのために本製品を持ち込む場所と方法の詳細を確認してください。事業ユーザーは、サプライヤーに連絡して詳細を確認してください。本製品を正しく廃棄することで、廃棄物処理、回収、リサイクルが適切に行われ、潜在的な悪影響や人間の健康への危険を防ぐことができます。

適合宣言

CE

한국어

https://www.gamesir.hk/pages/manuals-gamesir-g8+

제품 구성

메인 컨트롤러 ×1 Type-C 충전 케이블 ×1 보강용 엄지 스틱 ×1 라운드 엄지 스틱 ×1
사용 설명서 ×1 빠른 설치 가이드 ×1 감사 및 애프터 서비스 카드 ×1
표준 엄지 스틱 ×1 보증서 ×1

호환성

- Android 10.0 버전 이상
- iOS 14 버전 이상
- iPad OS 14 버전 이상

장치 레이아웃

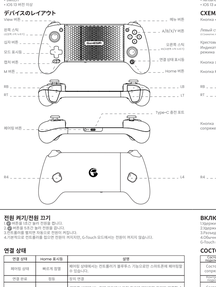

전원 켜기/전원 끄기

1.⏻ 버튼을 눌러 전원을 켭니다.
2.⏻ 버튼을 3 초 동안 길게 눌러 전원을 끕니다.
3.컨트롤러를 접으면 자동으로 전원이 꺼지지만 G-Touch 모드에서는 계속 활성화 상태로 유지됩니다.

연결 상태

연결 상태	홈 표시등	설명
페어링 상태	파란색 빠르게	페어링 상태에서는 컨트롤러가 Bluetooth 기능을 통해서만 장치와 페어링할 수 있습니다.
연결 상태	켜짐	연결이 성공적으로 완료되었습니다.
재연결 상태	느리게 천천히	재연결 상태에서는 컨트롤러가 마지막으로 연결된 장치에만 재연결할 수 있으며 짧게 누릅니다. 페어링 버튼을 3 초 동안 길게 누르면 강제로 페어링 상태로 변경할 수 있습니다.

모드 설명

모드	홈 표시등	연결 방법	호환 플랫폼
Android	녹색	ⓐ+Ⓗ+Ⓧ	Android 9.0 버전 이상
iOS	파란색	ⓐ+Ⓗ+Ⓨ	Android/iOS
Switch	빨간색	ⓐ+Ⓗ+Ⓑ	Switch/iOS
G-Touch	청록	ⓐ+Ⓗ+Ⓐ	Gamesir 앱

*대응 상태에서 해당 키 조합을 눌러 원하는 모드로 전환하십시오.
*iOS 모드로 연결이 성공하면 기본 색상이 밝은 청록색으로 바뀝니다.

충전

1.컨트롤러가 펼쳐진 상태에서는 충전 중에는 충전 라이트만 켜집니다.
2.컨트롤러가 접힌 상태에서는 충전 중에는 충전 라이트만 켜집니다.
*충전 중에 컨트롤러를 접어도 자동으로 전원이 꺼지지 않습니다.
*충전 모드에서 Mode 표시등에 현재 배터리 잔량이 표시됩니다.

A/B, X/Y 버튼 위치를 전환할 수 있습니다

1.Ⓗ 버튼을 길게 누른 상태에서 세로 방향 버튼 그룹에 있는 해당 버튼을 누르면 개인 취향에 따라 전환할 수 있습니다.
2.상단 커버를 제거합니다. ABXY 키캡의 왼쪽에 ◀ 기호가 있고 오른쪽에 ▶ 기호가 있습니다. 왼쪽 홈 ◀에서 ABXY 키캡을 살짝 분리합니다.
3.분리한 키캡의 ▶ 기호가 왼쪽을 향하도록 위치를 조정한 후 왼쪽 홈에 삽입합니다. 올바르게 정렬되었고 설치가 대칭인지 확인하십시오.
*2 가지 레이아웃을 사용할 수 있습니다: Xbox 버튼 레이아웃(위-Y, 왼쪽-X, 아래-A, 오른쪽-B) 및 PlayStation 버튼 레이아웃(위-△, 왼쪽-□, 아래-✕, 오른쪽-○).
*기본 레이아웃은 Xbox 버튼 레이아웃입니다.

스틱 및 트리거 조정

*현재 컨트롤러에 표시된 색상: L3+R3 버튼을 3 초 동안 길게 누르면 홈 표시등과 모드 표시등이 천천히 흰색으로 깜박이며 보정 모드에 들어갔음을 나타냅니다.
1.스틱을 원형으로 3 회 이상 움직여 보정합니다.
2.스틱을 최대 각도로 3 회 회전시킨 후 자연스럽게 초기 위치로 돌아오게 합니다.
3.트리거를 최대 이동 거리까지 3 회 누른 후 자연스럽게 초기 위치로 돌아오게 합니다.
4.Ⓗ 버튼을 눌러 보정 모드를 종료하면 보정이 성공했음을 나타냅니다.
*데이터 수집 중 오류를 방지하려면 보정을 일정한 속도로 부드럽게 수행해야 합니다.

자이로스코프 조정

1.컨트롤러를 평평한 표면에 놓고 Ⓛ+Ⓡ 버튼을 길게 누릅니다. 홈 표시등이 빠르게 깜박입니다.
2.홈 표시등이 천천히 깜박이면 버튼을 놓습니다. 보정이 성공했음을 나타냅니다.

GAMESIR 앱으로 트리거 조정하기

1.App Store 에서 GameSir 앱을 다운로드하거나 Google Play 에서 GameSir 을 검색하여 설치합니다. GameSir 앱을 사용하여 펌웨어 업그레이드, 스틱 및 트리거 영역 조정, 진동 강도 조정, 버튼 테스트 등을 할 수 있습니다.

⚠ 다음 주의 사항을 주의 깊게 읽어주시기 바랍니다

- 이 장치(배터리, 충전기 및 액세서리)를 3 세 미만 어린이의 손이 닿지 않는 곳에 보관하십시오. 삼키거나 흡입한 경우 즉시 의사의 진료를 받으십시오.
- 물이나 습기에 노출하지 마십시오.
- 직사광선이나 고온에 노출하지 마십시오.
- 습하거나 먼지가 많은 곳에 제품을 두지 마십시오.
- 가연성 물질이 있는 곳이나 화기 근처에서 제품을 사용하지 마십시오.
- 감전 위험을 피하기 위해 뇌우 발생 시 제품을 사용하지 마십시오.
- 케이블 포트를 강하게 구부리거나 당기지 마십시오.
- 떨어뜨리거나 충격을 가하지 마십시오.
- 가솔린이나 시너 등의 화학 물질을 사용하지 마십시오.
- 분해, 수리 또는 개조하지 마십시오.
- 제품을 원래 용도 이외의 목적으로 사용하지 마십시오. 원래 용도 이외의 목적으로 사용하여 발생한 사고나 손상에 대해서는 책임을 지지 않습니다.
- 광원을 직접 보지 마십시오. 시력을 손상시킬 수 있습니다.
- 품질에 대한 우려 사항이나 제안 사항이 있으시면 GameSir 또는 현지 유통업체에 문의하십시오.

폐전기전자제품(WEEE) 정보

제품의 올바른 폐기 방법(폐전기전자제품(WEEE) 정보)

참고: 제품, 배터리, 설명서 또는 포장재에 쓰레기통 위에 X 표시가 있는 기호(그림 참조)가 인쇄되어 있는 경우, 제품 또는 동봉 문서에 있는 이 표시는 가정용 쓰레기와 함께 폐기해서는 안 된다는 것을 의미합니다. 다른 종류의 폐기물과 분리하여 지정된 수거함에 책임감 있게 재활용하십시오. 지정된 수거함에서는 무료로 수거합니다. 또는 일부 국가에서는 구매 시 동등한 신제품을 판매점에 반품할 수 있습니다. 이 제품을 올바르게 폐기하면 귀중한 자원을 절약하고 부적절한 폐기물 처리로 인해 발생할 수 있는 인체 건강 및 환경에 대한 잠재적 악영향을 방지할 수 있습니다. 가정 사용자는 이 품목을 환경 친화적으로 재활용하기 위해 구매한 판매점 또는 지방 정부 사무소에 문의하여 세부 정보를 확인하십시오. 사업체 사용자는 공급업체에 문의하여 자세한 정보를 확인하십시오. 이렇게 하면 폐기된 제품이 올바른 처리, 복구 및 재활용을 거쳐 환경과 인체 건강에 미치는 잠재적 악영향을 방지할 수 있습니다.

적합성 선언

CE

[Русский]

https://www.gamesir.hk/pages/manuals-gamesir-g8+

КОМПЛЕКТАЦИЯ

Контроллер Контроллер ×1 Кабель Type-C ×1 Усиленный стик ×1 Круглый стик ×1
Руководство пользователя ×1 Краткое руководство ×1 Благодарственное письмо ×1
Стандартный стик ×1 Гарантийный талон ×1

СОВМЕСТИМОСТЬ

- ОС Android 10 или более поздней версии
- ОС iOS 14 или более поздней версии
- ОС iPad OS 14 или более поздней версии

СХЕМА УСТРОЙСТВА

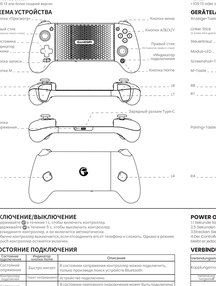

ВКЛЮЧЕНИЕ/ВЫКЛЮЧЕНИЕ

1.Нажмите кнопку ⏻ для включения контроллера.
2.Удерживайте кнопку ⏻ в течение 3 с, чтобы выключить контроллер.
3.Замкните контроллер, и он включится автоматически.
4.Подключение к контроллеру приведет к его выключению при складывании; однако в режиме G-Touch контроллер останется активным.

СОСТОЯНИЕ ПОДКЛЮЧЕНИЯ

Состояние подключения	Индикатор режима «Домой»	Описание
Состояние сопряжения	Быстро мигает синим	В состоянии сопряжения контроллер можно подключить только к устройству через Bluetooth-функцию.
Состояние подключения	Горит синим	Подключение выполнено успешно.
Состояние повторного подключения	Медленно мигает синим	В состоянии повторного подключения можно быстро подключить контроллер только к последнему использованному устройству, нажав кнопку. Чтобы принудительно перевести контроллер в режим сопряжения, нажмите и удерживайте кнопку сопряжения в течение 3 с.

ОПИСАНИЕ РЕЖИМА

Режим	Индикатор режима «Домой»	Способ подключения	Совместимая платформа
Android	Зеленый	ⓐ+Ⓗ+Ⓧ	Android 9.0 или более поздней версии
iOS	Синий	ⓐ+Ⓗ+Ⓨ	Android/iOS
Switch	Красный	ⓐ+Ⓗ+Ⓑ	Switch/iOS
G-Touch	Голубой	ⓐ+Ⓗ+Ⓐ	Приложение Gamesir

*Если контроллер включен, нажмите соответствующую комбинацию клавиш, чтобы переключиться в нужный режим.
*После успешного подключения к iOS в режиме D54 цвет индикатора по умолчанию изменится на оранжево-желтый.

ПОДКЛЮЧЕНИЕ К УСТРОЙСТВУ ANDROID ЧЕРЕЗ BLUETOOTH

1.Убедитесь, что контроллер выключен, нажмите и удерживайте Ⓗ+Ⓧ, чтобы включить контроллер, индикатор начнет быстро мигать желтым цветом.
2.Откройте список устройств Bluetooth на телефоне, выберите «GameSir-G8+» и нажмите «Подключить».
3.Если индикатор горит зеленым, подключение выполнено успешно.
*После подключения при выключенном состоянии нажмите кнопку «Домой», чтобы быстро включить контроллер и автоматически выполнить повторное подключение.

ПОДКЛЮЧЕНИЕ К УСТРОЙСТВУ IOS ЧЕРЕЗ BLUETOOTH

1.Убедитесь, что контроллер выключен, нажмите и удерживайте Ⓗ+Ⓨ, чтобы включить контроллер, индикатор начнет быстро мигать синим.
2.Откройте список устройств Bluetooth на телефоне, выберите «DUALSHOCK 4 Wireless Controller» и нажмите «Подключить».
3.Если индикатор горит синим, подключение выполнено успешно. (Или нажмите «Настройки» - «Основные» - «Обновление ПО» - «Аксессуары Bluetooth» в этом режиме в разделе «Конфигурация» на телефоне. При нажатии кнопки M она будет синего цвета.)
*После успешного подключения при выключенном состоянии нажмите кнопку «Домой», чтобы быстро включить контроллер и автоматически выполнить повторное подключение.

ПОДКЛЮЧЕНИЕ К NINTENDO SWITCH ЧЕРЕЗ BLUETOOTH

1.Перейдите в главное меню Nintend