


eufy
by Anker

eufy

For FAQs and more information, please visit:

www.eufylife.com

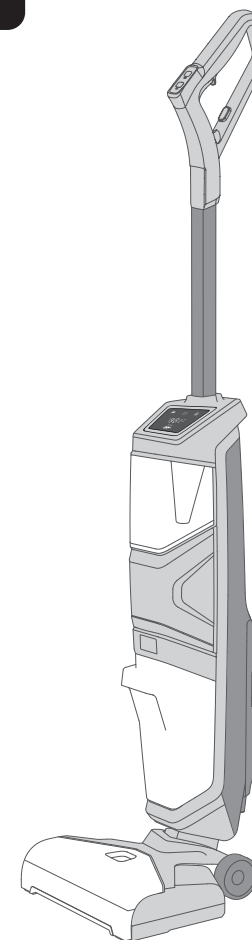

OWNER'S MANUAL

WetVac WR21 Wet & Dry Cordless Vacuum Cleaner

WR21 51005003321 V01

English	01
Español	22

Table of Contents

02	Important Safety Instructions
07	What's in the Box
08	Overview
09	Assembly
09	Charging
10	Selecting a Voice Prompt Language
11	Adding Water and Floor Cleaner
12	Using the Vacuum
13	LED Screen Guide
13	Carrying with the Handle
14	Maintenance
	Clean the Dirty Water Tank and Sponge Filter
	Clean the Rolling Brush
	Self-Cleaning and Self-Drying
20	Troubleshooting
20	Specifications
21	Customer Service

Thank you for purchasing this appliance. Carefully read all instructions before using this product, and keep this manual for future reference.

Important Safety Instructions

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

- READ ALL INSTRUCTIONS BEFORE USING. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with this appliance.
- Not intended to be used as a toy. Close attention is necessary when used by or near children.
- Cleaning and maintenance shall not be performed by children without adult supervision.
- This appliance is only to be used with the power supply unit provided.
- Do not soak this appliance in any liquid.
- Keep hair, loose clothing, fingers, and other body parts away from openings and moving parts.
- Do not use with a damaged cord or plug. The damaged power cord should be replaced by a professional technician or the original manufacturer to avoid accidents.
- If the appliance is not working as it should, or has been dropped, damaged, or submerged in water, contact our customer service for advice.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not throw this appliance into fire, as the battery may explode.
- Do not remove the built-in battery by yourself. The battery should only be replaced by the manufacturer.
- The used battery should be placed in a sealed plastic bag and disposed

of safely according to local environmental regulations.

- The battery must be removed from this appliance before it is disposed of.
- Charge this appliance with the supplied charging base only. Using another charging base may cause fire.
- Recharge only with the adapter (US/CA: OH-1048B3601000U3-UL; UK: OH-1048B3601000U3-UK; EU: OH-1048B3601000U3-VDE; AU: OH-1048B3601000U3-SAA) and the battery pack specified by the manufacturer. Use of any damaged, modified, or any other battery packs and adapters may create a risk of injury and fire.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or unplug the adapter with wet hands.
- Do not charge or use this appliance outdoors.
- Avoid electrical short-circuit caused by power outlets or plugs.
- Do not charge, disassemble, burn the discarded battery, or heat above 60°C.
- Before using this appliance, make sure the rolling brush cover is installed correctly to avoid any damage.
- Do not put any object into the openings of the appliance.
- If the opening is blocked, do not use the appliance. Clean up any debris such as hair, soft cloth, and cotton threads from the opening before use, otherwise the suction power will be decreased.
- Take special care when cleaning stairs to avoid injury.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic substances (such as chlorine bleaching agent, ammonia water, drain cleaner, etc.).
- Do not use in a confined space filled with oil-based paint, mothproof substances, flammable dust, or other explosive and toxic substances.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Make sure the sponge filter is installed correctly before using. Do not use without water tank or filters in place.
- Do not store this appliance in a place where it may freeze.
- Do not expose this appliance to rain. Store it indoors.

- Use only as described in this manual. Use only manufacturer recommended attachments.
- Store this appliance on a flat surface.
- Only use the floor cleaner designated by eufy and in a proper ratio. We are not responsible for any damage and injury caused by unauthorized floor cleaners.
- Do not ingest the floor cleaner. If accidentally swallowed, seek professional help or contact a poison control center immediately.
- Under abusive conditions, liquid may leak from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid comes in contact with the eyes, seek immediate medical help. Leaking liquid from the battery may cause irritation or burns.
- Avoid accidental activation. Before lifting or operating this appliance, make sure that the switch is off. Carrying the appliance with your finger on the switch or energizing appliance that has the switch on invites accidents.
- This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperatures (above 130°C), as it may catch fire and/or explode.
- Charging, using and storing of the appliance should be within a room temperature range of 4-35°C.
- Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
- Unplug the appliance from the outlet before cleaning or maintaining the appliance.
- Before cleaning, add 2 bottle caps of floor cleaner into a full tank of clean water with a dilution ratio of 1:40.
- Use extra care when cleaning with the rolling brush as a hazard may occur if the appliance runs over the supply cord.
- Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Turn off all controls before unplugging.
- Unplug before connecting the main body or charging base.
- Do not modify or attempt to repair the appliance or the battery pack, except as indicated in the instructions for use and care.

SAVE THESE INSTRUCTIONS

Notice



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

The following importer is the responsible party (for FCC matters only).

Company Name: POWER MOBILE LIFE, LLC
 Address: 400 108th Ave NE Ste 400, Bellevue, WA 98004-5541
 Telephone: +1 (800) 988 7973

ISED Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

EU Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type WR21 is in compliance with Directives 2014/35/EU & 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://support.eufylife.com/s/articleRecommend?type=Download>

GB Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type WR21 is in compliance with Electrical Equipment (Safety) Regulations 2016 & Electromagnetic Compatibility Regulations 2016 & The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 & The Ecodesign for Energy-Related Products Regulations 2010. The full text of the GB declaration of conformity is available at the following internet address:
<https://support.eufylife.com/s/articleRecommend?type=Download>


The following importer is the responsible party (contract for EU and UK matters)

Anker Technology (UK) Ltd
Suite B, Fairgate House, 205 Kings Road, Tyseley, Birmingham, B11 2AA, United Kingdom




Anker Innovations Deutschland GmbH
Georg-Muche-Strasse 3, 80807 Munich, Germany

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong




What's in the Box

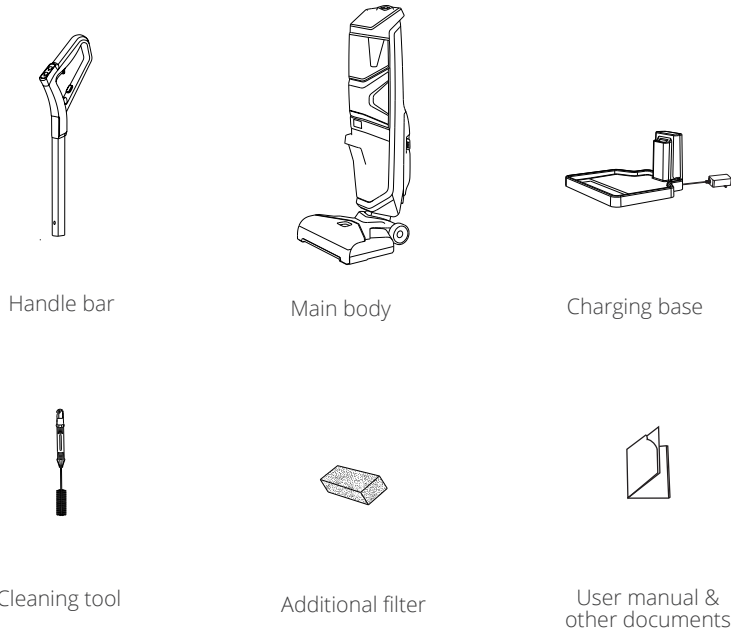

If needed, refer to the list below to buy additional accessories at eufylife.com.


Accessories				
	WetVac Multi-Surface Rolling Brush	WetVac Carpet Rolling Brush	WetVac Replacement Filter	WetVac Hard Floor Cleaner
Model	T29X0	T29X1	T29X2	T29X3

Overview

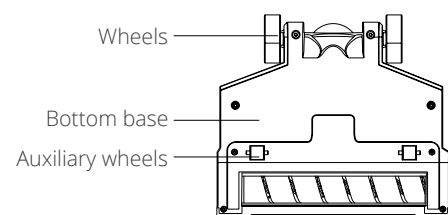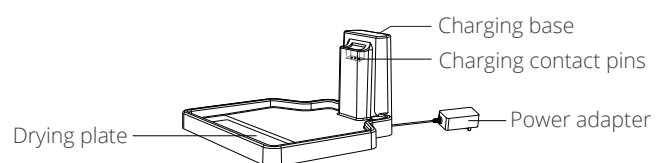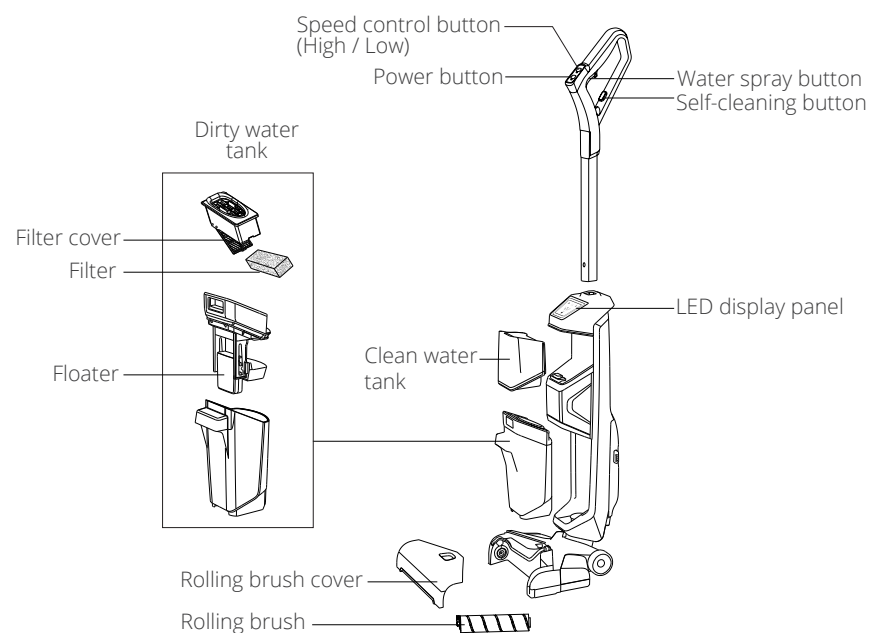

Assembly


The vacuum consists of three parts: handle bar, main body, and charging base. After unpacking, install the vacuum as illustrated.

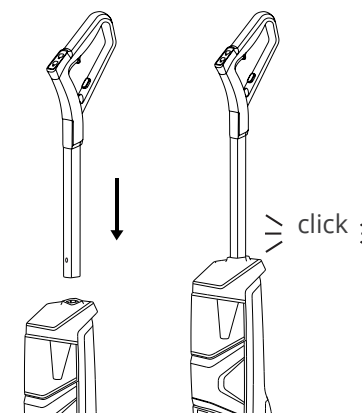

Charging

The vacuum is powered by a lithium-ion battery. Before first use, charge the battery for more than 5 hours.

1. Install the vacuum onto the charging base.
2. Connect the adapter to a power outlet. The LED display lights up, indicating that the vacuum is ready for charge.

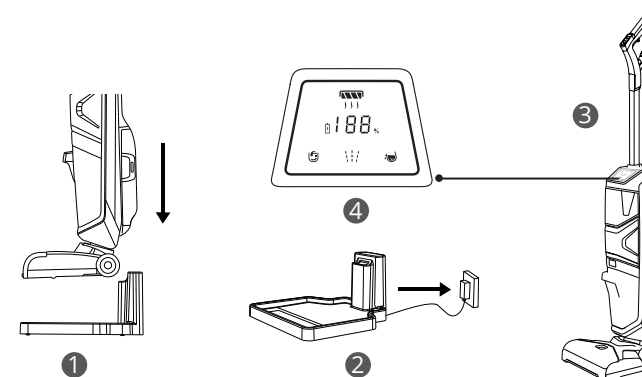


Selecting a Voice Prompt Language


1. Gently step on the foot pedal and push the handle bar backward until you hear a click.
2. Press and hold the water spray button with one hand, then hold the self-cleaning button with the other hand to enter the language selection mode.
3. Press the water spray button repeatedly to select from the available languages.
4. When you hear the desired language, press the speed control button to confirm. The selected language will be saved.

Adjust Volume

Press and hold the self-cleaning button for 3 seconds to adjust the volume level or turn off the voice prompts.

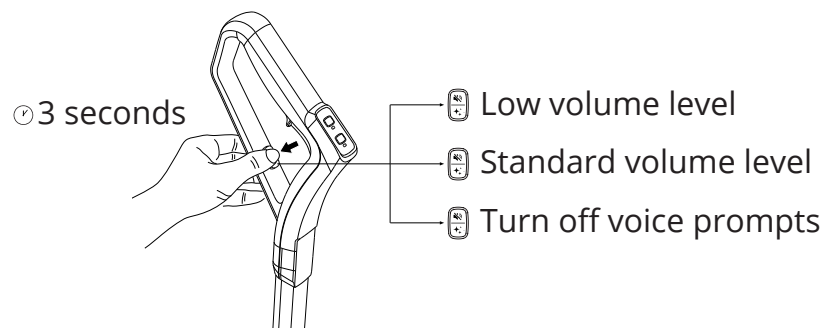

Adding Water and Floor Cleaner

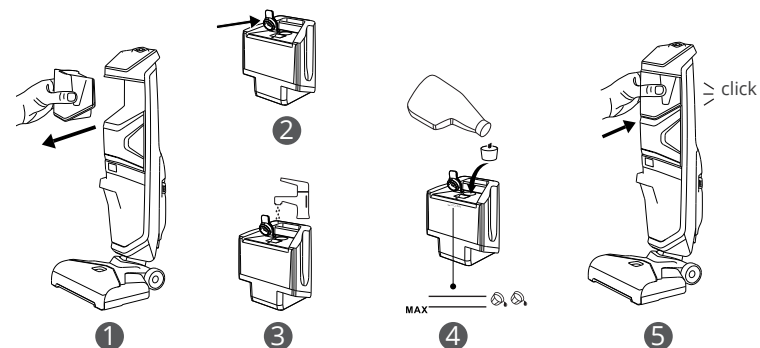


1. Remove the clean water tank from the main body.
2. Open the rubber cover.
3. Add water until it reaches the MAX water line.
4. Add 2 bottle caps of floor cleaner (purchased separately) into the water tank, then close the rubber cover.
5. Place the water tank back into the body.




- Do not add too much cleaner. Use the floor cleaner designated by eufy only. Use with any other cleaner may cause severe damage to the vacuum.
- Do not add hot water into the water tank.
- Do not put the water tank into a microwave for heating.
- Do not add floor cleaner with too much foam as it will cause false alarms.

Using the Vacuum

1. Gently step on the foot pedal and push the handle bar backward until you hear a click.
2. Press the power button. The rolling brush will begin to rotate.

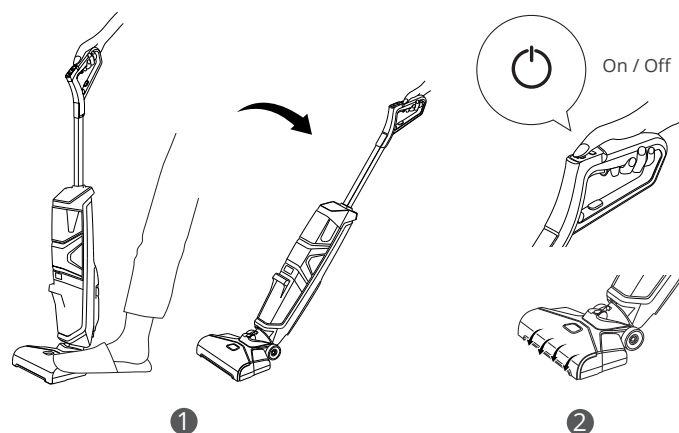

3. Press the speed control button to select a rotation speed: **High / Low**.
4. Press and then release the water spray button. Water and floor cleaner will spray onto the rolling brush.
5. After cleaning, push the handle bar forward until you hear a click. The vacuum will automatically turn off and you will hear the corresponding voice prompt.

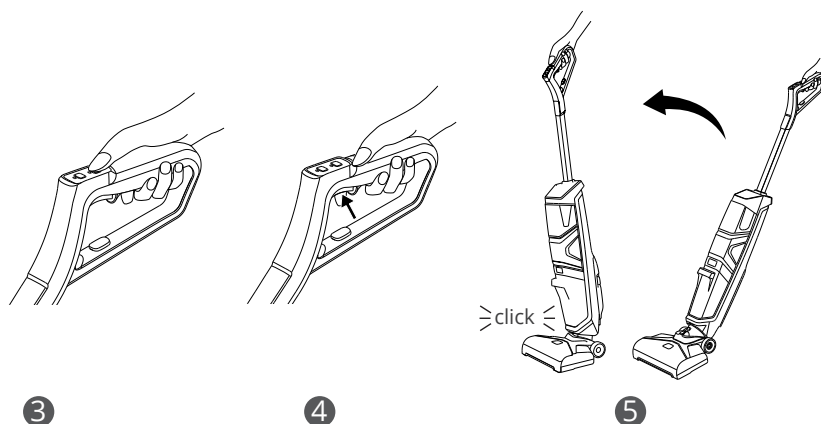


6. Place the vacuum onto the charging base to charge, and then start self-cleaning and self-drying (see the Maintenance section).



• To prevent unpleasant smells, clean the dirty water tank after each use (see the **Maintenance** section).



LED Screen Guide

The LED screen will show you the working status of this vacuum.

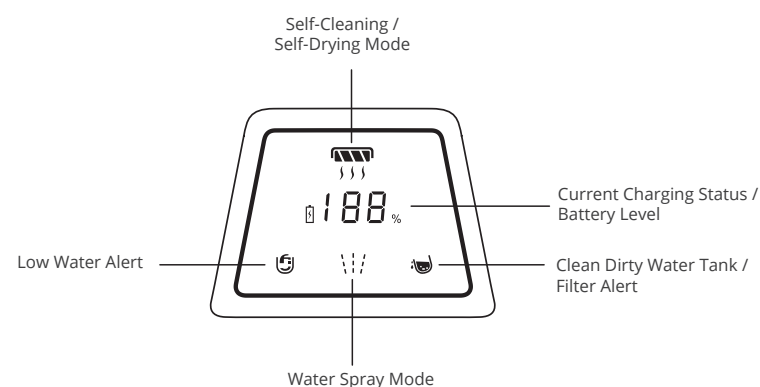

Carrying with the Handle

We recommend moving and carrying the vacuum by lifting it by the specially designed, ergonomic handle, instead of the handlebar, to avoid damage.

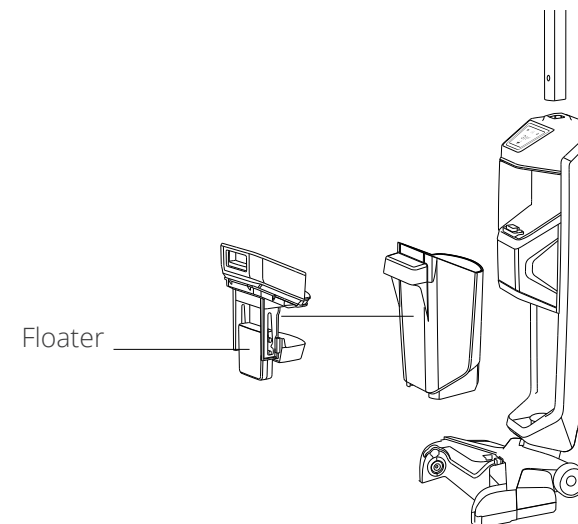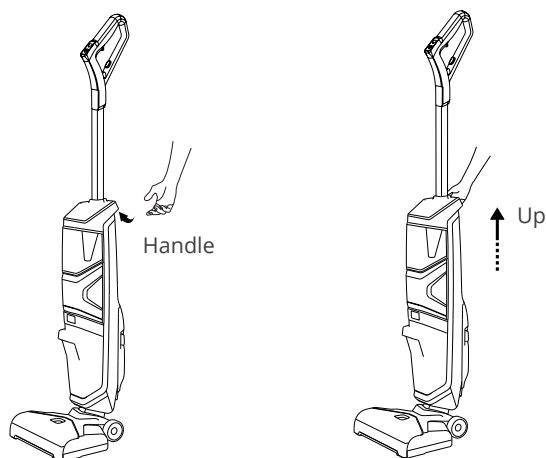

Maintenance


Clean the Dirty Water Tank and Sponge Filter




Clean water tank and filter

The floater is what prevents the dirty water tank from overflowing. When the dirty water tank is full, the floater will shut off your suction motor and produce a loud sound, indicating that the tank needs to be cleaned.


1. Press the release button and hold the handle as illustrated.
2. Pull out the dirty water tank.
3. Remove the filter component. Empty the dust and dirty water.

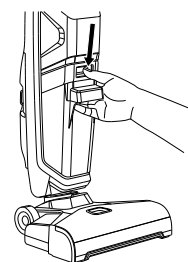

1

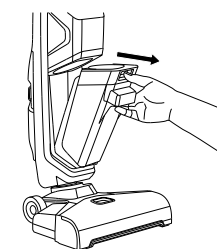


2

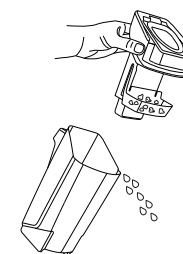


3


4. Rinse the water tank thoroughly with water. Do not use hard material tools to clean or rub the inner part of the water tank as it may damage the protective layer.
5. Remove the filter cover.
6. Remove and clean the sponge filter.

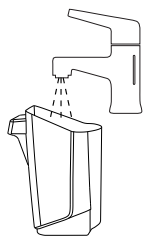

4




5

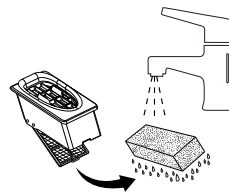


6

7. Clean the filter component with water or mild detergent.
8. Clean the floater and top container as illustrated.
9. If there is any debris around the area as illustrated, clean with a cloth or towel.

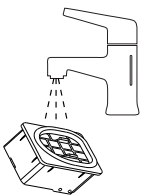

7

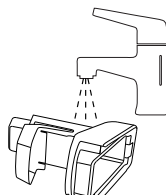


8




9


10. Make sure to completely air dry all the components.
11. Reassemble these components.

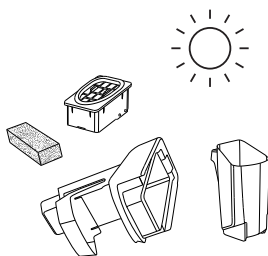


10

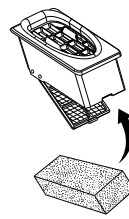


11

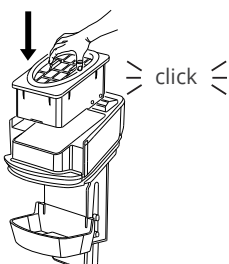


12. Reassemble the dirty water tank.
13. Place the dirty water tank back into the main body.

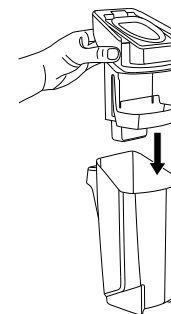

12

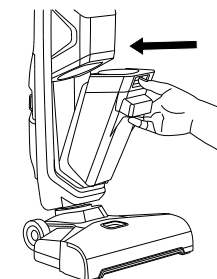

13

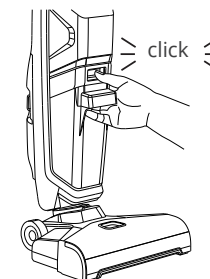


Make sure the dirty water tank has been cleaned and all the components are completely dry before use.

Clean the Rolling Brush




Before removing the rolling brush cover, make sure the vacuum has been turned off.

1. Pull out to open the rolling brush cover.
2. Lift the rolling brush to remove.

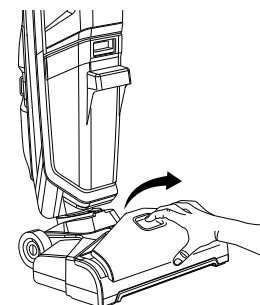


1

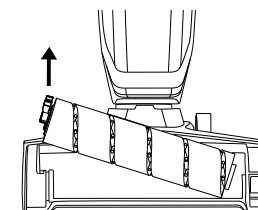


2

3. Clean the rolling brush with the supplied cleaning tool.

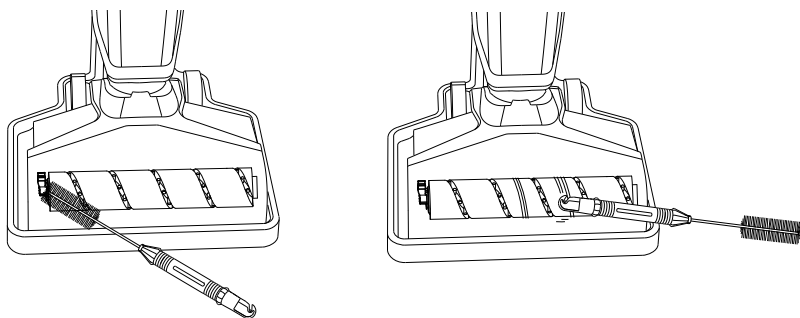




4. To reinstall the rolling brush, insert the end of the rolling brush into one side of the head, then fix the pin of the rolling brush into the hole on the other side of the head. Make sure the rolling brush is installed properly, otherwise it may be damaged during use.

5. Reinstall the rolling brush cover.

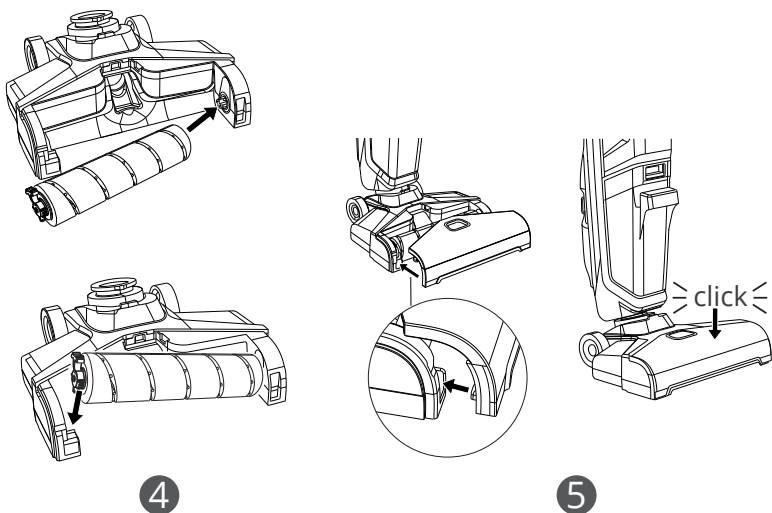

Self-Cleaning and Self-Drying

1. After cleaning, place the vacuum onto the charging base.
2. Make sure the battery level is high and there is enough water in the clean water tank.
3. Press the self-cleaning button. The vacuum will start self-cleaning and will self-dry automatically. It will take a while and you will hear a voice prompt when the self-drying is complete.

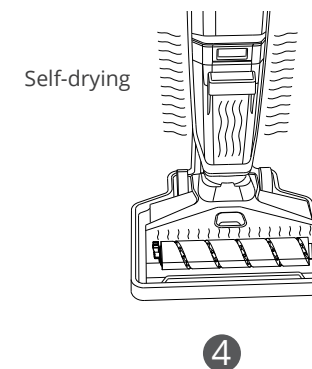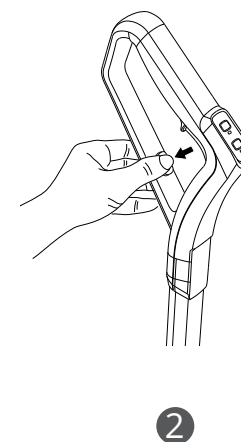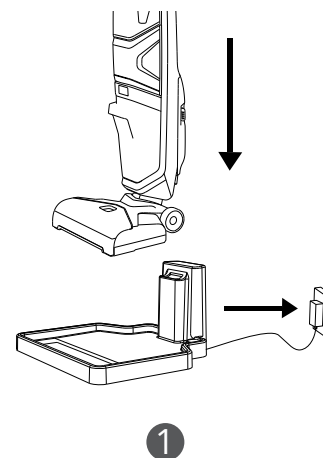

Troubleshooting

Vacuum is not working normally:

1. Make sure the battery is fully charged.
2. Make sure the handle bar has been pushed backward and you have heard a click before use.
3. Check if the rolling brush is stuck.
4. If the self-cleaning is not working due to low battery, charge for 5 minutes before restarting the self-clean.

Suction power is decreased or there is a loud noise:

1. Check if any objects are stuck in the opening.
2. Check if the dirty water tank is properly installed.
3. Check if the dirty water tank and sponge filter are clean.

Specifications

Model	WR21
Charging voltage	AC 100-240 V
Rated Power	250 W
Battery life	≥32 minutes
Battery energy	115 Wh
Battery capacity	4000 mAh
Charging Time	<5 hours
Noise	≤72 dBA
Clean water tank capacity	600 mL
Dirty water tank capacity	550 mL

Customer Service

For tutorial videos, FAQs, manuals, and more information, please visit: <https://support.eufylife.com/>

Warranty: 12-month limited warranty



support@eufylife.com



www.eufylife.com



(US) +1 (800) 988 7973 Mon-Sat 6:15 AM - 6:45 PM (PT);

Sun 6:15 AM - 5:45 PM (PT)

(UK) +44(0)1604 936200 Mon-Sun 6:00-19:00

(DE) +49(0)69 9579 7960 Mo-Fr 8:00-16:00; Sa 9:00-16:00

(日本) 03 4455 7823 月-金 9:00 - 17:00

For more support phone numbers, please visit:

<https://support.eufylife.com/s/phonecontactus>

Or scan the QR code below:



@EufyOfficial



@EufyOfficial



@EufyOfficial



@EufyOfficial

Índice

23	Instrucciones de seguridad importantes
27	QUÉ HAY EN LA CAJA
28	Descripción general
29	Montaje
29	Cargando
30	Selección del idioma para los mensajes de voz
31	Cómo añadir agua y el limpiador para suelos
32	Modo de uso de la aspiradora
33	Guía de pantalla LED
34	Cómo transportarla con el asa
34	Mantenimiento
	Limpieza del depósito de agua sucia y la esponja del filtro
	Limpieza del cepillo giratorio
	Autolimpieza y autosecado
41	Solución de problemas
41	Especificaciones
42	Servicio de atención al cliente

Gracias por adquirir este dispositivo. Lea bien las instrucciones antes de usar el producto y conserve este manual para consultarlo más adelante.

Instrucciones de seguridad importantes



ESTE APARATO ESTÁ DESTINADO EXCLUSIVAMENTE PARA USARSE EN HOGARES.

- LEA LAS INSTRUCCIONES ANTES DE USAR EL PRODUCTO. Si no sigue las advertencias e instrucciones, podría provocar descargas eléctricas, incendios y/o lesiones graves.
- Este aparato lo pueden utilizar niños a partir de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimientos, si han recibido supervisión o instrucciones sobre el uso seguro del aparato y comprenden los peligros que comporta.
- Los niños deben estar bajo supervisión para evitar que jueguen con el aparato.
- No está concebido para ser utilizado como un juguete. Preste atención cuando lo utilicen niños o cuando está cerca de ellos.
- No permita que los niños realicen la limpieza y el mantenimiento sin la supervisión de un adulto.
- Este aparato solo se debe utilizar con la fuente de alimentación incluida.
- No sumerja el aparato en ningún líquido.
- Mantenga el cabello, la ropa suelta, los dedos y otras partes del cuerpo alejados de las aberturas y las partes móviles.
- No lo utilice con un cable o enchufe dañado. Si el cable de alimentación presenta daños, deberá entregárselo a un técnico profesional o al fabricante original para reemplazarlo y así evitar accidentes.
- Si la aspiradora no funciona como debería, se ha caído, ha sufrido algún daño o se ha sumergido en agua, póngase en contacto con el servicio de atención al cliente para obtener asistencia.
- El mantenimiento debe ser realizado por una persona calificada en reparación que utilice únicamente piezas de repuesto idénticas a las originales. Esto garantizará que no se menoscabe la seguridad del producto.
- No arroje el aparato al fuego ya que la batería podría explotar.
- No trate de extraer la batería integrada. El fabricante es el único que puede reemplazar la batería.

- La batería usada se debe colocar en una bolsa de plástico sellada y se debe desechar de forma segura y de conformidad con las normativas ambientales locales.
- La batería debe sacarse del aparato antes de desecharlo.
- Cargue únicamente el aparato con la base de carga incluida. Si utiliza otra base de carga, podría causar un incendio.
- No desenchufe el adaptador tirando del cable. Para desenchufar el aparato, tire del enchufe, no del cable.
- No manipule el enchufe ni desconecte el adaptador con las manos mojadas.
- No cargue ni utilice el aparato en exteriores.
- Evite posibles cortocircuitos eléctricos causados por tomas de corriente o enchufes.
- No cargue, desmonte o queme la batería desechada ni la esponja a temperaturas superiores a 60 °C.
- Antes de usar el aparato, asegúrese de que la tapa del cepillo giratorio esté bien colocada para evitar lesiones o daños.
- No introduzca ningún objeto en la boquilla del aparato.
- Si la boquilla se atasca, deje de utilizar el aparato. Retire cualquier residuo, como mechones de cabello, restos de tela o hilos de algodón, de la boquilla antes de usar la aspiradora; de lo contrario, la potencia de succión se verá reducida.
- Tenga especial cuidado al limpiar escaleras para evitar lesiones.
- No aspire líquidos inflamables o combustibles, como gasolina, ni utilice la aspiradora en zonas donde puedan estar presentes.
- No aspire sustancias tóxicas (como productos blanqueadores con cloro, agua con amoníaco, desatascadores de desagües, etc.).
- No lo use en espacios cerrados con pintura con base de aceite, sustancias a prueba de polillas, partículas inflamables u otras sustancias explosivas y tóxicas.
- No recoja objetos duros o afilados como vidrio, clavos, tornillos, monedas, etc.
- No recoja nada que esté humeando o quemándose, como cigarrillos, cerillas o cenizas calientes.
- Asegúrese de que la esponja del filtro esté bien colocada antes de usar la aspiradora. No use el aparato sin haber colocado antes el depósito de agua o los filtros.
- No guarde el aparato en un lugar donde pueda congelarse.

- No lo deje bajo la lluvia. Guárdelo en interiores.
- Use solo según lo descrito en este manual. Utilice solo los accesorios recomendados por el fabricante.
- Guarde el aparato colocándolo sobre una superficie plana.
- Utilice únicamente el limpiador de suelos proporcionado por eufy y en una dosis adecuada. No nos hacemos responsables de ningún daño o lesión causado por productos de limpieza de suelos no autorizados.
- No ingiera el líquido del limpiador de suelos. Si lo ingiriera accidentalmente, acuda a un médico o comuníquese con un centro de toxicología inmediato.
- Bajo condiciones abusivas, el líquido de la batería puede derramarse; evite el contacto. Si se produce contacto por accidente, enjuague con agua. Si el líquido entra en contacto con los ojos, busque ayuda médica de inmediato. El líquido derramado de la batería puede causar irritación o quemaduras.
- Evite que el aparato se active por accidente. Antes de levantar o manipular el aparato, compruebe que el interruptor esté apagado. No transporte el aparato con el dedo sobre el interruptor ni lo cargue mientras está encendido porque esto podría provocar accidentes.
- El aparato incluye una batería recargable de iones de litio. No exponga la batería ni el aparato al fuego ni a temperaturas excesivas (superiores a 130 °C), ya que podría incendiarse o explotar.
- Cargue, use y guarde el aparato en entornos con un rango de temperatura ambiente de 4 a 35 °C.
- Siga todas las instrucciones de carga y no cargue la batería fuera del rango de temperatura especificado en las instrucciones; de lo contrario, podría dañar la batería y aumentar el riesgo de incendio.
- Desenchufe el aparato de la toma de corriente antes de limpiarlo o realizar el mantenimiento.
- Antes de limpiarlo, vierta 2 tapas de la botella del limpiador de suelos en un depósito lleno de agua limpia con una proporción de dilución de 1:40.
- Tenga mucho cuidado al limpiar con el cepillo giratorio, ya que puede ser peligroso si el aparato pisa el cable de corriente.
- No use el cable para tirar de la aspiradora o transportarla ni como asa, no lo deje en medio al cerrar una puerta y no tire de él al pasar por esquinas o bordes afilados. No pise el cable con el aparato. Mantenga el cable alejado de superficies calientes.
- Apague todos los controles antes de desenchufar el dispositivo.
- Desenchufe el aparato antes de conectar la unidad principal o la base de carga.

• No modifique ni intente reparar el aparato o la batería, a excepción de lo que se indique en las instrucciones de uso y mantenimiento.

GUARDE ESTE MANUAL DE INSTRUCCIONES

Aviso




Este símbolo en el dispositivo o en su embalaje indica lo siguiente:
No deseche los aparatos eléctricos como residuos urbanos sin clasificar; utilice instalaciones de recogida independientes. Comuníquese con las autoridades locales para obtener información sobre los sistemas de recolección disponibles. Si los aparatos eléctricos se desechan en vertederos, las sustancias peligrosas pueden filtrarse al agua subterránea y entrar en la cadena alimentaria, dañando su salud y bienestar. Al cambiar dispositivos antiguos por nuevos, el minorista tiene la obligación legal de recuperar el dispositivo antiguo para su eliminación, sin cargo alguno.

Declaración de conformidad de la UE

Por la presente, Anker Innovations Limited declara que este producto tipo WR21 cumple las Directivas 2014/35/UE y 2014/30/UE.
El texto completo de la declaración UE de conformidad está disponible en la siguiente dirección de Internet:
<https://support.eufylife.com/s/articleRecommend?type=Download>


QUÉ HAY EN LA CAJA



Mango



Cuerpo principal



Base de carga



Herramienta de limpieza





Filtro adicional






Manual de usuario y otros documentos

En caso necesario, consulte la siguiente lista para comprar accesorios adicionales en eufylife.com.


Accesorios				
	WetVac Multi-Surface Rolling Brush	WetVac Carpet Rolling Brush	WetVac Replacement Filter	WetVac Hard Floor Cleaner
Modelo	T29X0	T29X1	T29X2	T29X3

Descripción general

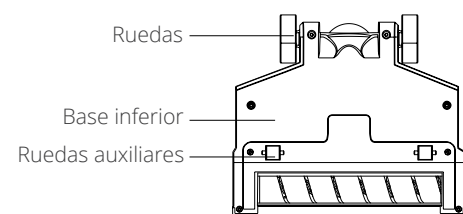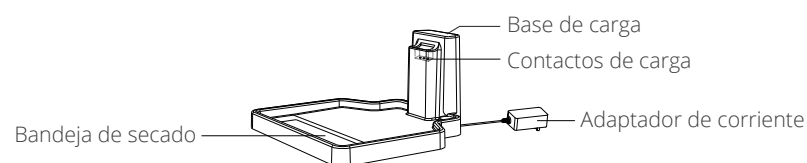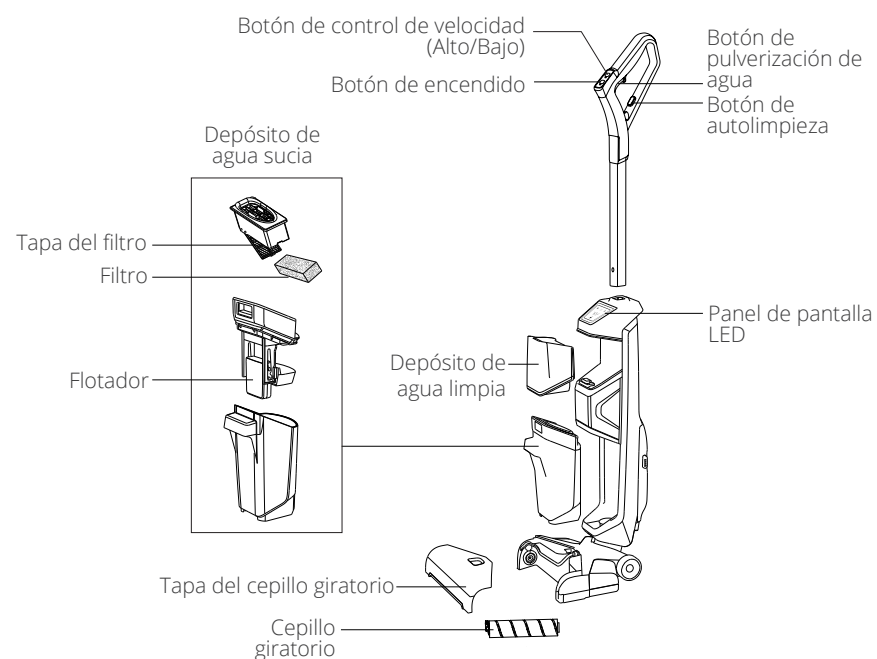

Montaje


La aspiradora consta de tres partes: mango, unidad principal y base de carga. Después de sacarla del embalaje, monte la aspiradora según se indica en la ilustración.

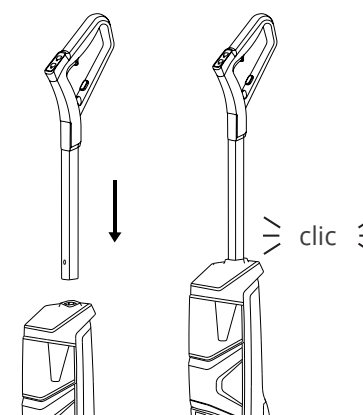

Cargando

La aspiradora funciona con una batería de iones de litio. Antes de usarla por primera vez, cargue la batería durante más de 5 horas.

1. Fije la aspiradora sobre la base de carga.
2. Conecte el adaptador a una toma de corriente. La pantalla LED se encenderá y esto indicará que la aspiradora está lista para cargarse.

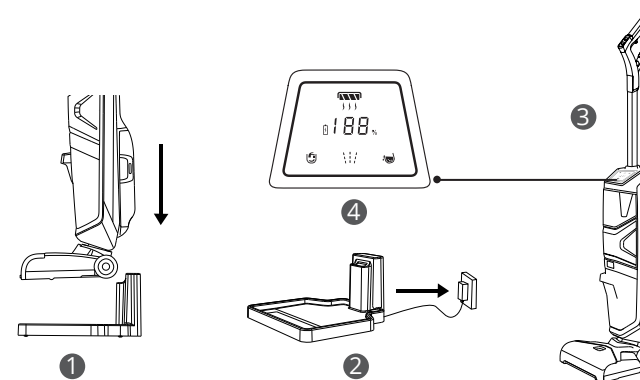

Selección del idioma para los mensajes de voz


1. Pise suavemente el pedal y tire del mango hacia atrás hasta que oiga un clic.
2. Mantenga pulsado el botón de pulverización de agua con una mano y el botón de autolimpieza con la otra mano para acceder al modo de selección de idioma.
3. Pulse el botón de pulverización de agua varias veces para moverse por los idiomas disponibles.
4. Cuando escuche el idioma deseado, pulse el botón de control de velocidad para confirmarlo. El idioma seleccionado se guardará.

Ajustar volumen

Mantenga pulsado el botón de autolimpieza durante 3 segundos para ajustar el nivel de volumen o desactivar las indicaciones de voz.



Cómo añadir agua y el limpiador para suelos

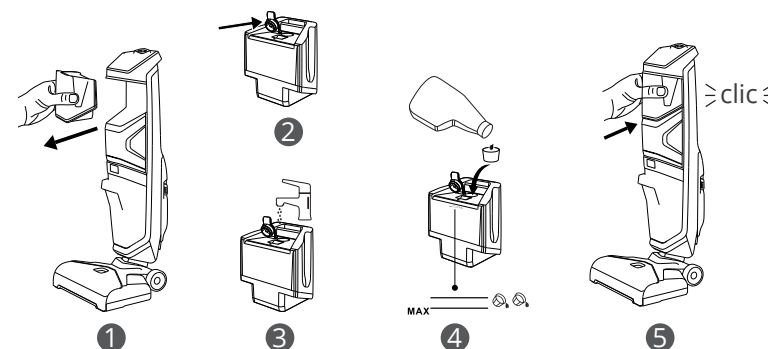


1. Retire el depósito de agua limpia de la unidad principal.
2. Abra la tapa de goma.
3. Añada agua hasta que llegue a la marca MAX.
4. Vierta 2 tapas de la botella del limpiador de suelos (se adquiere por separado) en el depósito de agua y luego ponga la tapa de goma.
5. Vuelva a fijar el depósito de agua en la unidad.




- No vierta demasiado líquido del limpiador. Utilice solo el limpiador de suelos proporcionado por eufy. Si se usa cualquier otro limpiador, esto podría causar daños importantes en la aspiradora.
- No añada agua caliente al depósito de agua.
- No coloque el depósito de agua en un microondas para calentarlo.
- Evite crear mucha espuma al añadir el limpiador de suelos ya que provocaría falsas alarmas.

Modo de uso de la aspiradora

1. Pise suavemente el pedal y tire del mango hacia atrás hasta que oiga un clic.
2. Pulse el botón de encendido. El cepillo giratorio comenzará a girar.

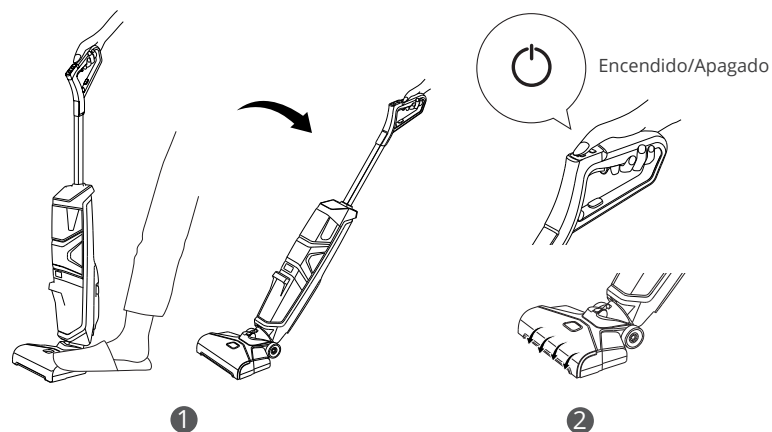

3. Pulse el botón de control de velocidad para seleccionar una velocidad de rotación: **Alto/Bajo**.
4. Pulse y luego suelte el botón de pulverización de agua. Se rociará agua y el líquido del limpiador de suelos en el cepillo giratorio.
5. Tras terminar de limpiar, empuje el mango hacia adelante hasta que escuche un clic. La aspiradora se apagará automáticamente y se reproducirá el mensaje de voz correspondiente.

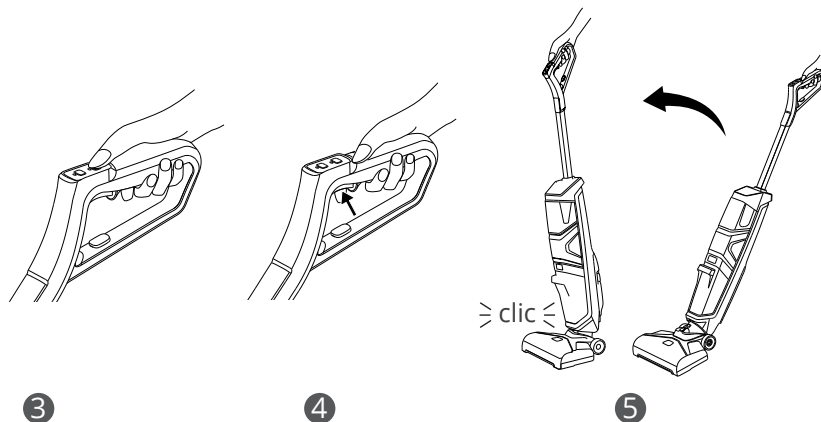


6. Coloque la aspiradora en la base de carga para cargarla y luego empezará a autolimpiarse y autosecarse (consulte la sección Mantenimiento).



• Para evitar olores desagradables, limpie el depósito de agua sucia después de cada uso (consulte la sección Mantenimiento).


Guía de pantalla LED

En la pantalla LED aparece el estado de funcionamiento de la aspiradora.

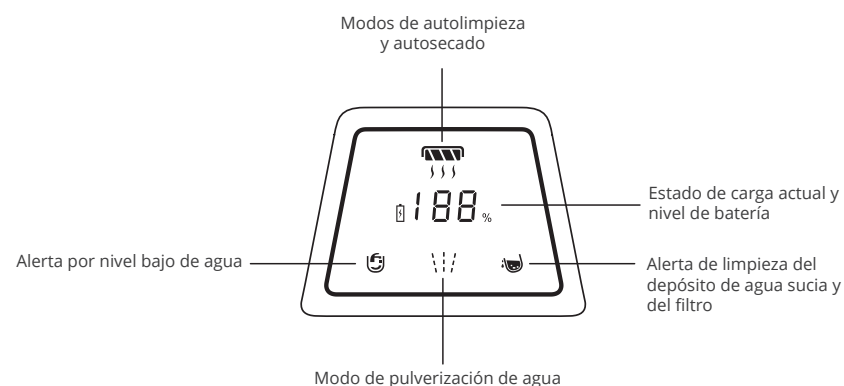


Cómo transportarla con el asa

Le recomendamos que mueva y transporte la aspiradora levantándola por el asa ergonómica especialmente diseñada para esta, en lugar del mango, para evitar que se dañe.

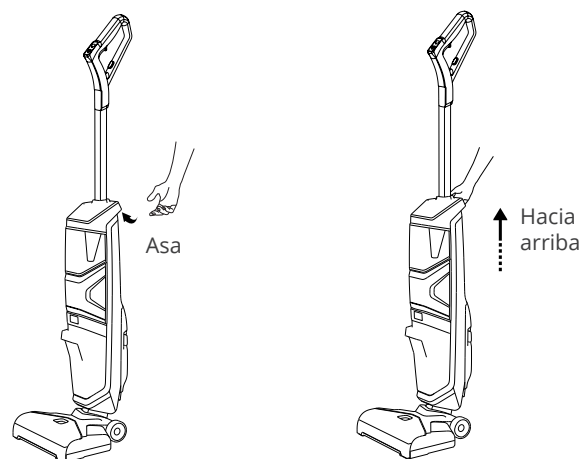


El flotador es lo que evita que el depósito de agua sucia se desborde. Cuando el depósito de agua sucia está lleno, el flotador apagará el motor de succión y emitirá un fuerte sonido como aviso de que el depósito debe limpiarse.

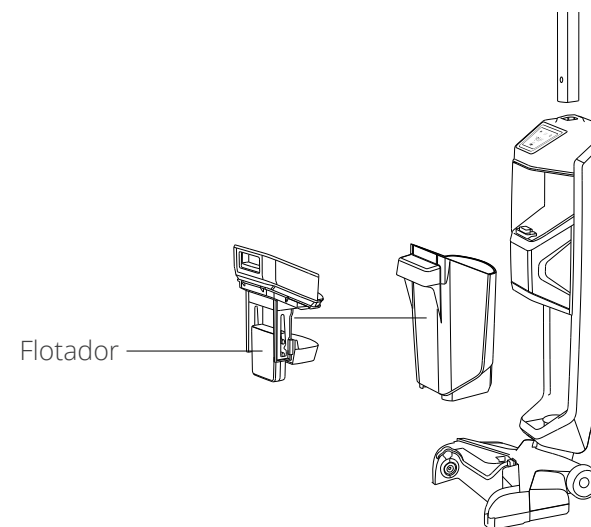


Mantenimiento

Limpieza del depósito de agua sucia y la esponja del filtro

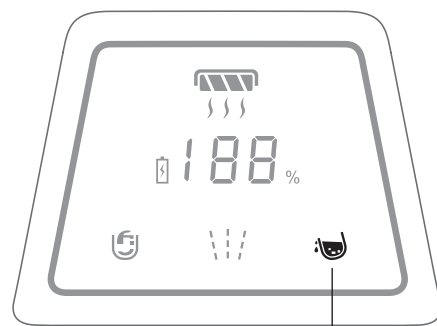


Limpieza de depósito de agua limpia y filtro


1. Pulse el botón de extracción y sostenga el tirador tal y como se ve a continuación.
2. Saque el depósito de agua sucia.
3. Quite la pieza del filtro. Retire el polvo y el agua sucia.

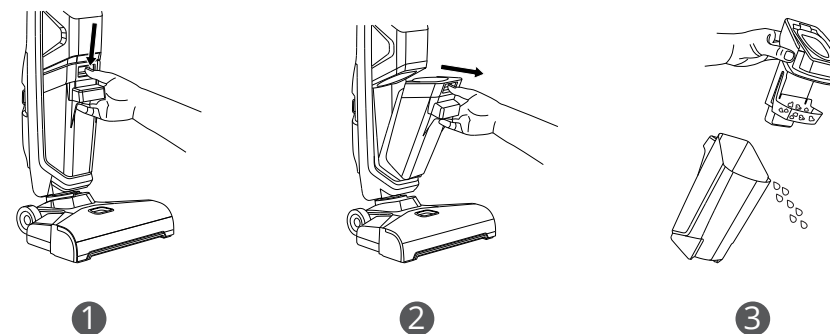


4. Enjuague bien el depósito con agua. No utilice herramientas de materiales duros para limpiar o frotar la parte interior del depósito de agua, ya que podría dañar el revestimiento de protección.
5. Quite la tapa del filtro.
6. Retire y limpie la esponja del filtro.

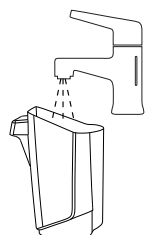

4




5

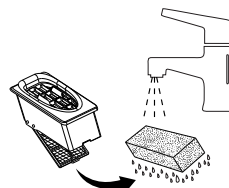


6


7. Limpie la pieza del filtro con agua o un detergente neutro.
8. Limpie el flotador y el recipiente superior tal como se muestra en la ilustración.
9. Si queda algún residuo alrededor de la zona, tal y como se ve en la ilustración, límpielo con un paño o una toalla.

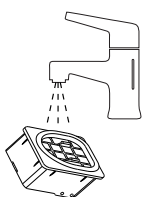

7

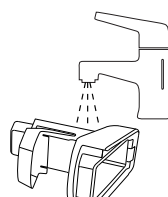


8

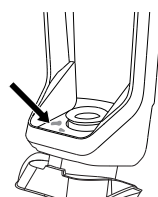

9


10. Asegúrese de secar al aire todas las piezas.
11. Vuelva a montarlas.

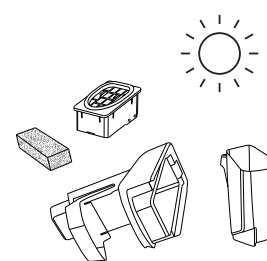


10




11

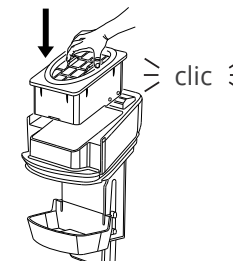


12. Vuelva a montar el depósito de agua sucia.
13. Vuelva a colocar el depósito de agua sucia en la unidad principal.

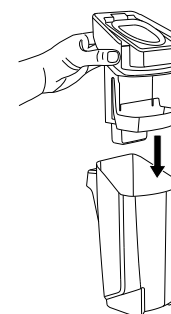

12

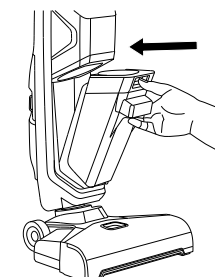

13

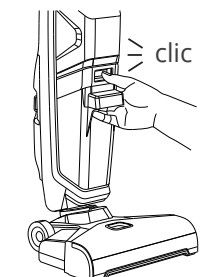


Asegúrese de haber limpiado el depósito de agua sucia y que todas las piezas estén completamente secas antes de usar la aspiradora.


Limpieza del cepillo giratorio

! Antes de quitar la tapa del cepillo giratorio, compruebe que la aspiradora esté apagada.

1. Tire hacia usted para abrir la tapa del cepillo giratorio.
2. Levante el cepillo giratorio para quitarlo.


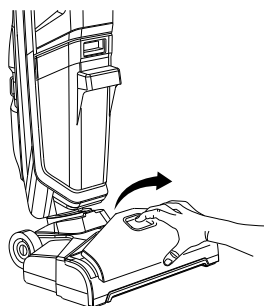


1


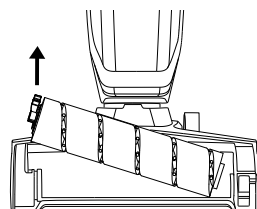


2



3. Limpie el cepillo giratorio con la herramienta de limpieza incluida.

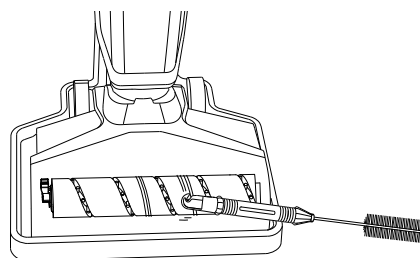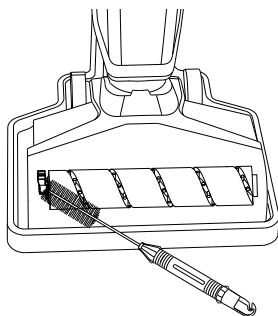


4. Para volver a colocar el cepillo giratorio, fije el extremo de este en un lado del cabezal y luego meta el pasador del cepillo giratorio en el orificio del otro lado del cabezal. Compruebe que el cepillo giratorio esté bien instalado porque, de lo contrario, podría dañarse al usarlo.
5. Vuelva a poner la tapa del cepillo giratorio.

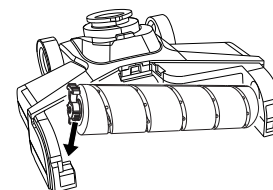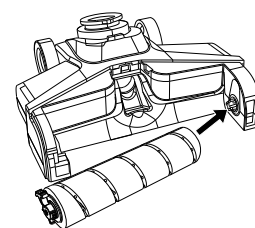

4

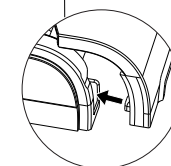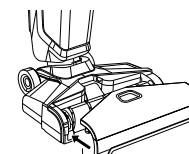


5

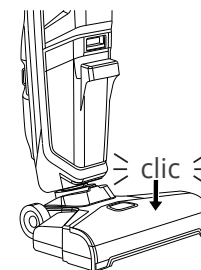


Autolimpieza y autosecado


1. Después de limpiar, coloque la aspiradora en la base de carga.
2. Compruebe que el nivel de la batería sea alto y que haya suficiente agua en el depósito de agua limpia.
3. Pulse el botón de autolimpieza. La aspiradora empezará a limpiarse y secarse por sí misma. Tardará un rato y escuchará un mensaje de voz cuando termine el autosecado.

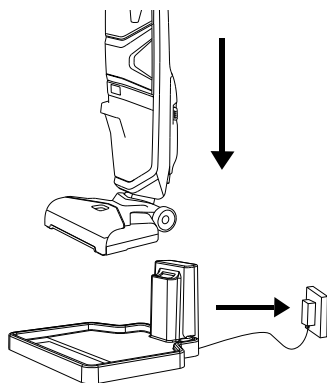


1

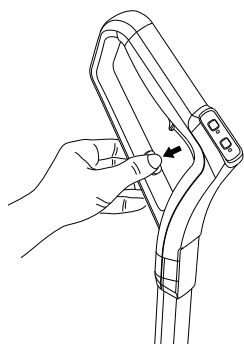

2

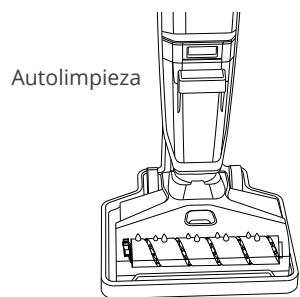

3

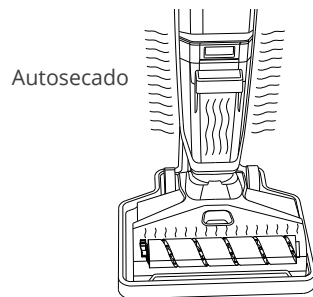

4

Solución de problemas

Si la aspiradora no funciona correctamente:

1. Asegúrese de que la batería esté totalmente cargada.
2. Recuerde que debe tirar del mango y compruebe que escucha el clic correspondiente antes de usarla.
3. Revise el cepillo giratorio para ver si está atascado.
4. Si la función de autolimpieza no responde porque el nivel de batería es bajo, cargue la aspiradora durante 5 minutos antes de reiniciar la autolimpieza.

La potencia de succión es menor o se produce un ruido fuerte:

1. Compruebe si hay algún objeto atascado en la boquilla.
2. Compruebe que el depósito de agua sucia esté colocado correctamente.
3. Fíjese si el depósito de agua sucia y la esponja del filtro están limpios.

Especificaciones

Modelo	WR21
Potencia de carga	100-240 V CA
Potencia nominal	250 W
Duración de la batería	≥32 minutos
Energía de la batería	115 Wh
Capacidad de la batería	4000 mAh
Tiempo de carga	<5 horas
Ruido	≤72 dBA
Capacidad del depósito de agua limpia	600 ml
Capacidad del depósito de agua sucia	550 ml

Servicio de atención al cliente

Para ver tutoriales de vídeo, preguntas frecuentes, manuales y demás información, visite: **<https://support.eufylife.com/>**

Garantía: Garantía limitada de 12 meses



support@eufylife.com



www.eufylife.com



(US) +1 (800) 988 7973 Mon-Sat 6:15 AM - 6:45 PM (PT);

Sun 6:15 AM - 5:45 PM (PT)

(UK) +44(0)1604 936200 Mon-Sun 6:00-19:00

(DE) +49(0)69 9579 7960 Mo-Fr 8:00-16:00; Sa 9:00-16:00

(日本) 03 4455 7823 月-金 9:00 - 17:00

Para obtener más números de teléfono de asistencia, visite:

<https://support.eufylife.com/s/phonecontactus>

O escanee el código QR :



@EufyOfficial



@EufyOfficial



@EufyOfficial



@EufyOfficial