

SYLVANIA

KARAOKE 2 X 8" LIGHT UP BLUETOOTH SPEAKER-FM RADIO-USB RECORDING Model No: SP782



User Manual

SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Packing list

Upon opening the package, please check for the following items:
1 x Speaker
1 x USB charging cable
1 x Instruction manual

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.


Specification

Input: DC 5V
Drivers: 2 x 8" Full Range
FM: 87.5~108.0 MHz
Battery Capacity: 1500mAh
Transmission Distance: 10m
Dimension: (WxHxD): 245x560x185mm

2

Product overview

1. Power/VOLUME -&+
RED=Charging
Light off = Fully Charged
2. Charging Indicator
3. DC interface (5V)
4. MODE/LED ON
(Long press to turn on/off light; Lightly press to enter into selection for Bluetooth, FM Radio, AUX Input, USB, TF)
5. Previous track/TWS
6. Play/Pause/REC
7. Next track
8. TF/USB input
9. AUX input
10. MIC input

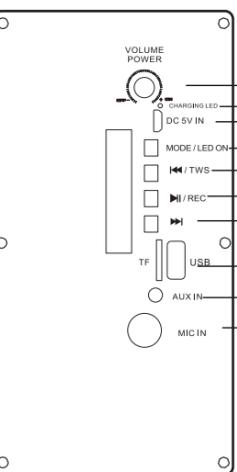

3

Playing recording function

1. After the portable speaker is turned on, insert the TF Card or U disk to the TF slot or USB port, press the Mode button to the Bluetooth mode, connect it with your Bluetooth device and play the music, long press the REC button around 3 seconds, you will here a prompt voice "ding" means the TF card/USB is starting recording, long press the play/pause button for 3 seconds again and you will here prompt voice "ding ding", that means stop recording.
2. If you want to play this recording sound, press the Mode button to the USB or TF card mode, press the next button to find out this song and play it.

Note :

- a) When your TF card and U disk insert to the speaker at same time , it will record to your U disk when recording.
- b) The recording only works in Bluetooth mode, can not record in FM, Aux mode and can't record Microphone's sound.
- c) It's better to turn the Bluetooth devices volume to maximum during recording.
- d) It will be stopped recording when pressing the mode button during recording.

POWER SOURCE

1. Please charge the unit at least 4 hours before first time using.
2. Twist the dial clockwise/anticlockwise to switch on/off the unit.

CHARGE THE BATTERY

When the battery is charging, the CHARGE STATUS lights shows on the LED display is red. After the battery has fully charged, the light turns off.

1. Connect the USB charge cable to the DC5V interface of the speaker firmly.
2. When the battery is fully charged, please disconnect the USB charge cable from the speaker.
3. The speaker works normally when charging.

POWER/VOLUME

Twist the dial clockwise/anticlockwise to increase/decrease the volume.
Twist the dial clockwise/anticlockwise to power on or off the unit.

PREVIOUS/NEXT BUTTON

Under playing status, press

4

PREVIOUS/NEXT

button to get back to a previous or next song.

PAUSE/PLAY BUTTON

To stop playing the current track, please press PAUSE/PLAY button on the control panel. Press it once again to continue playing.

MODE/LED ON

Long press to turn on/off light. Lightly press to enter into playing mode selection(Bluetooth,FM Radio,AUX Input, USB,TF).

AUX IN JACK

1. Connect an audio cable to the AUX IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc, then select AUX by pressing the MODE/LED ON button on the control panel .
2. Play from an external audio device.

MIC IN JACK

Plug in microphone directly for playing.

USB JACK

Insert USB directly for playing.

TF JACK

Insert TF card directly for playing.

FM FUNCTION

Lightly press MODE/LED ON button to switch to FM mode. Press

5

PLAY/PAUSE button on control panel for automatic searching and saving the radio stations, by pressing PREVIOUS or NEXT you can select a previous or next radio station.

Bluetooth:

Short Press MODE/LED ON button on control panel to select Bluetooth mode.
Simultaneously turn the Bluetooth setting on your phone, tablet or any other bluetooth enabled audio device and select "Syl SP782"(no need to match code), the unit and device will then connected via Bluetooth. Press the "NEXT SONG" and "PREVIOUS SONG" button on the control panel to select the song, press " PLAY/ PAUSE" button to control the playing status.

TWS: (True Wireless Speaker)

- It needs two speakers to make a TWS. When you had two speakers, you can make a TWS as below steps:
1. Don't connect to this speaker with Bluetooth devices.
 2. Turn on both speakers and press the mode button to change to Bluetooth mode.
 3. Press and hold the TWS button, the display shows 't on' that means the TWS on and it will enter to pairing mode. It will have a tone coming out after both speakers connected together. (If you want to turn this TWS off, press and hold again, the display shows 't off', It will be disconnected TWS connection).
 4. Turn the Bluetooth devices to search the Bluetooth name "Syl SP782" and tap to connect it. It will have a tone coming out from this speaker after connected successfully.
 5. Now you can play the music from your Bluetooth devices.

6

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

7

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

8

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON,
L5S 2A3 www.curtisint.com

9

SYLVANIA

KARAOKE 2 X 8 "

HAUT-PARLEUR BLUETOOTH LUMINEUX RADIO-FM-USB ENREGISTREMENT

Numéro de modèle: SP782



Manuel de l'utilisateur

SYLVANIA est une marque déposée de
OSRAM Sylvania Inc. utilisé sous licence.

CHER CLIENT

Afin d'obtenir les meilleures performances de votre produit, veuillez lire attentivement ce manuel d'instructions avant utilisation et conserver pour référence future.

REMARQUE

Cette unité peut être soumise aux changements de spécifications, caractéristiques et / ou fonctionnement sans préavis à l'utilisateur, afin de continuer à améliorer et à développer sa technologie.

Liste de colisage

À l'ouverture du colis, veuillez vérifier les éléments suivants:


- 1 x haut-parleur
- 1 x câble de chargement USB
- 1 x manuel d'instructions

Spécification

- Entrée: DC 5V
- Pilotes: 2 x 8 "gamme complète
- FM: 87,5 ~ 108,0 MHz
- Capacité de la batterie: 1500mAh
- Distance de transmission: 10m
- Dimension: (LxHxP): 245x560x185mm

Manuel de l'utilisateur

1. Puissance/VOLUME-&+
ROUGE = En charge
Lumière éteinte =
entièrement chargée
2. Indicateur de charge
ROUGE = En charge
Lumière éteinte =
entièrement chargée
3. Interface DC (5V)
4. MODE / LUMIÈRE
(Appui long pour tourner
lumière marche / arrêt;
Légèrement légèrement
entrer en sélection pour
Bluetooth, Radio FM,
Entrée AUX, USB, TF)
5. Piste précédente /
pause et TWS
6. lecture / REC
7. Piste suivante
8. Entrée TF/USB
9. Entrée AUX
10. Entrée MIC

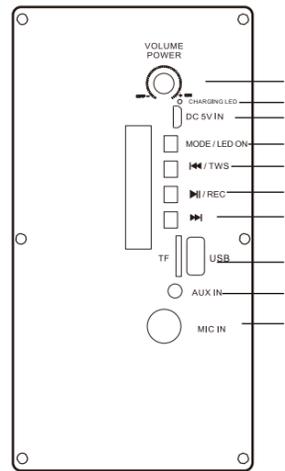

SOURCE D'ÉNERGIE

1. veuillez charger l'unité au moins 4 heures avant la première utilisation.
2. Tournez le cadran dans le sens horaire / antihoraire pour allumer / éteindre l'appareil.

CHARGER LA BATTERIE

Lorsque la batterie est en charge, le voyant ÉTAT DE CHARGE s'allume s'affiche sur l'écran LED est rouge. Une fois la batterie complètement déchargée chargé, la lumière s'éteint.

1. Connectez le câble de charge USB à l'interface DC5V du haut-parleur fermement.
2. Lorsque la batterie est complètement chargée, veuillez déconnecter l'USB câble de charge du haut-parleur.
3. Le haut-parleur fonctionne normalement lors de la charge.

PUISSANCE / VOLUME

Tournez le cadran dans le sens horaire / antihoraire pour augmenter / diminuer le le volume.
Tournez le cadran dans le sens horaire / antihoraire pour allumer ou éteindre l'appareil.

BOUTON PRÉCÉDENT / SUIVANT

Sous statut de lecture, affichés sur

PRÉCÉDENT SUIVANT

Pour revenir à une chanson précédente ou suivante.

BOUTON PAUSE / JOUER

Pour arrêter la lecture de la piste en cours, veuillez appuyer sur PAUSE / PLAY

sur le panneau de commande. Appuyez encore une fois pour continuer en jouant.

MODE / LUMIÈRE

Appuyez longuement pour allumer / éteindre la lumière. Ont légèrement pour entrer dans le jeu sélection du mode (Bluetooth, radio FM, entrée AUX, USB, TF).

AUX IN JACK

1. Connectez un câble audio à la prise AUX IN de l'enceinte et à la prise de sortie audio sur les périphériques audio externes tels que lecteur MP3, discman, etc., puis sélectionnés AUX par en affichant sur le bouton MODE / LED ON du panneau de commande.
2. Jouez à partir d'un périphérique audio externe.

MIC IN JACK

Branchez le microphone directement pour jouer.

USB JACK

Insérez directement l'USB pour jouer.

TF JACK

Insérez la carte TF directement pour jouer.

FONCTION FM

Appuyez légèrement sur le bouton MODE / LED ON pour passer en mode FM. presse Bouton PLAY / PAUSE sur le panneau de commande pour une recherche automatique et enregistrer les stations de radio, en prévenant sur PRÉCÉDENT ou SUIVANT vous pouvez sélectionner une station de radio précédente ou suivante.

Bluetooth:

Appuyez sur le bouton MODE / LED ON du panneau de commande pour sélectionner Mode Bluetooth.
Activez simultanément le paramètre Bluetooth sur votre téléphone, votre tablette ou tout autre périphérique compatible audio et Bluetooth "Syl SP782" (pas besoin de faire correspondre le code), l'unité et l'appareil puis connecté via Bluetooth. Appuyez sur "NEXT SONG" et "PREVIOUS SONG" sur le panneau de commande pour sélectionné chanson, affichée sur le bouton "PLAY / PAUSE" pour contrôler la lecture statut.

TWS: (True Wireless Speaker)

Il a besoin de deux haut-parleurs pour faire un TWS. Quand tu en avais deux haut-parleurs, vous pouvez créer un TWS comme suit:

1. Ne vous connectez pas à ce haut-parleur avec des appareils Bluetooth.
2. Allumez les deux haut-parleurs et affichés sur le bouton de mode pour changer en mode Bluetooth.
3. Appuyez et maintenez enfoncé le bouton lecture / pause d'un haut-parleur pendant 3 secondes et attendez que les deux enceintes se connectent. Il aura un ton sortant de ces haut-parleurs après connecté avec succès.
4. Tournez les appareils Bluetooth pour rechercher le nom Bluetooth "Syl SP782" et affichés sur pour le connecteur. Il aura une tonalité à venir hors de ce haut-parleur après une connexion réussie.
5. Vous pouvez maintenant écouter la musique de vos appareils Bluetooth

Déclaration de la FCC

REMARQUE: cet équipement a été testé et jugé conforme avec les limites d'un appareil numérique de classe B, conformément à la partie 15 du les règles de la FCC. Ces limites sont prévues pour fournir des protection efficace contre les interférences nuisibles dans un installation. Cet équipement produit des utilisations et peut rayonner l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut provoquer des interférences radio aux communications. Cependant, il n'y a aucune garantie cette interférence ne se produit pas dans une installation particulière. Si ce les produits provoqués des interférences nuisibles à la radio ou à la télévision. réception de la mission, qui peut être déterminée en tournant éteindre et rallumer l'équipement, l'utilisateur est encouragé à essayer de corriger l'ingérence d'une ou plusieurs des mesures suivantes:
- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'équipement et le récepteur.
-Connectez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.
-Consulter le revendeur ou un technicien radio / TV expérimenté pour aide Changements ou modifications non reconnus par le la partie responsable de la conformité pourrait annuler l'autorisation de l'utilisateur pour faire fonctionner l'équipement. Cet appareil est conforme à la partie 15 des règles de la FCC. Opération est soumis aux deux conditions suivantes:

- (1) cet appareil ne doit pas provoquer d'interférences nuisibles, et
- (2) cet appareil doit accepter toute interférence reçue, y compris

des interférences pouvant entraîner un fonctionnement indésirable

90 jours de garantie

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jugé défectueux, à notre choix; Cependant, vous êtes responsable de tous les coûts associés au retour du produit. Si le produit ou le composant n'est plus disponible, nous le remplacerons par un produit similaire de valeur égale ou supérieure. Avant l'envoi d'un produit de remplacement, le produit doit être rendu inutilisable ou nous être renvoyé.

Cette garantie ne couvre pas le verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).

Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifique. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisant pas les limitations de garanties implicites ou de dommages spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner.

Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

Pour faire une demande de garantie, ne retournez pas ce produit au magasin. Veuillez envoyer un courriel électronique à support@curtiscs.com ou appeler le 1-800-968-9853.

veuillez appeler le: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNITÉ 15, MISSISSAUGA, ON,
L5S 2A3 www.curtisint.com