

SAMSUNG

USER MANUAL

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at www.samsung.com
Model _____ Serial No. _____

The figures and illustrations in this User Manual are provided for reference only and may differ from the actual product appearance.
The product design and specifications may change without notice.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the Samsung service centre.

Country	Samsung Service Centre	Web Site
SAUDI ARABIA	8002474357 (08:00 ~ 20:00 HELP) From Inside Saudi Arabia +966112614718 From outside Saudi Arabia (Call charges may be applied) Digital services (24/7 HELP)	www.samsung.com/sa_en/support (English) www.samsung.com/sa/support (Arabic)
PAKISTAN	0800-Samsung (7267864)	www.samsung.com/pk/support
TUNISIA	80100 012	www.samsung.com/n_africa/support
U.A.E	800-SAMSUNG (800 - 726 7864)	
OMAN	800-SAM CS (800-72627)	
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
BAHRAIN	8000-GSAM (8000-4726)	
QATAR	800-CALL (800-2255)	
TÜRKİYE	444 7711	www.samsung.com/tr/support
JORDAN	0800-22273 06-577-7444 WhatsApp +962-79-777-7421	
LEBANON	1598 WhatsApp +962-79-777-7421	www.samsung.com/levant/support
IRAQ	80010080 WhatsApp +962-79-777-7421	



BN68-14481E-02

© 2022 Samsung Electronics Co., Ltd. All rights reserved.


01 What's in the Box?

Make sure the following items are included with your TV. If any items are missing, contact your dealer.

- Samsung Smart Remote
- User Manual
- Warranty Card / Regulatory Guide (Not available in some locations)
- TV Power Cable

- The items' colours and shapes may vary depending on the models.
- Cables not included can be purchased separately.
- Check for any accessories hidden behind or in the packing materials when opening the box.

Warning: Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV at the edges, as shown.

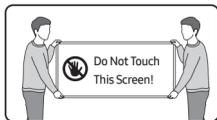

02 Initial Setup


When you turn on your TV for the first time, it immediately starts the Initial Setup. Follow the instructions displayed on the screen and configure the TV's basic settings to suit your viewing environment.

You can connect The Sero via the SmartThings app on your mobile device to control the **Portrait Mode** and the related functions on the TV.

Using the TV Controller

Using the **TV Controller** button at the top on the rear panel, you can turn on The Sero. If the button is pressed again with the power on, you can see the function menus on the screen. The usage of the menus is shown in the following figure.

- Remove the protective film attached on the SAMSUNG logo. The reception sensitivity may decrease when the sensor is blocked.

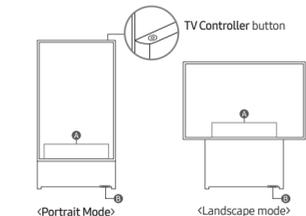

- A Control menu
- B Eco Sensor / Microphone switch / Remote control sensor

Before Reading This User Manual

This TV comes with this User Manual and an embedded e-Manual (📖) > Menu > Settings > Support > Open e-Manual.

On the website (www.samsung.com), you can download the manuals and see its contents on your PC or mobile device.

Warning! Important Safety Instructions

Please read the Safety Instructions before using your TV. Refer to the table below for an explanation of symbols which may be on your Samsung product.

CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.	
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

How to turn on and off the Microphone



You can turn on or off the microphone by using the switch at the bottom of the TV. If microphone is turned off, All voice and sound features using microphone are not available.

- The position and shape of the microphone switch may differ depending on the model.
- During analysis using data from the microphone, the data is not saved.

03 Troubleshooting and Maintenance

Troubleshooting

For more information, refer to "Troubleshooting" or "FAQ" in the e-Manual.

📖 > Menu > Settings > Support > Open e-Manual > Troubleshooting or FAQ

If none of the troubleshooting tips apply, please visit "www.samsung.com" and click Support or contact the Samsung service centre.

- This TFT LED panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- To keep your TV in optimum condition, upgrade to the latest software. Use the **Update Now** or **Auto update** functions on the TV's menu (📖 > Menu > Settings > Support > Software Update > Update Now or Auto update).
- In **Portrait Mode**, some apps or external inputs may not support the full screen.

Power

- Do not overload wall outlets, extension cords, or adaptors beyond their voltage and capacity. It may cause fire or electric shock.

Refer to the power specifications section of the manual and/ or the power supply label on the product for voltage and amperage information.

- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.
- Never insert anything metallic into the open parts of this apparatus. This may cause electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Be sure to plug in the power cable until it is firmly seated. When unplugging the power cable from a wall outlet, always pull on the power cable's plug. Never unplug it by pulling on the power cable. Do not touch the power cable with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or Samsung service centre.
- To protect this apparatus from a lightning storm, or to leave it unattended and unused for a long time, be sure to unplug it from the wall outlet and disconnect the antenna or cable system.
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cable to generate sparks and heat or by causing the insulation to deteriorate.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure that the wall outlet and power plug are readily accessible.

Installation


- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or moisture.
- Be sure to contact an authorised Samsung service centre for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do so may lead to serious damage to your TV.
- Do not expose this apparatus to dripping or splashing.

Providing proper ventilation for your TV

Leave a space around the product for ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.

For installation, be sure to secure the spaces as shown in the figure.

- When you install your TV with a stand, we strongly recommend you use parts provided by Samsung Electronics only. Using parts provided by another manufacturer may cause difficulties with the product or result in injury caused by the product falling.

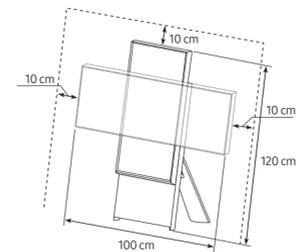

Safety Precaution

Using the stand provided with the product, install The Sero on a flat surface.



Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang on or destabilise the TV. This action may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your TV.



WARNING: Never place a television set in an unstable location. The television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Always use cabinets or stands or mounting methods recommended by Samsung.
- Always use furniture that can safely support the television set.
- Always ensure the television set is not overhanging the edge of the supporting furniture.
- Always educate children about the dangers of climbing on furniture to reach the television set or its controls.
- Always route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- Never place a television set in an unstable location.
- Never place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Never place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Never place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.



04 Specifications and Other Information

Specifications

Display Resolution

3840 x 2160

Model Name

QA43LS05B

(Saudi Arabia only: QA43LS05BAU)

Sound (Output)

60 W

Operating Temperature

50 °F to 104 °F (10 °C to 40 °C)

Operating Humidity

10 % to 80 %, non-condensing

Storage Temperature

-4 °F to 113 °F (-20 °C to 45 °C)

Storage Humidity

5 % to 95 %, non-condensing

Notes

- This device is a Class B digital apparatus.
- For information about the power supply, and more information about power consumption, refer to the information on the label attached to the product.
 - On most models, the label is attached to the back of the TV. (On some models, the label is inside the cover terminal.)
- The images and specifications of the Quick Setup Guide may differ from the actual product.

Decreasing power consumption

When you shut the TV off, it enters Standby mode. In Standby mode, it continues to draw a small amount of power. To decrease power consumption, unplug the power cable when you don't intend to use the TV for a long time.

Licences

Dolby Audio

POWERED BY

QUICK SET

HEVC Advance
Covered by Patents at patentist.hevcadvance.com

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

- When you have to relocate or lift the TV for replacement or cleaning, be sure not to pull out the stand.

Precautions for moving The Sero

Lift the product by two persons upright only in portrait mode.

- ⚠ Never move the product in landscape mode.
- ⚠ If the product falls, it may cause injury or product damage. Be careful not to hurt hands or feet.
- ⚠ Be careful not to hold the screen display while lifting the product.
- ⚠ Do not lift the product by yourself.
- ⚠ Never move the product by dragging it.
- ⚠ Never hold the display for moving

Operation

- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Store the accessories (remote control or etc.) in a location safely out of the reach of children.
- Do not drop or strike the product. If the product is damaged, disconnect the power cable and contact a Samsung service centre.
- Periodically remove dust, even if the surface is not contaminated or stained.
 - Dust adhered to the surface for a prolonged period of time may cause stains.
- Do not use a nail or other tools to scratch the dirt off. It may damage the fabric.
 - To remove oil or liquid stains, use a clean white cloth wet with water. If the stain persists, wipe it with a cloth and a mixture of water and neutral detergent (such as dish soap).
 - A non-neutral detergent or cleaner may cause discoloration or fabric damage.
 - After cleaning, use a dry cloth or hairdryer to dry the area.
 - Do not use excessive force, to avoid discoloration or fabric damage.
- **WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**



Recommendation - Jordan Only



Hereby, Samsung Electronics, declares that this TV is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The official Declaration of Conformity may be found at <http://www.samsung.com>, go to Support > Search Product Support and enter the model name.

This equipment may only be used indoors.

This equipment may be operated in Jordan.



SAMSUNG

دليل المستخدم

شكراً لشرائك هذا المنتج من Samsung. للحصول على خدمة أكثر تكاملاً، نرجي تسجيل المنتج على الموقع www.samsung.com الرقم التسلسلي

توفر الأشكال والأمنلة التوضيحية الواردة في دليل المستخدم هذا بفرص التوضيح فقط وقد تختلف عن المظهر الحقيقي للمنتج. علماً بأنه قد يتم تغيير تصميم المنتج ومواصفاته دون إخطار.

اتصل بـ*سامسونج* في جميع أنحاء العالم

إذا كنت لديك أي أسئلة أو تعليقات خاصة بمنتجات Samsung، فيرجي الاتصال بمركز خدمة Samsung.

البلد	مركز خدمة Samsung ☎	موقع ويب
 SAUDI ARABIA	8002474357 (08:00 ~ 20:00 HELP) From Inside Saudi Arabia +966112614718 From outside Saudi Arabia (Call charges may be applied)	www.samsung.com/sa_en/support (English) www.samsung.com/sa/support (Arabic)
 PAKISTAN	Digital services (24/7 HELPL) 0800-Samsung (7267864) 80 100 012	www.samsung.com/pk/support
 TUNISIA	800-SAMSUNG (800 - 726 7864)	www.samsung.com/n_africa/support
 U.A.E	800-SAM CS (800-726277)	
 OMAN	183-CALL (183-2255)	www.samsung.com/ae/support (English)
 KUWAIT	8000-GSAM (8000-4726)	www.samsung.com/ae_ar/support (Arabic)
 BAHRAIN	800-CALL (800-2255)	
 QATAR	444 77 11	
 TÜRKİYE	0800-22273 06-577-7444	www.samsung.com/tr/support
 JORDAN	1598	
 LEBANON	WhatsApp +962-79-777-7421	www.samsung.com/levant/support
 IRAQ	800100800 WhatsApp +962-79-777-7421	

© عام 2022 لشركة Samsung Electronics Co., Ltd جميع الحقوق محفوظة.

01 محتويات العبوة

يرجى التأكد من وجود العناصر التالية مع التلفزيون. في حالة عدم وجود أي عناصر، اتصل بالموزع الذي تتعامل معه.

- وحدة التحكم عن بعد ل Samsung Smart
- دليل المستخدم
- بطاقة الضمان / دليل اللوائح التنظيمية (لا يتوفران في بعض المواقع)
- كبل الطاقة للتلفزيون

- قد تختلف ألوان العناصر وأشكالها وفقاً للطرز.
- يمكن شراء الكبلات غير المرفقة بشكل منفصل.
- تحقق من عدم وجود أي ملحقات مخفية أو موجودة في مواد التغليف عند فتح العبوة.

تحذير: قد تتلف الشاشات من الضغط المباشر عند التعامل معها بطريقة غير صحيحة. نوصي برفع التلفزيون من الجوانف كما هو موضح.



لا تلمس هذه الشاشة!

02 الإعداد المبدئي


عند قيامك بتشغيل التلفزيون للمرة الأولى، فإنه يبدأ بإجراء "الإعداد المبدئي" على الفور. يمكنك اتباع التعليمات الموضحة على الشاشة، وتكوين الإعدادات الأساسية للتلفزيون لتتوافق مع بيئة العرض لديك.

يمكنك توصيل The Serو عن طريق التطبيق SmartThings في جهاز المحمول للتحكم في الوضع الرأسي والوظائف ذات الصلة على التلفزيون.

استخدام وحدة التحكم في التلفزيون

باستخدام الزر وحدة التحكم في التلفزيون أعلى اللوحة الخلفية، يمكنك تشغيل The Serو. في حال الضغط على الزر مرة أخرى في وضع التشغيل، يمكنك الاطلاع على قوائم الوظائف على الشاشة. يوضح الشكل التالي استخدام القوائم.

- قم بإزالة الطبقة الواقية المرفقة على الشعار SAMSUNG . قد تقل حساسية الاستقبال عند إعاقة المستشعر.

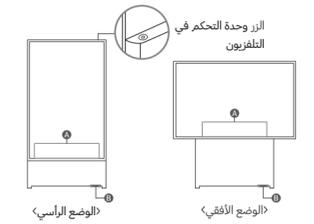

A قائمة التحكم

B مستشعر Eco / مفتاح الميكروفون / مستشعر جهاز التحكم عن بعد

قبل قراءة دليل المستخدم

يأتي هذا التلفزيون مزوداً بدليل المُستخدم هذا ودليل إلكتروني مضمناً ⓘ ☰ ☰ قائمة > ⚙️ الإعدادات > **الدعم** > فتح **e-Manual**.

يمكنك تنزيل الأدلة من موقع الويب (www.samsung.com) والاطلاع على محتواها على جهاز الكمبيوتر أو على جهازك المحمول.

تحذير! إرشادات هامة للحفاظ على السلامة

يرجى قراءة إرشادات السلامة قبل استخدام التلفزيون. ارجع إلى الجدول أدناه لتوضيح الرموز التي قد توجد في جهاز Samsung لديك.

تنبيه	
خطر التعرض لصدمة كهربائية. لا تفحسه.	
تنبيه للحد من خطر التعرض لصدمة كهربائية. لا تقم بإزالة الغطاء (أو الجزء الخلفي). فلا توجد أجزاء داخلية قابلة للصيانة من قبل المستخدم. فأطلب من الأفراد المؤهلين القيام بجميع أعمال الصيانة.	
 يشير هذا الرمز إلى وجود فولت عالي بالداخل. فمن الخطر أن تلمس أي جزء داخلي بهذا المنتج بأي شكل من الأشكال.	
 يشير هذا الرمز إلى أنه قد تم تضمين إرشادات مهمة تتعلق بالتشغيل والصيانة مع هذا المنتج.	
 منتج من الدرجة الثانية؛ يشير هذا الرمز إلى أنه لا يتطلب اتصالاً آمناً للكهرباء بالأرض (التأريض). وإذا لم يكن هذا الرمز موجوداً في أحد الأجهزة بسلك التيار الرئيسي، فلا بد أن المنتج يحتوي على توصيل موثوق بالطرف الأرضي الوافي (التأريض).	
 جهد التيار المتردد؛ الجهد المقتن الموسوم بهذا الرمز هو جهد التيار المتردد.	
 جهد التيار المستمر؛ الجهد المقتن الموسوم بهذا الرمز هو جهد التيار المستمر.	
 تنبيه. راجع تعليمات الاستخدام؛ يشير هذا الرمز إلى قراءة دليل المستخدم لمزيد من المعلومات المتعلقة بالسلامة.	

الطاقة

- لا تقم بحمل مآخذ الحائط أو أسلاك التمديد أو المحولات فوق جهاز. وسعنها، فقد يؤدي هذا إلى نشوب حريق أو حدوث صدمة كهربائية. راجع قسم مواصفات الطاقة في دليل المستخدم، و/أو ملصق مصدر الطاقة الموجود على المنتج للحصول على معلومات عن الجهد وشدة التيار.
- ينبغي وضع أسلاك مصدر الطاقة في مسار يجعلها في مأمن من السير فوقها أو الضغط عليها بوضع أشياء فوقها أو بشكل يعوق توصيلها، كما ينبغي توجيه عبءية خاصة للأسلاك عند طرف القابس وماخذ الحائط ومواضع خروج الأسلاك من الأجهزة.
- يحظر وضع أي شيء معدني في الأجزاء المفتوحة الموجودة بهذا الجهاز؛ فقد يؤدي هذا إلى حدوث صدمة كهربائية.
- لتجنب حدوث صدمة كهربائية، لا تلمس الأجزاء الداخلية لهذا الجهاز أبناً؛ حيث يُسمح للفني المعتمد وحده بفتح هذا الجهاز.

- تأكد من توصيل كبل التيار الكهربائي وإدخاله بشكل محكم، عند إخراج كبل التيار الكهربائي من مأخذ الحائط، اسحب دائماً من قابس كبل التيار الكهربائي. ولا تقم أبداً بإخراجه من خنلن سحب كبل التيار الكهربائي. لا تلمس كبل التيار الكهربائي بأيديك.
- إذا لم يعمل هذا الجهاز بشكل سليم -وخاصةً في حالة صدور أصوات أو روائح غير عادية منه- فأفصله عن الفور واتصل بالموزع المعتمد أو مركز خدمة Samsung.


- لحماية هذا الجهاز من العواصف والبرق أو تركه في حالة الغياب عنه أو دون استخدام لوقت طويل، تأكد من فصله عن مأخذ الحائط، ثم افصل الهوائي أو نظام الكبل.
- قد تسبب الأتربة المتراكمة في حدوث صدمة كهربائية أو تسرب كهربائي أو نشوب حريق بسبب توليد كبل التيار الكهربائي للشرر والحرارة أو بسبب تلف المادة العازلة.
- لا تستخدم سوى قابس ومقبس تم توصيلهما أرضياً بشكل جيد.
- قد يؤدي التوصيل الأرضي غير السليم إلى حدوث صدمة كهربائية أو تلف في الجهاز (أجهزة التلئة اللثة فقط).
- إيقاف تشغيل هذا الجهاز تماماً، افصله عن مأخذ الحائط. لضمان أنه يمكنك فصل هذا الجهاز من مصدر الطاقة بسرعة إذا لزم الأمر، تأكد أنه يمكنك الوصول بسهولة إلى مأخذ الحائط وقابس التيار الكهربائي.

التثبيت

- لا تضع هذا الجهاز فوق جهاز مشع أو مقاوم للحرارة أو بالقرب منه أو في مكان معزى لأشعة الشمس المباشرة.
- لا تضع أي أواني تحتوي على الماء (زهريه أو غيرها) فوق هذا الجهاز؛ فقد يؤدي ذلك إلى التعرض لخطر نشوب حريق أو حدوث صدمة كهربائية.
- لا تعرض هذا الجهاز لمياه الأمطار أو للرطوبة.
- اتصل بمركز خدمة Samsung لتعمد للحصول على معلومات عند تركيب التلفزيون في مكان كثيف الأتربة أو ذي درجة حرارة مرتفعة أو منخفضة أو يتسم بالرطوبة العالية أو يوجد به مواد كيميائية أو عند تركيب الجهاز في الأماكن التي يتم تشغيله فيها على مدار 24 ساعة في اليوم، مثل في المطارات ومحطات القطار وغيرها، علماً بأنه قد يؤدي عدم الالتزام بذلك إلى تعريض التلفزيون لتلفيات شديدة.
- لا تعرض هذا الجهاز لتطرات السوائل ولا ترشه بها.

توفير تهوية جيدة للتلفزيون

اترك مسافة حول المنتج للتهوية. فقد يتجم عن سوء التهوية اندلاع حريق أو تلفيات بالمنتج نتيجة ارتفاع درجة حرارته الداخلية. للتزكيب، تأكد من وجود مسافات كافية على النحو الموضح في الشكل. عند تركيب التلفزيون مع الحامل، فإننا نوصلك ببندقة باستخدام القطع المتوفرة من قبل شركة Samsung فقط. ولقد يؤدي استخدام القطع المتوفرة من أي شركة مصنعة أخرى إلى مواجهة صعوبات في استخدام المنتج أو حدوث إصابات نتيجة لسقوطه.

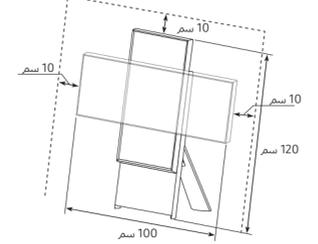

احتياطات السلامة

قم بتثبيت The Serو على سطح مستو باستخدام الحامل المزود بالمنتج.



تحذير: قد يؤدي شد التلفزيون أو دفعه أو الصعود فوقه إلى سقوطه، واحرص بشكل خاص على ألا يتصلق أطفالك بالتلفزيون أو يحركونه؛ فقد يؤدي عنهم به إلى سقوطه فوفهم؛ مما قد يتسبب في حدوث إصابات خطيرة أو قد يؤدي إلى الوفاة. اتبع كل احتياطات السلامة الموضحة في "بشرة السلامة"

المرفقة مع التلفزيون.

- تحذير: لا تضع جهاز التلفزيون مطلقاً في مكان غير ثابت. قد يسقط التلفزيون، مما قد يتسبب في حدوث إصابات خطيرة أو يؤدي إلى الوفاة. ويمكن تجنب حدوث العديد من الإصابات، خاصةً للأطفال، عن طريق اتخاذ الإجراءات الاحتياطية البسيطة مثل:

- استخدم دائماً الوحدات أو الحوامل أو طرق التثبيت الموصى بها من قبل Samsung.
- استخدم دائماً الأثاث الذي يمكن من خلاله تثبيت جهاز التلفزيون بأمان.
- تأكد دائماً من عدم تآرجح جهاز التلفزيون على حافة قطعة الأثاث المثبت عليها.

- ارشد الأطفال دائماً بخصوص مخاطر التسلق على الأثاث للوصول إلى جهاز التلفزيون أو أدوات التحكم فيه.
- قم دائماً بتوجيه الأسلاك والكبلات المتصلة بالتلفزيون بحيث لا يمكن التعثر فيها أو إسكاتها.
- لا تضع جهاز التلفزيون مطلقاً في مكان غير ثابت.
- لا تضع أبداً جهاز التلفزيون على قطعة الأثاث العالية (على سبيل المثال، الدواليب أو خزانات الكتب) دون تثبيت كل من قطعة الأثاث وجهاز التلفزيون بعامدة مناسبة.

- لا تضع أبداً جهاز التلفزيون على الملابس أو أي مواد أخرى قد تكون موضوعة بين جهاز التلفزيون وقطعة الأثاث المثبت عليها.
- لا تضع أبداً فوق جهاز التلفزيون أو قطعة الأثاث المثبت عليها التلفزيون أشياء قد تجذب الأطفال للتلصق، مثل الألعاب وأجهزة التحكم عن بعد.

إذا أردت تخزين جهاز التلفزيون الحالي لديك أو أردت تغيير موضعه، فيجب تطبيق نفس الاعتبارات المذكورة أعلاه.

- عند الحاجة لنقل التلفزيون أو رفعه للتنظيف أو تغيير مكانه، تأكد من عدم خلع الحامل.

احتياطات يجب مراعاتها عند تحريك The Serو

ارفع المنتج بواسطة شخصين بطريقة مستقيمة فقط في وضع عمودي.

⚠️ لا تحرك المنتج في وضع أفقي.

⚠️ إذا سقط المنتج، فقد يتسبب ذلك في الإصابة أو تلف المنتج. انتبه حتى لا تؤذَ اليدين أو القدمين.

⚠️ انتبه حتى لا تلمس بشاشة العرض عند رفع المنتج.

⚠️ لا ترفع المنتج بنفسك.

⚠️ لا تحرك المنتج عن طريق سحبه.

⚠️ لا تلمس الشاشة لتحريك التلفزيون.

العملية

- يعمل هذا الجهاز بواسطة البطاريات. وقد توجد بعض اللوائح البيئية في مجتمعك تتطلب منك التخلص من هذه البطاريات بطريقة آمنة. لذا، يرجى الاتصال بالسلطات المحلية للاطلاع على المعلومات الخاصة بكيفية التخلص من هذه البطاريات أو إعادة تدويرها.

- احفظ بالمخلفات (جهاز التحكم عن بعد وغيره) في مكان آمن بعيداً عن متناول الأطفال.

- جنب سقوط المنتج أو تعرضه للطرق. في حالة تعرض المنتج للثقب، افصل كبل التيار الكهربائي واتصل بمركز خدمة Samsung.
- يحظر التخلص من جهاز التحكم عن بعد أو البطاريات عن طريق حرقها. ينبغي عدم تقصير دائرة البطاريات أو تفكيكها أو تعريضها للسخونة الزائدة.

تنبيه: قد يكون هناك خطر حدوث انفجار في حالة استبدال البطاريات الموجودة بجهاز التحكم عن بعد بنوع غير صحيح من البطاريات. فاستبدلها ببطاريات من نفس النوع أو من نوع مماثل فقط.

تحذير - لتجنب اندلاع حريق، قم دوماً بإبعاد الشموع وأي مصدر للهب عن هذا المنتج.

 لا تستخدم الشمعة لتجنب تغير اللون أو تلف الأقمشة.

العناية بالتلفزيون

- تنظيف هذا الجهاز، افصل كبل التيار الكهربائي من مأخذ الحائط وأصح المنتج باستخدام قطعة قماش ناعمة وجافة. علماً بأنه يحظر استخدام أي مواد كيميائية، مثل الشمع أو البنزين أو الكحول أو مخفف المرحان أو مبيد الحشرات أو مزيل الجوا أو المشحّمات أو المنظفات، حيث قد تؤدي هذه المواد الكيميائية إلى تلف مظهر التلفزيون أو إزالة الطاعة الموجودة عليه.
- قد تحدث خدوش لشاشة التلفزيون أثناء تنظيفها؛ لذا تأكد من مسح السطح الخارجي للشاشة بعناية باستخدام قطعة قماش ناعمة لمنع حدوث أي خدوش.
- لا ترش مياه أو أي سائل على التلفزيون مباشرةً؛ فقد يتسبب دخول أي مادة سائلة إلى المنتج في حدوث خلل بالجهاز أو نشوب حريق أو حدوث صدمة كهربائية.

تنظيف الأقمشة

- قم بإزالة أي أوساخ أو بقع على سطح المنتج على الفور.
- يمكن أن تكون الإزالة والتنظيف أقل فعالية لبعض المواد أو إذا تراكمت لفترة طويلة.

- استخدم المكنسة الكهربائية أو بكرة الوبر اللاصقة لإزالة الغبار وصمات اليد وما شابه ذلك.

– لا تتسبب بعض فرش التنظيف في تلف المنتج. حسب المواد التي تحتوي عليها.

– قد تترك المنادش والملابس المنيظفة نسالة أو أوساخًا على المنتج.

– قم بإزالة الغبار بشكل دوري، حتى لو لم يكن السطح ملوئًا أو ملطخًا.

– قد يتسبب الغبار الملصق بالسطح لفترة طويلة في ظهور بقع. لا تستخدم مساملاً أو أدوات أخرى لخدش الأوساخ. فقد يتسبب في تلف الأقمشة.

- لإزالة بقع الزيت أو السوائل، استخدم قطعة قماش نظيفة مبللة باماءء. إذا استمر ظهور البقع، امسحها بقطعة قماش ومزيج من الماء ومنظف محايد (مثل صابون الأطباق).

– قد يتسبب استخدام المنظف أو المنظف غير المصايد في تغير اللون أو تلف الأقمشة.

– بعد التنظيف، استخدم قطعة قماش جافة أو مجفف شعر لتجفيف المنطقة.

– لا تستخدم القوة المفرطة لتجنب تغير اللون أو تلف الأقمشة.

04 المواصفات ومعلومات أخرى

عندما تقوم بإيقاف تشغيل التلفزيون، فإنه يكون في وضع "الاستعداد". في وضع "الاستعداد"، يستهلك التلفزيون قدرًا بسيطًا من الطاقة. لتقليل استهلاك الطاقة، افصل كبل التيار الكهربائي في حالة عدم استخدامك للتلفزيون لفترة طويلة.

التراخيص

Dolby Audio

POWERED BY

QUICK SET

HEVC Advance

Covered by Patents at patentlist.hevcadvance.com

HDMI

High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

ملحظات

- هذا الجهاز مصنف من الأجهزة الرقمية من الفئة B.
- للحصول على معلومات حول مصدر الطاقة ولمزيد من المعلومات حول استهلاك الطاقة، راجع المعلومات الموجودة على الملصق الترفيق بالمنتج.

– في أغلب الظن، يُرفق الملصق بالجزء الخلفي من التلفزيون.

(في أغلب الظن، يكون الملصق داخل غطاء الكبلات).

- قد تختلف مواصفات وصور Quick Setup Guide عن المنتج الفعلي.