


PHILIPS

BHD720, BHD723

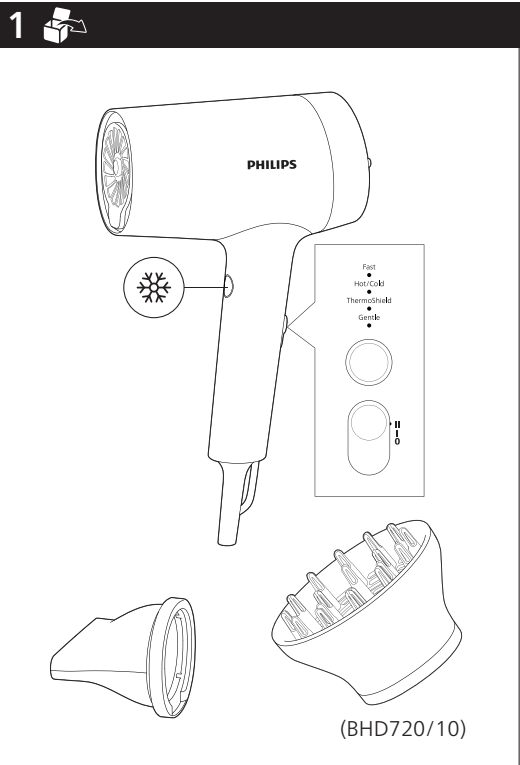

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important


Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING: Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- The supply cord cannot be replaced. If the supply cord is damaged, you must have the appliance replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


Specifications are subject to change without notice
© 2024 Koninklijke Philips N.V.
All rights reserved.

3000.100.1949.3 (07/04/2024)

>75 % recycled paper
>75 % papier recyclé

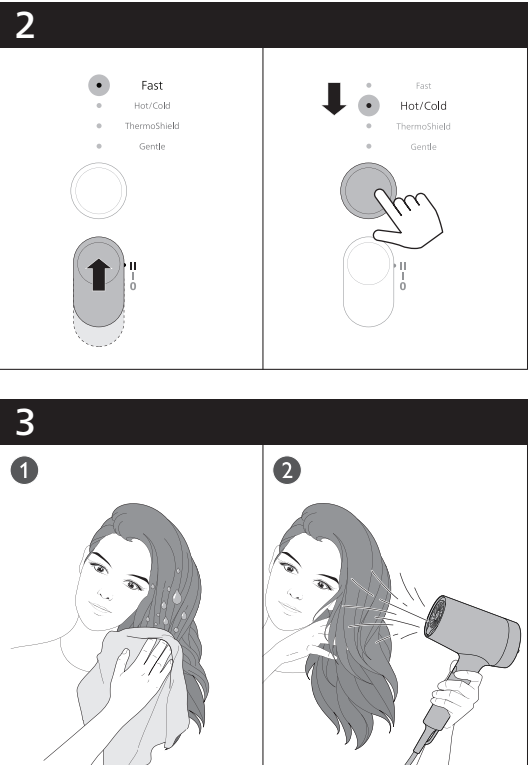

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not pull on the supply cord after using. Always unplug the appliance by holding the plug.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in the user manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the supply cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not operate the appliance with wet hands.
- Always return the appliance to a service center authorized by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
- Do not connect the appliance with a plug adapter. If really necessary, only use a certified plug adapter.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

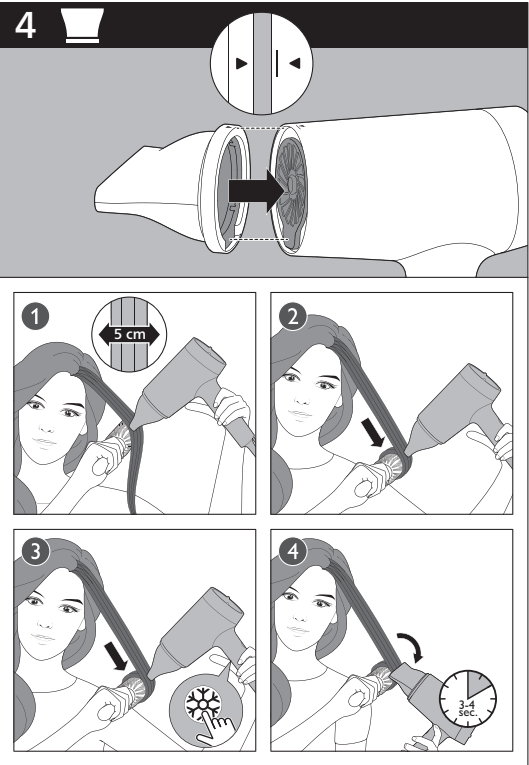

- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products.


2 How to use your hairdryer

- For precise drying, attach the nozzle onto the hairdryer.
- Switch on the hairdryer with the desired speed setting and press the button to select your preferred mode.



Switch/ Button	Settings	Function
Speed	II	Strong airflow and fast drying
	I	Gentle airflow and styling
	0	Switch off
Mode	Fast	Dry shower-wet hair quickly
	Hot/Cold	Dry hair with an alternating hot and cold airflow for more comfortable drying experience
	ThermoShield	Dry your hair at a constant caring temperature
	Gentle	Dry hair at a mild temperature for gentle experience, especially soothing your scalp

- Press the cool shot button for cool airflow to fix your style. Press again to exit cool shot and to return to the selected mode.
- (Only for BHD720/10) To enhance volume for curls and bouncy style, attach the diffuser onto the hairdryer. Insert the pins into your hair to touch your scalp and make rotating movements.

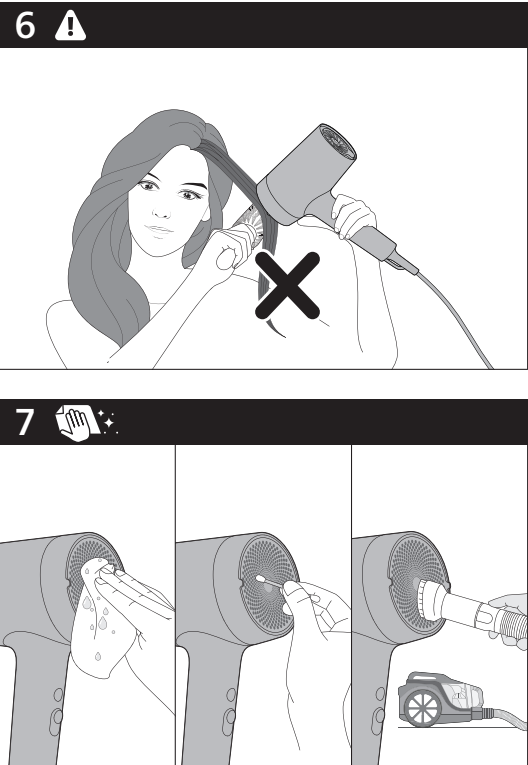

3 After use

- Switch off the appliance and unplug it.
- The airflow outlet of the hair dryer and the attachment are hot after use, please do not touch it immediately.

4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

Problem	Cause	Solution
There is bad smell for the first-time of use.	The smell may come from the new appliance.	The smell will gradually disappear after a few uses. Please try to dry/style your hair in a well-ventilated room.
There is burning smell when drying/styling my hair.	If there is some dust or residue left in the appliance, it may be burnt due to the high temperature and produce odor.	Turn off the appliance and wait until it cools down. Check if any residues left. Remove the dirty stuffs from the appliance and keep it clean.

5 Support

If you need information or support, please visit www.philips.com/support.

한국어


필립스코리아 제품을 구입해 주셔서 감사합니다!
필립스코리아가 드리는 모든 지원 혜택을 받으실 수 있도록 www.philips.com/welcome에서 제품을 등록하십시오.

1 주의 사항

본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- 경고: 본 제품은 물이 없는 곳에서 사용하십시오.
- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.
- 경고: 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 사용 후에는 반드시 제품의 전원 코드를 뽑으십시오.
- 전원 코드는 교체할 수 없습니다. 전원 코드가 손상된 경우, 안전을 위해 제품을 필립스코리아 공인 서비스 센터 또는 필립스코리아 서비스 지정점에 의뢰하여 교체하십시오.
- 8세 이상의 아이들과 신체적인 감각 및 정서적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.
- 추가 안전을 위하여 잔여 전류 소멸 장치(RCD)를 욕실 전원에 설치할 것을 권장합니다. 이 RCD의 정격 잔여 전류는 30mA 이하여야 합니다. 자세한 설치 방법은 전기 설비업체에 문의하십시오.
- 사용 후 전원 코드를 당기지 마십시오. 항상 플러그를 잡고 제품의 전원 코드를 뽑으십시오.
- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.
- 이 사용자 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.
- 제품을 인조 모발에 사용하지 마십시오.
- 제품이 전원에 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 다른 제조업체에서 만들었거나 필립스코리아에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 전원 코드를 제품에 감지 마십시오.
- 제품이 충분히 식은 다음 보관하십시오.

- 젖은 손으로 제품을 작동하지 마십시오.
- 검사 또는 수리가 필요한 경우에는 항상 필립스코리아 서비스 지정점으로 문의하십시오. 비공인업체에서 수리하는 경우 제품 사용자에게 심각한 상황을 초래할 수 있습니다.
- 플러그 어댑터를 제품을 연결하지 마십시오. 불가피한 경우 반드시 인증 받은 플러그 어댑터를 사용하십시오.
- 제품이 과열되면 자동으로 전원이 꺼집니다. 제품의 전원을 뽑은 후 몇 분 동안 열기가 식도록 두십시오. 제품의 전원을 다시 켜기 전에 그릴이 잔털, 머리카락 등으로 막혀 있지 않은지 확인하십시오.
- 감전 사고를 막으려면 공기 흡입망에 금속 물질을 삽입하지 마십시오.
- 공기 흡입망을 절대로 막지 마십시오.
- 제품 코드를 제품이나 팔 주변에 말거나 감지 마십시오.

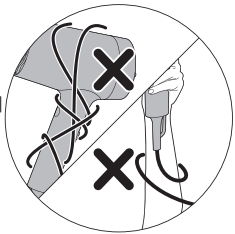

EMF(전자기장)

이 필립스코리아 제품은 EMF(전자기장)와 관련된 모든 기준 및 규정을 준수합니다.

재활용

- 이 기호는 전기 제품을 일반 가정용 쓰레기와 함께 폐기하면 안 된다는 것을 의미합니다.
- 전기 제품의 분리 수거에 대한 해당 국가의 규정을 준수하십시오.

2 헤어드라이어 사용 방법

- 정확한 드라이를 위해 헤어 드라이어에 노즐을 부착하세요.
- 원하는 속도 설정에 맞춰 헤어드라이어 스위치를 켜 다음 버튼을 눌러 원하는 모드를 선택합니다.

스위치/ 버튼	설정	기능
속도	II	빠른 드라이를 위한 강한 바람
	I	부드러운 바람 및 스타일링
	0	전원 끄기
모드	빠름 (Fast)	젖은 모발을 빠르게 건조
	뜨거움/차가움 (Hot/Cold)	뜨거운 바람과 차가운 바람을 번갈아 사용해 머리를 말리면 더 편안하게 말릴 수 있습니다
	써모실드 (ThermoShield)	일정 온도를 유지한 상태로 모발 건조
	부드러움 (Gentle)	온화한 온도에서 머리를 말려야 부드러운 건조를 경험할 수 있고, 특히 두피를 진정시켜 줍니다

- 3 스타일 고정을 위해 시원한 바람을 원할 경우 쿨샷 버튼 을 누르십시오. 한 번 더 누르면 쿨샷 모드가 종료되고 선택한 모드로 돌아갑니다.

