


## PLAY AND CHARGE KIT

User Manual  
Manuel de l'utilisateur  
Bedienungsanleitung  
Manual de usuario

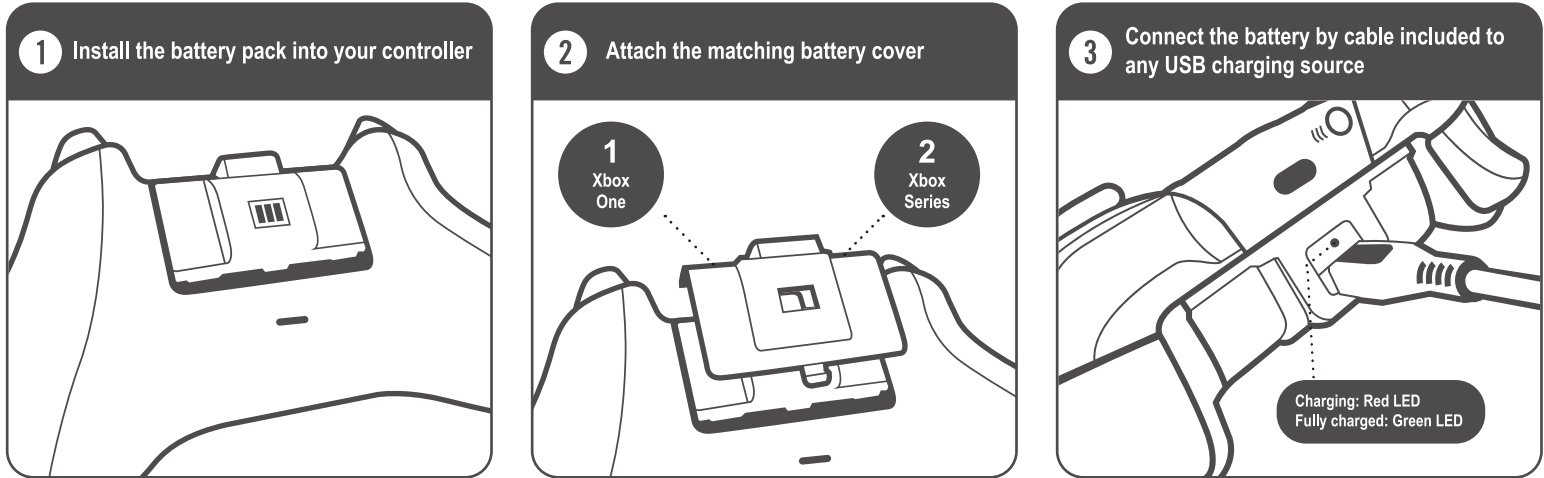

### ENGLISH

#### CONTENTS

- 2x 1400mAh Battery Pack
- 2x No.1 Battery Cover for Xbox One Controller
- 2x No.2 Battery Cover for Xbox Series Controller
- 5ft (1.5m) Micro USB Charger Cable
- User Manual

#### AFTER-SALES SERVICE

12-Month Warranty  
support@6amgame.com

#### USE

1. Install the rechargeable battery into the battery compartment of your Xbox wireless controller.
2. Check underside of battery cover: '1' for Xbox One and '2' for Xbox Series X.
3. Attach the matching battery cover to the back of the Xbox wireless controller.
4. Connect the cable to battery and USB charging source or dock your controller on the charging station.
5. Check LED color for charge status: Red while charging and green once fully charged.

*Note: For battery charge level, check Xbox on-screen display. The battery can also be charged when not installed to controller. The controller remains functional when the battery is being charged in the controller.*

#### CHARGING ATTENTION

- Only use original/included Micro USB cable.
- Do not connect Micro USB cable to any USB AC adapters.
- Do not charge the rechargeable batteries on flammable surfaces i.e. mattresses, couches, or any other flammable materials.

- Do not leave batteries unattended for long periods of time.
- Do not cover your controller with any blankets, pillows, bedding, etc. while charging.
- Ensure proper ventilation.

#### WARNING - BATTERY LEAKAGE

Leakage of the components contained in the battery pack, or combustion of the product components, can cause personal injury as well as damage to game controller. If a battery leaks, please avoid direct contact with skin. In case of contacting by accident, please wash thoroughly with soap and water immediately. If liquid leaking from the battery pack comes into contact with your eyes, immediately flush thoroughly with water and contact a medical professional for assistance.

#### BATTERY WARNING

Do not attempt to disassemble the rechargeable battery yourself- you may damage the battery, which could cause overheating, fire, and injury. Dispose of batteries according to your local environment laws and guidelines. Do not throw away batteries in normal household trash. Please find battery banks at supermarkets, community centers and recreation centers for proper recycling or disposal. Do not use or leave the product containing rechargeable batteries exposed to very high temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened. Do not use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation. In case the electrolyte gets into the eyes due to the leakage of battery, do not rub eyes! Rinse eyes with clean running water and seek medical attention

immediately. Otherwise, it may injure eyes or cause a loss of sight. If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from battery charger and place it in a sealed vessel such as a metal box. Be aware discarded batteries may cause fire, do not heat it or throw it into fire.

#### TROUBLESHOOTING

Q1: The rechargeable battery fits but battery cover does not fit the controller.

A1: Confirm the matching battery cover. No.1 battery cover for Xbox One controller. No.2 battery cover for Xbox Series controller.

A2: Confirm the battery cover is installed correctly. Insert piece should be aligned to the jack. Put battery cover cling to the battery compartment and plug in straightly.

Q1: The rechargeable battery is not charging.  
A1: The rechargeable battery needs a powered USB source to charge. Confirm that your Xbox is powered ON.

A2: Confirm the USB charging cable is connected to the rechargeable battery and/or the Xbox correctly.  
A3: Confirm the rechargeable battery and battery door is installed correctly.

#### REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



The WEEE symbol informs the end-user about separate disposal requirements for WEEE (Waste of electrical and electronic equipment) as required per the Article 11(2) of the WEEE Directive and prescribed by European standard EN50419:2005.

**CE**  
CE (Conformité Européenne aka European Conformity) is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.

The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

*Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television*

*reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by One or more of the following measures:*

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/ TV technician for help.

#### CAN ICES-3(B)/NMB-3(B)

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

#### MANUFACTURED BY

Shenzhen Jindinglong Technology Co., Ltd.  
4th Floor, Building 1, Sanwei Chaxi Industrial Zone,  
Sanwei Community, Hangcheng Street, Baican  
District, Shenzhen Province  
support@6amgame.com



Name: LUCKY TRANSPORT EURO KFT  
Address: 1085 Budapest,JÓ ZSEF KÖ RÚ T  
69.FSZT.1,Hungary  
Contact Person: NACSASZTA GÁBOR  
Email: eurep.office@gmail.com



Name: Sea&Mew Accounting Ltd  
Address: Electric Avenue Vision 25, London, Enfield  
EN3 7GD  
Contact Person: Billy Han  
E-mail: info@seamew.net

#### ADDITIONAL LEGAL

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, and Xbox One are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

#### GERMAN

#### INHALT

- 2x 1400mAh Akku-Pack
- 2x Nr.1 Batteriefachabdeckung für Xbox One Controller
- 2x Nr.2 Akkuabdeckung für Xbox Series Controller
- 1,5 m Micro-USB-Ladekabel
- Benutzerhandbuch

#### KUNDENDIENST

12 Monate Garantie  
support@6amgame.com

#### ANWENDUNG

1. Legen Sie die wiederaufladbare Batterie in das Batteriefach Ihres Xbox Wireless Controllers ein.
2. Überprüfen Sie die Unterseite der Batterieabdeckung: "1" für Xbox One und "2" für Xbox Series X.
3. Bringt die passende Batterieabdeckung auf der Rückseite des Xbox Wireless Controllers an.
4. Verbinden Sie das Kabel mit dem Akku und der USB-Ladequelle oder docken Sie Ihren Controller an der Ladestation an.
5. Prüfe die LED-Farbe für den Ladestatus: Rot während des Ladevorgangs und grün, wenn er vollständig geladen ist.and green once fully charged.

*Hinweis: Prüfen Sie den Ladezustand des Akkus auf der Xbox-Bildschirmanzeige. Der Akku kann auch geladen werden, wenn er nicht in den Controller eingesetzt ist. Der Controller bleibt funktionsfähig, wenn der Akku im Controller geladen wird.*

#### AUFMERKSAMKEIT AUFLADEN

- Verwenden Sie nur das originale/mitgelieferte Micro-USB-Kabel.
- Schließen Sie das Micro-USB-Kabel nicht an einen USB-AC-Adapter an.
- Laden Sie die Akkus nicht auf brennbaren Oberflächen auf, z. B. auf Matratzen, Sofas oder anderen brennbaren Materialien.
- Lassen Sie die Akkus nicht über einen längeren Zeitraum unbeaufsichtigt.
- Decken Sie den Controller während des Ladevorgangs nicht mit Decken, Kissen, Bettzeug usw. ab.
- Sorgen Sie für ausreichende Belüftung.

#### WARNUNG - AUSLAUFEN DER BATTERIE

Ein Auslaufen der im Akku enthaltenen Komponenten oder eine Verbrennung der Produktkomponenten kann zu Verletzungen führen und den Game Controller beschädigen. Wenn ein Akku ausläuft, vermeiden Sie bitte den direkten Kontakt mit der Haut. Im Falle eines versehentlichen Kontakts waschen Sie sich bitte sofort gründlich mit Wasser und Seife. Falls Flüssigkeit aus dem Akku in Ihre Augen gelangt, spülen Sie diese sofort gründlich mit Wasser aus und wenden Sie sich an einen Arzt.

#### FEHLERSUCHE

- Q1: Die wiederaufladbare Batterie passt, aber die Batterieabdeckung passt nicht zum Controller.  
A1: Bestätigen Sie die passende Batterieabdeckung. Nr.1 Akku-Abdeckung für Xbox One Controller. Nr.2 Batteriefachabdeckung für Xbox Series Controller.  
A2: Vergewissern Sie sich, dass die Batterieabdeckung richtig eingesetzt ist. Das Einsatzstück sollte auf die Buchse ausgerichtet sein. Setzen Sie die Batterieabdeckung auf das Batteriefach und schließen Sie sie gerade an.  
Q1: Die wiederaufladbare Batterie wird nicht geladen.  
A1: Der Akku benötigt eine USB-Stromquelle zum Aufladen. Vergewissern Sie sich, dass Ihre Xbox eingeschaltet ist.  
A2: Vergewissern Sie sich, dass das USB-Ladekabel richtig mit dem Akku und/oder der Xbox verbunden ist.  
A3: Vergewissern Sie sich, dass der Akku und die Akkuabdeckung richtig eingesetzt sind.

#### SPANISH

#### CONTENIDO

- 2x Batería de 1400mAh
- 2x No.1 Cubierta de la batería para el mando de Xbox One
- 2x No.2 Cubierta de la batería para el mando de la serie Xbox
- Cable de carga Micro USB de 1.5m
- Manual de usuario

#### SERVICIO POSTVENTA

Garantía de 12 meses  
support@6amgame.com

#### USO

1. Instala la batería recargable en el compartimento de la batería de tu mando Xbox inalámbrico.
2. Comprueba la parte inferior de la tapa de la batería: '1' para Xbox One y '2' para Xbox Series X.
3. Coloca la tapa de la batería correspondiente en la parte trasera del Mando Xbox Inalámbrico.
4. Conecte el cable a la batería y la fuente de carga USB o conecte su controlador a la estación de carga
5. Comprueba el color del LED para ver el estado de la carga: Rojo mientras se está cargando y verde una vez que está completamente cargado.

*Nota: Para conocer el nivel de carga de la batería, comprueba la visualización en pantalla de Xbox. La batería también se puede cargar cuando no está instalada en el mando. El mando sigue funcionando cuando la batería se está cargando en el mando.*

#### COBRANDO LA ATENCIÓN:

- Utilice únicamente el cable Micro-USB original o incluido.
- No conecte el cable Micro-USB a ningún adaptador de CA USB.
- No cargue las baterías recargables sobre superficies inflamables, como colchones, sofás o cualquier otro material inflamable.
- No deje las baterías desatendidas durante largos periodos de tiempo.
- No cubra su controlador con ninguna manta, almohada, ropa de cama, etc. mientras se carga.
- Asegure una ventilación adecuada.

#### ADVERTENCIA - FUGA DE LA BATERÍA

Las fugas de los componentes contenidos en el paquete de baterías, o la combustión de los componentes del producto, pueden causar lesiones personales, así como daños en el mando del juego. En caso de fuga de la batería, evite el contacto directo con la piel. En caso de contacto por accidente, lávese a fondo con agua y jabón inmediatamente. Si el líquido que gotea de la batería entra en contacto con los ojos, lávese inmediatamente con agua y póngase en contacto con un profesional médico para recibir asistencia.

#### SOLUCIÓN DE PROBLEMAS

- P1: La batería recargable encaja pero la tapa de la batería no encaja en el mando.  
A1: Confirme que la cubierta de la batería encaja. No.1 battery cover para el mando de Xbox One. No.2 battery cover para el mando Xbox Series.  
A2: Confirme que la cubierta de la batería está instalada correctamente. La pieza de inserción debe estar alineada con la clavija. Coloque la cubierta de la batería en el compartimento de la batería y enchúfela directamente.  
P1: La batería recargable no se está cargando.  
R1: La batería recargable necesita una fuente de alimentación USB para cargarse. Confirma que tu Xbox está encendida.  
A2: Confirma que el cable de carga USB está conectado a la batería recargable y/o a la Xbox correctamente.  
A3: Confirma que la batería recargable y la Puerta de la Batería están instaladas correctamente.

#### FRENCH

#### CONTENU

- 2x Batería de 1400mAh
- 2x No.1 Couvercle de batterie pour la manette Xbox One
- 2x Couvercle de batterie No.2 pour la manette Xbox Series
- Câble de chargeur Micro USB de 1,5 m
- Manuel de l'utilisateur

#### SERVICE APRÈS-VENTE

Garantie de 12 mois  
support@6amgame.com

#### UTILISATION

1. Installez la batterie rechargeable dans le compartiment à batterie de votre manette Xbox sans fil.
2. Vérifiez le dessous du couvercle de la batterie : '1' pour la Xbox One et '2' pour la Xbox Series X.
3. Fixez le couvercle de batterie correspondant à l'arrière de la manette sans fil Xbox.
4. Connectez le câble à la batterie et à la source de charge USB ou placez votre manette sur la station de charge.
5. Vérifiez la couleur de la DEL pour connaître l'état de charge : Rouge pendant la charge et vert une fois la charge terminée.

*Remarque : Pour connaître le niveau de charge de la batterie, consultez l'affichage à l'écran de la Xbox. La batterie peut également être chargée lorsqu'elle n'est pas installée dans la manette. La manette reste fonctionnelle lorsque la batterie est chargée dans la manette.*

#### ATTENTION À LA CHARGE

- Utilisez uniquement le câble Micro-USB original/inclus.
- Ne connectez pas le câble Micro-USB à un quelconque adaptateur secteur USB.
- Ne chargez pas les piles rechargeables sur des surfaces inflammables, comme des matelas, des canapés ou tout autre matériau inflammable.
- Ne laissez pas les batteries sans surveillance pendant de longues périodes.
- Ne couvrez pas votre contrôleur avec des couvertures, des oreillers, de la literie, etc. pendant la charge.
- Veillez à une bonne ventilation.

#### WARNUNG - AUSLAUFEN DER BATTERIE

Une fuite des composants contenus dans la batterie, ou la combustion des composants du produit, peut provoquer des blessures corporelles ainsi que des dommages à la manette de jeu. Si une batterie fuit, veuillez éviter tout contact direct avec la peau. En cas de contact accidentel, veuillez vous laver immédiatement à l'eau et au savon. Si le liquide s'échappant de la batterie entre en contact avec vos yeux, rincez-les immédiatement à l'eau et contactez un professionnel de la santé pour obtenir de l'aide.

#### DÉPANNAGE

- Q1 : La batterie rechargeable s'adapte mais le couvercle de la batterie ne s'adapte pas à la manette.  
A1 : Confirmez le couvercle de batterie correspondant. No.1 couvercle de batterie pour la manette Xbox One. couvercle de batterie n°2 pour la manette Xbox Series.  
A2 : Vérifiez que le couvercle de la batterie est correctement installé. La pièce d'insertion doit être alignée avec le jack. Placez le couvercle de la batterie sur le compartiment de la batterie et branchez directement.  
Q1 : La batterie rechargeable ne se charge pas.  
A1 : La batterie rechargeable a besoin d'une source USB alimentée pour se charger. Confirmez que votre Xbox est sous tension.  
A2 : Vérifiez que le câble de charge USB est correctement connecté à la batterie rechargeable et/ou à la Xbox.  
A3 : Vérifiez que la batterie rechargeable et le couvercle de la batterie sont correctement installés.