



GROOMMASTER 2-SPEED CORDLESS-CORDED CLIPPER KIT

CLEANING / MAINTENANCE

REMOVING AND INSTALLING ACCESSORIES

NOTE: Before attaching or removing blade or combs, ensure the device is off and unplugged from the charger.

NOTE: Use caution when attaching and detaching the blade. It is recommended to wash and/or disinfect after each use. If the blade becomes damaged, stop using and contact customer service regarding a replacement.


Blade Disassembly

Press the lock key (refer to Fig. 1) and pull the blade away from body (refer to Fig. 2).

Note: Hold the blade while disassembling to avoid dropping and potentially damaging the blade.

Blade installation

Press and hold the lock key (refer to Fig.1) while sliding the blade into the slot B at connection A (Fig.3); Once aligned, press down firmly on the back of the blade. A "click" noise will be heard indicating the blade was successfully installed.

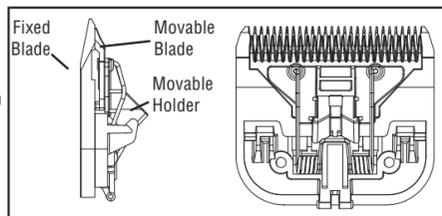

CLEANING AND MAINTENANCE

Blade Cleaning and Maintenance


NOTE: Ensure the device is turned off and unplugged from the charger before cleaning and maintenance.

Cleaning the blade: Use the cleaning brush to remove any loose hair on the blade (Fig. 4). The blade assembly can be rinsed under running water while attached to the clipper body for a quick clean. For a deeper more thorough cleaning, it is recommended to remove the blade from the body. Refer to the Cleaning and Maintenance section below.

Maintenance of the blade: When the blade is removed from the device, place one drop of oil in each of the circled areas in Figure 6. Gently push the Movable Holder (C) to evenly distribute the oil. The blade can now be re-installed.

NOTE:

1. Do not remove any parts of the blade assembly as this could render the blade inoperable.
2. After each use, and while the device is OFF and unplugged from the charger, it is recommended to brush away any loose hairs from the blade. If a lot of hair has accumulated in between the blade and the body of the clipper, rinse the blade under running water then dry thoroughly. If some hair still remains, it is recommended to remove the blade and clean with water.
3. For optimal performance and to extend the life of the blade, it is recommended to oil the blade after each

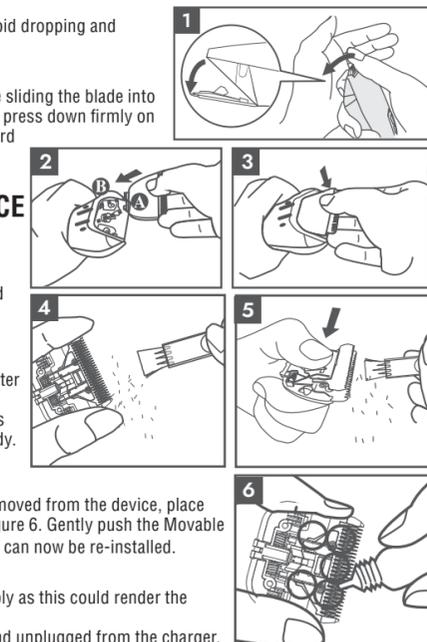

IMPORTANT SAFETY INSTRUCTIONS

When using electrical devices, basic safety precautions should always be followed:

1. Read all instructions before using this device.
 2. For household use only.
 3. Use this device only for trimming/clipping as described in this instruction manual. Do not use for other purposes.
 4. To reduce the risk of electrical shock do not immerse unit, plug or cord in water or other liquids.
 5. This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 6. Children should be supervised to ensure that they do not play with the device.
 7. Unplug from wall outlet when not in use and charging is complete, when moving device from one location to another, before putting on or taking off parts and before cleaning. To disconnect, grip plug and pull charger from the outlet.
 8. Avoid contact with moving parts.
 9. Do not operate in the presence of explosive and/or flammable fumes.
 10. To avoid risk of fire, NEVER place the charging cable under rugs or any parts near an open flame, cooking or other heating appliance.
 11. Do not operate the device with a damaged cord or plug, after the device malfunctions, or has been dropped/damaged in any manner. Discard or contact customer service.
 12. Do not run charging cable under carpeting. Do not cover cable with throw rugs, runners, or similar coverings. Do not route cable under furniture or appliances. Arrange cable away from high traffic area and where it will not be tripped over.
 13. The use of attachments not recommended or sold by the appliance manufacturer may cause injuries.
 14. Do not let the cable hang over the edge of a table, counter or come in contact with hot surfaces, including the stove.
 15. **WARNING:** To reduce the risk of fire or electric shock, do not use this device with any solid-state speed control device.
 16. It is recommended to keep the device stored or charged in a room with ambient temperature between 41°F and 104°F.
 17. Use only the provided charging cable and charger. Use of non-listed / non-certified parts may cause damage to the device and void the warranty. For spare and replacement parts, please contact customer service.
 18. When the device is being charged, the battery indicator will display the current level. When fully charged, it is recommended to disconnect from the power source. Continuous overcharging can shorten the life of the battery.
 19. Use battery operated device only with specifically designated and integrated battery type. Use of any other batteries may create a risk of fire.
 20. Do not incinerate this device even if it is severely damaged. The batteries can explode in a fire. Never incinerate or dispose batteries into a fire.
 21. The battery must be removed from the device before it is disposed of.
 22. The device must be disconnected from the power supply when removing the battery.
 23. The battery is to be disposed of safely.
WARNING: For the purposes of recharging the battery, only use the detachable supply unit M29US provided with this device.
 24. IPX5 for clipper only.
- NOTE:** THIS UNIT CONTAINS LI-ION BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED PROPERLY. CHECK LOCAL AUTHORITY REGULATIONS. NEVER INCINERATE OR DISPOSE BATTERIES INTO A FIRE.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS FOR HOUSEHOLD USE ONLY

COMB ATTACHMENTS / FCC

cleaning. The service life of the blade is related to the frequency of use, the quality of the hair being trimmed and the maintenance.

NOTE: When replacing the blade, please contact our customer service, and do not use incompatible blades from other manufacturers.

NOTE: During an extended clipping session or working through thick hair, the blade may feel slightly warm. This is normal and does not impact the functionality of the clipper.

Body Cleaning and Maintenance

NOTE: Turn this device OFF and disconnect from charger before cleaning and maintenance.

1. After each use, it is recommended to use the brush to sweep away any remaining hair fragments on the clipper.
2. Use a soft damp cloth to clean the body of the clipper.
3. After cleaning the body of the clipper, wipe with a dry cloth, add lubricating oil to the blade head, and store it in a dry place. It is recommended to store in the provided carrying case.

COMB ATTACHMENTS

Use Comb Attachments for trimming

The provided comb attachments can be used to extend the cutting length of the hair. It is recommended to start with the highest length comb (19mm) and work down until the desired length is achieved. To attach the comb, hold the clipper body with the blade facing upwards, gently push the comb onto the blade until it clicks into place. (Fig. 7)

NOTE: The clipper can be used without comb attachments but should be used with caution. When no comb attachments are used, the length of the hair will be approximately 1mm. Be sure to move slowly and do not push the blade directly on the skin to avoid injuries.

NOTE: For best results, hair should be dry when cutting. Wet hair will increase the difficulty of cutting and may reduce the sharpness and effectiveness of the blade.

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

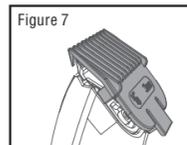
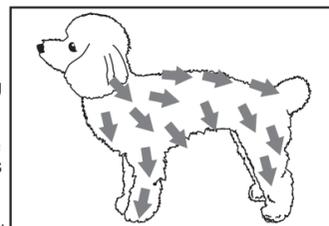


Figure 7

OPERATING INSTRUCTIONS

BEFORE FIRST USE

CHARGING THE BATTERY

1. Charge the battery for at least 90 minutes before the first use.
2. Insert the charging cable into the device charging port. Connect the USB into the charger.
3. Plug charger into a standard 120V outlet.

• The battery can be charged at any time and at any power level.

• A full charge provides up to 2 hours of use.



NOTE: The clipper can be used while charging

OPERATING INSTRUCTIONS

Press and hold the Power Button for approximately 1.5 seconds to turn the device ON to speed 1. Use caution as the blade will now be in operation. Once the device is ON, the Flashlight, Power Indicator Light, and LED Screen will now be illuminated. Quick press the power button to toggle between the 2 Speed Settings and OFF. All indicator lights and screen will turn OFF when the device is successfully turned OFF.

NOTE: To turn the Flashlight ON/OFF, press the Power Button for 1.5 seconds when the device is turned ON.

NOTE: If the blade becomes clogged during clipping, all the lights will flash for 3 seconds and the unit will turn off. Refer to the Cleaning and Maintenance section to clean the blade before continuing to use the clipper.

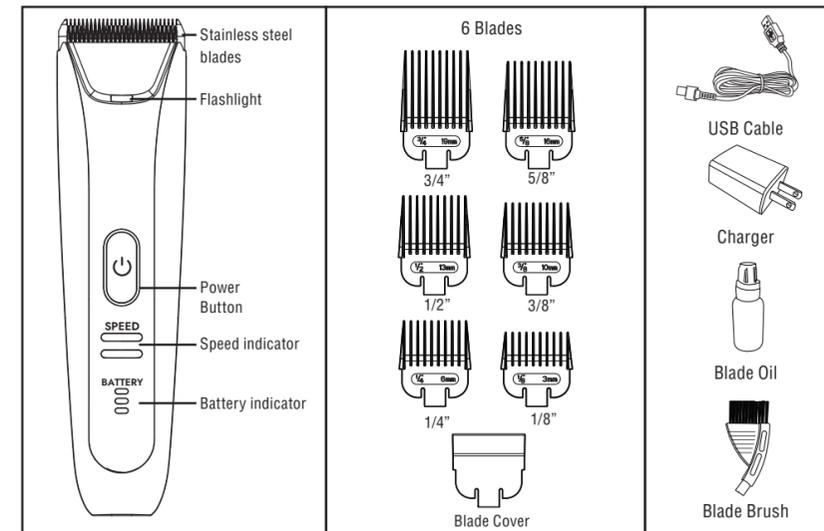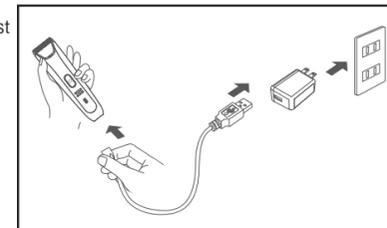

CLEANING / MAINTENANCE

REMOVING AND INSTALLING ACCESSORIES

NOTE: Before attaching or removing blade or combs, ensure the device is off and unplugged from the charger.

NOTE: Use caution when attaching and detaching the blade. It is recommended to wash and/or disinfect after each use. If the blade becomes damaged, stop using and contact customer service regarding a replacement.


Blade Disassembly

Press the lock key (refer to Fig. 1) and pull the blade away from body (refer to Fig. 2).

Note: Hold the blade while disassembling to avoid dropping and potentially damaging the blade.

Blade installation

Press and hold the lock key (refer to Fig.1) while sliding the blade into the slot B at connection A (Fig.3); Once aligned, press down firmly on the back of the blade. A "click" noise will be heard indicating the blade was successfully installed.

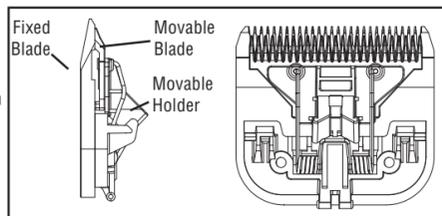

CLEANING AND MAINTENANCE

Blade Cleaning and Maintenance

NOTE: Ensure the device is turned off and unplugged from the charger before cleaning and maintenance.

Cleaning the blade: Use the cleaning brush to remove any loose hair on the blade (Fig. 4). The blade assembly can be rinsed under running water while attached to the clipper body for a quick clean. For a deeper more thorough cleaning, it is recommended to remove the blade from the body. Refer to the Cleaning and Maintenance section below.

Maintenance of the blade: When the blade is removed from the device, place one drop of oil in each of the circled areas in Figure 6. Gently push the Movable Holder (C) to evenly distribute the oil. The blade can now be re-installed.

NOTE:

1. Do not remove any parts of the blade assembly as this could render the blade inoperable.
2. After each use, and while the device is OFF and unplugged from the charger, it is recommended to brush away any loose hairs from the blade. If a lot of hair has accumulated in between the blade and the body of the clipper, rinse the blade under running water then dry thoroughly. If some hair still remains, it is recommended to remove the blade and clean with water.
3. For optimal performance and to extend the life of the blade, it is recommended to oil the blade after each

COMB ATTACHMENTS / FCC

cleaning. The service life of the blade is related to the frequency of use, the quality of the hair being trimmed and the maintenance.

NOTE: When replacing the blade, please contact our customer service, and do not use incompatible blades from other manufacturers.

NOTE: During an extended clipping session or working through thick hair, the blade may feel slightly warm. This is normal and does not impact the functionality of the clipper.

Body Cleaning and Maintenance

NOTE: Turn this device OFF and disconnect from charger before cleaning and maintenance.

1. After each use, it is recommended to use the brush to sweep away any remaining hair fragments on the clipper.
2. Use a soft damp cloth to clean the body of the clipper.
3. After cleaning the body of the clipper, wipe with a dry cloth, add lubricating oil to the blade head, and store it in a dry place. It is recommended to store in the provided carrying case.

COMB ATTACHMENTS

Use Comb Attachments for trimming

The provided comb attachments can be used to extend the cutting length of the hair. It is recommended to start with the highest length comb (19mm) and work down until the desired length is achieved. To attach the comb, hold the clipper body with the blade facing upwards, gently push the comb onto the blade until it clicks into place. (Fig. 7)

NOTE: The clipper can be used without comb attachments but should be used with caution. When no comb attachments are used, the length of the hair will be approximately 1mm. Be sure to move slowly and do not push the blade directly on the skin to avoid injuries.

NOTE: For best results, hair should be dry when cutting. Wet hair will increase the difficulty of cutting and may reduce the sharpness and effectiveness of the blade.

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

LIMITED THREE-YEAR WARRANTY

What is Covered and How Long Coverage Lasts

At KONG, we stand behind our products and quality controls. The KONG clipper (the "Product") has a limited warranty of 3 years from the original date of purchase in the United States or Canada from an authorized seller for the original purchaser against materials and/or workmanship defects, subject to the limitations set forth in this warranty.

What is Not Covered

KONG reserves the right to deny warranty requests in its sole and absolute discretion if it determines that any problem was caused by normal wear and tear (other than Product blade malfunction under normal use as noted below), misuse, accident (including spilled liquid), theft, alteration, improper or unauthorized repair, or improper storage. Consequential, indirect, special, punitive, and incidental damages are not recoverable under this warranty, including, but not limited to, any loss of use.

Should the Product's blade malfunction under normal use, then KONG's sole and exclusive obligation will be to provide one blade replacement during the three-year warranty period.

What KONG will Do

This warranty is limited to repair or replacement on an exchange basis, as selected by KONG, in KONG's sole and absolute discretion, of the Product, which upon examination by KONG is deemed to have been defective when the Product left the factory. KONG may also choose to refund the purchase price, less depreciation, of the Product when, in KONG's sole and absolute discretion, the situation calls for such.

If replacement is required in accordance with this warranty and the defective Product has been discontinued or is unavailable, KONG reserves the right to select and supply a similar Product or offer full credit for the Product to the original authorized seller; otherwise the same Product will be supplied for replacement to the original authorized seller from where the original purchase was made.

How to Obtain Warranty Service

If you have any problems with the Product, please do not contact or return the Product to the original authorized seller. Instead, please contact KONG's customer service as follows:

Website: <https://www.kongpetcare.com>

Email: info@kongpetcare.com

Phone: 1-866-769-3166 (8:30 am – 5:00 pm EST) Monday -Friday

How State Law Relates to This Warranty

This warranty is governed by Delaware law without regard to conflicts of law principles. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO THE EXTENT PERMITTED BY LAW, THE FOREGOING WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED, OR STATUTORY, WHETHER WRITTEN OR ORAL, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR TRADE USAGE, AND THE REMEDIES OF THE PURCHASER SHALL BE LIMITED TO THOSE PROVIDED HEREIN. Some states do not allow limitations as set forth above, so the above limitation may not apply to you. The total cumulative liability to KONG, from all causes of action and all theories of liability, will be limited to and will not exceed the purchase price of the Product paid by you.

Environmental Protection and Recycling

The battery installed in the electric clipper contains substances that may be harmful to the environment. The device should be disposed of according to local environmental regulations. Never incinerate or dispose of batteries/device into a fire.

© 2025 KONG Company Products Inc. All rights reserved.
KONG® is a registered trademark of the KONG Company used under license.
Distributed by Star Elite Inc., Montreal, Canada H3B 3X9
3 year limited warranty

SEK010 - 022825
Made in China
www.kongpetcare.com

IPX5
*Clipper Body Only



TROUSSE DE TOILETTAGE GROOMMASTER AVEC TONDEUSE À 2 VITESSES SANS FIL ET AVEC

NETTOYAGE / ENTRETIEN

RETRAIT ET INSTALLATION DES ACCESSOIRES

REMARQUE : Avant de fixer ou de retirer la lame ou les peignes, s'assurer que l'appareil est éteint et débranché du chargeur.

REMARQUE : Soyez prudent lorsque vous fixer et détacher la lame. Il est recommandé de laver et/ou de désinfecter après chaque utilisation. Si la lame est endommagée, cessez de l'utiliser et contactez le service clientèle.

Démontage de la lame

Appuyez sur la touche de verrouillage (voir Fig. 1) et tirez sur la lame pour l'éloigner du corps (voir Fig. 2).

REMARQUE : Tenez la lame pendant le démontage pour éviter de la faire tomber et de l'endommager.

Installation de la lame

Appuyez sur le bouton de verrouillage et maintenez-le enfoncé (voir Fig. 1) tout en faisant glisser la lame dans la fente B au niveau de la connexion A (Fig. 3); Une fois alignée, appuyez fermement sur l'arrière de la lame. Un « clic » se fait entendre, indiquant que la lame a été installée avec succès.

NETTOYAGE ET ENTRETIEN

Nettoyage et entretien de la lame

REMARQUE : Assurez-vous que l'appareil est éteint et débranché du chargeur avant de procéder au nettoyage et à l'entretien.








Nettoyage de la lame : Utilisez la brosse de nettoyage pour retirer les poils libres de la lame (Fig. 4).

Entretien de la lame : Lorsque l'icône la lame est retirée de l'appareil, déposez une goutte d'huile dans chacune des zones encadrées de la figure 6. Poussez doucement le support mobile (C) pour répartir uniformément l'huile. La lame peut maintenant être réinstallée.

REMARQUE :

1. Ne retirez aucune pièce de l'assemblage de la lame, car cela pourrait rendre la lame inutilisable.
2. Après chaque utilisation, et alors que l'appareil est éteint et débranché du chargeur, il est recommandé de brosser les poils détachés de la lame. Si de nombreux poils se sont accumulés entre la lame et le corps de la tondeuse, et le corps de la tondeuse, rincez la lame à l'eau courante puis séchez-la soigneusement. S'il reste des cheveux encore, il est recommandé de retirer la lame et de la nettoyer à l'eau.
3. Pour des performances optimales et pour prolonger la durée de vie de la lame, il est recommandé d'huiler la lame après chaque nettoyage. La durée de vie de la lame dépend de la fréquence d'utilisation, de la qualité des cheveux tondu et de l'entretien.

REMARQUE : Lors du remplacement de la lame, veuillez contacter notre service clientèle, et n'utilisez pas de

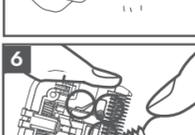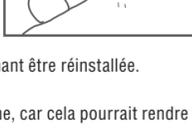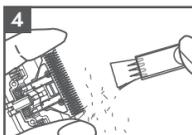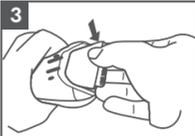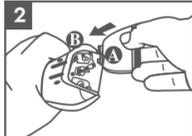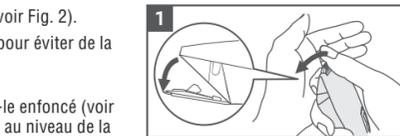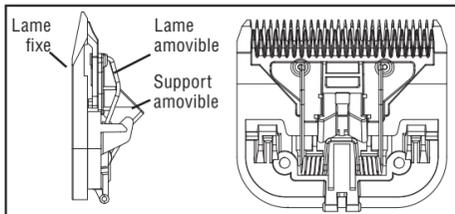

INSTRUCTIONS DE SÉCURITÉ

Lors de l'utilisation d'appareils électriques, il convient de toujours respecter les mesures de sécurité de base :

1. Lire toutes les instructions avant d'utiliser cet appareil.
2. Pour un usage domestique uniquement.
3. N'utilisez cet appareil que pour la coupe/le découpage tels qu'ils sont décrits dans ce manuel d'instructions. Ne pas l'utiliser à d'autres fins.
4. Pour réduire le risque d'électrocution, ne pas immerger l'appareil, la fiche ou le cordon dans l'eau ou dans un autre liquide.
5. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou qui manquent d'expérience et de connaissances, à moins qu'elles n'aient bénéficié surveillance ou des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité.
6. Les enfants doivent être surveillés afin de s'assurer qu'ils ne jouent pas avec l'appareil.
7. Débrancher l'appareil lorsqu'il n'est pas utilisé et que la charge est terminée, lorsque vous déplacez l'appareil d'un endroit à un autre, avant de mettre ou de retirer des pièces et avant de nettoyer. Pour débrancher l'appareil, saisissez la fiche et retirez le chargeur de la prise.
8. Éviter tout contact avec les pièces mobiles.
9. Ne pas utiliser en présence de fumées explosives.
10. Pour éviter tout risque d'incendie, ne placez JAMAIS le câble de charge sous un tapis ou à proximité d'une flamme nue, d'un appareil de cuisson ou d'un autre appareil de chauffage.
11. Ne pas utiliser l'appareil avec un cordon ou une fiche endommagé(e), après un dysfonctionnement de l'appareil, est tombé ou a été endommagé de quelque manière que ce soit. Jeter l'appareil ou contacter le service clientèle.
12. Ne pas faire passer le câble de chargement sous la moquette. Ne pas recouvrir le câble avec des tapis, des patins, ou des revêtements similaires. Ne pas faire passer le câble sous les meubles ou les appareils électroménagers. Disposer le câble à l'écart de la zone de passage et à un endroit où l'on ne risque pas de trébucher.
13. L'utilisation d'accessoires non recommandés ou recommandés ou vendus par le fabricant de l'appareil blessures.
14. Ne laissez pas le câble pendre sur le bord d'une table, d'un comptoir ou entrer en contact avec des objets chauds, d'un comptoir ou en contact avec des surfaces chaudes, y compris la cuisinière.
15. AVERTISSEMENT : Afin de réduire le risque d'incendie ou de choc électrique, n'utilisez pas ce ventilateur avec un autre appareil.
16. Il est recommandé de conserver l'appareil dans une pièce où la température ambiante est comprise entre 41°F et 104°F.
17. Utilisez uniquement le câble de charge et le bloc de charge fournis, et le bloc de charge fournis. L'utilisation de pièces non listées / non certifiées peut endommager l'appareil et annuler la garantie. Pour les pièces de rechange, veuillez contacter le service clientèle.
18. Lorsque l'appareil est en cours de chargement, l'indicateur de batterie affiche le niveau actuel. Lorsque l'appareil est complètement chargé, il est recommandé de le déconnecter de la source d'alimentation. Une surcharge continue peut réduire la durée de vie de la batterie.
19. N'utiliser l'appareil fonctionnant sur batterie qu'avec une batterie spécifiquement désignée et intégrée spécifiquement désignées et intégrées. L'utilisation d'autres piles peut créer un risque d'incendie.
20. Ne pas incinérer cet appareil, même s'il est gravement endommagé. Les piles peuvent exploser dans un incendie. Ne jamais incinérer ou jeter les piles dans un feu.
21. La batterie doit être retirée de l'appareil 22. L'appareil doit être déconnecté de l'alimentation électrique l'alimentation électrique lors du retrait de la batterie.
23. La batterie doit être éliminée en toute sécurité. AVERTISSEMENT : Pour recharger la batterie, n'utilisez que l'unité d'alimentation détachable M29US fournie avec l'appareil.
24. IPX5 pour la tondeuse uniquement.

REMARQUE : CET APPAREIL CONTIENT UNE BATTERIE LI-ION. LA BATTERIE DOIT ÊTRE RECYCLÉE OU ÉLIMINÉE DE MANIÈRE APPROPRIÉE. VÉRIFIER LES RÉGLEMENTATIONS LOCALES. NE JAMAIS INCINÉRER NI JETER LES PILES AU FEU.

VEUILLEZ LIRE ET CONSERVER CES IMPORTANTES INSTRUCTIONS DE SÉCURITÉ POUR UN USAGE DOMESTIQUE SEULEMENT

ATTACHEMENT DES PEIGNES

lames incompatibles d'autres fabricants.

REMARQUE : Lors d'une séance de tonte prolongée ou d'une tonte de cheveux épais, la lame peut être légèrement chaude. Ce phénomène est normal et n'affecte pas le fonctionnement de la tondeuse.

Nettoyage et entretien du corps de l'appareil

REMARQUE : Éteindre l'appareil et le débrancher du chargeur avant de procéder au nettoyage et à l'entretien.

1. Après chaque utilisation, il est recommandé d'utiliser la brosse pour balayer les fragments de cheveux restés sur la tondeuse.
2. Utiliser un chiffon doux et humide pour nettoyer le corps de la tondeuse.
3. Après avoir nettoyé le corps de la tondeuse, l'essuyer avec un chiffon sec, ajouter de l'huile lubrifiante à la tête de la lame et la ranger dans un endroit sec. Il est recommandé de le ranger dans l'étui de transport fourni.

PEIGNES AMOVIBLES

Utiliser les peignes pour la coupe

Les peignes fournis peuvent être utilisés pour augmenter la longueur de coupe des cheveux. Il est recommandé de commencer par le peigne le plus long (19 mm) et de descendre jusqu'à ce que la longueur souhaitée soit atteinte. Pour fixer le peigne, tenez le corps de la tondeuse avec la lame vers le haut. Doucement le peigne sur la lame jusqu'à ce qu'il s'enclenche. (Fig. 7)

REMARQUE : La tondeuse peut être utilisée sans peigne, mais doit être utilisée avec précaution. Lorsqu'aucun peigne n'est utilisé, la longueur des cheveux sera d'environ 1 mm.

Veuillez à d'avancer lentement et de ne pas appuyer la lame directement sur la peau afin d'éviter les blessures.

REMARQUE : Pour de meilleurs résultats, les cheveux doivent être secs au moment de la coupe. Les cheveux mouillés augmentent la difficulté de la coupe et peuvent réduire le tranchant et l'efficacité de la lame.

DÉCLARATION DE CONFORMITÉ FCC

Potentiel d'interférences radio/télévision

Cet appareil est conforme à la section 15 des règles de la FCC. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable. Ce produit a été testé et respecte les seuils d'un appareil numérique de classe B, conformément à la section 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Le produit génère, utilise et peut émettre des rayonnement de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que l'interférence ne se produira pas dans une installation particulière. Si le produit provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en allumant ou en éteignant le produit, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre le produit et le récepteur.
- Brancher le produit dans une prise de courant sur un circuit différent de celui sur lequel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/TV.
- Les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler le droit de l'utilisateur à faire fonctionner l'équipement.


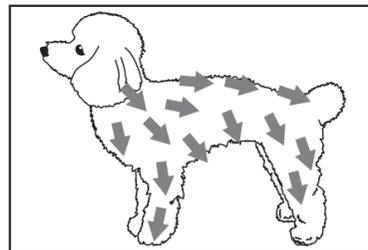


Figure 7

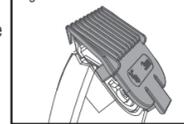

AVANT LA PREMIÈRE UTILISATION

AVANT LA PREMIÈRE UTILISATION CHARGEMENT DE LA BATTERIE

1. Chargez la batterie pendant au moins 90 minutes avant la première utilisation.
2. Insérez le câble de charge dans le port de charge de l'appareil. Connecter le port USB au chargeur.
3. Branchez le chargeur sur une prise de courant standard de 120 V.


- La batterie peut être chargée à tout moment et à n'importe quel niveau de puissance.
- Une charge complète permet jusqu'à 2 heures d'utilisation.

REMARQUE : La tondeuse peut être utilisée pendant le chargement.

INSTRUCTIONS D'UTILISATION

Appuyer sur le bouton d'alimentation et le maintenir enfoncé pendant environ 1,5 seconde pour mettre l'appareil en marche à la vitesse 1. Soyez prudent car la lame est maintenant en fonctionnement. Une fois l'appareil allumé, la lampe de poche, le voyant d'alimentation et l'écran LED s'allument. Appuyez rapidement sur le bouton d'alimentation pour basculer entre les 2 réglages de vitesse et l'ARRÊT. Tous les voyants et l'écran s'éteignent lorsque l'appareil est éteint l'appareil.

REMARQUE : Pour allumer/éteindre la lampe de poche, appuyez sur le bouton d'alimentation pendant 1,5 seconde lorsque l'appareil est allumé.

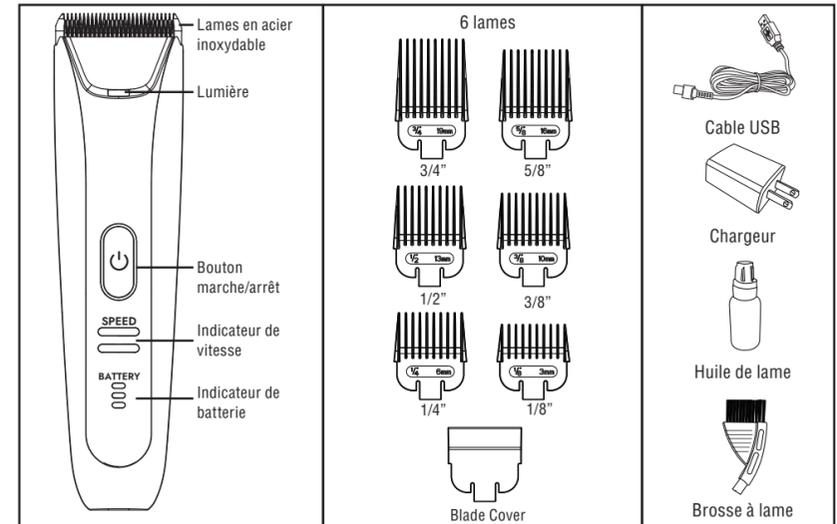

GARANTIE LIMITÉE

GARANTIE LIMITÉE DE TROIS ANS

Ce qui est couvert et combien de temps dure la couverture

Chez KONG, nous garantissons nos produits et nos contrôles de qualité. La tondeuse KONG (le « Produit ») bénéficie d'une garantie limitée de 3 ans à compter de la date d'achat d'origine aux États-Unis ou au Canada auprès d'un vendeur agréé pour l'acheteur d'origine contre les défauts de matériaux et/ou de fabrication, sous réserve des limitations énoncées dans cette garantie.

Ce qui n'est pas couvert

KONG se réserve le droit de refuser les demandes de garantie à sa seule et absolue discrétion si elle détermine qu'un problème a été causé par l'usure normale (autre qu'un dysfonctionnement de la lame du produit dans des conditions normales d'utilisation comme indiqué ci-dessous), une mauvaise utilisation, un accident (y compris un liquide renversé), un vol, une altération, une réparation inappropriée ou non autorisée ou un stockage inapproprié. Les dommages consécutifs, indirects, spéciaux, punitifs et accessoires ne sont pas récupérables au titre de cette garantie, y compris, mais sans s'y limiter, toute perte d'utilisation.

Si la lame du produit ne fonctionne pas correctement dans des conditions normales d'utilisation, KONG aura pour seule et unique obligation de fournir une lame de rechange pendant la période de garantie de trois ans.

Ce que KONG fera

Cette garantie est limitée à la réparation ou au remplacement sur une base d'échange, selon le choix de KONG, à la seule et absolue discrétion de KONG, du produit qui, après examen par KONG, est considéré comme défectueux lorsque le produit a quitté l'usine. KONG peut également choisir de rembourser le prix d'achat, moins la dépréciation, du produit lorsque, à la seule et absolue discrétion de KONG, la situation l'exige. Si un remplacement est requis conformément à cette garantie et que le produit défectueux a été abandonné ou n'est pas disponible, KONG se réserve le droit de sélectionner et de fournir un produit similaire ou d'offrir un crédit complet pour le produit au vendeur agréé d'origine ; sinon, le même produit sera fourni pour remplacement au vendeur agréé d'origine auprès duquel l'achat initial a été effectué.

Comment obtenir un service de garantie

Si vous rencontrez des problèmes avec le produit, veuillez ne pas contacter ni renvoyer le produit au vendeur agréé d'origine. Vous pouvez également contacter le service client de KONG comme suit : Site Web : <https://www.kongpetcare.com> E-mail : info@kongpetcare.com

Téléphone : 1-866-769-3166 (8 h 30 – 17 h 00 HNE) du lundi au vendredi

Comment la loi de l'État s'applique-t-elle à cette garantie ?

Cette garantie est régie par la loi du Delaware sans égard aux principes de conflits de lois. Cette garantie vous confère des droits légaux spécifiques, et vous pouvez également bénéficier d'autres droits qui varient d'un État à l'autre. DANS LA MESURE PERMISE PAR LA LOI, LA GARANTIE PRÉCITÉE EST EXCLUSIVE ET EST DONNÉE ET ACCEPTÉE EN LIEU ET PLACE DE TOUTES AUTRES GARANTIES ET REPRÉSENTATIONS, EXPRESSES, IMPLICITES OU LÉGALES, ÉCRITES OU ORALES, Y COMPRIS SANS LIMITATION TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE, D'ADÉQUATION À UN USAGE PARTICULIER OU À UN USAGE COMMERCIAL, ET LES RECOURS DE L'ACHETEUR SERONT LIMITÉS À CEUX PRÉVUS DANS LES PRÉSENTES. Certains États n'autorisent pas les limitations telles que celles énoncées ci-dessus, de sorte que la limitation ci-dessus peut ne

Protection de l'environnement et recyclage

La batterie installée dans la tondeuse électrique contient des substances qui peuvent être nocives pour l'environnement. L'appareil doit être mis au rebut conformément aux réglementations locales en matière d'environnement. Ne jamais incinérer ou jeter les batteries/appareils au feu.