


Use and Care Guide
Cornhole LED Ring Light

PACKAGE CONTENTS

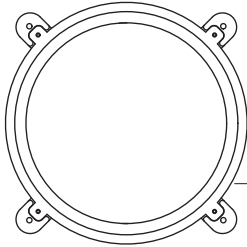


A - LED Ring light
x 2



B - Battery compartment
x 2



C - Alkaline Battery LR6
AA 1.5V (pre-installed)
x 4



D - Remote control
x 1



E - Screw
x 8




PLANNING FOR A SUCCESSFUL ASSEMBLY

- Read all instructions before assembly and installation.
- Inspect each part for defects that may have occurred during shipping. If any parts appear missing or damaged, do not assemble product. Contact Hampton Bay customer service.
- Do not use this product for other than its intended purpose.
- Keep your receipt and these instructions for proof of purchase.

Installation and Use



1 Preparing for installation

- Attach the LED ring light (A) to the back of the cornhole board using the four (4) screws (E) provided.
- Peel off the sticker located on the battery compartment (B), and attach to the back of the board.

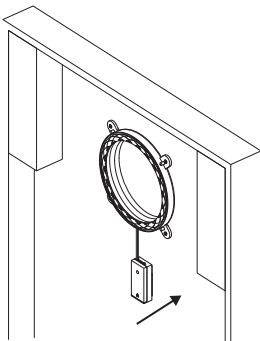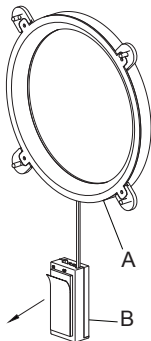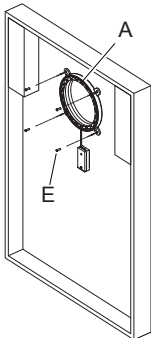

2 First time use

- Switch battery compartment (B) to the “ON” position.
- Remove the pull-tab at the end of the remote control (D).
- Select the desired color on the remote control (D).

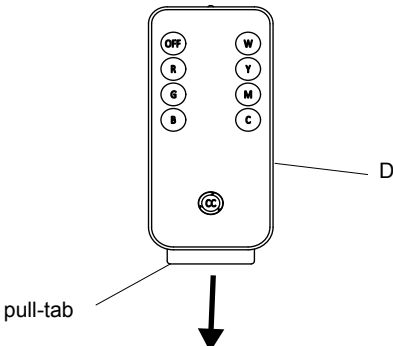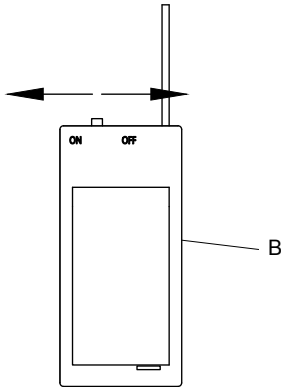

Maintenance

Replacing the battery



CAUTION: When replacing the batteries, use two (2) LR6 AA 1.5V alkaline batteries.




IMPORTANT: Dispose of the batteries in accordance with local, state, and federal regulations.



NOTE: For best performance, replace with a LR6 AA 1.5V alkaline battery when performance diminishes.

- ❑ Remove and save the screw at the top of the battery compartment (B).
- ❑ Slide off the battery cover.
- ❑ Replace the old batteries with two (2) new LR6 AA 1.5V alkaline batteries.
- ❑ Slide the battery cover back on to the battery compartment (B) and secure using the screw that was removed in the first step.

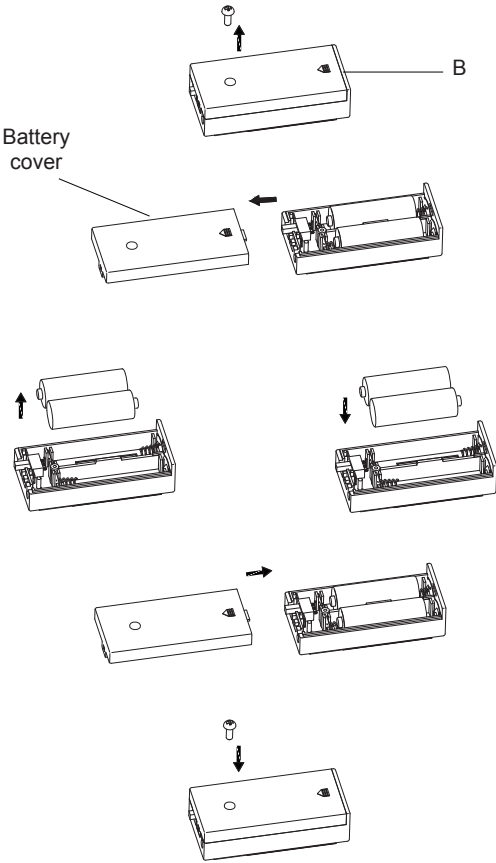

Battery Instructions

- ❑ Adult supervision is necessary when changing or disposing of batteries.
- ❑ Make sure the unit is switched to the “OFF” position when changing batteries.
- ❑ Batteries must be inserted with the correct polarity.
- ❑ Do not mix old and new batteries or batteries of different types such as alkaline, standard (carbon-zinc) and re-chargeable (nickel cadmium or nickel metal hydride) batteries.
- ❑ The supply terminals are not to be short-circuited under any circumstances.
- ❑ Exhausted batteries are to be removed from the unit.
- ❑ Replace batteries when the light is faint. Replace all batteries at the same time.
- ❑ Only batteries of the same or equivalent type as recommended are to be used.
- ❑ Do not allow any parts of the unit to come in contact with heat or flame.
- ❑ Never throw batteries in a fire or attempt to open outer casing. Batteries may explode or leak.
- ❑ Dispose of old batteries carefully. Batteries should be recycled or disposed of as per manufacturer’s recommendations.
- ❑ Batteries are harmful if swallowed, so keep away from young children.
- ❑ Remove batteries when not used for an extended period, or when depleted. Batteries can corrode over time and may cause permanent damage to the unit.
- ❑ Discharged batteries should be removed immediately from the battery compartment in order to avoid leakage.


Troubleshooting

Problem	Solution
LED light is not lighting up.	❑ The battery is not making contact. Make sure batteries are properly placed inside of the battery compartment. ❑ The battery is reaching the end of its useful life. Replace the old battery with a new battery.

Warranty

The manufacturer warrants this product to be free for two (2) years against any defects that are due to faulty materials or workmanship. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer’s only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer’s discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation or any other failure not relating to faulty workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, or fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including any labor/expense costs involved in the replacement or repair of said product.


Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

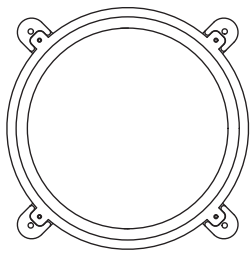

Guía de uso y mantenimiento

Anillo de luz LED para juego de *cornhole*

CONTENIDO DEL PAQUETE

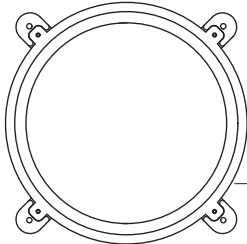


A – Anillo de luz
LED x 2



B - Compartimento de
baterías x 2



C – Batería alcalina LR6
AA de 1.5 V
(preinstalada)
x 4



E - Control remoto
x 1



D - Tornillo
x 8




PLANIFICACIÓN DEL ENSAMBLAJE EXITOSO

- Lee todas las instrucciones antes de ensamblar e instalar.
- Inspecciona cada una de las partes o piezas para ver si fueron afectadas durante el envío. Si hay piezas faltantes o dañadas, no ensambles este producto. Comunícate con el Servicio al Cliente de Hampton Bay.
- No uses este producto para propósito distinto al previsto.
- Conserva el recibo y estas instrucciones como prueba de compra.

Instalación y uso



1 Cómo prepararse para la instalación

- Fija el anillo de luz LED (A) a la parte posterior del tablero del juego *cornhole* utilizando los cuatro (4) tornillos (E) suministrados.
- Retira la calcomanía ubicada en el compartimento de baterías (B) y fíjala a la parte posterior del tablero.

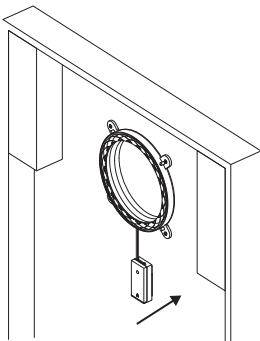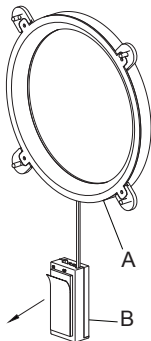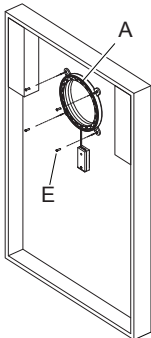

2 Al usar por primera vez

- Cambia el interruptor en el compartimento de baterías (B) a la posición de ON (ENCENDIDO).
- Retira la lengüeta del extremo del control remoto (D).
- Selecciona el color deseado en el control remoto (D).

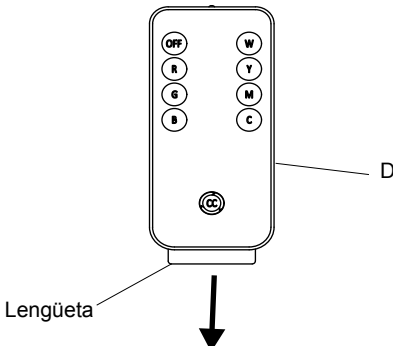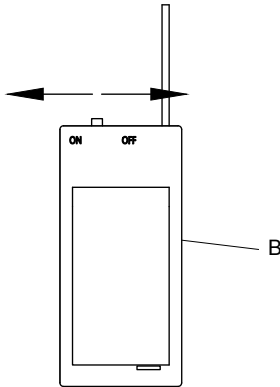

Mantenimiento

Cómo reemplazar la batería



PRECAUCIÓN: Al reemplazar las baterías, usa dos (2) baterías alcalinas LR6 AA de 1.5 V.




IMPORTANTE: Desecha las baterías de acuerdo con las regulaciones locales, estatales y federales.



NOTA: Para un mejor rendimiento, reemplaza con una batería alcalina LR6 AA de 1.5 V cuando el rendimiento disminuya.

- Retira y guarda el tornillo de la parte superior del compartimento de baterías (B).
- Desliza hacia afuera la cubierta de las baterías.
- Reemplaza las baterías viejas con dos (2) alcalinas nuevas LR6 AA de 1.5V.
- Desliza la cubierta de las baterías hacia el compartimento de baterías (B) y asegúrala con el tornillo que se retiró en el primer paso.

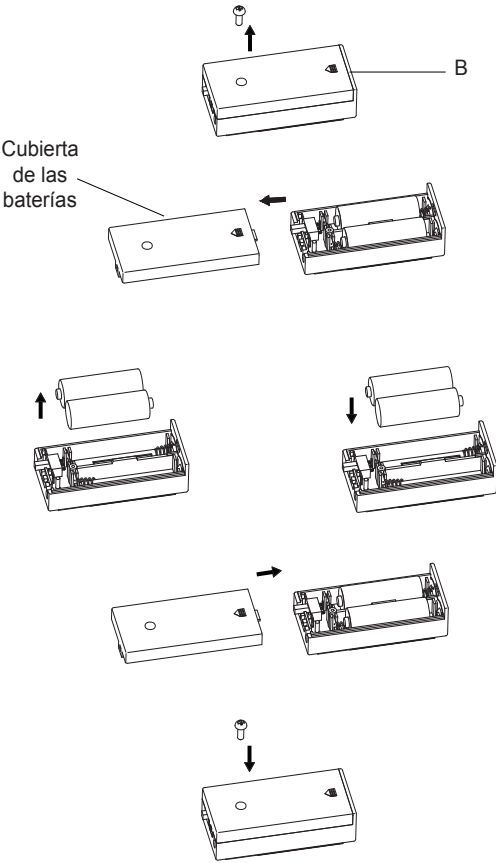

Instrucciones para las baterías

- Es necesaria la supervisión de adulto para cambiar o desechar las baterías.
- Al cambiar las baterías, asegúrate de que la unidad esté en la posición OFF (APAGADA).
- Las baterías tienen que insertarse con la polaridad correcta.
- No mezcles baterías viejas y nuevas ni de diferentes tipos, tales como alcalinas, estándar (carbón zinc) y recargables (níquel cadmio o níquel hidruro metálico).
- Las terminales de suministro de corriente no pueden ponerse en corto circuito bajo ninguna circunstancia.
- Las baterías con carga agotada deben retirarse de la unidad.
- Reemplaza las baterías cuando la luz sea tenue. Reemplaza todas las baterías al mismo tiempo.
- Sólo deben utilizarse baterías del mismo tipo o equivalentes a las recomendadas.
- No permitas que ninguna parte de la unidad entre en contacto con el calor o las llamas.
- Nunca arrojes baterías al fuego ni intentes abrir la carcasa exterior. Las baterías pueden explotar o producir fugas.
- Desecha las baterías viejas cuidadosamente. Las baterías deben reciclarse o desecharse según las indicaciones del fabricante.
- Las baterías son nocivas si se ingieren, así que mantenlas alejadas de niños pequeños.
- Retira las baterías cuando no estén en uso por un período prolongado o se hayan agotado. Las baterías pueden corroerse con el tiempo y causar daños permanentes a la unidad.
- Las baterías sin carga deben retirarse inmediatamente del compartimento de baterías para evitar fugas.

Solución de problemas

Problema	Solución
La luz LED no se enciende.	- La batería no está haciendo contacto. Asegúrate de que las baterías estén colocadas correctamente dentro del compartimento de baterías. - La batería está llegando al final de su vida útil. Reemplaza la batería vieja por una batería nueva.

Garantía

El fabricante garantiza que este producto no presentará defectos materiales ni de fabricación por dos (2) años. Esta garantía es válida sólo para el consumidor original y cubre ya sólo productos en uso y servicio normales. Si se detecta algún defecto en este producto, la única obligación y solución exclusiva del fabricante será, a su entera discreción, repararlo o reponerlo, siempre que el producto no haya sido dañado por mal uso, abuso, accidente, modificaciones, alteraciones, negligencia o manejo indebido. Esta garantía no cubre ningún producto mal instalado, configurado o usado de algún modo no acorde con las instrucciones adjuntas. Esta garantía no cubre fallas del producto como resultado de accidente, mal uso, abuso, negligencia, modificaciones o instalación defectuosa, ni cualquier otra falla no relacionada con defectos de fabricación. Esta garantía no se aplica al acabado de ninguna parte del producto, como la superficie, ni al deterioro por condiciones ambientales, que se considera desgaste normal. El fabricante no garantiza y rechaza específicamente cualquier garantía, explícita o implícita, o de idoneidad del producto para determinado propósito, que no sea la garantía indicada aquí. El fabricante rechaza específicamente cualquier obligación y no será responsable por ninguna pérdida o daño directo o indirecto, incluyendo cualquier costo de mano de obra y los gastos por reposición o reparación del producto.

Comuníquese con el equipo de servicio al cliente al 1-855-HD-HAMPTON o visite www.HamptonBay.com.