



STREAM DECK MINI

Quick Start Guide

Part: 51GAI9910

Contents

Ⓔ	Quick Start Guide	2
Ⓕ	Guide de démarrage rapide	12
Ⓖ	Kurzanleitung	
Ⓔ	Guía de inicio rápido	
Ⓘ	Guida rapida	
Ⓖ	Snelstartgids	
Ⓖ	Hurtig start guide	
Ⓕ	Pikaopas	
Ⓖ	Инструкция по началу работы	
Ⓖ	Guia rápido	
Ⓖ	Skrócona instrukcja obsługi	
Ⓔ	Snabbstartsguide	
Ⓖ	دليل البدء السريع	


1

Download and install the Stream Deck app.




2

Connect Stream Deck Mini directly to a USB port on your PC or Mac – do not use a USB hub.

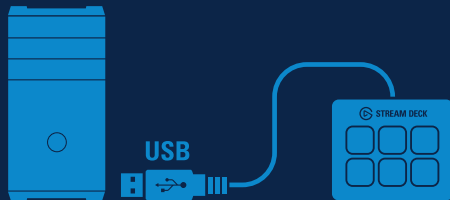


3

Launch the app to customize Stream Deck Mini. Drag actions from the right panel and drop them onto your desired keys on the left.

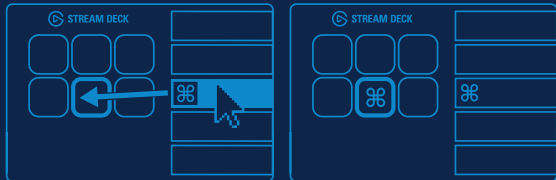

4

Configure your actions and personalize keys with custom icons – for best results use 72 x 72 pixels .jpg or .png files.

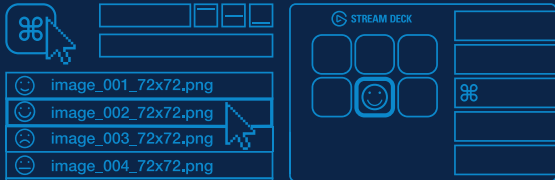


5

Drag and drop „Create Folder“ onto a key. Then drag and drop actions into that folder.




Tap the back key to exit a folder and return to your main configuration.

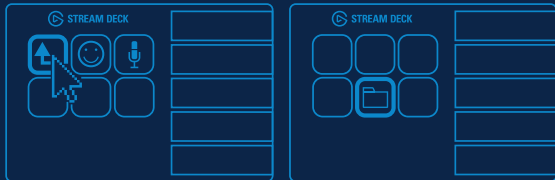


6

Right-click keys to copy, delete or move them.

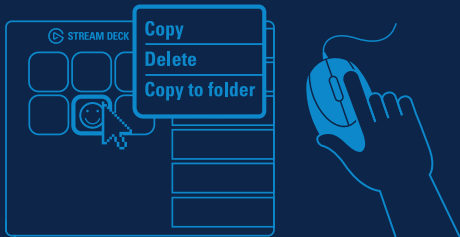

7

Enter your social media accounts to connect with your fans.

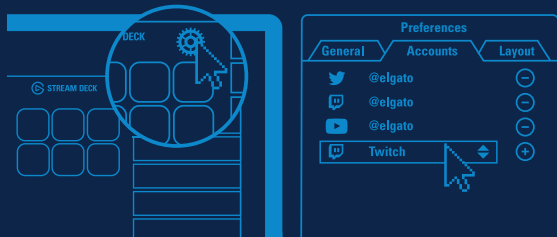

8

Get tapping and unleash your creative genius.

elgato      /elgato


1

- (FR) Téléchargez et installez l'app Stream Deck.
- (DE) Lade die Stream Deck App herunter und installiere sie.
- (ES) Descarga e instala la aplicación Stream Deck.
- (IT) Scarica e installa l'app Stream Deck.
- (NL) Download en installeer de Stream Deck-app.
- (DK) Download og installer Stream Deck app.
- (FI) Lataa ja asenna Stream Deck-sovellus.
- (RU) Загрузите и установите приложение Stream Deck.
- (PT) Descarregue e instale a aplicação Stream Deck.
- (PL) Pobierz i zainstaluj aplikację Stream Deck.
- (SV) Hämta installera Stream Deck-appen.
- (AR) قم بتنزيل تطبيق Stream Deck وتثبيته على جهازك.



2


- (FR) Branchez directement Stream Deck sur un port USB de votre PC ou de votre Mac. N'utilisez pas de hub USB.
- (DE) Verbinde Stream Deck Mini direkt mit einem USB-Port an deinem PC oder Mac. Verwende keinen USB-Hub.
- (ES) Conecta tu Stream Deck Mini directamente a un puerto USB de tu PC o Mac. No lo conectes a un hub USB.
- (IT) Collega Stream Deck Mini direttamente a una porta USB del tuo PC o del tuo Mac. Non usare un hub USB.
- (NL) Sluit de Stream Deck Mini rechtstreeks aan op een USB-poort van de pc of Mac. Gebruik geen USB-hub.
- (DK) Forbind Stream Deck Mini direkte til en USB-port på din PC eller Mac – brug ikke en USB-hub.
- (FI) Yhdistä Stream Deck Mini suoraan PC- tai Mac-tietokoneesi USB-porttiin. Älä käytä USB-keskitintä.
- (RU) Подключите Stream Deck Mini к порту USB вашего компьютера PC или Mac (не используйте USB-концентратор).
- (PT) Ligue o Stream Deck Mini diretamente a uma porta USB no seu PC ou Mac – não use um hub USB.
- (PL) Podłącz urządzenie Stream Deck Mini bezpośrednio do portu USB komputera PC lub Mac — nie używaj koncentratora USB.
- (SV) Anslut Stream Deck Mini direkt till en USB-port i datorn - använd inte en USB-hubb.
- (AR) قم بتوصيل Stream Deck Mini بمنفذ USB بالكمبيوتر الشخصي أو الماك مباشرة - لا تستخدم مشترك USB.

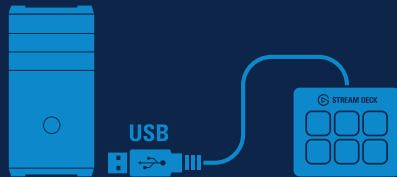

3


- (FR) Ouvrez l'app pour personnaliser votre Stream Deck. Glissez-déposez des actions du panneau de droite vers les touches souhaitées situées à gauche.
- (DE) Starte die App zur Anpassung von Stream Deck Mini. Ziehe Aktionen aus dem rechten Bereich auf die gewünschte Taste im linken Bereich.
- (ES) Abre la aplicación para personalizar tu Stream Deck Mini. Arrastra acciones desde el panel derecho y suéltalas en las teclas que desees en el lado izquierdo.
- (IT) Apri l'app per personalizzare Stream Deck Mini. Trascina le azioni dal pannello sulla destra e rilasciale sui tasti desiderati sulla sinistra.
- (NL) Start de app om de Stream Deck Mini te configureren. Sleep acties van het rechterpaneel naar de gewenste toetsen aan de linkerkant.
- (DK) Start app'en for at tilpasse Stream Deck Mini. Træk handleringer fra til højre og anbring dem på de ønskede taster til venstre.
- (FI) Käynnistä sovellus Stream Deck Minin muokkaamista varten. Vedä toimintoja oikeanpuoleisesta paneelisti ja pudota ne haluamiisi painikkeisiin vasemmalla.
- (RU) Запустите приложение, чтобы начать настройку. Выбирайте действия из списка справа и перетаскивайте влево на нужные клавиши.
- (PT) Abra a aplicação para personalizar o Stream Deck Mini. Arraste ações do painel direito e arraste-as para as teclas desejadas à esquerda.

- (PL) Uruchom aplikację, aby dostosować urządzenie Stream Deck Mini. Przeciągnij działania z prawego panelu i upuść je na żądane klawisze po lewej stronie.
- (SV) Öppna appen och anpassa Stream Deck Mini. Dra åtgärder från panelen till höger, och släpp dem på önskad tangent till vänster.
- (AR) ابدأ تشغيل التطبيق لتخصيص Stream Deck Mini. اسحب الإجراءات من اللوحة اليمنى وأسقطها على المفاتيح التي تريدها على اليسار.


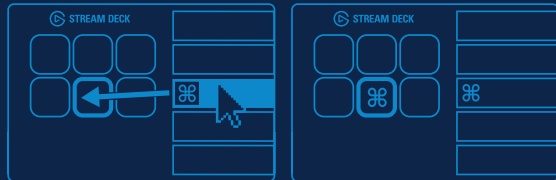


- (FR) Configurez vos actions et personnalisez les touches au moyen d'icônes personnalisées. Pour un résultat optimal, utilisez des fichiers .jpg ou .png de 72 x 72 pixels.
- (DE) Konfiguriere deine Aktionen und personalisiere die Tasten mit eigenen Icons. Die besten Ergebnisse erzielst du mit .jpg oder .png Dateien mit 72x72 Pixeln.
- (ES) Configura las acciones y personaliza las teclas con iconos personalizados. Para un resultado óptimo, usa archivos .jpg o .png de 72 x 72 píxeles.
- (IT) Configura le azioni e personalizza i tasti con icone personalizzate. Per ottenere i migliori risultati utilizza file .jpg o .png di 72 x 72 pixel.
- (NL) Configureer acties en personaliseer toetsen met eigen symbolen. Gebruik JPG- of PNG-bestanden van 72 x 72 pixels voor de beste resultaten.
- (DK) Konfigurer dine handlinger og gør dine taster personlige med særlige symboler – brug 72 x 72 pixels .jpg- eller .png-billeder for det bedste resultat.
- (FI) Konfiguroi toimintosi ja personoi painikkeet haluamillasi kuvakkeilla – saat parhaan tuloksen käyttämällä 72 x 72 pikselin jpg- tai png-tiedostoja.
- (RU) Настроив действия, добавьте к ним собственные пиктограммы. Лучше всего подойдут файлы .jpg или .png размером 72 x 72 пикс.
- (PT) Configure as suas ações e personalize teclas com ícones personalizados - para obter os melhores resultados, use ficheiros .jpg ou .png com 72 x 72 píxeis.



- (PL) Skonfiguruj działania i spersonalizuj klawisze przy użyciu niestandardowych ikon — aby uzyskać najlepsze wyniki, użyj plików .jpg lub .png o rozmiarze 72 x 72 pikseli.
- (SV) Konfigurera dina åtgärder och gör dina tangenter personliga med egna symboler - bäst resultat ger .jpg- eller .png-filer om 72 x 72 bildpunkter.
- (AR) - قم بتكوين الإجراءات وتخصيص المفاتيح باستخدام الأيقونات المخصصة - للحصول على أفضل النتائج، استخدم صور .jpg أو .png بمقاس 72×72 بكسل.

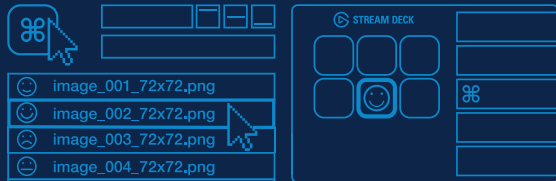

- (FR) Glissez-déposez « Créer un dossier » sur une touche, puis glissez-déposez des actions dans ce dossier.
- (DE) Ziehe „Ordner erstellen“ auf eine Taste. Ziehe dann Aktionen in diesen Ordner.
- (ES) Arrastra „Crear carpeta“ a una tecla. A continuación, arrastra acciones a esa carpeta.
- (IT) Trascina e rilascia „Crea cartella“ su un tasto. Quindi trascina e rilascia le azioni in quella cartella.
- (NL) Sleep 'Maak map' naar een toets. Sleep vervolgens acties naar die map.
- (DK) Træk og anbring „Opret mappe“ på en tast. Træk og anbring derpå handlinger ind i denne mappe.
- (FI) Vedä ja pudota „Luo kansio“ painikkeen päälle. Vedä ja pudota sen jälkeen toimintoja kyseiseen kansioon.
- (RU) Перетащите на одну из клавиш опцию «Создать папку». Перетаскиванием добавьте в папку дополнительные действия.
- (PT) Arraste a largue „Criar pasta“ numa tecla. Em seguida, arraste a largue ações nessa pasta.
- (PL) Przeciągnij i upuść działanie „Create Folder” (Utwórz folder) na klawisz. Następnie przeciągnij i upuść działania do tego folderu.
- (SV) Dra och släpp „Skapa mapp“ till en tangent. Dra och släpp sedan åtgärder till den mappen.
- (AR) اسحب وأسقط „إنشاء مجلد“ على أحد المفاتيح، ثم اسحب وأسقط الإجراءات إلى هذا المجلد.

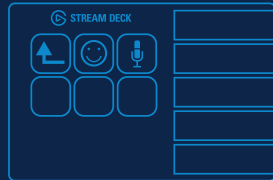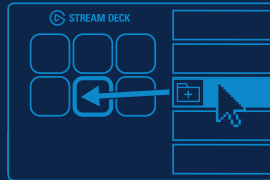


- (FR) Pour quitter un dossier et revenir à la configuration principale, touchez la touche de retour.
- (DE) Tippe auf die Zurück-Taste, um einen Ordner zu verlassen und zur Hauptkonfiguration zurückzukehren.
- (ES) Pulsa la tecla de retroceso para salir de la carpeta y volver a tu configuración principal.
- (IT) Tocca il tasto indietro per uscire dalla cartella e tornare alla configurazione principale.
- (NL) Tik op de Vorige-toets om een map te sluiten en naar de hoofdconfiguratie te gaan.
- (DK) Tryk på tilbage-tasten for at forlade en mappe og returnere til din hovedkonfiguration.
- (FI) Poistu kansiosta napauttamalla Takaisin-painiketta ja palaa pääkonfiguraatioon.
- (RU) Для возврата в главное окно нажмите «Назад».
- (PT) Toque na tecla de retroceder para sair de uma pasta e regressar à configuração principal.
- (PL) Naciśnij klawisz Back (Wstecz), aby wyjść z folderu i wrócić do konfiguracji głównej.
- (SV) Lämna mappen och gå tillbaka till huvudkonfigurationen med tillbakaknappen.
- (AR) اضغط على مفتاح الرجوع للخروج من مجلد والعودة إلى التكوين الرئيسي.

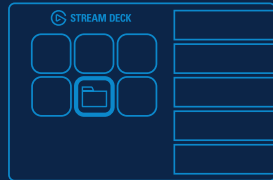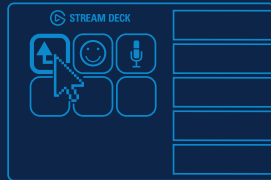


6

- (FR) Cliquez avec le bouton droit de la souris sur des touches pour les copier, les supprimer ou les déplacer.
- (DE) Rechtsklicke auf eine Taste, um sie zu kopieren, zu löschen oder zurückzusetzen.
- (ES) Pulsa las teclas con el botón derecho del ratón para copiarlas, eliminarlas o moverlas.
- (IT) Fai clic con il tasto destro del mouse sui tasti per copiarli, eliminarli o spostarli.
- (NL) Klik rechts op een toets om die toets te kopiëren, te verwijderen of te verplaatsen.
- (DK) Højreklik på taster for at kopiere, slette, eller flytte dem.
- (FI) Voit oikealla painikkeella kopioida, poistaa ja siirtää painikkeita.
- (RU) Щелчок правой кнопкой мыши по любой клавише позволит скопировать, переместить или удалить ее.
- (PT) Clique com o botão direito nas teclas para as copiar, apagar ou mover.
- (PL) Kliknij prawym przyciskiem myszy klawisze, aby je skopiować, usunąć lub przenieść.
- (SV) Kopiera, radera eller flytta tangenter genom att högerklicka på dem.
- (AR) انقر بزر الماوس الأيمن فوق المفاتيح لنسخها، أو حذفها، أو نقلها.

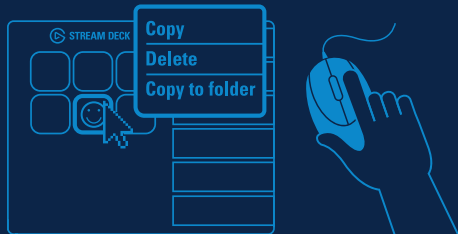

- (FR) Ajoutez vos comptes de réseau social pour échanger avec vos fans.
- (DE) Trage deine Social Media-Accounts ein und verbinde dich mit deinen Fans.
- (ES) Introduce tus cuentas de redes sociales para conectar con tus seguidores.
- (IT) Inserisci i tuoi account di social media per connetterti con i tuoi fan.
- (NL) Maak verbinding met sociale media en houd contact met je fans.
- (DK) Angiv dine konti på sociale medier for at kontakte dine fans.
- (FI) Ole yhteydessä seuraajiisi lisäämällä sosiaalisen median tilisi.
- (RU) Добавьте ваши профили в соцсетях, чтобы быстро отправлять сообщения читателям.
- (PT) Introduza as suas contas das redes sociais para estabelecer contacto com os seus fãs.
- (PL) Wprowadź konta mediów społecznościowych, aby połączyć się z fanami.
- (SV) Kom i kontakt med dina fans genom att ansluta till dina konton i sociala medier.
- (AR) أدخل حسابات التواصل الاجتماعي الخاصة بك للتواصل مع معجبيك.

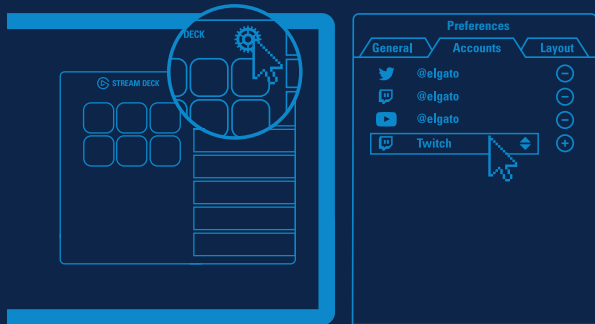

- (FR) Familiarisez-vous avec les touches et laissez libre cours à votre créativité.
- (DE) Leg los und entfalte deine Kreativität.
- (ES) Ponte a pulsar las teclas y libera tu talento creativo.
- (IT) Continua a toccare e libera la tua creatività.
- (NL) Gebruik de geconfigureerde toetsen en laat je geniale creativiteit de vrije loop.
- (DK) Tryk løs og slip dit kreative geni løs.
- (FI) Ala naputtelemään ja vapauta luova neroutesi.
- (RU) Все готово! Можно приступить к созданию трансляций.
- (PT) Comece a tocar e liberte o seu génio criativo.
- (PL) Zacznij naciskać i uwolnij swój kreatywny geniusz.
- (SV) Knattra igång och släpp loss.
- (AR) تعرف على المفاتيح وأطلق العنان لإبداعاتك.

elgato



Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. For questions about Elgato product compliance with FCC regulations, please contact:

Compliance Officer, Corsair Memory Inc., 47100 Bayside Pkwy, Fremont, CA 94538, USA

Applicant Name (상호명): Corsair Memory, Inc. | Product Name (제품명칭): Stream Deck Mini

Model No.(모델명): 20GAI9901 | Manufactured Year & Month (제조연월):

Please refer to gift box sticker

Manufacturer & Country of Origin (제조사 및 제조국가): Corsair Memory, Inc./ Made in Taiwan



R-R-CSI-20GAI9901