



PRIMO
WATER™

BOTTOM LOADING
WATER DISPENSER
WITH ICE MAKER

AMERICA'S #1 BRAND OF DISPENSERS




5333235

Bottom Loading Water Dispenser - with Ice Maker

#5333235

The clean, modern silhouette of the Deluxe 2-in-1 Ice Maker + Water Dispenser perfectly complements your kitchen and lifestyle. Welcome to smart and simple design, where with the light touch of a button, you can dispense two temperatures of water and make ice. Cold or hot – you choose whatever temperature you need.

FEATURES

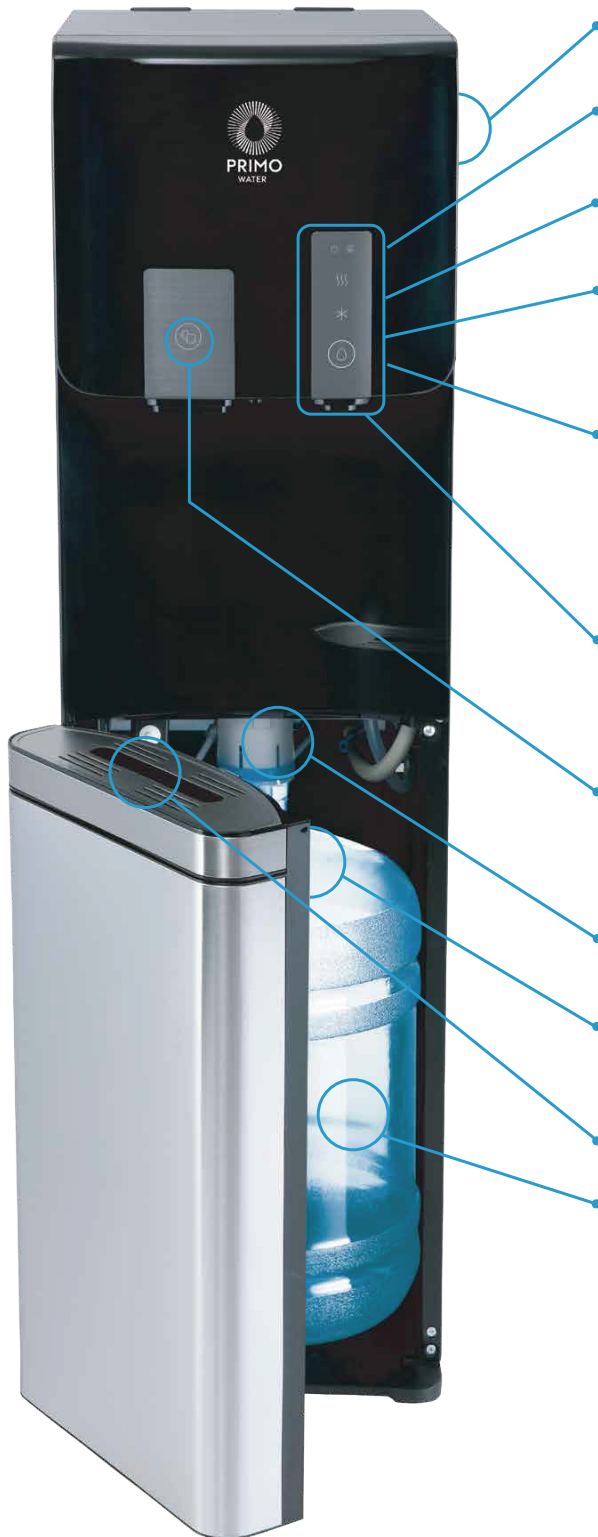

CONVENIENCE SWITCHES – On/Off switches for heating, cooling, night light and ice making are located on the back of the dispenser.

POWER ICON – Indicates that the dispenser is plugged in and ready to use.

EMPTY BOTTLE ICON – Blinks white when the bottle is empty and needs to be replaced.

HOT WATER ICON – Lights up red when heating, turns off when water is hot. Touch and hold hot water icon for three seconds; unit will chime and droplet icon will light up; touch and hold droplet to dispense hot water, release to stop.

COLD WATER ICON – Lights up blue when water is cooling, turns off when water is fully chilled. Touch to unlock, then touch dispense control to dispense cold water. For continuous dispensing, touch and hold icon for three seconds. Dispense control will flash. Touch dispense control to start dispensing, touch again to stop.

DISPENSE CONTROL – Touch to dispense water after unlocking the preferred temperature control. Release to stop dispensing. During continuous dispensing, dispense control will flash. Touch to start continuous dispensing, touch again to stop.

ICE ICON – Fades in and out when making ice, light remains on when full. Touch and continuously hold to dispense ice. Release to stop dispensing. For continuous dispensing, touch icon three times to start, touch again to stop.

PROBE ASSEMBLY – Probe pumps water from the bottle into the hot and cold reservoirs and ice maker.

PROBE HANGER – Rest probe assembly on the hanger (located inside the cabinet door) to keep it clean while replacing bottles.

DRIP TRAY – Removable and dishwasher-safe.

WATER BOTTLE – Sold separately. Uses 3- and 5-gallon bottles. Visit PrimoWater.com to find Primo water at the store nearest you.

QUICK START GUIDE

READ COMPLETE USER GUIDE INSTRUCTION SEQUENCE BEFORE PLUGGING IN AND TURNING ON DISPENSER.
FAILURE TO FOLLOW PROPER INSTALLATION INSTRUCTIONS MAY CAUSE DAMAGE TO THE WATER DISPENSER.


1. Place the dispenser on a level floor surface in the desired location in your home. Product is intended for indoor use only. (Note: Do NOT plug power cord into wall outlet until instructed.)



2. Position dispenser so the back is at least 4 inches from wall and there are at least 4 inches of clearance on both sides.




3. Clean probe with a damp cloth and dish soap. (Visit **PrimoWater.com** for detailed cleaning instructions.) Place probe assembly on hanger inside door to keep it clean.

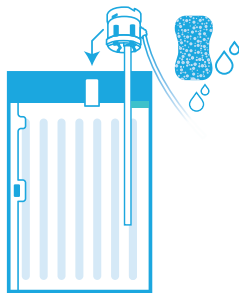

Inside of door


4. Grab a bottle of Primo water (sold separately) and fully remove the cap. Insert probe assembly into bottle. Press firmly to secure assembly over bottle opening. For 3-gallon bottles, squeeze the tabs on the top of the probe assembly to separate the probe cap from the collar and press the collar securely over the bottle opening.

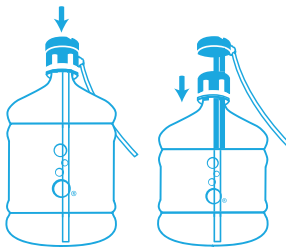

5 Gallon

3 Gallon

5. Slide bottle inside the cabinet and close cabinet door. (Note: Water will not pump from bottle unless door is fully closed.)

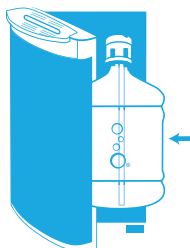

6. Plug dispenser into a ground fault circuit interrupting (GFCI) outlet. You will hear the dispenser begin to pump water to fill the internal hot and cold reservoirs.




7. Turn on desired functions by flipping the switches on the back of the dispenser to the ON position.

Red – heats water

Blue – chills water

Green – activates ice maker

Black – night light

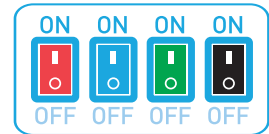

8. Once the dispenser has stopped filling the internal reservoirs, dispense and dispose at least 1 quart (approximately 2 pint glasses) of water from the cold and hot spouts.



9. Your water will be ready to dispense fully chilled water in approximately 1 hour and piping-hot in approximately 12 minutes. The first batch of ice will be ready in approximately 90 minutes.



10. Register your dispenser at **PrimoWater.com** to activate your warranty, which runs for 1 year from date of purchase.

Primo Pre-Filled Exchange Water or Self-Service Refill Water from Primo Water (sold separately)



Available at thousands of locations nationwide.
Learn more at **PrimoWater.com/locations**.

Bottom Loading Water Dispenser - with Ice Maker

OPERATING INSTRUCTIONS

DISPENSING COLD WATER

1. Water will take approximately 1 hour after initial setup to become chilled. Cooling light will turn off once the water has been fully chilled.
2. Dispenser will chime when cold icon is touched and released; will also chime when droplet is touched. For continuous, the dispenser will chime after holding the cold icon for three seconds. Will also chime when droplet is touched to start dispensing and touched to stop.

DISPENSING HOT WATER

1. Water will take approximately 12 minutes after initial setup to reach its hottest temperature. Heating light will turn off once the water has been fully heated.
2. Hot water dispense has two control options: touch and hold hot icon then touch and hold the dispense icon at the same time (chime will be heard if done correctly) OR touch and hold hot water icon for three seconds; unit will chime and droplet icon will light up; touch and hold droplet to dispense hot water, release to stop.

DISPENSING ICE

1. The dispenser will take approximately 90 minutes after initial setup to fill with ice. Cooling system fan will be on during ice making cycle. "Ice Empty" icon will turn off when ice is available to be dispensed.
2. Touch and hold the ice icon to dispense (unit will chime).
3. For continuous dispensing, tap the ice icon three times to start dispensing (unit will chime twice); tap once to stop dispensing (unit will chime). Ice is available to be dispensed.

CAUTION: This unit dispenses water at temperatures that can cause severe burns. Avoid direct contact with hot water. Keep children and pets away from the unit while dispensing. Never allow children to dispense hot water without proper and direct supervision. Disable the heating feature by switching the heating convenience switch on the back of the unit to the off position or unplug the unit. Product is intended for water dispensing only. Do not use with other liquids.

WARNINGS & SAFETY PRECAUTIONS

To reduce risk of injury and property damage, user must read this entire guide before assembling, installing & operating dispenser.

Failure to execute the instructions in this manual can cause personal injury or property damage. Models that heat water dispense at very high temperatures. Failure to use properly can cause personal injury.

When operating this dispenser, always exercise basic safety precautions, including the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- This dispenser is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Never use any liquid in the dispenser other than known and microbiologically safe bottled water.
- For indoor use only. Keep water dispenser in a dry place away from direct sunlight. Do NOT use outdoors.
- Install and use only on a hard, flat and level surface.

LOCK-OUT FUNCTION

Touch and hold the hot and cold icons for three seconds to lock the touch controls. All icons on the dispenser will flash AND chime three times, indicating unit is locked and no water can be dispensed. If controls are touched, the icons will flash three times. To unlock, press and hold the hot and cold icons for three seconds. All icons will flash three times indicating unit is unlocked and the dispenser will resume normal operation.

REPLACING THE BOTTLE

When your bottle is empty, the empty bottle light will flash. To prevent freeze-up or over-heating, the dispenser will not heat or cool water when the bottle light is flashing. Replace the bottle as soon as possible to re-enable cooling and heating.

1. Open dispenser cabinet door and slide empty bottle out of cabinet.
2. Remove probe assembly from the empty bottle and place it on the probe hanger.
3. Set empty bottle aside.
4. Remove the entire plastic cap from the new bottle.
5. Place probe into the new bottle and slide the collar down until it clicks into place. Press on the top of the probe until the tube touches the bottom of the bottle. For 3-gallon bottles, squeeze the tabs on the top of the probe assembly to separate the probe cap from the collar and press the collar securely over the bottle opening.
6. Slide the bottle into the cabinet and close the door.

CLEANING & MAINTENANCE

For best taste, performance and hygiene, clean your cabinet, controls, bottle probe and spouts regularly. Use a clean, soft cloth and food-grade sanitizer or bleach.

Empty and clean drip tray as needed. Clean the cold reservoir regularly.

Visit **PrimoWater.com** for detailed cleaning instructions.

- Do NOT place dispenser into an enclosed space or cabinet.
- Do NOT operate dispenser in the presence of explosive fumes.
- Position back of dispenser no closer than 4 inches from wall and permit free airflow between wall and dispenser. There must be at least 4 inches clearance on the sides of the dispenser to permit airflow.
- The dispenser is intended to be plugged into a ground fault interrupting receptacle.
- Do not use an extension cord with your water dispenser.
- Always grasp plug and pull straight out from outlet. Never unplug by pulling on power cord.
- Do NOT use dispenser if cord becomes frayed or otherwise damaged.
- To protect against electric shock, do NOT immerse cord, plug, or any other part of dispenser in water or other liquids.
- Ensure dispenser is unplugged prior to cleaning.
- Never allow children to dispense hot water without proper and direct supervision. Unplug unit to prevent unsupervised use by children.
- Do not dispense hot water if water bottle is empty.
- Please contact us at 866-429-7566 for troubleshooting assistance.

For warranty information, additional assistance, or instructional videos for maintaining or operating your dispenser, visit our customer support page at **PrimoWater.com**. or call us at 844-23-PRIMO. Our U.S.-based customer service team would be happy to help!

Bottom Loading Water Dispenser - with Ice Maker

WARRANTY

PRIMO WATER DISPENSER LIMITED WARRANTY ("WARRANTY")

Primo Water North America ("Primo") warrants your Primo Water Dispenser ("Dispenser") pursuant to the following terms and conditions.

WHAT DOES THIS WARRANTY COVER?

Primo warrants to the original purchaser of the Dispenser, and to no other person, that its Dispenser, including all component parts, are free from defects in material and workmanship for a period of one (1) year from the date of purchase, as stated below.

WHAT DOES THIS WARRANTY NOT COVER?

This Warranty does not cover the following:

- Damage or failure caused by normal wear and tear;
- Damage or failure caused by improper installation or assembly, which includes a failure to install or assemble the Dispenser in accordance with the instructions in the User's Manual;
- Damage or failure caused by improper operation, which includes a failure to operate the Dispenser in accordance with the instructions in the User's Manual;

Damage or failure caused by improper maintenance, which includes:

- Improper maintenance or service by you or any third party; or
- A failure to perform normal and routine maintenance on the Dispenser in accordance with the instructions in the User's Manual.
- Damage or failure resulting from accident, abuse, misuse, alteration, or misapplication; or
- Damage to the finish of the Dispenser occurring after purchase, including but not limited to scratches, dents, discoloration, or rust.

WHAT IS THE PERIOD OF COVERAGE ("WARRANTY PERIOD")?

The Warranty Period for Dispensers runs for one (1) year from the date of purchase. Implied warranties, including the implied warranty of merchantability and the implied warranty of fitness for a particular purpose, for the Primo Water Dispensers are subject to the same one (1) year duration discussed above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

WHAT WILL PRIMO DO TO CORRECT PROBLEMS?

If Primo confirms, after examination of the Dispenser or any component part, that you have a valid Warranty claim based on the terms set forth herein, at Primo's sole discretion, Primo will repair or replace the Dispenser or component part without charge.

HOW DO YOU OBTAIN WARRANTY SERVICE?

To obtain Warranty service, and before returning any parts, contact Primo's Customer Service Department online at PrimoWater.com/Contact-Us/ or by telephone at 844-237-7466.

To qualify for Warranty service, you may be required to ship your Dispenser or component parts to Primo. Shipment fees for return of the Dispenser or component parts to Primo must be prepaid by you. If Primo determines that you have a valid Warranty claim, Primo will return the repaired Dispenser or replacement parts to you, freight or

postage prepaid by Primo. If, after examination of the Dispenser or any component part, Primo determines that you do not have a valid Warranty claim, Primo will either retain the Dispenser or component parts, or return the Dispenser or component parts to you, at your discretion. If you request that Primo return the Dispenser or component parts to you, Primo will bill you for the shipment costs incurred by Primo. If you purchased your Dispenser outside of the continental U.S. (i.e., Hawaii, Alaska, or Puerto Rico), you may be required to return your Dispenser or component parts to the original point of purchase. If Primo determines that you have a valid Warranty claim, Primo will return the repaired Dispenser or replacement parts to you, freight or postage prepaid by Primo.

WILL I NEED PROOF OF PURCHASE TO OBTAIN WARRANTY SERVICE?

Primo may require reasonable proof of your date of purchase from an authorized retailer or distributor prior to offering service under this Warranty. Therefore, you should retain your receipt, order confirmation, sales slip, or invoice. Please also register your Dispenser at PrimoWater.com/Product-Registration/.

DO ANY OTHER WARRANTIES APPLY TO MY DISPENSER?

Primo offers no other warranties on its Dispensers beyond those set forth in this Warranty. No other warranty, oral or written, is authorized or has been given by Primo to the original purchaser. Primo disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors.

CAN I TRANSFER THIS WARRANTY TO SOMEONE ELSE?

This Warranty is extended to the first retail purchaser only and is not transferable.

WHAT REMEDIES DO I HAVE UNDER THIS WARRANTY?

THE ABOVE REMEDIES SHALL BE YOUR SOLE REMEDIES UNDER THE TERMS OF THIS WARRANTY. IN NO EVENT WILL PRIMO'S LIABILITY EXCEED THE PURCHASE PRICE OF THE DISPENSER. FURTHER, PRIMO SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY OTHER PERSON FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. PRIMO ASSUMES NO RESPONSIBILITY FOR DAMAGES OF ANY KIND CAUSED BY THIRD PARTIES.

Some states do not allow the exclusion or limitation of incidental, punitive, or consequential damages, so the above limitation or exclusion may not apply to you.

HOW DOES STATE LAW RELATE TO THIS WARRANTY?

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Join our community by following us on social and signing up for our emails.

We share tips for healthy living, important news about water, new product announcements and special offers.

GARANTIA

GARANTÍA LIMITADA DEL DISPENSADOR DE AGUA
PRIMO ("GARANTÍA")

Primo Water North America ("Primo") garantiza su dispensador de agua ("Dispensador") de conformidad con los siguientes términos y condiciones.

¿QUÉ CUBRE ESTA GARANTÍA?

Primero garantiza el comprador original del Dispensador, y a ninguna otra persona, que su Dispensador, incluidos todos los componentes, está libre de defectos de material y mano de obra durante un periodo de un (1) año a partir de la fecha de compra, como se indica a continuación.

¿QUÉ NO CUBRE ESTA GARANTÍA?

Primero garantiza al comprador original del Dispensador, y a ninguna otra persona, que su Dispensador, incluidos todos los componentes, está libre de defectos de material y mano de obra durante un período de un (1) año a partir de la fecha de compra.

Esta garantía no cubre lo siguiente:

• Daños causados por el uso indebido o negligencia del usuario.
• Daños causados por modificaciones no autorizadas.
• Daños causados por eventos externos como incendios, inundaciones, terremotos, etc.

Para obtener más detalles sobre esta garantía, consulte el manual de instrucciones.

¿NECESITARÉ UN COMPROBANTE DE COMPRA PARA CONSEGUIR EL SERVICIO DE GARANTÍA?

No, pero es necesario proporcionar información sobre el producto y el problema para poder ayudarte mejor.

- Daño o falla causada por el desgaste normal;
- Daños o fallos causados por una instalación o montaje incorrecto, que incluye la falta de instalación o montaje del Dispensador de acuerdo con las instrucciones del Manual del Usuario;
- Daños o fallos causados por un funcionamiento incorrecto, que incluye la falta de funcionamiento del Dispensador de acuerdo con las instrucciones del Manual del Usuario; Daños o fallos causados por un mantenimiento incorrecto, lo cual incluye: Daños o fallos causados por un mantenimiento incorrecto;
- ¿SE APLICAN OTRAS GARANTÍAS A MI DISPENSADOR?**
- PrimoWater.com/Product-Registration/.**
- Primo puede requerir una prueba razonable de su fecha de compra de esta Garantía. Por lo tanto, debe conservar su recibo, confirmación de pedido, boleto de venta o factura. Por favor, registre su Dispensador en

Primero no ofrece ninguna otra garantía sobre sus dispensadores mas dice:

- Un mantenimiento incorrecto por parte de usted o de un tercero; o
- Una falta de mantenimiento normal y de rutina del Dispensador de acuerdo con las instrucciones del Manual del Usuario.
- Daño o falla resultante de accidente, abuso, mal uso, alteración o aplicación incorrecta; o
- Daño o falla resultante de accidente, abuso, mal uso, alteración o aplicación incorrecta; o

¿CUAL ES EL PERIODO DE COBERTURA ("PERIODO DE GARANTIA")?

El Periodo de Garantía para Dispensadores se extiende durante un (1) año a partir de la fecha de compra. Las garantías implícitas, incluidas la garantía implícita de comerciabilidad y la garantía implícita de idoneidad para un propósito particular, para los Dispensadores de agua y Primeros auxilios de un (1) año de un (1) año de discusión anteriormente. Algunos estados no permiten limitaciones sobre cuánto dura una garantía implícita, de manera que la limitación anterior pudiera no proceder para usted.

¿QUÉ HARÁ PRIMO PARA CORREGIR LOS PROBLEMAS?

Si Primo confirma, después de examinar el Dispensador o cualquier componente, que tiene un reclamo de Garantía válido basado en los términos establecidos en este documento, a discreción exclusiva de Primo, Primo reparará o reemplazará el Dispensador o el componente sin cargo. Algunos estados no permiten la exclusión o limitación de daños derivados o incidentales, de modo que la limitación o exclusión anterior

¿CÓMO PUEDE CONSEGUIR EL SERVICIO DE GARANTÍA?

Para obtener el servicio de garantía, y antes de devolver cualquier pieza, comuníquese con el Departamento de Servicio al Cliente de Primo en línea en PrimoWater.com/Contact-Us/ o por teléfono al 844-237-7466.

8747-237-7466. el oppisa la



Unase a nuestra comunidad siguiendonos en las redes sociales y suscribiendose a nuestros correos electronicos. Compartimos consejos para una vida saludable, noticias importantes sobre el agua, anuncios de nuevos productos y ofertas especiales.

Dispensador De Agua De Carga Inferior - Con Máquina de Hielo

INSTRUCCIONES DE USO

DISPENSACIÓN DE AGUA FRÍA

1. El agua demorará aproximadamente 1 hora después de la instalación inicial para que esté fría. La luz de enfriamiento se apagará una vez que el agua esté totalmente fría.

2. Toque el icono de frío para desbloquear, luego toque y mantenga pulsado el icono de dispensación para obtener agua fría. Suelte para detener la dispensación. El dispensador sonará cuando se toque y suelte el icono frío, también sonará cuando se toca la gota. Para dispensar de forma continua, el dispensador sonará después de mantener pulsado el icono de frío durante tres segundos. También sonará cuando se toque la gottita para comenzar a dispensar y se toque para detener.

DISPENSAR AGUA CALIENTE

1. El agua demorará aproximadamente 12 minutos después de la instalación inicial para alcanzar la temperatura más caliente. La luz indicadora de calentamiento dejará de parpadear cuando el agua esté caliente.
2. El dispensador de agua caliente tiene dos opciones de control: tácil y Mantenga presionado el icono de acceso rápido y, a continuación, toque y mantenga presionado el icono de dispensación en el mismo tiempo (se escuchará el timbre si se hace correctamente) O Mantenga presionado el icono de agua caliente durante tres segundos; La unidad El icono de timbre y gota se iluminará; Mantener pulsado Gota para dispensar agua caliente, suelte para detener.

DISPENSACIÓN DE HIELO

1. El dispensador tardará aproximadamente 90 minutos después de la configuración inicial en llenarse de hielo. El ventilador del sistema de enfriamiento estará encendido durante el ciclo de fabricación de hielo. El icono de hielo se iluminará cuando la máquina de hielo esté llena.
2. Toque y mantenga pulsado el icono de hielo para dispensar (la unidad sonará).
3. Para dispensar continuamente, toque el icono de hielo tres veces para comenzar a dispensar (la unidad sonará dos veces); toque una vez para detener la dispensación (la unidad sonará).

PRECAUCIÓN: Esta unidad dispensa agua a temperaturas que pueden causar quemaduras graves. Evite el contacto directo con el agua caliente. Mantenga a los niños y los mascotas alejados de la unidad mientras dispensa. Nunca permita que los niños dispensen agua caliente sin la supervisión adecuada y directa. Desactive la función de calentamiento cambiando el interruptor de conveniencia de calentamiento en la parte posterior de la unidad a la posición de apagado o desenchufe la unidad. Este producto está diseñado para dispensar solo agua. No use ningún otro líquido.

ADVERTENCIAS DE SEGURIDAD Y PRECAUCIÓN

Para reducir el riesgo de lesiones y daños a la propiedad, el usuario debe leer toda esta guía antes de montar, instalar y operar el dispensador.

El incumplimiento de las instrucciones de este manual puede causar lesiones personales o daños a la propiedad. Modelos que calientan el agua dispensan temperaturas muy altas. El uso incorrecto puede causar lesiones personales.

Al operar este dispensador, siempre tome las precauciones básicas de seguridad, incluidas las siguientes:

- Antes de su uso, este dispensador debe montarse e instalarse correctamente de acuerdo con este manual.
- Este dispensador está diseñado para dispensar solo agua. NO use ningún otro líquido. NO la utilice para otros fines. Nunca use ningún líquido en el dispensador que no sea agua embotellada conocida y microbiológicamente segura.
- Solo para uso en interiores. Mantenga el dispensador de agua en un lugar seco alejado de la luz solar directa. NO utilice el equipo en exteriores.
- Instale y use solo en una superficie dura, plana y nivelada.
- NO coloque el dispensador en un espacio o gabinete cerrado.

FUNCIÓN DE BLOQUEO

REEMPLAZO DE LA BOTELLA

Toque y mantenga pulsados los iconos calientes y fríos durante tres segundos para bloquear los controles táctiles. Todos los iconos del dispensador parpadearán Y sonarán tres veces, lo que indica que la unidad está bloqueada y que no se puede dispensar agua. Si se tocan los controles, los iconos parpadearán tres veces. Para desbloquear, presione y mantenga pulsados los iconos calientes Y fríos durante tres segundos. Todos los iconos parpadearán tres veces indicando que la unidad está desbloqueada y el dispensador reanudará su funcionamiento normal.

MANTENIMIENTO Y LIMPIEZA

Para obtener el mejor sabor, rendimiento e higiene, limpie su gabinete, controles, sonda de botella y botella cada vez que reemplace su botella de agua. Use un paño limpio y suave y un desinfectante o blanqueador de grado alimenticio. Vacíe y limpie la bandeja de goteo según sea necesario. Limpie el depósito frío al menos una vez cada 3 meses. Visite PrimoWater.com para obtener instrucciones detalladas de limpieza.

6. Deslice la botella en el gabinete y cierre la puerta.

- NO opere el dispensador en presencia de gases explosivos.
- Coloque la parte posterior del dispensador no más cerca de 4 pulgadas de la pared y permita el flujo de aire libre entre la pared y el dispensador. Debe haber al menos 4 pulgadas de espacio libre en los lados del dispensador para permitir el flujo de aire.
- El dispensador está diseñado para ser enchufado en un interruptor de falla a tierra. NO use un cable de extensión con su dispensador de agua.
- Siempre agarre el enchufe y tire directamente del tomacorriente. Nunca desenchufe tirando del cable de alimentación.
- NO use el dispensador si el cable se deslitcha o se daña.
- Para protegerse contra descargas eléctricas, NO sumerja el cable, el enchufe ni ninguna otra parte del dispensador en agua u otros líquidos. Asegúrese de que el dispensador esté desenchufado antes de limpiarlo. Nunca permita que los niños dispensen agua caliente sin la supervisión adecuada y directa. Desenchufe la unidad para evitar que los niños lo usen sin supervisión.
- NO dispense agua caliente si la botella de agua está vacía.
- Comuníquese con nosotros al 866-429-7566 para obtener ayuda con algún problema.

GUÍA PARA INICIO RÁPIDO

LEA LA SECUENCIA COMPLETA DE INSTRUCCIONES DE LA GUÍA DEL USUARIO ANTES DE ENCHUFAR Y ENCENDER EL DISPENSADOR. SINO SIGUE LAS INSTRUCCIONES DE INSTALACIÓN ADECUADAS PUEDE DAÑAR EL DISPENSADOR DE AGUA.


1. Coloque el dispensador en una superficie nivelada del piso en la ubicación deseada en su hogar. Este producto está diseñado para su uso solo en interiores. [Nota: NO conecte el cable de alimentación a la toma de corriente hasta que se le indique.]



2. Coloque el dispensador de modo que la parte posterior esté al menos a 4 pulgadas de la pared y haya al menos 4 pulgadas de espacio libre en ambos lados.




3. Limpie la sonda con un paño húmedo y jabón para platos. (Visite PrimoWater.com para obtener instrucciones detalladas de limpieza). Coloque el ensamblaje de la sonda en el colgador dentro de la puerta para mantenerlo limpio.




Interior de la puerta

4. Tome una botella de agua Primo (se vende por separado) y retire completamente la tapa. Inserte el ensamblaje de la sonda en la botella. Presione firmemente para asegurar el montaje sobre la apertura de la botella. Para botellas de 3 galones, apriete las lengüetas en la parte superior del ensamblaje de la sonda para separar la tapa de la sonda del cuello y presione el cuello con seguridad sobre la abertura de la botella.

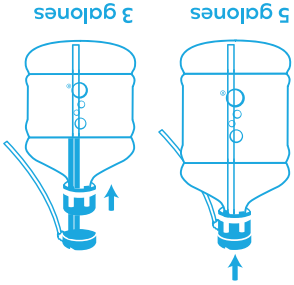

5. Deslice la botella dentro del gabinete y cierre la puerta del gabinete. [Nota: El agua no se bombeará desde la botella o menos que la puerta esté completamente cerrada.]

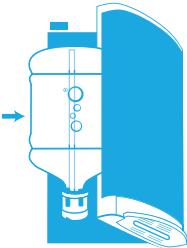


6. Enchufe el dispensador en un interruptor de circuito por falla a tierra (GFCI). Escuchará que el dispensador comienza a bombear agua para llenar los depósitos internos calientes y fríos.



7. Active las funciones deseadas girando los interruptores en la parte posterior del dispensador a la posición de encendido (ON).

Rojo – calienta el agua
Azul – enfría el agua
Verde – activa la máquina de hielo
Negro – luz nocturna

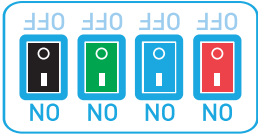

8. Una vez que el dispensador haya dejado de llenar los depósitos internos, dispense y deseché al menos 1 litro (aproximadamente 2 vasos de pinto) de agua de los tanques fríos y calientes.



9. Está lista para dispensar agua completamente enfriada en aproximadamente 1 hora y bien caliente en aproximadamente 12 minutos. El primer lote de hielo estará listo en aproximadamente 90 minutos.



10. Registre su dispensador en PrimoWater.com para activar su garantía, que se extiende durante 2 años a partir de la fecha de compra.

Agua de intercambio precargada Primo o agua con autoserivicio de recarga de Primo (se vende por separado).



Disponble en miles de ubicaciones en todo el país. Obtenga más información en PrimoWater.com/locations.

Dispensador De Agua De Carga Inferior - Con Máquina de Hielo

#5333235

La silueta limpia y moderna de la máquina de hielo 2 EN 1 Deluxe + Dispensador de agua complementa perfectamente su cocina y estilo de vida. Bienvenido al diseño inteligente y simple, donde con el ligero toque de un botón, puede dispensar dos temperaturas de agua y hacer hielo. Frio o caliente: elija la temperatura que necesite.

CARACTERÍSTICAS

- INTERRUPTORES CONVENIENTES** – Los interruptores de encendido/apagado para calentar, refrigerar, fabricar de hielo y luz nocturna se encuentran en la parte posterior del dispensador.
- ICONO DE ENCENDIDO** – Indica que el dispensador está enchufado y listo para usar.
- ICONO DE BOTELLA VACÍA** – Parpadea en blanco cuando la botella está vacía y necesita ser reemplazada.
- ICONO DE AGUA CALIENTE** – E ilumina en rojo cuando está calentando, se apaga cuando el agua está caliente. Toque y mantenga pulsado el icono de agua caliente durante tres segundos, la unidad sonará y el icono de gotitas se iluminará; toque y mantenga pulsada la gotita para dispensar agua caliente, suéltela para detenerla.
- ICONO DE AGUA FRÍA** – Se ilumina en azul cuando el agua se está enfriando, se apaga cuando el agua está completamente fría. Toque para desbloquear, luego toque el control de dispensación para dispensar agua fría. Para una dispensación continua, toque y mantenga pulsado el icono durante tres segundos. El control de dispensación parpadeará; toque el control de dispensación para comenzar a dispensar, toque nuevamente para detener.
- CONTROL DE DISPENSACIÓN** – Toque para dispensar agua después de desbloquear el control de temperatura preferido. Suéltelo para detener la dispensación. Durante la dispensación continua en frío, el control de dispensación se iluminará. Toque para comenzar la dispensación continua, toque nuevamente para detener.
- ICONO DE HIELO** – Se desvanece y se enciende una y otra vez al hacer hielo, la luz permanece encendida cuando está llena. Toque y sostenga continuamente para dispensar hielo. Suéltelo para detener la dispensación. Para dispensar continuamente, toque el icono tres veces para comenzar, toque nuevamente para detener.
- ENSAMBLAJE DE LA Sonda** – La sonda bombea agua de la botella a los tanques calientes y fríos y a la máquina de hielo.
- SOPORTE DE Sonda** – Descanse el ensamblaje de la sonda en el soporte (ubicado dentro de la puerta del gabinete) para mantenerlo limpio mientras reemplaza las botellas.
- BANDEJA DE GOTEO** – Es extraíble y apta para lavavajillas.
- BOTELLA DE AGUA** – No está incluida. Utiliza botellas de 3 y 5 galones. Visite Primowater.com para encontrar la tienda más cercana a usted que vende agua Primo.





DISPENSADOR DE AGUA DE CARGA INFERIOR CON MÁQUINA DE HIELO

LA MARCA DE DISPENSADORES #1 DE LOS ESTADOS UNIDOS