Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk

COSTWAY

Contact Us!

Do NOT return this item.
Contact our friendly customer service department for help first.

US:cs.us@costway.com
UK:cs.uk@costway.com
AU:cs.au@costway.com

ISONART



USER'S MANUAL

Weighted Key Digital Piano
MU70017

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

FEATURES

Thank you for choosing our digital piano. The digital piano is elegant and exquisite, and it is the perfect combination of the latest electronic technology.
◆ Before using this instrument, you must read the instructions in detail.

MULTIMEDIA MP3 PLAY
With MP3 multimedia playback functions providing full music entertainment.

SPECIAL REMINDER
Stay away from radio, TV, antenna receiver, router, refrigerator and all RF electrical interference sources such as motorized appliances.

PRODUCT CARE
Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing failure.
1. AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT
Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.
2. DO NOT USE NEAR THE TV OR RADIO.
This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.
3. NO PAINT, DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.
Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.
4. DO NOT SHAKE, AVOID COLLISION
When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

JACK SOCKET

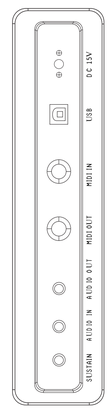

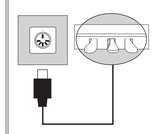

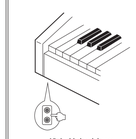



1. POWER LINE CONNECTION
1. When used according to the access power line, one end is inserted into the socket at the bottom of the piano operation plate. The other end is inserted into the110V household power socket.
2. If you do not use this product for a long time, unplug the power cord and keep it properly.
2. AUDIO INPUT/OUTPUT PLUG
1. The audio output socket can be connected to large sound box equipment.
2. The audio input socket connects the external sound source to the electric piano for playback.
3. MIDI INPUT AND OUTPUT SOCKET
The MIDI interface of this digital piano can be connected to music equipment with MIDI.
4. USB TRANSPORT INTERFACE
Use the USB port of this digital piano to connect to a computer. Through pre-installed music software on the computer, you can play the keyboard to perform music performance, composition, editing, storage and other functions. The edited music and the built-in accompaniment of the music software can be connected to the digital piano through the software for playback, or play according to the accompaniment music.
5. DOUBLE HEADSET SOCKET
Connecting the headset will automatically cut off the output of the built-in loudspeaker, so it won't disturb others when playing *This product has two headphone sockets, which can insert two headphones at the same time.
6. PEDAL SOCKET
Insert the end of the pedal line into the circular socket on the bottom of the piano, and you can connect the 3 pedal sound effects .In turn : weak tone, posterior extension and portamento.

INSTALLATION

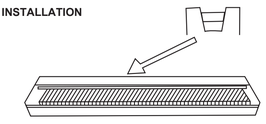

OPERATION GUIDE

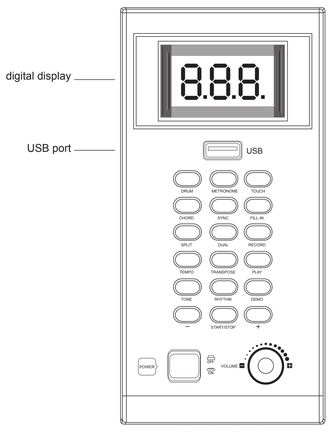

Function Panel

Basic operation
Preparatory work
This section introduces you to the basic operating knowledge of digital piano

How to play
1. switch the "power supply" switch to the on state, the display screen is lit up, and enter the normal playing state.
2. adjust the volume potentiometer and adjust the volume to the appropriate position.
3. play music on the keyboard.

The choice of timbre
There are 480 timbres in this product (see TONE list).
Please follow the following steps to select the desired timbre

How to select tone color
1. Find the TONE you need in the timbre list and remember its timbre number.
2. Press the tone key to enter timbre mode.
3. Select the desired timbre by selecting the "+"/"-" key, the timbre number is (000-479).

The convenience of chord accompaniment
The following steps describe how to use the chord functionality of this product. Before you begin, you should first select the rhythm you want to use and set the speed value.

Automatic accompaniment
The choice of rhythm
This product has 200 built-in rhythms (see the RHYTHM list), please follow the steps below to select the desired rhythm.

How to choose rhythm
1. Press the rhythm key to enter the rhythm mode.
2. Select the desired rhythm by selecting the "+"/"-" key, the rhythm number is (000-199).
3. Press the "start / stop" key to start playing the rhythm.
4. To stop the rhythm to play, and then press the "start / stop" key.

Synthetic chord accompaniment
1. Press the start / stop button to start broadcasting the currently selected rhythm.
2. press the "chord" button to enter the chord state. If the chord mode of single multi-finger reuse conforms to the multi-finger chord playing method, the piano responds to the multi-finger chord; where the single-finger chord method is not in accordance with the multiple-finger chord method, the response is recognized according to the single-finger chord.
3. To play a chord, press different fingerings to perform different performances on the accompaniment keyboard (1-22 keys from the left).
4. Press the "chord" button again to turn off the chord state.

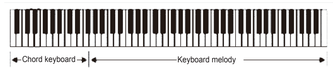

Synchronous start
You can set this product to start playing rhythmically while you play accompaniment on the keyboard. The following steps describe how to use synchronous startup.
Before you begin, you should first select the rhythm to use, set the speed value, and select the chord accompaniment.

Using synchronous startup
1. In the chord state, press the synchronize button to enter the synchronous start standby state.
2. When you play the chord, the accompaniment will automatically start broadcasting.
3. To cancel synchronization, press the start / stop button.

Use of Music Library
The built-in music library of this product contains 80 pieces of music (see list of demonstration songs), and the built-in music is used for playback and appreciation.

The playing of music in a library
1. find the music to be played in the library list and record its number.
2. press the key of "DEMO" to enter the mode of demonstration song.
3. select the song by selecting the "+" "-" key Number (000-079)
4. Press the DEMO key or start / stop the key to stop playing to exit this mode.
The music will continue to play in order until you stop it.

The use of keyboard strength tactile function
When the keyboard of this product is opened for the strength tactile keyboard "strength" function, the relative volume of the electronic output music will vary according to the intensity that the keyboard is pressed, and can play music with different volume and different feelings.
1. press the strength TOUCH button, and the strength touch function is activated.
2. press "TOUCH" again and turn off the tactile function.
When booting, it is automatically in the state of starting the strength tactile function.

The use of keyboard Drum instrument function
Press the "Drum" button, switch the keyboard of the digital piano to the drum key board, press the DRUM button again, and turn off the function.

The use of Dual Voice function
When using the Dual Voice function to play the keyboard, you can emit two different timbre at the same time, showing the resonance effect of the two musical instruments.

How to use Dual Voice function
1. first enter the timbre mode, choose a musical instrument as the main timbre.
2. press the "DUAL" button to enter the second timbre selection mode.
3. use the "+/-" button to select a musical instrument as the second timbre.

The use of keyboard split function
Using the keyboard split function, you can assign two different timbre (main tone and split tone) to both ends of the keyboard, so that you can play one timbre with your left hand and another with your right hand to play an ensemble effect.

Use of metronome function
Press the "metronome" button, the metronome function is activated, you can follow the beat sound to play. Press the metronome button again, and the metronome function is turned off.
Please use the "Tempo" button and "+/-"button to set the speed.

Recording
1. Press the recording key to enter recording mode.
2. The maximum number of recordings is 250, and when the recording is full, there will be no room for new recording.
3. Each time you press this key, you erase the last memory, and re-enter recording mode.

Play sound
1. Press the PLAY key to play the recorded notes and drums, and play them in the timbre selected for the recording at that time
2. Press the PLAY key, and if there is no previous memory value, no action occurs.

Transpose effect control
1. Press the "Transpose" key to enter the transposition control mode, and then press the "+" and "-" keys to set the range of transposition.
2. There are 13 segments (-6-+6) for the transposition control, and the power-on preset value is in the seventh segment.
3. In the transposition mode, press the "+" and "-" keys for more than one second to continuously increase/decrease the transposition.

MP3 function
1. Connect to the U disk and go directly into MP3 mode.
2. Select songs from MP3. Press the "+" "-" key to select the song.
3. Press the start / stop key to start and pause playback.

APPENDIX

TONE

000	AcoPiano	035	FretBass
001	BrtPiano	036	SlpBass1
002	ElcPiano	037	SlpBass2
003	HnkPiano	038	SynBass1
004	RhoPiano	039	SynBass2
005	ChoPiano	040	Violin
006	Hrpchord	041	Viola
007	Clvichrd	042	Cello
008	Celesta	043	CntrBass
009	GlcknsplI	044	TremoStr
010	MusicBox	045	PizziStr
011	Vibphone	046	OrchHarp
012	Marimba	047	Timpani
013	Xylophon	048	String1
014	TubBells	049	String2
015	Dulcimer	050	SynStr1
016	DrawOrg	051	SynStr2
017	PercOrg	052	ChoirAah
018	RockOrg	053	VoiceOoh
019	ChurhOrg	054	SynVoice
020	ReedOrg	055	OrchHit
021	Accrdion	056	Trumpet
022	Harmnica	057	Trombone
023	TangoAcc	058	Tuba
024	NylonGtr	059	MuteTrmp
025	SteelGtr	060	FrnchHrn
026	JazzGtr	061	BrassSec
027	CleanGtr	062	SynBrss1
028	MutedGtr	063	SynBrss2
029	OverGtr	064	SoprnSax
030	DstorGtr	065	AltoSax
031	GtrHrmnc	066	TenorSax
032	AcoBass	067	BariSax
033	ElecBass	068	Oboe
034	BassPick	069	EngHorn

070	Bassoon	108	Kalimba	146	Hrpchrd1
071	Clarinet	109	BagPipe	147	Clvchrd1
072	Piccolo	110	Fiddle	148	Celestal
073	Flute	111	Shanai	149	Glcknspl
074	Recorder	112	TinklBel	150	MusicBx1
075	PanFlute	113	Agogo	151	Vibphonl
076	BottBlow	114	SteelDrm	152	Marimbal
077	Shakuhac	115	WoodBlck	153	Xylopho1
078	Whistle	116	TaikoDrm	154	TubBell1
079	Ccarina	117	MelodTom	155	Dulcime1
080	Square	118	SynthDrm	156	DrawOrg1
081	Sawtooth	119	RevCymbl	157	PercOrg1
082	Calliope	120	GtrFrt	158	RockOrg1
083	Chiff	121	BrthNse	159	ChuhOrg1
084	Charang	122	Seashore	160	ReedOrg1
085	Voice	123	BrdTweet	161	Accdion1
086	Fifths	124	TeleRing	162	Harmnic1
087	Bas+Lead	125	Helicopt	163	TangoAc1
088	NewAge	126	Applause	164	NylonGt1
089	Warm	127	GunShot	165	SteelGtl
090	Polysyn	128	Yong Gin	166	JazzGtr1
091	Choir	129	Zheng	167	CleanGt1
092	Bowed	130	ZhongRua	168	MutedGt1
093	Metallic	131	Pi Pa	169	OverGtr1
094	Halo	132	BigSouna	170	DstorGt1
095	Sweep	133	Suona	171	GtrHrmn1
096	Rain	134	Er Hu	172	AcoBassl
097	Soundtrk	135	Yue Hu	173	EleBass1
098	Crystal	136	Di Zi	174	BassPik1
099	Atmosphe	137	Bong Di	175	FreBass1
100	Brights	138	Koto	176	SlpBass3
101	Goblins	139	Qu Di	177	SlpBass4
102	Echoes	140	AcoPinol	178	SynBass3
103	Sci-Fi	141	BrtPinol	179	SynBass4
104	Sitar	142	ElcPino1	180	Violinl
105	Banjo	143	HnkPino1	181	Violal
106	Shamisen	144	RhoPino1	182	Cellol
107	Koto	145	ChoPinol	183	CntBassl

184	TremoStl	222	Caliopel
185	PizziStl	223	Chiffl
186	OrcHarp	224	Charang1
187	Timpanil	225	Voicel
188	String3	226	Fifthsl
189	String4	227	BasLeadl
190	SynStr3	228	NewAgel
191	SynStr4	229	Warml
192	ChoirAal	230	Polysynl
193	VoiceOhl	231	Choirl
194	SynVoicl	232	Bowed1
195	OrchHitl	233	Metalicl
196	Trumpetl	234	Halol
197	Trmbonel	235	Sweepl
198	Tubal	236	Rainl
199	MuteTrpl	237	SoundtkI
200	FrnhHrnl	238	Crystall
201	BrasSecl	239	Atmosphel
202	SynBrss3	240	Brightsl
203	SynBrss4	241	Goblinsl
204	SoprSaxl	242	Echoesl
205	AltoSaxl	243	Sci-Fil
206	TenoSaxl	244	Sitarl
207	BariSaxl	245	Banjol
208	Oboel	246	Shamsenl
209	EngHornl	247	Kotol
210	Bassoonl	248	Kalimbal
211	Clarint1	249	BagPipel
212	Piccolol	250	Fiddlel
213	Flutel	251	Shanail
214	Recordrl	252	TinkBell
215	PaFlutel	253	Agogo1
216	BotBlowl	254	SteelDrml
217	ShakuhA1:	255	Wodblckl
218	Whistle1	256	TaikDrml
219	Ocarinal	257	MeloToml
220	Squarel	258	SyntDrm
221	Sawtootl	259	Recymbll

260	GtrFrtl	298	RockOrg2
261	BrthNsel	299	ChuhOrg2
262	Seshorel	300	ReedOrg2
263	BrdTwetl	301	Accdion2
264	TelRingl	302	Harmnic2
265	Helicptl	303	TangoAc2
266	Aplausel	304	NylonGt2
267	GunShotl	305	SteelGt2
268	YongGinl	306	JazzGtr2
269	Zhengl	307	CleanGt2
270	ZhonRual	308	MutedGt2
271	PiPal	309	OverGtr2
272	BiSounal	310	DstorGt2
273	uonal	311	GtrHrmn2
274	ErHul	312	AcoBass2
275	YueHul	313	EleBass2
276	Di Zil	314	Basspik2
277	Bong Dil	315	FreBass2
278	Kotol	316	SlpBass5
279	Qu Dil	317	SlpBass6
280	AcoPino2	318	SynBass5
281	BrtPino2	319	SynBass6
282	ElcPino2	320	Violin2
283	HnkPino2	321	Viola2
284	RhoPino2	322	Cello2
285	ChoPino2	323	CntBass2
286	Hrpchrd2	324	TremoSt2
287	Clvchrd2	325	PizziSt2
288	Celesta2	326	OrcHarp2
289	Glcknsp2	327	Timpani2
290	MusicBx2	328	String5
291	Vibphon2	329	String6
292	Marimba2	330	SynStr5
293	Xylopho2	331	SynStr6
294	TubBell2	332	ChoirAa2
295	Dulcime2	333	VoiceOh2
296	DrawOrg2	334	SynVoic2
297	PercOrg2	335	OrchHit2

336	Trumpet2	374	Halo2
337	Trmbone2	375	Sweep2
338	Tuba2	376	Rain2
339	MuteTrp2	377	Soundtk2
340	FrnhHrn2	378	Crrystal2
341	BrasSec2	379	Atmophe2
342	SynBrss5	380	Brights2
343	SynBrss6	381	Goblins2
344	SoprrSax2	382	Echoes2
345	AltoSax2	383	Sci-Fi2
346	TenoSax2	384	Sitar2
347	BariSax2	385	Banjo2
348	Oboe2	386	Shamsen2
349	EngHorn2	387	Koto2
350	Bassoon2	388	Kalimba2
351	Clarint2	389	BagPipe2
352	Piccolo2	390	Fiddle2
353	Flute2	391	Shanai2
354	Recordr2	392	TinkBel2
355	PaFlute2	393	Agogo2
356	BotBlow2	394	SteeDrm2
357	Shakuha2	395	WodBlck2
358	Whistle2	396	TaikDrm2
359	Ocarina2	397	MeloTom2
360	Square2	398	SyntDrm2
361	Sawtoot2	399	Recymbl2
362	Caliope2	400	GtrFrt2
363	Chift2	401	BrthNse2
364	Charang2	402	Seshore2
365	Voice2	403	BrdTwet2
366	Fifths2	404	Telring2
367	BasLead2	405	Helicpt2
368	NewAgge2	406	Aplause2
369	Warm2	407	GunShot2
370	Polysyn2	408	YongGin2
371	Choir2	409	Zheng2
372	Bowed2	410	ZhonRua2
373	Metalic2	411	PiPa2

412	BiSouna2	450	DstorGt3
413	Suona2	451	GtrHrmn3
414	Er Hu2	452	AcoBass3
415	YueHu2	453	EleBass3
416	DiZi2	454	BassPik3
417	BongDi2	455	FreBass3
418	Koto2	456	SlpBass7
419	QuDi2	457	SlpBass8
420	AcoPino3	458	SynBass7
421	BrtPino3	459	SynBass8
422	ElcPino3	460	Violin3
423	HnkPino3	461	Viola3
424	RhoPino3	462	Cello3
425	ChoPino3	463	CntBass3
426	Hrpchrd3	464	TremoSt3
427	Clvchrd3	465	PizziSt3
428	Celesta3	466	OrcHarp3
429	Glcknsp3	467	Timpani3
430	MusicBx3	468	String7
431	Vibphon3	469	String8
432	Marimba3	470	SynStr7
433	Xylopho3	471	SynStr8
434	TubBell3	472	ChoirAa3
435	Dulcime3	473	VoiceOh3
436	DrawOrg3	474	SynVoic3
437	PercOrg3	475	OrchHit3
438	RockOrg	476	Trumpet3
439	ChuhOrg3	477	Trmbone3
440	ReedOrg3	478	Tuba3
441	Accdion3	479	MuteTrp3
442	Harmnic3		
443	TangoAc3		
444	ylonGt3		
445	SteelGt3		
446	JazzGtr3		
447	CleanGt3		
448	MutedGt3		
449	OverGtr3		

APPENDIX

RHYTHM

000	50sPop	037	BritRock
001	CoolPop	038	60sViRo
002	GroovPop	039	CharRock
003	60sVinta	040	60sPopRk
004	80sPop	041	RkBilly
005	RapPop	042	RkBoogie
006	PopRock	043	RkChaCha
007	60sSoul	044	RkClassi
008	70sSoul	045	RkShuffl
009	Funk	046	RockPop
010	16Shuff	047	RockRol
011	Twist	048	RockRol2
012	BritPop1	049	StrtRock
013	BritPop2	050	JazzRock
014	HardRk1	051	FastGosp
015	HardRk2	052	FolkRock
016	Fusion1	053	Skiffle
017	Fusion2	054	FuPoRock
018	FunkShf1	055	CntRock
019	FunkShf2	056	AcouRock
020	FusShufl	057	PopMambo
021	FusShuf2	058	LatPart
022	ClubPopl	059	Cumbia
023	ClubPop2	060	Parranda
024	16Pop1	061	Carnival
025	16Pop2	062	Bosanova
026	8Pop1	063	Mambo
027	8Pop2	064	Mambo2
028	8Soull	065	Bolero
029	8Soul2	066	Cumbia
030	8Rock1	067	LatnRock
031	8Rock2	068	DiscoLtn
032	Clas8Bet	069	Tijuana
033	VintaGtr	070	Reggae
034	Schltal	071	Salsa
035	60sRockN	072	Calypso
036	StanROCH	073	GuadDanc

074	Reggae12	111	DiscoFnk
075	Reggae16	112	DscoHand
076	70sChart	113	DsCoPrty
077	RomaBald	114	DiscoSmba
078	90sCool	115	UKPop
079	AlpBall	116	ClubDnce
080	AlpBall2	117	ModernRB
081	EBallad	118	HipShffl
082	Unpluggd	119	ChrlSton
083	PopBalld	120	DiscoPop
084	PopNewAg	121	DiscSoul
085	8BModern	122	DiscTrot
086	CntryBld	123	EuroBeat
087	LoveSong	124	Rap
088	MdCnPop	125	Rave
089	ElecPop	126	Techno1
090	AcouBlld	127	Techno2
091	PianoBld	128	70DisFuk
092	RBBallad	129	DiscoPhi
093	RckBlld	130	DiscoHou
094	SlowEasy	131	80sDisco
095	AnaBlld	132	SwingFoX
096	SloRock1	133	SlowFox
097	SloRock2	134	OrganCha
098	SloRock3	135	OrganQui
099	SlowSoul	136	CatGrve
100	8BtAdria	137	DixieJzz
101	ClssPno	138	MedJazz
102	80sEPBad	139	JazzBand
103	80sByBad	140	JazzClub
104	70sDisc1	141	Ragtime
105	70sDisc2	142	BndShfll
106	FnkyDsco	143	BndShf12
107	SatNight	144	BndShf13
108	ClubLtn	145	FastBnd1
109	DscoChoc	146	stBnd2
110	DiscoFox	147	FranSoul

148	JazzFunk	185	Pasodobl
149	CIBigBad	186	Samba1
150	Prenjazz	187	Samba2
151	JumpJive	188	SchlRck1
152	CountBad	189	SchlRck2
153	CountTwo	190	FoxTrot
154	Countryl	191	VieWaltz
155	Country2	192	Tango1
156	FingPick	193	Tango2
157	CntryBot	194	GerWaltz
158	NewCotry	195	Carnival
159	EasCnt	196	OrgSamba
160	7O'sCntr	197	Reel
161	Hoedown	198	GayGordo
162	CouShuff	199	ScaWaltz
163	SchPolka		
164	PolkaPop		
165	BluGrsst		
166	BluGrss2		
167	BluGrss3		
168	PopWltz		
169	USAMarch		
170	HullGull		
171	Tarntla		
172	LmboRock		
173	SwaWaltz		
174	PubPiano		
175	JzzWltz11		
176	JzzWltz2		
177	ShowTune		
178	Polka		
179	OberPoka		
180	ParPolka		
181	Waltz		
182	ChaCha		
183	Rumba		
184	Jive		

APPENDIX

DEMO

000	HotelPac	037	Greensle
001	Madness	038	Polka
002	Restaura	039	Arabesqu
003	Johny	040	JockClub
004	Zimbada	041	Transpor
005	Paradise	042	Higher
006	Birthday	043	TaihLake
007	Carmen	044	August
008	Cavatina	045	CentGove
009	JingBell	046	Tathagat
010	Silent	047	Aobaosha
011	Christma	048	YamiChxi
012	SaintsGo	049	Jasmine
013	Susanna	050	Jaunty
014	MoonRive	051	GoodDay
015	ABCWord	052	Chidhood
016	MerryChr	053	ZiZhuTia
017	SixDucks	054	Auspicio
018	MaryLamb	055	Journey
019	Moonligh	056	FarPlace
020	AmeriRag	057	PraiSong
021	CrazArms	058	LookHome
022	TearDrop	059	Affordab
023	WaltOp64	060	Chapeau
024	PianSona	061	Qinghai
025	BlueDanu	062	SameSong
026	TheCrave	063	RoadBend
027	TeaTwo	064	Farewell
028	SleigRid	065	HappHome
029	NoseRein	066	PlaPeach
030	SileNigh	067	NewCetry
031	Dream	068	GaMeRose
032	Clock	069	KdLoSong
033	Humoresq	070	Dansolde
034	Frohlich	071	BeijTune
035	Canon	072	YiJiaMei
036	Waltz	073	Rumanxil
		074	Dabiesha
		075	HappYear
		076	DreOfRiv
		077	ThePenhu
		078	HeartThr
		079	Jasmine

ITEMS INCLUDED

Power adapter	1PC	MIDI line	1PC
Piano cover	1PC	Foot Pedal	1PC
Headphone	1PC	Manual	1PC
Music stand	1PC		

MUSICAL INSTRUMENT PARAMETERS

Keyboard: 88 key	Pitch: ＜ 3 tones.
Voice range: A2-C5	Output power: ＞20W*2
Style Upright piano	Power parameters: DC 15V 50/60Hz

PRECAUTIONS

POWER SUPPLY
This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

MARKING MAP
To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:

⚠ WARNING
This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

⚠ BE CAREFUL
This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO

This triangle sign (△) indicates what users should pay attention to. (The left picture shows a cautious electric shock)
A circular sign (⃠) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (No disassembly is allowed on the left)
Black dots (•) indicate what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The left picture shows that the power plug must be pulled out of the socket)

⚠ WARNING
Smoke, odor, overheating:
When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually.
In case of the above situation, the following operations should be performed immediately.
1. turn of the power.
2. Pull the plug out of the power outlet.
3. Contact us.

Power cord:
● Improper use of power cord may cause fire and electric shock. The following precautions must be observed.
• The special power cord designated for this product must be used.
• The AC power supply with output voltage within the rated voltage range for household use must be used.
• Do not overload power sockets and extension lines.
● The improper treatment of power line will lead to damage or breakage, which will lead to fire and electric shock hazards.
The following precautions must be observed.
• Do not place or heat heavy objects on power lines.
• Do not attempt to alter or bend the power cord too much.
• Do not twist or pull the power cord.
• If the power cord or plug is damaged, please replace the same type of power cord.
● Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.
● Please use the power cord where it won't splash. Water is in danger of causing fire and electric shock.
● Never place vases or any other Container containing water on this product. Water is dangerous of causing fire and electric shock.
● Do not allow minors to unplug and touch power lines or connection boards, minors do not have electricity safety common sense, there is a risk of electric shock.

⚠ BE CAREFUL
● Improper use of power cord may cause fire and electric shock. The following precautions must be observed.
• Do not put the power cord near the furnace or other heat source.
• Do not pull the power cord when unplugging the power socket, but must grasp the plug body.
• The power cord pl