



www.petlibro.com



## PETLIBRO

Automatic Pet Feeder

**Model:** PLAF001

©Libro Corp. All Rights Reserved.

**Manufacturer:** Shenzhen Libro Technology Co., Ltd.

**Address:** 12/F, Tower B, GALAXY WORLD, Yabao Road,

Longgang District, Shenzhen, China

Made in China

PLAF001\_V2.0



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model: PLAF001

# USER MANUAL

Automatic Pet Feeder

Before using the product, please read this manual thoroughly and retain it for future reference.

# CONTENTS

---

## English

SAFETY PRECAUTIONS	01
WARRANTY	04
IN THE BOX	05
PRODUCT DIAGRAM	06
BUTTONS AND DISPLAY OVERVIEW	07
HOW TO USE	08
ASSEMBLY AND PREPARE FOR SETTING	08
PROGRAM SETTING	10
CLEAN AND CARE	15
TROUBLESHOOTING	17
SPECIFICATIONS	18

## 日本語

安全に関する注意事項	19
保証	22
箱入り	23
製品図	24
ボタンとディスプレイの概要	25
使用方法	26
組み立てと設定の準備	26
プログラム設定	28
クリーン&ケア	33
トラブルシューティング	35
仕様	36

## SAFETY PRECAUTIONS

### ! Warning

- Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around the pet feeder.
- To reduce the risk of injury, please keep close supervision when an appliance is used near children.
- Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
- Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
- Do NOT place any foreign object in the pet feeder.
- Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
- Do NOT use wet, canned or moist food.
- Do NOT disassemble the unit other than as instructed in this User Guide.
- Do NOT use the feeder for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
- Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
- Always unplug when not in use and before cleaning.
- Never pull on the electrical power cord to remove the plug from the wall outlet.

- If the plug of this device gets wet, turn off electricity to that wall outlet. Do not attempt to unplug.
- Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way of foot traffic.

### CAUTION

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store to protect the power cord.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4°C / 39°F.
- Use alkaline D batteries to power. Do NOT use rechargeable batteries.
- Check the batteries regularly. Before leaving for extended time, always replace batteries with new ones.
- Do NOT lift the pet feeder by lid, food tank, or food tray. Lift and carry it using both hands and the base, while keeping the unit in an upright position.
- Suitable for dry food ONLY, with kibble size ranging from 2-10mm / 0.07-0.4in in diameter. Larger kibble may get stuck at the food outlet.
- Read and observe all important notices listed on the pet feeder and in the packaging.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.


**WARRANTY**

- 1-year warranty
- Lifetime support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email: **support@petlibro.com**

If any questions related to orders, please contact the seller through the shopping platform.

## IN THE BOX

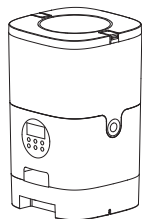

Automatic Pet Feeder

X1



Stainless Steel Bowl

X1



Bowl Holder

X1



Power Adapter

X1



Desiccant Bag

X1




User Guide Kit


X1

## PRODUCT DIAGRAM

### Front View

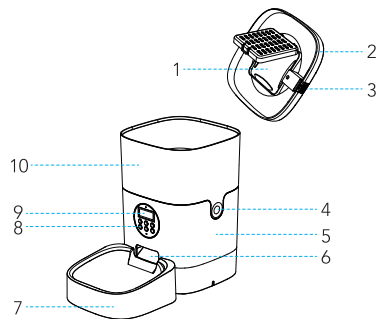

### Bottom View

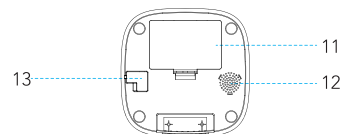

1) Desiccant Carrier

2) Lid

3) Lid Lock Button

4) Food Tank Buckle

5) Base

6) Food Outlet

7) Stainless Bowl &  
Bowl Holder

8) Control Panel

9) LCD Display


10) Food Tank

11) Battery Compartment

12) Speaker

13) Power Socket

## BUTTONS AND DISPLAY OVERVIEW

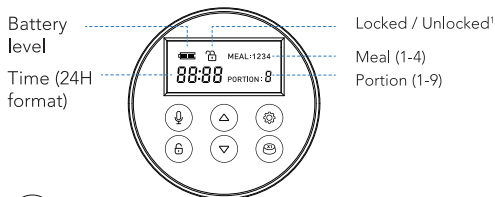

### Recording Button

When the device is unlocked, press and hold for 3s until a beep is heard then the device starts to record. Keep holding the button throughout your recording. Release the button when you hear the beep twice, this indicates that the recording has ended. The device supports a maximum of 10s recording.



### Unlocked Button

Before programming, press and hold the button for 3 seconds to unlock the system.



### Up Button

- In the unlocked mode, press to increase value.
- In the locked mode, press and hold for 6 to 10 seconds, the display flashes twice, and the current time is 00:00, indicating the resetting is complete.



### Down Button

In the unlocked mode, press to decrease value.



### Setting Button

Press shortly: Confirm the current settings and enters the next step automatically.  
Press and hold for 3s: Set the current time of the device.



### Manual Feeding Button

In the unlocked mode, press once to feed a portion.

**Note:** After 30 seconds of standby, the control buttons and screen are automatically locked.


## HOW TO USE

Warning: Please use the original 5V power supply.

## ASSEMBLY AND PREPARE FOR SETTING




1. Take out the food bowl inside the food tank.

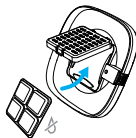

2. Put the desiccant bag into the carrier under the lid.

### Notes:

- To prevent mold growth, it is recommended to change the desiccant bag every 15 days.
- Remove the desiccant bag before cleaning the lid.

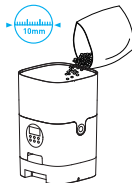


3. Add dry pet food to the food tank.

### Notes:


- Do NOT use canned, wet or moist pet food.
- Recommend kibble size ranging from 2-10mm / 0.07-0.4in in diameter.



4. Put the lid back on.  
Press down to make sure it snaps into place.

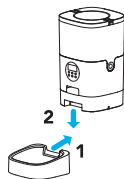

5. Install the food bowl.  
Attach the bowl to the designated notches underneath the feeder base.  
Note: Before moving the feeder, press the bowl down to remove it from the feeder base. If there is grain in the food bowl, handle it gently to avoid spilling. Hold the base instead of any other parts when lifting the feeder.

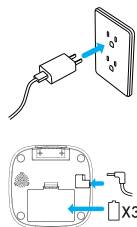

6. Connect Power.

- Plug the 5V power adapter into a power socket and the power cable into the power jack under the feeder.
- Open the battery compartment at the bottom of the unit, and install 3 alkaline D batteries (not included) in case of power outage.
- The LCD display will light up automatically indicating the feeder is on now.

## Notes:

- 1) Batteries are NOT included.
- 2) Before connecting power, make sure all parts are clean and dry.
- 3) The battery should power with an output of 4-5V; the battery level icon on the display blinks on a low battery level.


## PROGRAM SETTING

### 1. Set the Current Time


1) Press and hold the Unlocked button (🔓) for 3s to unlock other buttons and screen. The lock indicator on the screen turns from 🔒 to 🔓.



2) Press and hold the Setting Button (⚙️) for 3s, the hour digits will start to flash.

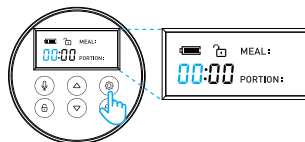






3) Press the Up / Down button (⬆️ / ⬆️) to set the hour. Press the Set button (⚙️) to save. The minute digits flash, press the Up / Down button (⬆️ / ⬆️) to set the minute, press the Set button (⚙️) to save. The current time setting is complete.



For example: If the current time is 8:30 AM, first, press the Up/Down button (⬆️ / ⬆️) to set the hour to 08, press the set button (⚙️) to save, and then press the Up/Down button (⬆️ / ⬆️) to set the minute to 30, press the Set button (⚙️) to save.

## 2. Set the Number of Meals per Day

After the current time is set, press the Setting Button shortly and the word "MEAL" will come up and meal number will flash. Press the Up / Down button  /  to choose 1-4 meals per day, press the Set button  to save.

For example: If you want to set 4 meals per day, press the up button  until it shows 1 2 3 4, then press the set button  to save.









## 3. Set the Feeding Time & Portion of Meals

### • Set the feeding time of the first meal




1) Once the number of meals per day is set, the feeder is ready for setting the meal time and portion of the first meal, icon 1 stays solid, the hour digits flash.



2) Press the Up / Down button  /  to set the hour. Press the Set button  to save. The minute digits flash, press the Up / Down button  /  to set the minute. Press the Set button  to save.



### • Set the portion of the first meal

1) Once the first meal time is set, the portion number will flash. Press the Up/Down button  /  to set the portion (Max 9), press the Set button  to save.



2) Repeat the steps above to set the time and portion of other meals if needed. The feeder supports up to 4 meals per day.

### \*Reference for portion setting:

Model	Daily Intake	Meals per Day	Portion per Meal	Per Portion
PLAF001-4L	1/2 Cup	2	5	12.5ml
		3	3 3 4	
		4	2 2 3 3	
	1/3 Cup	2	3 4	
		3	2 2 3	
		4	1 2 2 2	
	2/3 Cup	2	7	
		3	4 5 5	
		4	3 3 4 4	
	3/4 Cup	2	7 8	
		3	5	
		4	3 4 4 4	
	9/10 Cup	2	9	
		3	6	
		4	4 4 5 5	
	1 Cup	3	6 7 7	
		4	5	
	1 1/4 Cup	3	8 8 9	
		4	6 6 6 7	
	1 1/2 Cup	4	6 8 8 8	
		3	9	
		4	6 7 7 7	
	1 3/4 Cup	4	8 8 9 9	

### Important Notes:

1) It is normal to hear clicks before food is dispensed.




2) One or two kibbles may be left at the chute after feeding, and it may come out of the outlet when the machine is moved (doesn't indicate a faulty equipment).

3) Refer to the instructions on your pet food packaging for detailed feeding instruction.

4) Please double-check the current time after setting.


## 4. Clear All Settings

In the **locked mode**, press and hold the up button (▲) for 6 to 10 seconds, the display flashes twice, and the current time is 00:00, indicating the resetting is complete.

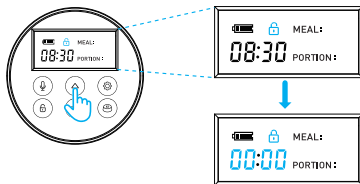

## 5. Record a Meal Call

1. Unlock the device first by press and hold the Unlock Button (🔓) for 3s. Then press and hold the Recording Button (🔊) for 3s until you hear a beep. Keep holding down the Recording Button (🔊) to record. (10s maximum).

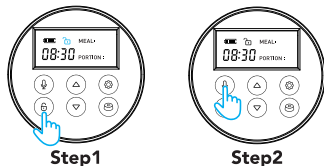

2. Release the Recording Button (🔊) or after the recording has lasted for 10s, the device will beep twice which indicates that the recording has finished and saved. To change the recording, just repeat the process. To check the voice you just recorded, press the Recording button (🔊) once.


### Notes:

- The default of the meal call playback is 2 times, and the meal call plays when feeding time is up.
- When the device is unlocked, to delete your recording, press and hold the Recording Button (🔊) for 3s. Release immediately after a beep is heard. When 2 beeps are heard, no recording is taken.

## 6. Manually Feed Your Pet

Unlock the screen first (press and hold the Unlocked button (🔓) for 3s), then press the Feed button (🍲), the feeder dispenses one portion of food.

Note: The normal schedule and portion is not affected.

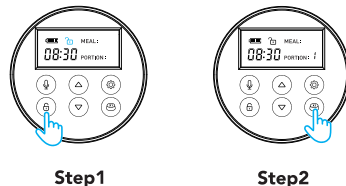


## CLEAN AND CARE


- It's recommended to clean the feeder regularly for the health of your pet.
- The washable parts are as follows: lid, food tank, stainless bowl, bowl holder.

### Clean the lid, food tank, food tray


1. Disconnect power before cleaning.

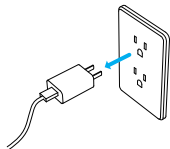


2. Remove the lid and take out the desiccant bag in the carrier under the lid.

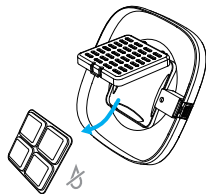


3. To remove the food tray, press down the stainless steel bowl with holder.

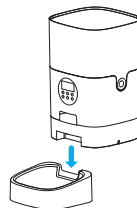

4. To remove the food tank, use your thumbs to press the buckles on both sides while pushing upwards at the same time.

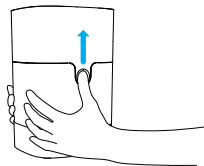

5. Rinse and air dry the lid, food tank, food tray thoroughly before refitting them to the machine.

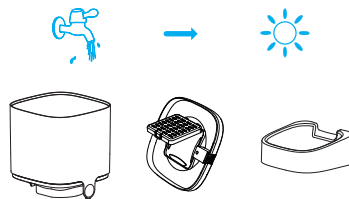

## TROUBLESHOOTING

Problems	Solutions
How to delete the voice recording.	To delete your recording, in the unlocked state, press and hold the recording button for 3 seconds until you hear a beep, then immediately press the recording button again, two beeps are heard.
No display on the screen.	<ol style="list-style-type: none"><li>1) Check whether the power adapter is connected to the socket. If properly connected but the problem still exists, you can install three batteries to see if the problem is solved.</li><li>2) If your feeder is only powered by batteries, make sure the batteries have enough power.</li><li>3) If the above solutions don't work, please contact our support team via email.</li></ol>
Kibbles don't come out.	<ol style="list-style-type: none"><li>1) Suitable kibble size: 2-10mm (0.07-0.4inch), bigger kibbles could get stuck and jam the feeder.</li><li>2) Do not add moist or wet food.</li><li>3) Empty and remove the food tank, check the chute and food outlet, and remove blockages.</li></ol>
Press the buttons, the display lights up, but the buttons don't work.	Before programming, press and hold the unlocked button for 3 seconds to unlock the system first.

## SPECIFICATIONS

Model	PLAF001
Food Tank Capacity	4 liters
Screen	LCD screen
Power	DC 5V power adapter; 3 x alkaline D batteries(not included)
Power Adapter	AC110-240V input, DC 5V output
Working Current	Avg. 80mA
Operating Temperature	-30 C -50 C / -22°F - 122°F
External Socket	5.5mm power socket
Net Weight	2.15kg / 4.74lbs
Dimensions	19 x 19 x 30cm / 7.5 x 7.5 x 12in

## 安全に関する注意事項

### !警告:

- ・梱包材はすべて適切に廃棄してください。窒息する恐れがありますので、お子様やペットの手の届かないところに保管してください。
- ・小さなお子様がペットフィーダーで遊んだり、ペットフィーダーの周りで遊んだりしないでください。
- ・怪我のリスクを減らすために、子供の近くで器具を使用するときは、近くで見守ってください。
- ・餌皿に手が届かないペットや体の不自由なペットには使用しないでください。
- ・ベース部分を水に浸けしないでください。コントロールパネルなどの電子部品を損傷する恐れがあります。
- ・ペットフィーダーの中に異物を入れないでください。
- ・屋外では使用しないでください。屋外では使用しないでください。頻繁に動作を確認し、正しく供給されていることを確認してください。
- ・ウェットフード、缶詰、湿ったフードは使用しないでください。
- ・本機の分解は、本ガイドの指示以外には行わないでください。
- ・本機を本来の用途以外に使用しないでください。
- ・メーカーが推奨または販売しているアタッチメントのみを使用してください。メーカーが推奨・販売していないアタッチメントを使用すると、危険な状態になることがあります。ペットフィーダーを改造しないでください。
- ・装置が故障していたり、破損している場合は、装置を操作しないでください。ご自分でペットフィーダーを修理しないでください。すぐにカスタマーサービスに連絡してください。
- ・使用していないときや掃除をする前には必ずプラグを抜いてください。
- ・電源コードを引っ張ってプラグをコンセントから抜くことは絶対にしないでください。
- ・本機のプラグが濡れた場合は、そのコンセントの電源を切ってください。プラグを抜こうとしないでください。

- ・設置後のフィーダーを点検してください。電源コードやプラグに水が付いている場合は、接続しないでください。
- ・電源コードやプラグに水が付着している場合は、接続しないでください。
- ・つまずかないように、電源コードは常に足元の邪魔にならないように配置してください。

### ご注意:

- ・ペットが部品を噛んだり飲み込んだりしないようにしてください。電源コードが気になる場合は、コードコンジット(硬質プラスチック製の保護具)をホームセンターなどで購入して、電源コードを保護してください。
- ・また、延長コードが必要な場合は、適切な定格のものを使用してください。
- ・ペットフィーダーは風雨にさらされる場所や、4℃以下の場所には設置保管しないでください。
- ・電源にはアルカリ乾電池を使用してください。充電式電池は使用しないでください。
- ・電池は定期的に点検してください。定期的に電池を点検し、長期間使用しない場合は、必ず新しい電池に交換してください。
- ・ペットフィーダーは、蓋やフードタンク、フードトレイを持って持ち上げないでください。蓋、フードタンク、フードトレイを持たずに、両手とベースを使って持ち上げ、本体を直立させたまま運んでください。
- ・ドライフード専用で、キブルサイズは以下の範囲です。
- ・直径2～10mm。直径2～10mmのドライフード専用です。
- ・ペットフィーダーやパッケージに記載されている重要な注意事項をすべて読み、守ってください。

このデバイスは、FCC規則のパート15に準拠しています。操作には、次の2つの条件が適用されます。

- (1) このデバイスは有害な干渉を引き起こさないこと、および
- (2) このデバイスは、望ましくない操作を引き起こす可能性のある干渉を含め、受信した干渉を受け入れる必要があります。

本機に対する変更または修正が、コンプライアンスに責任を持つ当事者によって明示的に承認されていない場合、本機を操作するユーザーの権限が無効になることがあります。

注: この装置は、FCC規則のパート15に準拠したクラスBデジタルデバイスの制限に準拠するようテストされ、確認されています。これらの制限は、住宅での設置において有害な干渉から妥当に保護するように設計されています。この装置は、無線周波エネルギーを生成、使用、放射することがあり、指示に従わずに設置、使用すると、無線通信に有害な干渉を引き起こすことがあります。しかし、特定の設置場所で干渉が発生しないことを保証するものではありません。本装置がラジオやテレビの受信に有害な干渉を引き起こす場合（装置の電源を切ったり入れたりすることで判断できます）、ユーザーは以下の手段の1つまたは複数によって干渉を修正するよう試みることが推奨されます。

- 受信アンテナの向きを変えるか、位置を変えます。
- 機器と受信機の間隔を広げます。
- 受信機が接続されているものとは別の回路のコンセントに機器を接続します。
- 販売店または経験豊富なラジオ/テレビ技術者に相談してください。

このデバイスとそのアンテナは、他のアンテナまたは送信機と同じ場所に配置したり、一緒に操作したりしないでください。

放射線被ばくに関する声明

FCCのRF Exposure ガイドラインに準拠するため、この機器は身体から最低 20cm 離して設置および操作する必要があります。

## 保証について


- 1年保証
- ライフタイムサポート

製品の使用方法や保証期間の延長などについては、当社ブランドのアフターセールススタッフにメールでお問い合わせください:

**support.jp@petlibro.com**

ご注文に関するご質問は、ショッピング・プラットフォームを通じて販売者にお問い合わせください。

## 箱入り

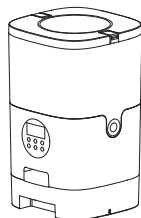

ペット自動給餌器

X1




ステンレス製ボウル

X1



ボウルホルダー

X1



電源アダプター

X1



乾燥剤バッグ

X1




ユーザーガイドキット


X1

## 製品図

フロントから

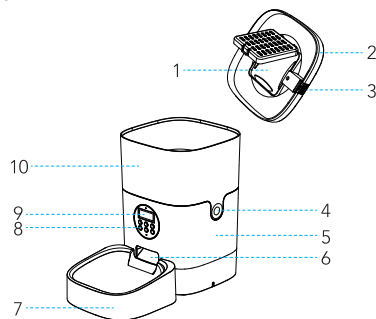


下から

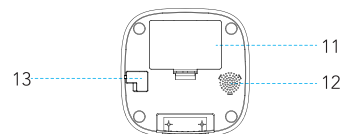

- 1) デシカントキャリア
- 2) 蓋
- 3) 蓋のロックボタン
- 4) フードタンクバックル
- 5) ベース
- 6) フードアウトレット
- 7) ステンレスボウル & ボウルホルダー

- 8) コントロールパネル
- 9) LCDディスプレイ
- 10) フードタンク
- 11) バッテリー収納部
- 12) スピーカー
- 13) 電源ソケット

## ボタンとディスプレイの概要

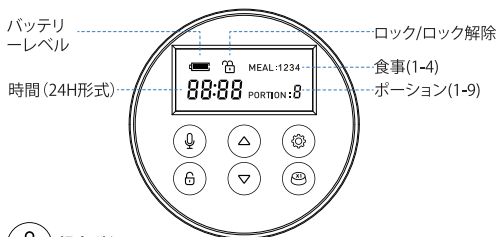

### 録音ボタン

デバイスのロックが解除されたら、ピープ音が始まるまで3秒間押し続け、録音を開始します。録音中はボタンを押し続けてください。ピープ音が2回鳴った後ボタンを離すと、録音が終了します。このデバイスは、最大10秒間録音することができます。

### ロック解除ボタン

プログラムを組む前に、ボタンを3秒間長押しすると、システムのロックが解除されます。

### アップボタン

- ロック解除モードでは、押すと値が増えます。
- ロックモードでは、6～10秒間押し続けると、ディスプレイが2回点滅し、現在の時刻が00:00となり、リセットが完了したことを示します。

### ダウンボタン

ロック解除モードでは、押すと値が減少します。

### 設定ボタン

短く押す：現在の設定を確認後、自動的に次のステップに進みます。  
3秒間押し続ける：デバイスの現在時刻を設定します。

### 手動給餌ボタン

ロックされていない状態で、1回押すと、一人分の食事ができます。

**注：30秒の待機後、操作ボタンと画面は自動的にロックされます。**


## ご使用方法

**警告 オリジナルの5V電源を使用してください。**

### 組み立てと設定の準備




1. フードタンク内のフードボールを取り出す。

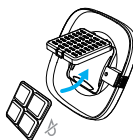

2. 乾燥剤バッグを蓋の下のカリヤに入れます。

#### ノート：

- カビの繁殖を防ぐため、15日ごとに乾燥剤バッグを交換することをお勧めします
- 蓋を掃除する前に、乾燥剤バッグを取り外してください。

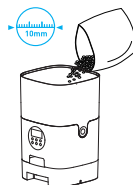


3. フードタンクにドライペットフードを入れる。

#### 注意事項


- 缶詰、ウェット、モイストのペットフードは使用しないでください。
- 直径2-10mm / 0.07-0.4inの範囲のキブルサイズをお勧めします。



4. ふたを元に戻します。  
押し下げて、所定の位置にカチッとはまるようにします。

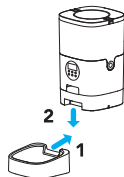

5. フードボウルを取り付けます。  
ボウルをフィーダーベースの下に指定されたノッチに取り付けます。  
注:フィーダーを移動する前に、ボウルを押し下げてフィーダーベースから取り外します。フードボウルに穀物が入っている場合は、こぼれないようにやさしく取り扱ってください。フィーダーを持ち上げるときは、他の部品ではなくベースを持ってください。

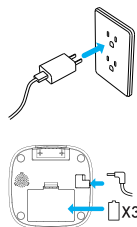

6. 電源を接続します。
- 5V電源アダプターを電源ソケットに差し込み、電源ケーブルをフィーダーの下に電源ジャックに差し込みます。
  - ユニットの下部にある/バッテリーコンパートメントを開き、停電に備えて3つのアルカリDバッテリー (別売) を取り付けます。
  - LCDディスプレイが自動的に点灯し、フィーダーがオンになったことを示します。


## ノート

- 電池は含まれていません。
- 電源を接続する前に、すべての部品が清潔で乾燥していることを確認してください。
- 3) バッテリーは4-5Vの出力で電力を供給します。電池残量が少なくなると、ディスプレイの電池残量アイコンが点滅します。


## プログラム設定

### 1. 現在の時刻を設定します


- 1) ロック解除ボタン を3秒間押し続けて、他のボタンや画面のロックを解除します。画面のロックインジケータが から に変わります。

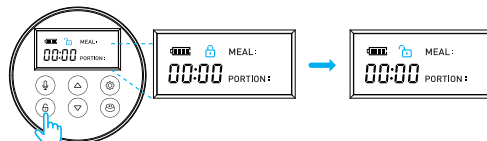

- 2) 設定ボタン を3秒間長押しすると、時刻が点滅し始めます。

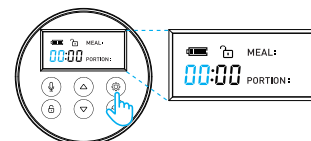

- 3) 上/下ボタン / を押して時間を設定します。設定ボタン を押して保存します。分析が点滅し、上/下ボタン / を押して分を設定し、設定ボタン を押して保存します。現在の時刻設定が完了しました。




例えば、現在の時刻が午前8時30分の場合、まず、アップ/ダウンボタン / を押して、時を08に設定し、セットボタン を押して保存し、次にアップ/ダウンボタン / を押して、分を30に設定し、セットボタン を押して保存します。



## 2. 1日の食事回数の設定

現在時刻が設定された後、設定ボタンを短く押すと、"MEAL"の文字が表示され、食事番号が点滅します。上/下ボタン(△/▽)を押して1日1～4食を選択し、設定ボタン(⊗)を押して保存します。

例: 1日4食を設定する場合は、上ボタン(△)を1234と表示されるまで押してから、設定ボタン(⊗)を押して保存します。




## 3. 給餌時間と食事の部分を設定します

### ・最初の食事の給餌時間を設定します

1) 1日あたりの食事数が設定されると、フィーダーは食事時間と最初の食事の一部を設定する準備が整います。アイコン1は点灯したままで、時間の数字が点滅します。



2) 上/下ボタン(△/▽)を押して時間を設定します。設定ボタン(⊗)を押して保存します。分析が点滅し、上を押す/下ボタン(△/▽)を設定します。設定ボタン(⊗)を押して保存します。



### ・最初の食事の部分を設定します

1) 最初の食事時間が設定されると、部分番号が点滅します。上/下ボタン(△/▽)を押して部分(最大9)を設定し、設定ボタン(⊗)を押して保存します。



2) 上記の手順を繰り返して、必要に応じて他の食事の時間と部分を設定します。フィーダーは1日4食までサポートします。

### ポーション設定の参考

モデル	毎日の摂取量	1日あたりの食事	食事あたりの部分	1ポーションあたり
PLAF001-4L	1/2 杯	2	5	12.5ml
		3	3 3 4	
		4	2 2 3 3	
	1/3 杯	2	3 4	
		3	2 2 3	
		4	1 2 2 2	
	2/3 杯	2	7	
		3	4 5 5	
		4	3 3 4 4	
	3/4 杯	2	7 8	
		3	5	
		4	3 4 4 4	
	9/10 杯	2	9	
		3	6	
		4	4 4 5 5	
	1 杯	3	6 7 7	
		4	5	
	1¼ 杯	3	8 8 9	
		4	6 6 6 7	
	1½ 杯	4	6 8 8 8	
		3	9	
		4	6 7 7 7	
	1⅝ 杯	4	8 8 9 9	

### 重要な注意事項:

- 1) 食品が分配される前にカチッという音が聞こえるのは正常です。
- 2) 給餌後、シュートに1つか2つのキブルが残っている可能性があり、機


械を動かすと出口から出てくる可能性があります(機器の故障を示すものではありません)。

3) 詳細な給餌手順については、ペット用食品包装の説明を参照してください。

4) 設定後、現在時刻を再確認してください。

#### 4. すべての設定を消去する

ロックモードでアップボタン(▲)を6~10秒長押しすると、ディスプレイが2回点滅し、現在の時刻が00:00となり、リセットが完了したことを示します。

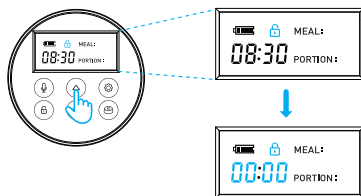

#### 5. ミールコールの録音

1.まず、ロック解除ボタン(Ⓢ)を3秒間長押しして、デバイスのロックを解除してください。次に録音ボタン(🎤)をビープ音が鳴るまで3秒間長押ししてください。録音ボタン(🎤)を押し続けると録音されます。(最大10秒)



ステップ 1



ステップ 2

2. 録音ボタン(🎤)を離すか、10秒間録音した後、デバイスはビープ音を2回鳴らし、録音を終了し保存されたことを知らせます。

録音を変更するには、このプロセスを繰り返します。

録音したばかりの音声を確認するには、録音ボタン(🎤)を1回押します。

ノード:

- 食事の呼び出し再生のデフォルトは2回で、給餌時間が終了すると食事の呼び出しが再生されます。

- デバイスのロックを解除した後、録音を削除するために、録音ボタン(🎤)を3秒間押し続けます。ビープ音が鳴ったらすぐに離します。ビープ音が2回鳴った場合、録音は行われていません。

#### 6. ペットに手で餌をやる

最初に画面のロックを解除し(ロック解除ボタン(Ⓢ)を3秒間押し続けます)、次にフィードボタンを押すと、フィーダーが食品の一部を分配します。

注:通常のスケジュールと部分は影響を受けません。



ステップ 1




ステップ 2

## クリーンアンドケア


- ペットの健康のために、フィーダーを定期的に掃除することをお勧めします。
- 洗える部品は、フタ、フードタンク、ステンレスボウル、ボウルホルダーです。

### 蓋、フードタンク、フードトレイを掃除してください。


1. 清掃する前に電源を切ってください。

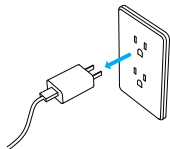


2. ふたを外し、ふたの下のキャリアにある乾燥剤バッグを取り出します。

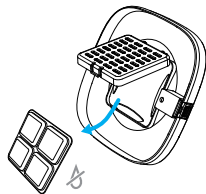


3. フードトレイを取り外すには、ホルダーでステンレス製のボウルを押し下げます。

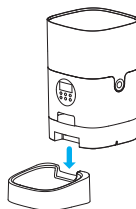

4. フードタンクを取り外すには、親指で両側のバックルを押しながら、同時に上に押し上げます。

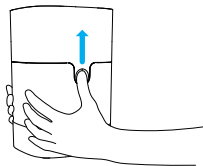

5. 蓋、フードタンク、フードトレイを十分に洗い、空気を乾燥させてから機械に取り付けてください。

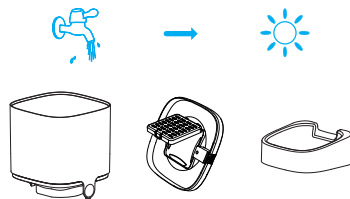

## トラブルシューティング

問題	解決方法
録音した音声の削除方法	録音を削除するには、ロック解除状態で、ピープ音が鳴るまで録音ボタンを3秒間押し続けてから、すぐにもう一度録音ボタンを押すと、ピープ音が2回鳴ります。
画面に表示されません	<p>1) 電源アダプタがソケットに接続されているか確認してください。正しく接続されていても問題が解決しない場合は、3つのバッテリーを取り付けて、問題が解決したかどうかを確認できます。</p> <p>2) フィーダーがバッテリーのみで駆動されている場合は、バッテリーに十分な電力があることを確認してください。</p> <p>3) 上記の解決策が機能しない場合は、メールでサポートチームにご連絡ください。</p>
キブルは出ません	<p>1) 適切なキブルサイズ: 2-10mm (0.07-0.4inch)、大きなキブルが詰まってフィーダーを詰まらせる可能性があります。</p> <p>2) 湿った食べ物や濡れた食べ物を加えないでください。</p> <p>フードタンクを空にして取り外し、シュートとフードアウトレットを確認し、詰まりを取り除きます。</p>
ボタンを押すと、ディスプレイが点灯しますが、ボタンが機能しません	プログラミングする前に、ロック解除ボタンを3秒間押し続けて、最初にシステムのロックを解除します。

## 仕様

モデル	PLAF001
フードタンク容量	4リットル
スクリーン	LCD スクリーン
電源	DC5V電源アダプター; 3 x アルカリ D バッテリー (含まれていません)
電源アダプタ	AC110-240V入力、DC5V出力
動作電流	Avg. 80mA
使用温度	-30°C - 50°C / -22°F - 122°F
外部ソケット	5.5mm電源ソケット
ネットウエイト	2.15kg / 4.74lbs
サイズ	19 x 19 x 30cm / 7.5 x 7.5 x 12in