

TCL

Snelstartgids



CJB1SW1LCAEA

HH500V

Voordat u begint

Lees alle instructies zodat u altijd en overal toegang hebt tot internet.


Waar u uw router moet neerzetten

De ideale plek voor uw apparaat is in de buurt van een raam. Zo krijgt u het beste signaal. Probeer een paar verschillende plekken totdat u de plek met het beste signaal vindt.


Zaken die de signaalsterkte kunnen beïnvloeden

Betonnen of houten muren kunnen de overdracht van draadloze signalen zwakker maken. Elektrische apparaten die sterke elektrische of magnetische velden produceren, zoals magnetrons, ijskasten en satellietantennes, kunnen het signaal negatief beïnvloeden. Zet de router niet in de buurt van dergelijke apparaten.

Inhoud van de doos:

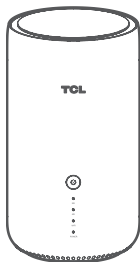

5G CPE



Stroomadapter




Snelstartgids



Veiligheids- en
garantie-
informatie

- Gebruik alleen de door TCL goedgekeurde stroomadapter die in deze doos wordt geleverd
- Niet-goedgekeurde opladers kunnen gevaarlijk zijn en het apparaat beschadigen

Apparaatoverzicht

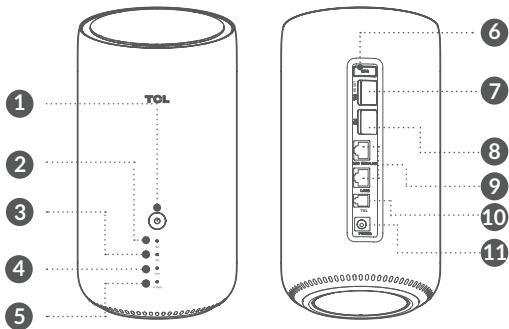


- 1 Aan/uit-knop
- 2 5G-indicator
- 3 4G-indicator
- 4 Wi-Fi-indicator
- 5 Voeding-indicator

- 6 WPS-knop
- 7 Reset-knop/Antennepoort
- 8 Nano SIM-sleuf
- 9 LAN-/WAN-poorten
- 10 TEL-poort
- 11 Voeding-aansluiting

Aan de slag met het apparaat:

SIM-kaart plaatsen

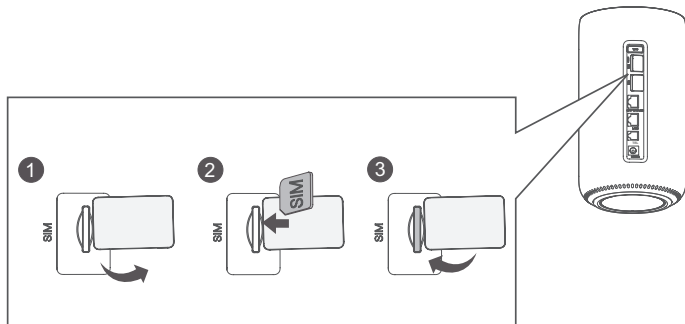


Belangrijk: Verwijder de simkaart niet wanneer uw 5G CPE in gebruik is, de verbinding met het internet wordt anders verbroken.

Tip: U kunt de PIN code van uw SIM kaart instellen via de startpagina. Ga naar Instellingen > Beveiliging > SIM PIN management.

De stroomadapter aansluiten

Volg de onderstaande afbeelding om de stroomadapter aan te sluiten. Als u de 5G CPE hebt aangesloten op het stopcontact, gaat deze automatisch aan.

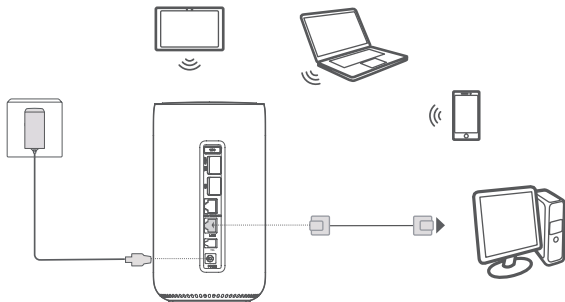

Plaats de 5G CPE minimaal één meter van telefoons en andere elektrische apparaten om storing te voorkomen die wordt veroorzaakt door radiosignalen.


De indicators gaan branden als de 5G CPE verbinding maakt met een netwerk.

- Brandt blauw: 4G/5G-sigitaal is sterk
- Brandt geel: 4G/5G-sigitaal is normaal
- Brandt rood: 4G/5G-sigitaal is zwak
- Uit: 4G/5G werkt niet

Uw apparaat verbinden met het WiFi-netwerk

Open een web browser en ga naar de startpagina (<http://192.168.1.1>) om de instellingen van de router te wijzigen.

- Raadpleeg het label aan de onderkant van de router voor het standaard login-wachtwoord, de netwerknaam en het WiFi-wachtwoord.
- Wanneer de kleur van de WiFi-indicator blauw is, is WiFi ingeschakeld.

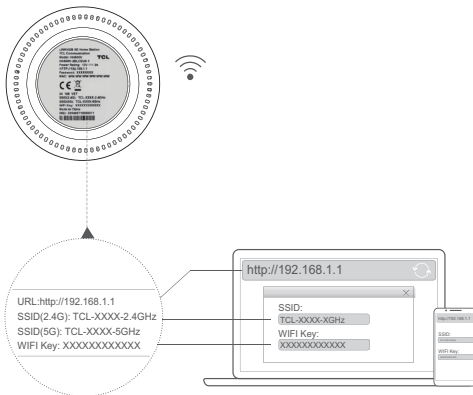


Optionele configuraties

• Ethernet-kabel

Sluit een uiteinde van de Ethernet-kabel aan op een van deze twee LAN-poorten, en het andere uiteinde sluit u aan op uw apparaat.

U kunt maximaal twee apparaten aansluiten via de LAN-poorten.

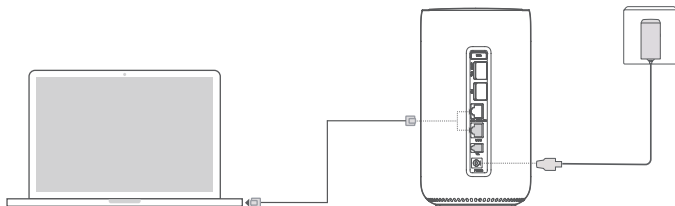


● Externe antenne

In gebieden met slechte signaalontvangst sluit u externe antennes aan op de twee poorten met het label 'TS-9' om de ontvangst te verbeteren.

Waarschuwing:

Controleer voordat u de externe antenne aansluit of de 5G CPE uitgeschakeld en is losgekoppeld van het stopcontact.


- De externe antenne moet worden geïnstalleerd door een gekwalificeerde technicus.

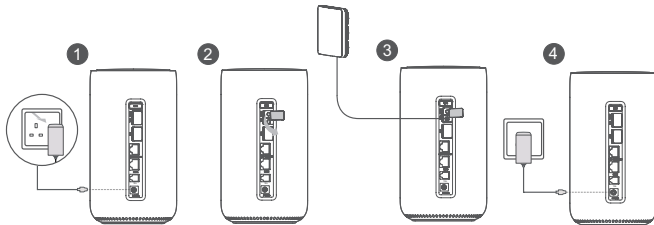

• Telefoon

Voer de onderstaande stappen uit om te verbinden met een telefoon:

1. Plaats een geldige SIM-kaart in het apparaat en schakel het apparaat in
2. Verbind de telefoon met de 'TEL'-poort van het apparaat via de telefoonlijn.

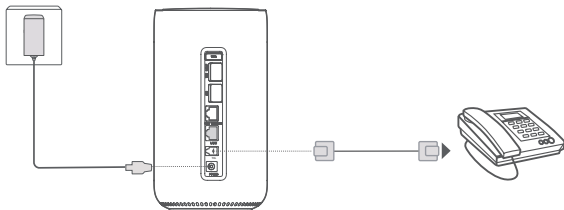

Veelgestelde vragen

● Het Wi-Fi-wachtwoord wijzigen

1. Typ `http://192.168.1.1` in de adresbalk in en druk op Enter. De startpagina wordt geladen.
2. Klik op **Aanmelden** en voer het wachtwoord in.
Het wachtwoord staat op het label op de onderzijde van het apparaat.
3. Ga naar **Instellingen > Wi-Fi > Basis** om het Wi-Fi-wachtwoord te wijzigen.

● Het apparaat in- of uitschakelen

Houd de aan/uit-toets 1 seconde ingedrukt om het apparaat in te schakelen.

Houd de aan/uit-toets 3 seconden ingedrukt om het apparaat uit te schakelen.

● De fabrieksinstellingen herstellen

Wanneer het apparaat is ingeschakeld, gebruikt u een paperclip of iets met een stompe punt om de Reset-toets zachtjes 3 seconden in te drukken tot de Aan/uit-toets begint te knipperen en uiteindelijk gaat branden.

● WPS-functie inschakelen

Houd de WPS-toets 3 seconden ingedrukt om WPS in te schakelen. Het Wi-Fi-lampje begint blauw te knipperen. Druk vervolgens binnen 2 minuten op de WPS-toets op het apparaat waarmee u verbinding wilt maken. De 5G CPE wijst de netwerkinstellingen automatisch toe aan het apparaat waarmee u verbinding wilt maken.

Veiligheidsherinnering

- Schakel tijdens onweer het apparaat uit en verwijder alle kabels.
- Gebruik geen externe antenne of stroomadapter die geen standaardonderdeel is voor het apparaat of niet is goedgekeurd door TCL. TCL niet aansprakelijk voor problemen die voortvloeien uit het gebruik van niet goedgekeurde apparatuur. Antennes voor buitengebruik moeten worden geïnstalleerd door een gekwalificeerde technicus.

Gaat u verhuizen?

Uw 5G CPE-service verhuist met u mee. U hoeft alleen maar te controleren of er dekking is op uw nieuwe locatie.



Quick Start Guide

HH500V

Before you get started

Make sure you read through all the instructions so that you can access and enjoy the internet anytime anywhere.


Where to place your router

To get the best signal, the ideal location for your device will be near a window. Try a few different areas until you find the one with the best signal.

Things that can affect your signal strength

Concrete or wooden walls can weaken the transmission of wireless signals. Electrical appliances that project strong electric or magnetic fields, such as microwave ovens, refrigerators and satellite antennas, can negatively affect your signal. Place your router away from such appliances.

What's in the box:

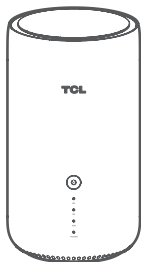

5G CPE



Power adapter




Quick start guide



Safety and
warranty
information

- Only use the TCL approved power adapter included in this box
- Unapproved chargers may cause damage to the device

Device overview

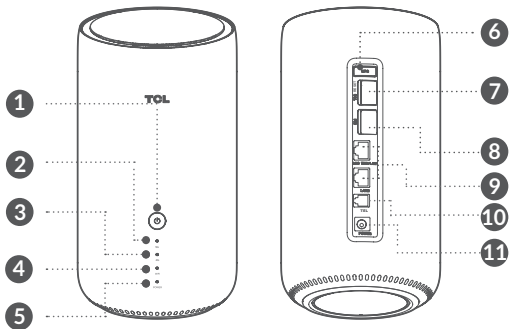


- 1 Power button
- 2 5G indicator
- 3 4G indicator
- 4 WiFi indicator
- 5 Power indicator

- 6 WPS button
- 7 Reset button / Antennae port
- 8 Nano SIM slot
- 9 LAN / WAN ports
- 10 TEL port
- 11 Power connector

Getting started with your device:

Insert a SIM

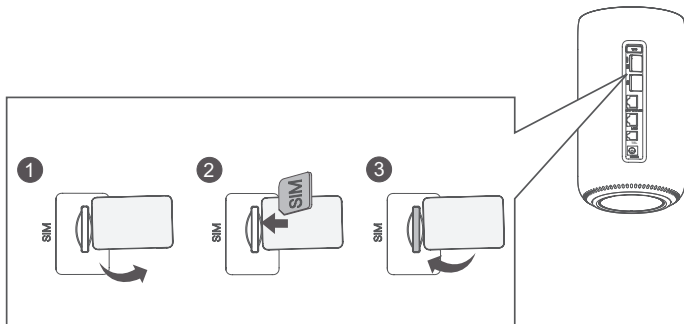


Note: Don't remove the SIM card when your 5G CPE is in use, else you may lose connectivity to the internet.

Tip: You can set your PIN code of SIM card on the web user interface of **Settings > Security > SIM PIN management**.

Connect to the power adapter

Follow the illustration below to plug in the power adapter. Once connected to a power outlet, your 5G CPE will automatically power on.

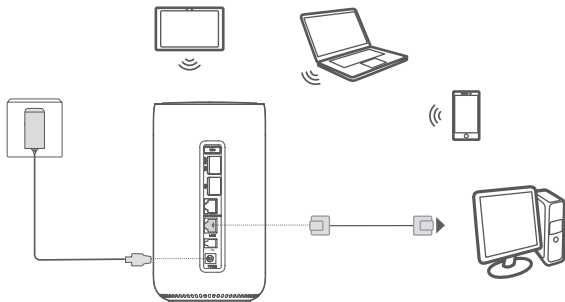

To prevent interference caused by radio signals, place the 5G CPE at least one metre away from phones and other electrical devices.


Indicators will turn on when 5G CPE has successfully connected a network.

- Solid Blue: 4G/5G signal is strong
- Solid yellow: 4G/5G signal is normal
- Solid red: 4G/5G signal is weak
- Off: 4G/5G is not working

Connect your device to the WiFi network

You can open a web browser and go to **http://192.168.1.1** to configure the settings as desired.

- Refer to the label on the bottom of your 5G CPE for the default login password, network name and WiFi password.
- When the colour of WiFi indicator is blue, WiFi feature is enabled.

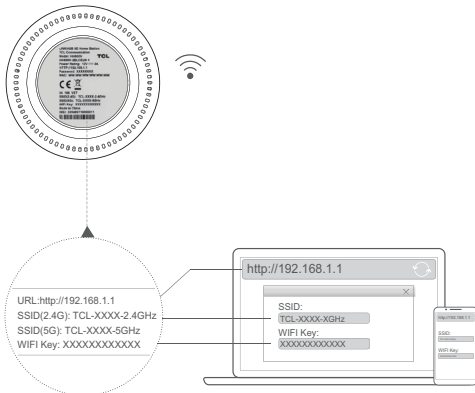


Optional configurations

• Ethernet cable

Connect one end of the Ethernet cable to either of these two LAN ports, and the other end to your Laptop or other devices.

Up to two devices can be connected to the LAN ports.

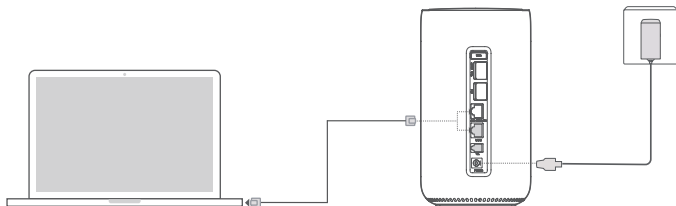


● External antennae

In areas with poor signal reception, connect external antennae to the two ports labelled TS-9 to improve signal reception.

Warning:

Before installing the external antennae, ensure that your 5G CPE is turned off and disconnected from the power outlet.


- The external antennae must be installed by a qualified technician.
- Use the antennae supplied by device manufacturer only.

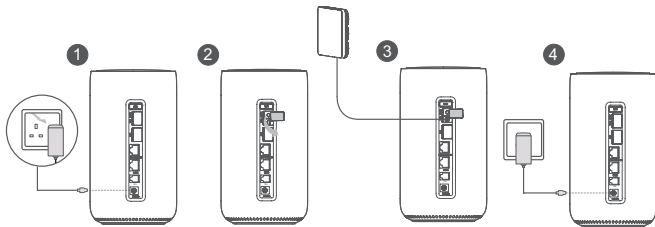

● Telephone

To connect to a telephone, follow the steps below:

1. Insert a valid SIM card into device and power on device.
2. Connect the telephone with device 'TEL' port via telephone line.

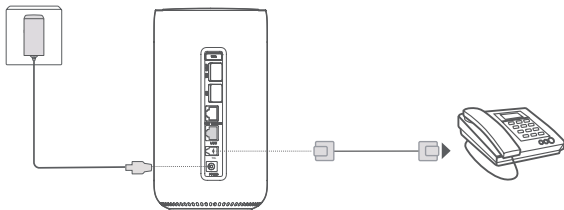

FAQs

● How to change WiFi Password

1. Type <http://192.168.1.1> into the address bar and press the Enter key. The home page will then load.
2. Click **Log in** and enter the password.
The password can be found on the label at the bottom of your 5G CPE.
3. Go to **Settings > WiFi > Basic** to change WiFi password.

● How to turn on or turn off the device

Press and hold the Power key for 1 second to turn on your 5G CPE.

Press and hold the Power key for 3 seconds to turn off your 5G CPE.

● How to restore factory settings

When the device is turned on, use a paperclip or blunt pin to gently press and hold the Reset key for 3 seconds until the power indicator starts to flash, and finally turns on.

● How to enable WPS function

To enable WPS, press and hold the WPS key for 3 seconds. The WiFi indicator will start to flash blue. Then press the WPS key on the device you wish to connect to within 2 minutes. Your 5G CPE will automatically assign your network settings to the device you wish to connect to.

Safety reminder

- During thunderstorms, turn off your 5G CPE and remove all cables.
- Do not use an external antennae or a power adapter that is not a standard component for the router or is not TCL approved. TCL is not liable for any problems that may result from use of unapproved equipment. Outdoor antennae must be installed by a qualified technician.

Moving home?

Your 5G CPE service can move with you, just make sure there's coverage in your new location.