🔖 Product packaging content

Numbering	Part Name	Quantity
1	Media Player	1
2	Bluetooth Remote Control	1
3	User Manual	1
4	HD Cable	Optional
5	AC Adapter	1
6	DC Cable	1

*The HD cable is optional, please ask the agent if you have any problem.
*Specifications and appearances of any product are only for information, take practicality as standard.
*It is recommended that users choose HD Cable with a length of not more than 1.2 meters, 128 braid nets and four layers of shielded dual magnetic rings.

🛡 Product service

Warranty Period
1. The purchase of the company's products can enjoy one year from the date of purchase of the warranty period. Special agreement to extend the sale period.
2. During the warranty period, users can enjoy valid purchase certificate free of charge after-sales maintenance services.
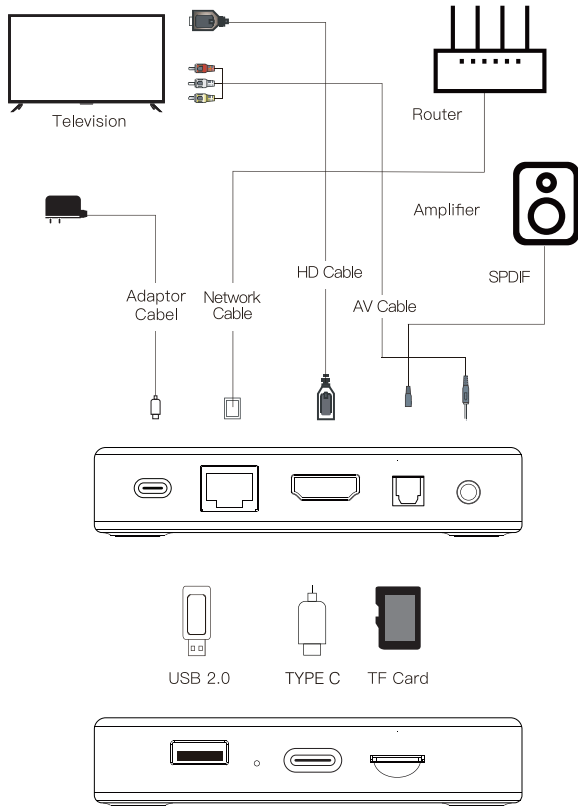
The following is not a free warranty EVPAD can provide paid service
1. Has exceeded the valid warranty period.
2. Failure to follow the instructions required by the installation, use, maintenance and storage of the fault or damage.
3. Failure or damage caused by repair by a NON-EVPAD authorized service person.
4. Due to accidental factors or that the behavior of the product damage, such as broken, Water, input voltage, corrosion, etc.
5. Unauthorized changes to the products native configuration files or unverified product firmware without EVPAD'S approval.
6. Unauthorized alteration, tear up the after-sales service card product serial number.
7. Damage caused by transportation, loading and unloading on the way back to repair by customer.
8. Failure and damage caused by flood, fire, lightning and other irresistible.
9. Other non-product itself design, technology, manufacturing quality problems caused by failure or damage

Special Reminder
1. Before use, please be sure to carefully read the product manual
2. Dealers to you to make non-division We commitment to guarantee, We do not assume responsibility for this Division
3. Before product repair, please contact our technical service, seek technical support to confirm the product failure

🔗 Installation Diagram

Television
Router
Amplifier
HD Cable
SPDIF
Adaptor Cabel
Network Cable
AV Cable
USB 2.0
TYPE C
TF Card

℮ How To Connect To The Internet

1. Be sure the network cable which connected to set-top box is from router, and the router DHCP feature is turn on.
2. Connect the network cable into Lan port of set top box, make sure it is good contact for internet cable and router.

📶 Connect WIFI

Set > Wifi > Select the desired wireless connection > Enter password

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

EVPAD

產品說明書

PRODUCT MANUAL

使用前請仔細閱讀本手冊，並妥善保管
Please read this manual before use and keep it in a safe place.

本說明書適用於EVPAD系列產品
This manual is for EVPAD products

本產品禁止在中國大陸銷售與使用
This product is prohibited to be sold and used in Chinese Mainland

📦 產品包裝內容

編號	部件名稱	數量
1	多媒體播放器	1
2	藍牙語音遙控器	1
3	產品說明書	1
4	高清視頻線	選配
5	電源適配器	1
6	電源線	1

註：1. 此產品高清線為選配，實驗室抽驗時請進口商提供高清線。
　　2. 本手冊涉及產品圖片及信息僅供參考，請以實物為準，如有任何變更，恕不另行通知。
　　3. 建議用戶選購長度不超過1.2米、128編織網四層屏蔽雙磁環的高清線。

⚠ 產品包裝內容

保修期

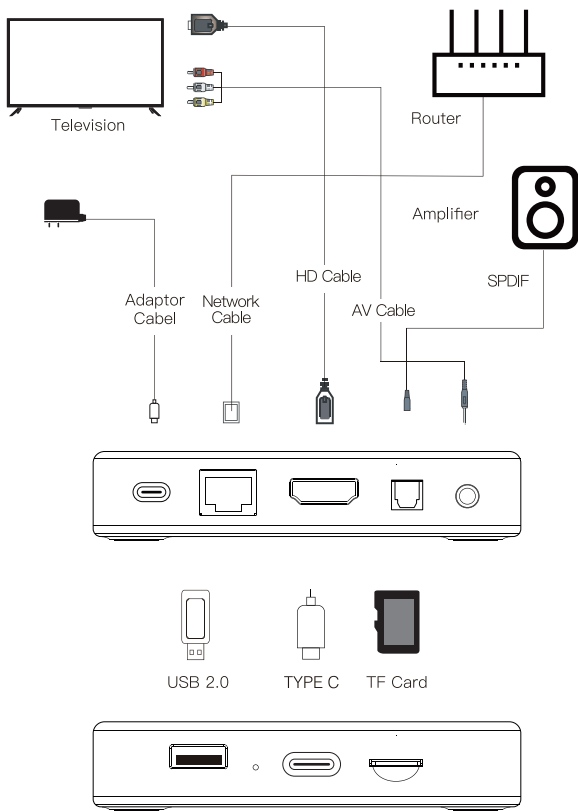1. 凡購買本公司產品均可享受自購買起為期壹年的保修服務，保修期內持有效購機憑證可免費享受售後服務，有特殊約定的除外!

下列情況不屬於免費保修範圍，EVPAD可提供有償服務。
1. 已經超過有效的保修期限;
2. 未按使用說明書要求安裝，使用，維護保管而導致的故障或損壞;
3. 非EVPAD授權的維修人員進行維修而導致的故障或損壞;
4. 因意外因素或人為行為導致的產品損壞，如：摔壞、進水、輸入不適電壓、腐蝕等;
5. 未經EVPAD允許，擅自改動產品固有的設置文件或未經認證的產品固件;
6. 擅自塗改撕毀本售後服務卡、產品序列號;
7. 客戶發回返修途中由於連輸、裝卸等所導致的損壞;
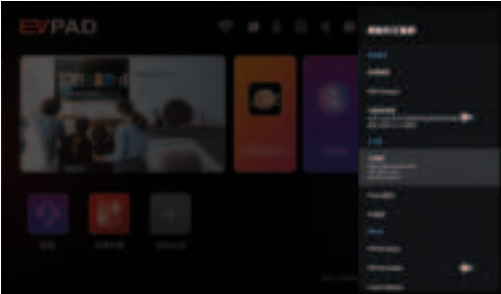8. 因火災、水災、雷電等不可抗拒而造成的故障或損壞;
9. 其他非產品本身設計、技術、制造質量等問題而導致的故障或損援。

特別提醒
1. 使用之前，請務必仔細讀產品說明書;
2. 經銷商向您做出的非我司保證的承諾，我司不為此承擔責任;
3. 在產品送修前，請聯系我司技術服務，尋求技術支持，以確認產品故障。

🔗 連接示意圖

Television
Router
Amplifier
Adaptor Cabel
Network Cable
HD Cable
AV Cable
SPDIF
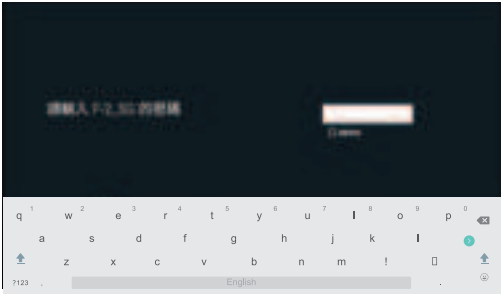USB 2.0
TYPE C
TF Card

🌐 "以太網"連接(插上網線即可接入互聯網)

1. 請確保連接機頂盒的網絡是從路由器引出的，並且路由器的DHCP功能打開。
2. 將網絡插入機頂盒的有線網絡接口，並確保網絡和機頂盒及路由器接觸良好。
3. 進入設置 > 網絡和互聯網 > 以太網>確認以太網已連接。

📶 無線連接/WIFI連接

設置>網絡和互聯網>WIFI>選中所需的無線連接>輸入密碼

重要提示

您購買的機器支持2.4/5.8Ghz雙頻WIFI，如您的家庭網絡支持雙頻路由器，我們強烈推薦選擇5.8Ghz，因為高頻網絡連接至互聯網更快，更穩定!

🎤 語音遙控器使用說明/Voice remote control instructions

1. 電源鍵/Power switch
2. 紅外鍵電視學習區 Infrared key TV learning area
3. Google Play鍵/Google Play key
4. 自定義APP鍵 Custom App key
5. YouTube鍵/YouTube key
6. 自定義APP鍵 Custom App key
7. 語音鍵/Voice key
8. OK確認鍵/OK key
9. 主畫面(不建議使用) Home screen (not recommended)
10. 返回鍵/Return key
11. 菜單鍵/Menu
13. 鼠標鍵/Mouse key
12. 音量−/Volume−
14. 音量+/Volume+
15. 靜音鍵/Mute key
16. 數字鍵/Numeric keys
17. 刪除鍵/Delete
18. 上網鍵/Browser

學習功能操作指南/Instruction of the Learning Function

1. 長按遙控器電視機按鍵區的"ᶜ"按鍵約5秒鐘，直到遙控器紅色指示燈變為長亮狀態，此時進入學習狀態。
   Press the programmable POWER key of the TV Box Remote Control for 5 seconds. The LED light will turn on, indicating that the programmable keys are in the programmable state.

2. 按下要學習的按鍵，紅色指示燈閃爍，此時處於學習接收狀態。
   Press one of the programmable keys of the TV Box Remote Control, its LED light will flash.

3. 手持被學習的遙控器，對準機頂盒遙控器，距離大約3~5mm，按下被學習的按鍵。
   Direct the head of the TV Remote Control at the head of the TV Box Remote Control. (Please keep 3~5cm distance between the two Remote Controls.)

4. 學習成功後紅色指示燈快速閃爍三下後繼續保持長亮，可以再次選擇其它學習按鍵進行學習。
   Press down the original key of the TV Remote Control, the LED light of the TV Box Remote Control will flash 3 times quickly and then stay lit up, indicating that the programmable key has been programmed. To program other keys, please repeat step 2~3~4.

5. 如學習失則紅燈閃爍5次，返回學習狀態，重複步驟2~4。
   The LED light will flash 5 times if the programmable key fail to be programmed. If so, please repeat step 2~3~4.

6. 學習完畢後，按電視按鍵區以外的任意其它按鍵退出學習狀態;紅色指示燈熄滅。
   Press any non-programmable key of the TV Box Remote Control to exit the programmable state.

*按鍵後,指示燈持續閃爍時間超過10秒,表示電池電量不足,請更換電池。
When press the key, the LED flashes continuously for more than 10 seconds, indicating the battery is low. Please replace the battery.

免責聲明