

Simple User Guide

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at www.samsung.com
Model _____ Serial No. _____

Figures and illustrations in this Simple User Guide are provided for reference only and may differ from the actual product appearance.
Product design and specifications may change without notice.

Contact SAMSUNG Support
If you have any questions relating to Samsung products, please contact the SAMSUNG customer care center via <https://www.samsung.com/tr/support/#contact>

Samsung Service Centre 	Website
444 7711	www.samsung.com/tr/support



BN68-17808L-00

© 2024 Samsung Electronics Co., Ltd. All rights reserved.


01 What's in the Box?

Make sure the following items are included with your TV. If any items are missing, contact your dealer.

- Simple User Guide
- Warranty Card / Regulatory Guide (Not available in some locations)
- *Samsung Smart Remote
- *Remote Control & Batteries
- *CI Card Adapter
- *TV Power Cord
- *Wall Mount Adapter x 2
- **One Connect Box
- **One Connect Box Power Cord
- **One Connect Cable x 2
- **One Connect cable holder (for wall mount)
- ***One Connect Box
- ***One Connect Box Power Cord
- ***One Connect Cable

*: Some of the items specified above may not be included in the package, depending on the model or geographical area.
: QN9D, QN8**D, S95D Series
***: The Frame Series
The type of battery may vary depending on the model.
The items' colours and shapes may vary depending on the models.
Cables not included can be purchased separately.
Check for any accessories hidden behind or in the packing materials when opening the box.

 **Warning:** Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV at the edges, as shown. For more information about handling, refer to the Unpacking and Installation Guide came with this product.

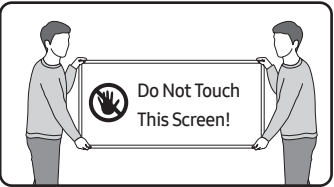

02 Connecting the TV to the One Connect Box

(One Connect Box Supported Model only)

For more information about how to connect via the One Connect Box, refer to Unpacking and Installation Guide.



- Do not use the One Connect Box in the upside-down or upright position.
- Take care not to subject the cable to any of the actions below. The One Connect Cable contains a power circuit.



Bending Twisting Pulling




Pressing on Electric shock

CLASS 1 LASER PRODUCT (The Frame Series only)

- Caution - Invisible laser radiation when open. Do not stare into beam.
 - Do not bend the One Connect Cable excessively. Do not cut the cable.
 - Do not place heavy objects on the cable.
 - Do not disassemble either of the cable connectors.
- Caution - Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

Using the One Connect cable holder
(QN8**D, QN9**D, S95D Series only)
You can use the One Connect cable holder to tidy up the cables while installing the wall mount.

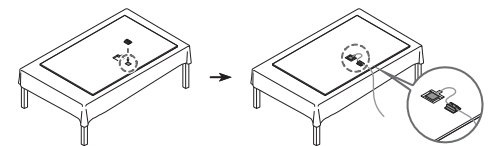

03 Initial Setup

When you turn on your TV for the first time, it immediately starts the Initial Setup. Follow the instructions displayed on the screen and configure the TV's basic settings to suit your viewing environment.

Before Reading This Simple User Guide

This TV comes with this Simple User Guide and an embedded User guide (⏮ > ≡ (left directional button) > ⚙ Settings > Support > Open User guide).

Warning! Important Safety Instructions

Please read the Safety Instructions before using your TV. Refer to the table below for an explanation of symbols which may be on your Samsung product.


CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.	
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the Simple User Guide for further safety related information.

- You will need a Samsung Account to access our network-based smart services. If you choose not to log in, you will only get a connection to terrestrial TV (applicable to devices with tuners only) and external devices, e.g. via HDMI.
- When installing the 43LS03D model as a wall mount, it can be installed vertically and used.
 - Some features may not support portrait mode or full screen.
 - The initial setup is optimised for landscape mode.

Using the TV Controller

You can turn on the TV with the **TV Controller** button at the bottom of the TV, and then use the **Control** menu. The **Control menu** appears when the **TV Controller** button is pressed while the TV is On.


- The position and shape of the buttons at the bottom of the TV may differ depending on the model.
- The screen may dim if the protective film on the SAMSUNG logo or the bottom of the TV is not detached. If protective film is attached, remove the film.



- A** Control menu
- B** TV Controller button / Remote control sensor / Microphone switch / *Motion Sensor
- C** TV Controller button / Remote control sensor
- D** Microphone switch
- *In Art mode, the Remote control sensor at the bottom of the TV remains off.

*: The Frame Series only

How to turn on and off the Microphone



Type A Type B



Type C Type D

★ : On/Off Switch

Power

- Do not overload wall outlets, extension cords, or adapters beyond their voltage and capacity. It may cause fire or electric shock.
Refer to the power specifications section of the manual or the power supply label on the product for voltage and amperage information.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.
- Never insert anything metallic into the open parts of this apparatus. This may cause electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or Samsung service centre.
- To protect this apparatus from a lightning storm, or to leave it unattended and unused for a long time, be sure to unplug it from the wall outlet and disconnect the antenna or cable system.
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing the insulation to deteriorate.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure that the wall outlet and power plug are readily accessible.

Installation

- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or moisture.

You can turn on or off the microphone by using the switch at the bottom or rear bottom of the TV. If microphone is turned off, All voice and sound features using microphone are not available.

- This function is supported only in QN8**D/QN9**D/Q7*D/Q8*D/QN8*D/QN9*D/S8*D/S9*D/The Frame Series.
- The position and shape of the microphone switch may differ depending on the model.
- During analysis using data from the microphone, the data is not saved.

04 Troubleshooting and Maintenance

Troubleshooting

For more information, refer to "Troubleshooting" in the User guide.
⏮ > ≡ (left directional button) > ⚙ Settings > Support > Open User guide > Troubleshooting
If none of the troubleshooting tips apply, please visit "www.samsung.com" and click Support or contact the Samsung service centre.

- This panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- To keep your TV in optimum condition, upgrade to the latest software. Use the **Update Now** or **Auto update** functions on the TV's menu (⏮ > ≡ (left directional button) > ⚙ Settings > Support > Software Update > Update Now or Auto update).

The TV won't turn on.

- Make sure that the power cord is securely plugged into the product and the wall outlet.
- Make sure that the wall outlet is working and the remote control sensor at the bottom of the TV is lit and glowing a solid red.
- Try pressing the **TV Controller** button at the bottom of the TV to make sure that the problem is not with the remote control. If the TV turns on, refer to "The remote control does not work".

The remote control does not work.

- Check if the remote control sensor at the bottom of the TV blinks when you press the ⏮ button on the remote control.
 - DU7 Series (except for DU7** model): If it does not blink, replace the remote control's batteries. Make sure that the batteries are installed with their poles (+/–) in the correct direction. Alkaline batteries are recommended for longer battery life.
 - Other models: When the remote's battery is discharged, charge the battery using the USB charging port (C-type), or turn over the remote to expose the solar cell to light.

- Be sure to contact an authorised Samsung service centre for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do so may lead to serious damage to your TV.
- Do not expose this apparatus to dripping or splashing.

Mounting the TV on a wall

 If you mount this TV on a wall, follow the instructions exactly as set out by the manufacturer. If it is not correctly mounted, the TV may slide or fall and cause serious injury to a child or adult and serious damage to the TV.

- To order the Samsung wall mount kit, contact Samsung service centre.
- Samsung is not responsible for any damage to the product or injury to yourself or others if you choose to install the wall mount on your own.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or when the consumer fails to follow the product installation instructions.
- You can install your wall mount on a solid wall perpendicular to the floor. Before attaching the wall mount to surfaces other than plaster board, contact your nearest dealer for additional information. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.
- When installing a wall mount kit, we recommend you fasten all four VESA screws.
- If you want to install a wall mount kit that attaches to the wall using two top screws only, be sure to use a Samsung wall mount kit that supports this type of installation. (You may not be able to purchase this type of wall mount kit, depending on the geographical area.)
- Do not mount the TV at more than a 15 degree tilt.
- Standard dimensions for wall mount kits are shown in the table on the Unpacking and Installation Guide.

 Do not install your wall mount kit while your TV is turned on. This may result in personal injury from electric shock.

- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.

- Try pointing the remote directly at the TV from 1.5-1.8 m away.
- If your TV came with a Samsung Smart Remote (Bluetooth Remote), make sure to pair the remote to the TV. To pair a Samsung Smart Remote, press the ⏮ and ⏭ buttons together for 3 seconds.

Eco Sensor and screen brightness

Eco Sensor adjusts the brightness of the TV automatically. This feature measures the light in your room and optimises the brightness of the TV automatically to reduce power consumption. If you want to turn this off, go to ⏮ > ≡ (left directional button) > ⚙ Settings > All Settings > General & Privacy > Power and Energy Saving > Brightness Optimisation.

- The eco sensor is located at the bottom of the TV. Do not block the sensor with any object. This can decrease picture brightness.

05 Specifications and Other Information

Display Resolution QN8**D/QN9**D Series: 7680 x 4320 Other models: 3840 x 2160
Sound (Output) DU7/DU8/Q6*D/Q7*D Series: 20 W S90D/Q8*D/QN8*D Series: 40 W QN90D Series (43"): 20 W QN90D Series (50"): 40 W QN90D Series (55"-98"): 60 W S95D/QN8**D Series: 70 W QN9**D Series: 90 W LS03D Series (43"-50"): 20 W LS03D Series (55"-85"): 40 W
Operating Temperature 10 °C to 40 °C (50 °F to 104 °F)
Operating Humidity 10 % to 80 %, non-condensing
Storage Temperature -20 °C to 45 °C (-4 °F to 113 °F)
Storage Humidity 5 % to 95 %, non-condensing

- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Always have two people mount the TV onto a wall.
 - For 82 inch or larger models, have four people mount the TV onto a wall.

Providing proper ventilation for your TV

When you install your TV *and One Connect Box, maintain a distance of at least 10 cm between the TV *and One Connect Box with other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.

- *: One Connect Box Supported Model Only
- When you install your TV with a stand or a wall mount, we strongly recommend you use parts provided by Samsung only. Using parts provided by another manufacturer may cause difficulties with the product or result in injury caused by the product falling.

Safety Precaution

 **Caution:** Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, do not hang on or destabilise the TV. This action may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your TV. For added stability and safety, you can purchase and install the anti-fall device, referring to "Preventing the TV from falling".

 **WARNING:** Never place a television set in an unstable location. The television set may fall, causing serious personal injury or death. Many injuries can be avoided by taking simple precautions such as:


- Always use cabinets or stands or mounting methods recommended by Samsung.
- Always use furniture that can safely support the television set.
- Always ensure the television set is not overhanging the edge of the supporting furniture.

- Always educate about the dangers of climbing on furniture to reach the television set or its controls.
- Always route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- Never place a television set in an unstable location.
- Never place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Never place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Never place items that might tempt to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

- When you have to relocate or lift the TV for replacement or cleaning, be sure not to pull out the stand.

Preventing the TV from falling

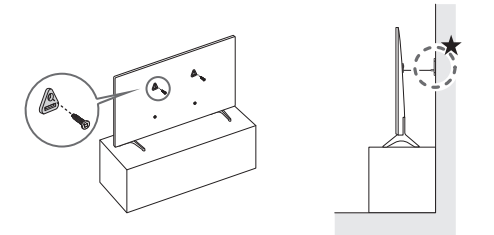

- ★ : Wall-anchor (not supplied)
1. Using the appropriate screws, firmly fasten a set of brackets to the wall. Confirm that the screws are firmly attached to the wall.
 - You may need additional material such as wall anchors depending on the type of wall.
 2. Using the appropriately sized screws, firmly fasten a set of brackets to the TV.
 - For the screw specifications, refer to the standard screw part in the table on the Unpacking and Installation Guide.
 3. Connect the brackets fixed to the TV and the brackets fixed to the wall with a durable, heavy-duty string, and then tie the string tightly.
 - Install the TV near the wall so that it does not fall backwards.
 - Connect the string so that the brackets fixed to the wall are at the same height as or lower than the brackets fixed to the TV.


Decreasing power consumption

When you shut the TV off, it enters Standby mode. In Standby mode, it continues to draw a small amount of power. To decrease power consumption, unplug the power cord when you don't intend to use the TV for a long time.

Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements.

The full text of the declaration of conformity is available at the following internet address:
<http://www.samsung.com> go to Support and enter the model name. This equipment may be operated in the TÜRKİYE. The 5 GHz and 6 GHz WLAN(Wi-Fi) function of this equipment may only be operated indoors.

RF max transmitter power :
[QN9D/QN8**D Series]**
100 mW at 2.4 GHz - 2.4835 GHz,
200 mW at 5.15 GHz - 5.25 GHz & 5.47 GHz - 5.725 GHz,
100 mW at 5.25 GHz - 5.35 GHz,
200 mW at 5.945 GHz - 6.425 GHz.
[S9*D/S8*D/QN9*D/QN8*D/Q8*D/Q7*D/Q6*D/DU8/DU7 Series]
100 mW at 2.4 GHz - 2.4835 GHz,
200 mW at 5.15 GHz - 5.25 GHz & 5.47 GHz - 5.725 GHz,
100 mW at 5.25 GHz - 5.35 GHz.
[The Frame Series]
100 mW at 2.4 GHz - 2.4835 GHz,
200 mW at 5.15 GHz - 5.25 GHz & 5.47 GHz - 5.725 GHz,
100 mW at 5.25 GHz - 5.35 GHz,
100 mW at 61 GHz - 61.5 GHz.

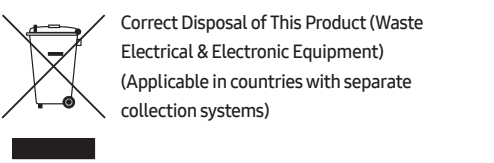


This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Precautions when installing the TV with a stand

(The Frame Series only)

When you install the TV with a stand, avoid placing the stand on the back part of the table surface. Failure to do so may cause the motion sensor at the bottom of the TV not to work properly.

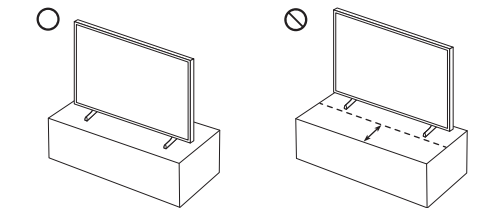

Operation


- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Store the accessories (remote control, batteries, or etc.) in a location safely out of the reach.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a Samsung service centre.
- Do not dispose of remote control or batteries in a fire.
- Do not short-circuit, disassemble, or overheat the batteries.
- **CAUTION:** There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.
- **WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**

Caring for the TV

- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product with a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, aerial fresheners, lubricants, or detergents. These chemicals can damage the appearance of the TV or erase the printing on the product.
- The exterior and screen of the TV can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.

Removing the battery


- To remove the battery, contact an authorised service centre. To obtain battery removal instructions, please visit www.samsung.com/global/ecodesign_energy.
- For your safety, you must not attempt to remove the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

- The type of battery may vary depending on the model.



The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

- The type of battery may vary depending on the model.

SAMSUNG

Kolay Kullanım Kılavuzu

Bu Samsung ürününü satın aldığınız için teşekkür ederiz. Daha fazla hizmet almak için lütfen www.samsung.com adresinden ürününüzü kaydedin

Model _____ Seri No. _____

Bu Kolay Kullanım Kılavuzu şekiller ve çizimler yalnızca referans amaçlıdır ve gerçek ürün görünümünden farklı olabilir. Ürün tasarımı ve teknik özellikler haber verilmeden değiştirilebilir.

SAMSUNG Destek İletişim Bilgileri

Samsung ürünleri ile ilgili soru ve talepleriniz için <http://www.samsung.com/tr/support/#contact> sayfasından Samsung çağrı merkezine ulaşabilirsiniz.

Samsung Servis Merkezi 📞	Web Sitesi
444 77 11	www.samsung.com/tr/support

Bu Kolay Kullanım Kılavuzu Okumadan Önce

Bu TV, Bu Kolay Kullanım Kılavuzu ve yerleşik bir Kullanıcı kılavuzu ile birlikte gelir. ➡️ (sol yön düğmesi) > ⚙️ **Ayarlar** > **Destek** > **Kullanıcı kılavuzunu** aç.

Uyarı! Önemli Güvenlik Talimatları

TV'nizi kullanmadan önce lütfen Güvenlik Talimatlarını okuyun. Samsung ürününüz üzerinde bulunabilecek sembollerin açıklamaları için aşağıdaki tabloya bakın.

DİKKAT	
ELEKTRİK ÇARPMASI RİSKİ. AÇMAYIN.	
DİKKAT: ELEKTRİK ÇARPMASI RİSKİNİ AZALTMAK İÇİN, KAPAĞI (VEYA ARKASINI) ÇIKARMAYIN. İÇ KISIMDA KULLANICININ ONARABİLECEĞİ BİR PARÇA YOKTUR. TÜM SERVİS İŞLEMLERİ İÇİN YETKİLİ PERSONELE BAŞVURUN.	
	Bu sembol, içinde yüksek voltaj olduğunu gösterir. Bu ürünün içindeki parçalarla herhangi bir temasta bulunmak tehlikelidir.
	Bu sembol, bu ürünle çalışma ve bakıma ilişkin önemli literatür verildiğini gösterir.
	Sınıf II ürün: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerekemediğini gösterir. Bu sembol elektrik kablosu olan bir ürününüz üzerinde yoksa ürünün koruyucu topraklamaya (toprak) güvenli bir bağlantısı olması GEREKİR.
	AC voltajı: Bu sembolle işaretlenen nominal voltaj AC voltajdır.
	DC voltajı: Bu sembolle işaretlenen nominal voltaj DC voltajdır.
	Dikkat: Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için Kolay Kullanım Kılavuzu başvurmasını söyler.

Güç

- Samsung duvar montaj kitini sipariş etmek için Samsung servis merkezi ile iletişime geçin.
 - Samsung, duvara montaj kitini kendiniz monte etmeyi seçtiğinizde kendinize ya da başkalarına vereceğiniz hasarlardan sorumlu değildir.
 - VESA olmayan veya belirtilmemiş duvara montaj kullanıldığında veya müşteri ürün kurma yönergelerine uymadığında, Samsung, ürünün zarar görmesinden veya yaralanmalardan sorumlu değildir.
 - Duvara montaj kitinizi zeminde dik olacak şekilde sağlam bir duvara monte edin. Duvara montaj kitini alçı pano dışında yüzeylere takmadan önce, ek bilgi için en yakın satıcıya başvurun. TV'yi tavana veya diğer bir duvara monte eterseniz, düşebilir ve ciddi kişisel yaralanmaya neden olabilir.
 - Bir duvara montaj kiti takarken, dört VESA vidayı da sıkmanız öneririz.
 - Yalnızca üstte iki vidayla duvara takılan bir duvara montaj kiti takmak istiyorsanız, bu tür kurulumu destekleyen bir Samsung duvara montaj kiti kullandığınızdan emin olun. (Coğrafi alana bağlı olarak bu tür duvara montaj kitini satın alamayabilirsiniz.)
 - TV'yi 15 derece eğimden daha fazla eğimde monte etmeyin.
 - Duvara montaj kitlerinin standart boyutları Unpacking and Installation Guide içindeki tabloda gösterilmiştir.
-  Duvara montaj kitinizi TV'niz açırken kurmayın. Bu, elektrik çarpması sonucu yaralanmayla sonuçlanabilir.
- Standart boyuttan daha uzun olan veya VESA standart vida teknik özelliklerine uymayan vidalar kullanmayın. Çok uzun vidalar TV setinin iç kısmının hasar görmesine neden olabilir.
 - VESA standardı vida teknik özelliklerine uymayan duvara montaj kitleri için, vidaların uzunluğu duvara montaj teknik özelliklerine bağlı olarak değişebilir.
 - Vidaları çok fazla sıkmayın. Bu, ürüne zarar verebilir veya ürünün düşmesine neden olarak yaralanmaya neden olabilir. Samsung bu tür kazalardan sorumlu değildir.
 - TV'yi duvara her zaman iki kişi monte etmelidir.
 - 82 inç ve daha büyük modeller için TV'yi duvara monte etmek için dört kişi gerekir.



Kurulum

- Bu cihazı bir radyatör veya ısı rezistörünün yakınına veya doğrudan güneş ışığı alan bir yere koymayın.
- Elektrik çarpması ya da yangına yol açma riski taşıdığı için, bu cihazın üzerine su içeren bir kap (vazo vb.) koymayın.
- Bu cihazı yağmura veya neme maruz bırakmayın.
- TV'nizi çok fazla toz, yüksek veya düşük sıcaklık, yüksek nem, kimyasal maddeler olan bir yere veya hava alanı, tren istasyonu vb. gibi günde 24 saat çalışacağı bir yere kurmayı düşünüyorsanız bilgi için yetkili bir servis merkezine başvurduğunuzdan emin olun. Aksi takdirde TV'nizde ciddi hasarlar meydana gelebilir.
- Bu cihazı damlama veya sıçramaya maruz bırakmayın.

TV'yi duvara monte etme

-  Bu TV'yi duvara monte ederseniz, yönergeleri tam olarak üreticinin belirttiği şekilde uygulayın. Doğru monte edilmezse, TV kayabilir veya düşebilir ve çocuk veya yetişkinde ciddi yaralanmalara ya da TV'nin ciddi derecede hasar görmesine neden olabilir.

- Güvenlik Önlemi**
-  **Dikkat:** TV'yi çekme, itme veya üzerine çıkma TV'nin düşmesine neden olabilir. Özellikle TV'ye asılmayın veya TV'nin dengesini bozmayın. Bu eylem TV'nin devrilmesine, ciddi yaralanmalara veya ölüme neden olabilir. TV'nize birlikte verilen Güvenlik Notundaki tüm güvenlik önlemlerine uyun. Ekstra sağlamlık ve güvenlik için "TV'nin düşmesini önleme" içinde açıklanan şekilde düşmeyi önleyici cihazı satın alabilirsiniz.
-  **UYARI:** Bir televizyon setini kesinlikle sabit olmayan bir konuma koymayın. Televizyon seti düşerek ciddi yaralanmaya veya ölüme neden olabilir. Birçok yaralanma, şunlar gibi basit önlemler alınarak engellenebilir:
- Her zaman Samsung tarafından önerilen kabinleri ve standları veya montaj yöntemlerini kullanın.
 - Her zaman televizyon setini güvenli destekleyebilecek eşya kullanın.
 - Her zaman televizyon setinin kendisini destekleyen eşyanın kenarından aşırı sarkmadığından emin olun.
 - Televizyon setine veya kumandalarına ulaşmak için mobilyaların üzerine tırmanmanın tehlikeleri konusunda mutlaka eğitim verin.
 - Kablolarla takılmamak, kabloları çekmemek ve kabloların yakanalmasını önlemek için her zaman televizyonunuzu bağlı kordonları ve kabloları yönlendirin.
 - Birtelevizyon setini kesinlikle sabit olmayan bir konuma koymayın.
 - Hem eşyayı hem de televizyon setini uygun bir desteğe sabitlemeden televizyon setini yüksek eşyaların üzerine kesinlikle yerleştirmeyin (örneğin, dolap veya kitaplık).
 - Televizyon setini, televizyon seti ve destekleyen eşya arasına koyulabilecek örtü veya diğer malzemelerin üzerine kesinlikle yerleştirmeyin.
 - Oyuncaklar ve uzaktan kumandalar gibi tırmanmaya teşvik edilebilecek eşyaları asla televizyonun üzerine veya televizyonun yerleştirildiği mobilyaların üzerine koymayın.
 - Mevcut televizyon setinizin kendisini veya yerini değiştiriyorsanız yukarıdaki önlemlerin aynıı alınmalıdır.
 - TV'yi başka bir yere yerleştirmeniz veya kaldırmanız gerektiğinde, standı dışarı çıkarmadığınızdan emin olun.

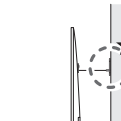- TV'nin düşmesini önleme**
-   ★: Duvar dübeli (birlikte verilmaz)
- Uygun vidaları kullanarak braket setini duvara sıkıca sabitleyin. Vidaların duvara iyice takıldığından emin olun.
 - Duvar tipine bağlı olarak duvar dübeli gibi ek malzemelere ihtiyacınız olabilir.


- TV'nizi yeterince havalandırma**
- TV* ve One Connect Kutunuzu kurarken, uygun havalandırmayı sağlamak için TV* ve One Connect Kutusu ile diğer nesneler (duvarlar, dolap kenarları vb.) arasında en az 10 cm'lik bir mesafe bırakın. Yeterli havalandırmanın sağlanması halinde, iç sıcaklıktaki artış nedeniyle yangın veya üründe bir sorun çikabilir.
- *: Yalnızca One Connect Kutusu Destekli Model
- TV'nizi stand veya duvar montajı ile monte ettiğinizde, yalnızca Samsung tarafından sağlanan parçaları kullanmanızı önerme öneririz. Başka bir üretici tarafından sağlanan parçaların kullanılması, üründe soruna veya ürünün düşmesi nedeniyle yaralanmaya neden olabilir.

- Uygun boyutta vidaları kullanarak braket setini TV'ye sıkıca sabitleyin.
 - Vida özellikleri için Unpacking and Installation Guide içindeki tabloda bulunan standart vida bölümüne bakın.
- TV'ye sabitlenmiş braketleri ve duvara sabitlenmiş braketleri sağlam, ağır iş gibi ile birleştirin ve sonra bağı sıkı bir şekilde bağlayın.
 - TV'yi arkaya doğru düşmemesi için duvara yakın bir yere takın.
 - Bağı duvara sabitlenmiş braketler, TV'ye sabitlenmiş braketlerle aynı yükseklikte veya daha alçak olacak şekilde bağlayın.

Standlı TV'yi kurarken önlemler

(Yalnızca The Frame Serisi)

Standlı TV'yi kurarken tablo yüzeyinin arka parçasına standı yerleştirmekten kaçının. Aksi halde TV'nin altındaki hareket sensörünün düzgün çalışmasına neden olabilirsiniz.

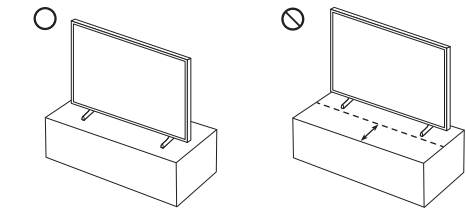

İşlem

- Bu cihaz piller kullanır. Ülkenizde, bu pillerin düzgün şekilde elden çıkarılması gerektiren çevre yönetmelikleri olabilir. Atma veya geri dönüşüm bilgileri için, lütfen yerel yetkililerle temasa geçin.
- Aksesuarları (uzaktan kumanda, piller vb.) ulaşılamayacak, güvenli bir yerde saklayın.
- Ürünü düşürmeyin veya çarpmayın. Ürün hasar görürse güç kablosunun bağlantısını kesin ve bir Samsung servis merkezile temasa geçin.
- Uzaktan kumandayı veya pilleri ateşe atmayın.
- Pillerle kasa devre yaptırmayın, parçalamayın veya aşırı ısıtmayın.
- DİKKAT:** Uzaktan kumandada kullanılan pilleri yanlış pil türüyle değiştirirseniz patlama tehlikesi vardır. Yalnızca aynı tiple veya eşdeğer tiple değiştirin.
- UYARI - YANGININ YAYILMASINI ÖNLEMEK İÇİN MUMLARI VE AÇIK ALEV İÇEREN DİĞER ÖĞELERİ BU ÜRÜNDEN HER ZAMAN UZAK TUTUN.

TV'nin bakımı

- Bu cihaz temizlemek için, güç kablosunu prizden çıkarın ve ürünü yumuşak, temiz bir bezle silin. Mum, benzen, alkol, tiner, böcek ilacı, oda parfümü, yağlayıcı veya deterjan gibi herhangi bir kimyasal kullanmayın. Bu kimyasallar TV'nin görünümüne hasar verebilir veya ürün üzerindekileri baskıyı silebilir.

© 2024 Samsung Electronics Co., Ltd. Tüm hakları saklıdır.

02 TV'yi One Connect Kutusuna bağlama

(Yalnızca One Connect Kutusu Destekli Model)

One Connect Kutusu yoluyla bağlama hakkında daha fazla bilgi için bkz. Unpacking and Installation Guide.

- One Connect Kutusunu baş aşağı veya dik konumda kullanmayın.
- Kabloyu aşağıdaki eylemlerden birine maruz bırakılmaya dikkat edin. One Connect Kablosu, bir güç devresi içirir.




Eğme Bükme Çekme

- SINIF 1 LAZER ÜRÜNÜ (yalnızca The Frame Serisi)
- Dikkat - Ağıldığında görünmez lazer radyasyonu. Işına doğru bakmayın.
 - One Connect Kablosu öğesini aşırı bükmemeyin. Kabloyu kesmeyin.
 - Kablo üzerine ağır nesneler yerleştirmeyin.
 - Kablo konektörlerini parçalarına ayırmayın.
 - Dikkat - Denetimlerin, ayarlamaların kullanımı ya da burada belirtilenler haricinde prosedürlerin performansı zararlı radyasyona maruz kalmayla sonuçlanabilir.

One Connect kablo tutucuyu kullanımı

(Yalnızca QN8**D, QN9**D, S9D Serisi)

Duvara montaj yaparken kabloları düzenlemek için One Connect kablo tutucuyu kullanabilirsiniz.

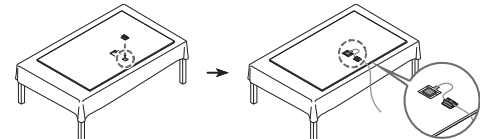

03 Başlangıç Kurulumu


TV'nizi ilk kez açtığınızda, İlk Kurulum'u anında başlatır. Ekranda görüntülenen talimatları izleyin ve izleme ortamınıza uyması için TV'nin temel ayarlarını yapıldırın.

- Ağ tabanlı akıllı hizmetlerimize erişmek için bir Samsung hesabına ihtiyacınız olacak. Oturum açmamanız seçerseniz yalnızca karasal TV'ye (yalnızca alıcısı olan cihazlar için geçerlidir) ve HDMI üzerinden harici cihazlara bağlanabilirsiniz.

- 43LS03D modeli duvar montajı olarak kurulurken dikey olarak kurulabilir ve kullanılabilir.
 - Bazı özellikler portre modunu veya tam ekranı desteklemeyebilir.
 - İlk kurulum yatay mod için optimize edilmiştir.


TV Kumandası Öğesini Kullanma

- TV'yi TV'nin altındaki **TV Kumandası** düğmesiyle açabilirsiniz ve sonra **Kumanda menüsü** öğesini kullanabilirsiniz. TV Açık iken **TV Kumandası** düğmesine basıldığında **Kumanda menüsü** görünür.
- TV'nin altındaki düğmelerin konumu ve şekli modele bağlı olarak değişebilir.
 - SAMSUNG logosu üzerindeki veya TV'nin altındaki koruyucu film çikanırsız ekran karabilir. Koruyucu film takılıysa, filmi çıkarın.



- A** Kumanda menüsü
B TV Kumandası düğmesi / Uzaktan kumanda sensörü / Mikrofon anahtarı / *Hareket Sensörü
C TV Kumandası düğmesi / Uzaktan kumanda sensörü
D Mikrofon anahtarı
- *Sanat modunda, TV'nin alt kısmındaki Uzaktan kumanda sensörü kapalı kalır.
 - *: Yalnızca The Frame Serisi

Mikrofonu açma ve kapatma

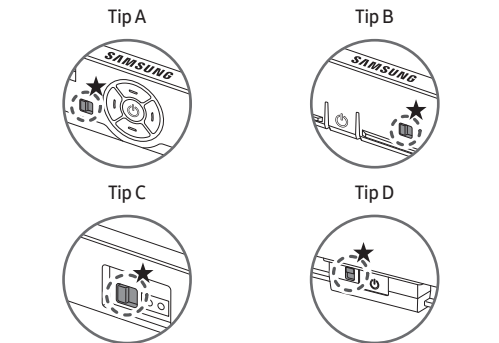

- ★ : Açma/Kapama Anahtarı
- TV'nin alt veya arka kısmında bulunan anahtarı kullanarak mikrofonu açabilir veya kapatabilirsiniz. Mikrofon kapalıysa, Mikrofon kullanın hiçbir ses özelliği kullanılamaz.
- Bu işlev yalnızca QN8**D/QN9**D/Q7**D/Q8**D/QN8**D/QN9**D/S8**D/S9**D/The Frame Serisinde desteklenir.
- Mikrofon anahtarının konumu ve şekli modele bağlı olarak farklılık gösterebilir.
- Mikrofondan gelen veriler kullanılarak yapılan analiz sırasında veriler kaydedilmez.

04 Sorun Giderme ve Bakım

Sorun Giderme

- Daha fazla bilgi için bkz. Kullanıcı kılavuzu içinde bulunan "Sorun Giderme".
- ➡️ (sol yön düğmesi) > ⚙️ **Ayarlar** > **Destek** > **Kullanıcı kılavuzunu** aç > **Sorun Giderme**
- Bu sorun giderme ipuçlarının hiçbirisi işe yaramazsa lütfen "www.samsung.com" sitesini ziyaret edin ve Destek düğmesini tıklayın veya Samsung servis merkezi ile iletişime geçin.
- Bu panel, üretiminde gelişmiş teknoloji kullanılan alt piksellerden oluşur. Ancak, ekranda birkaç parlak veya karantık piksel bulunabilir. Bu piksellerin, ürünün performansına bir etkisi olmaz.
 - TV'nizi optimum durumda tutmak için, en son yazılıma yükseltin. TV'nin menüsünde bulunan, **Şimdi Yükselt** veya **Otomatik Güncelleme** işlevlerini kullanın (➡️ (sol yön düğmesi) > ⚙️ **Ayarlar** > **Destek** > **Yazılım Güncelleme** > **Şimdi Yükselt** veya **Otomatik Güncelleme**).

TV açılmıyor.

- Güç kablosunun ürüne ve duvar prize sıkıca takıldığından emin olun.
- Prizden çalıştığından ve TV'nin altındaki uzaktan kumanda sensörünün yandığından ve sürekli kırmızı parladığından emin olun.
- Sorunun uzaktan kumandayla ilgili olmadığından emin olmak için TV'nin altındaki **TV Kumandası** düğmesine basmayı deneyin. TV açılırsa "Uzaktan kumanda çalışmıyor" bölümüne bakın.

Uzaktan kumanda çalışmıyor.

- Uzaktan kumandanın  düğmesine bastığınızda TV'nin alt kısmında bulunan uzaktan kumanda sensörünün yapıp söndüğünü kontrol edin.
 - DU7 Serisi (DU77** modeli hariç): Yanıp sönmüyorsa uzaktan kumandanın pillerini değiştirin. Pillerin kutuplarını (+/-) doğru yönde taktığınızdan emin olun. Daha uzun pil ömrü için alkalin piller önerilir.
 - Diğer modeller: Uzaktan kumandanın pili boşaldığında, USB şarj bağlantı noktasını (C) tipi kullanarak pil şarj edin veya uzaktan kumandayı ters çevirerek güneş pilinin ışık görmesini sağlayın.
- Uzaktan kumandayı 1,5-1,8 metre uzaklıktan doğrudan TV'ye doğrultmayı deneyin.
- TV'niz ile bir Samsung Akıllı Kumanda (Bluetooth Uzaktan Kumandası) geldiyse uzaktan kumandayı TV ile eşleştirdiğinizden emin olun. Samsung Akıllı Kumanda cihazını eşleştirmek için  ve  düğmelerini birlikte 3 saniye basılı tutun.

Eko Sensör ve ekran parlaklığı

- Eko Sensör, TV'nin parlaklığını otomatik ayarlar. Bu özellik, güç tüketimini azaltmak için odanızdaki ışık miktarını ölçer ve TV'nin parlaklığını otomatik olarak optimize eder. Bunı kapatmak isterseniz, suraya gidin:  ➡️ (sol yön düğmesi) > ⚙️ **Ayarlar** > **Tüm Ayarlar** > **Genel ve Gizlilik** > **Güç ve Enerji Tasarrufu** > **Parlaklık Optimizasyonu**.
- Eko sensörü TV'nin altında bulunur. Sensörü herhangi bir nesneyle engellemeyin. Görüntünün parlaklığını azaltabilir.

05 Teknik Özellikler ve Diğer Bilgiler

Teknik Özellikler

Model Adı

UE43DU7000UXTK / UE43DU7100UXTK / UE50DU7000UXTK UE50DU7100UXTK / UE50DU7200UXTK / UE55DU7000UXTK UE55DU7100UXTK / UE55DU7200UXTK / UE60DU7100UXTK UE65DU7000UXTK / UE65DU7100UXTK / UE65DU7200UXTK UE70DU7100UXTK / UE75DU7100UXTK / UE85DU7100UXTK UE43DU8000UXTK / UE43DU8500UXTK / UE50DU8000UXTK UE50DU8100UXTK / UE50DU8500UXTK / UE55DU8000UXTK UE55DU8100UXTK / UE55DU8500UXTK / UE65DU8000UXTK UE65DU8100UXTK / UE65DU8500UXTK / UE75DU8000UXTK UE75DU8500UXTK / UE85DU8000UXTK / QE50Q60DAUXTK QE50Q67DAUXTK / QE55Q60DAUXTK / QE55Q67DAUXTK QE65Q60DAUXTK / QE65Q67DAUXTK / QE75Q60DAUXTK QE75Q70DATXK / QE85Q70DATXK / QE65Q70DATXK QE65Q80DATXK / QE75Q80DATXK / QE55Q85DBTXK QE65Q85DBTXK / QE75Q85DBTXK / QE85Q85DBTXK QE43QN90DATXK / QE50QN90DATXK / QE55QN90DATXK QE65QN90DATXK / QE85QN90DATXK / QE85QN90DATXK QE98QN90DATXK / QE65QN8000DXTK / QE75QN8000DXTK QE85QN8000DXTK / QE65QN9000DXTK / QE75QN9000DXTK QE75QN9000DXTK / QE55S90DATXK / QE65S90DATXK QE75S90DATXK / QE43LS03DAUXTK / QE50LS03DAUXTK QE55LS03DAUXTK / QE65LS03DAUXTK / QE75LS03DAUXTK QE85LS03DAUXTK

Ekran Çözünürlüğü

QN8**D/QN9**D Serisi: 7680 x 4320

Diğer modeller: 3840 x 2160

Ses (Çıkış)
DU7/DU8/Q6**D/Q7**D Serisi: 20 W
S9D/Q8**D/QN8**D Serisi: 40 W
QN9D Serisi (43"): 20 W
QN9D Serisi (50"): 40 W
QN9D Serisi (55"-98"): 60 W
S9SD/QN8**D Serisi: 70 W
QN9**D Serisi: 90 W
LS03D Serisi (43"-50"): 20 W
LS03D Serisi (55"-85"): 40 W

Çalışma Sıcaklığı
10 °C ila 40 °C (50 °F ila 104 °F) arası
Çalışma Nemi
% 10 ila % 80 arası, yoğunlaşmayan
Depolama Sıcaklığı
-20 °C ila 45 °C (-4 °F ila 113 °F) arası
Depolama Nemi
% 5 ila % 95 arası, yoğunlaşmayan

Notlar

- Bu cihaz, bir Sınıf B dijital cihazdır.
- Güç kaynağı ve güç tüketimi hakkında daha fazla bilgi için ürün üzerindeki etikette bulunan bilgilere bakın.
 - Çoğu modellerde, etiket TV'nin arkasına takılmıştır. (Bazı modellerde, etiket kapak terminalinin içindedir.)
 - One Connect Kutu modellerinde, etiket One Connect Kutusunun altına takılmıştır.
- Tipik güç tüketimi IEC 62087'ye göre ölçülmüştür.
- Bir LAN kablosu bağlamak için bağlantı için bir CAT 7 (*STP tipi) kablosu kullanın. (100/10 Mb/sn)
- * Shielded Twisted Pair
- Unpacking and Installation Guide'nin içindeki resimler ve teknik özellikler gerçek üründen farklı olabilir.

Aşağıdaki durumlarda biriyönetim ücreti alınabilir:

- Talep etmeniz üzerine bir mühendise çağırın, ancak ileride hiç arıza olmadığı görülürse (yani, kullanıcı kılavuzu okunmadığında).
- Ünitesi Samsung servis merkezine götürdüğünüzde, ancak üründe bir arıza olmadığı görülürse (yani, kullanıcı kılavuzu okunmadığında).

Teknisiy ziyaret etmeden önce yönetim ücreti tutan hakkında bilgilendirileceksiniz.



Yetkisiz servis veya kişiler tarafından verilen onarım hizmetinden kaynaklı herhangi bir ürün hasarı, yaralanma veya diğer güvenlik sorunlarından SAMSUNG sorumlu değildir. Ürüne atıl kullaanma kılavuzunda yer alan bakım ve onarım talimatlarına dikkatle uyulmayan veya yetkisiz servis veya kişiler tarafından verilen onarım hizmetlerinden kaynaklı hasarlar garanti kapsamında değerlendirilmeyecektir.

Ürünün enerji etiketi ile ilgili detaylı bilgiye ulaşmak için:

- https://www.samsung.com/global/ecodesign_, energy web sitesini ziyaret edin
- Enerji etiketi üzerinde bulunan ürün kodunu sayfadaki arama bölümüne yazın
- Enerji etiketi ile ilgili bilgilere ulaşabilirsiniz

Güç tüketimini azaltma

TV'yi kapatığınızda, Bekleme moduna girer. Bekleme modunda, küçük bir miktar güç çekmeye devam eder. TV'yi uzun süre kullanmayı düşünmüyorsanız, güç tüketimini azaltmak için güç kablosunu fişten çıkarın.

İşbu belge ile Samsung, bu radyo ekipmanının 2014/53/AB Direktifine ve ilgili ihlgilere kanun gereksinimlerine uygun olduğunu beyan eder. Uyumluluk beyanının tam metni aşağıdaki internet adresinde bulunabilir:

<http://www.samsung.com> Destek'e gidin ve model adını girin.


Bu ekipman, TÜRKİYE'de çalıştırılabilir. Bu ekipmanın 5 GHz ve 6 GHz WLAN (Wi-Fi) işlevi yalnızca iç mekanda çalıştırılabilir.

RF maks verici gücü:

[QN9D/QN8**D Serisi]**
2,4 GHz - 2,4835 GHz'de 100 mW,
5,15 GHz - 5,25 GHz & 5,47 GHz - 5,725 GHz'de 200 mW,
5,25 GHz - 5,35 GHz'de 100 mW,
5,945 GHz - 6,425 GHz'de 200 mW.

[S9D/S8**D/QN8**D/Q8**D/Q6**D/DU8/DU7 Serisi]**
2,4 GHz - 2,4835 GHz'de 100 mW,
5,15 GHz - 5,25 GHz & 5,47 GHz - 5,725 GHz'de 200 mW,
5,25 GHz - 5,35 GHz'de 100 mW.

[The Frame Serisi]
2,4 GHz - 2,4835 GHz'de 100 mW,
5,15 GHz - 5,25 GHz & 5,47 GHz - 5,725 GHz'de 200 mW,
5,25 GHz - 5,35 GHz'de 100 mW,
6,1 GHz - 6,15 GHz'de 100 mW.



Ürünün, aksesuarlarının veya ilgili belgelerin üzerinde bulunan bu işaret, ürünün ve elektronik aksesuarlarının (örn. şarj cihazı, kulaklık, USB kablo) kullanım ömrü sonunda diğer ev atıklarıyla birlikte atılması gerektiğini belirtir.

- TV'nin dış yüzeyi ve ekranı temizleme sırasında çizilebilir. Dış yüzeyi ve ekranı, çizilmeleri önlemek için yumuşak bir bez kullanarak dikkatle sildiğinizden emin olun.
- TV'nin üzerine doğrudan su veya herhangi bir sıvı püskürtmeyin. Ürüne giren herhangi bir sıvı bir arızaya, yangına veya elektrik çarpmasına yol açabilir.

01 Kutuda Neler Var?

TV'nizle birlikte aşağıdaki öğelerin verildiğinden emin olun. Öğelerden herhangi biri eksikse, bayinizle görüşün.

- Kolay Kullanım Kılavuzu
- Garanti Kartı / Düzenleme Kılavuzu (Bazı ülkelerde yoktur)
- *Samsung Akıllı Kumanda
- *Uzaktan Kumanda & Piller
- *CI Card Adaptörü
- *TV Güç Kablosu
- *Duvara montaj adaptörü x 2
- **One Connect Kutusu
- **One Connect Güç Kablosu
- **One Connect Kablosu x 2
- **One Connect kablo tutucu (duvara montaj için)
- **One Connect Kutusu
- **One Connect Güç Kablosu
- **One Connect Kablosu

- *: Modele veya coğrafi bölgeye bağlı olarak, yukarıda belirtilen öğelerden bazıları pakete dahil olmayabilir.
- ** : QN9**D, QN8**D, S9SD Serisi
- ***: The Frame Serisi
- Pil türü modele bağlı olarak değişebilir.
 - Öğelerin renkleri ve şekilleri modellere bağlı olarak farklılık gösterebilir.
 - Birlikte almıyemen kablolar ayrıca satın alınabilir.
 - Kutuyu açarken ambalaj malzemesinin arkasında veya içinde gizlenmiş bir aksesuar olup olmadığını kontrol edin.
-  **Uyarı:** Yanlış tutulduğunda doğrudan basınç yücünden ekranlar hasar görebilir. TV'yi gösterilen şekilde kenarlarından kaldırmanızı öneririz. Elleçleme hakkında daha fazla bilgi için bu ürünle birlikte gelen Unpacking and Installation Guide belgesine bakın.



İthalatçı Firma

SAMSUNG

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD.ŞTİ.
Platofis İstanbul İş Merkezi,Ötacılar Cad. Bina
No: 78, Kat:3, No: B3, 34050, Etiler, İstanbul / Türkiye
Tel: (0212) 467 06 00

İmalatçı	SAMSUNG ELECTRONICS CO., LTD. (Maetan-dong) 129, Samsung-ro Yeongtong-gu, Suwon-si, Gyeonggi-do 443-742, Korea Tel: +82-2-2255-0114 / Fax: +82-2-2255-0117
LVD	Korea Testing Laboratory (KTL) Nemko Korea Co., Ltd. UL (Demko) Korea, Ltd. TUV Rheinland Korea Ltd.
EMC	DT&C Co., Ltd. KCTL Inc. CTK Co., Ltd. ONETECH Corp. Nemko Korea Co., Ltd. SGS Korea Co., Ltd. CS & Environment Centre of Samsung Electronics Co., Ltd.
Korea Testing Laboratory (KTL)	87, Digital-ro 26-gil, Guro-gu, Seoul 152-718 KOREA, REPUBLIC OF Tel: +82-2-860-1309
UL (Demko) Korea, Ltd.	#808, Manhattan Building, 36-2 Yeouido-Dong, Yeongdeunggo-gu, Seoul 150-749, Korea Tel: +82-2-2009-9100
TUV Rheinland Korea Ltd.	Test Center 4F, E&C Venture Dream Tower 6, 197-28, Guro-dong, Guro-gu 152-719 Seoul KORE