


クイックスタートガイド


D5 シリーズ

- 1 ご使用する前に保護材料を取り除いてください。
- 2 サイドブラシを取り付けます。
- 3 AAAバッテリーをリモコンにインストールします。


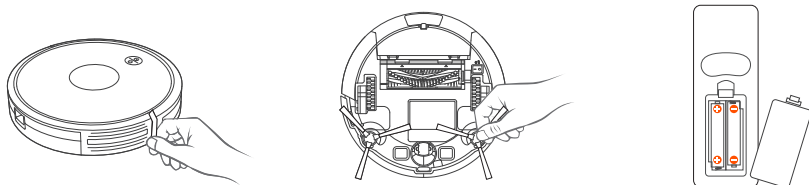


- 4 充電ベースを壁に近い地面に置いて、周囲に十分な空間があるようにします。

*常に充電ベースをオンにしてください。さもなければ、ロボット掃除機は自動的に充電ベースに戻って充電できません。

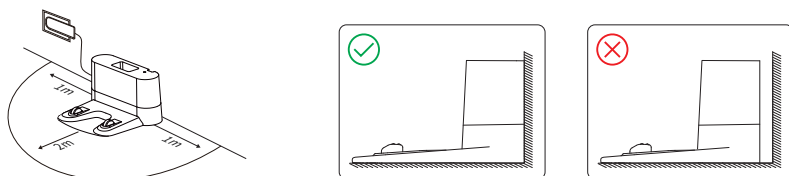

- 5 ご使用する前にロボット掃除機を満充電してください。
- 6 ロボット掃除機をオンにし、掃除を開始します。

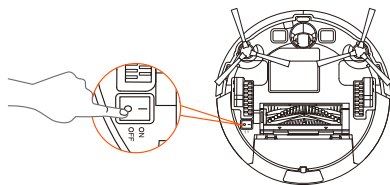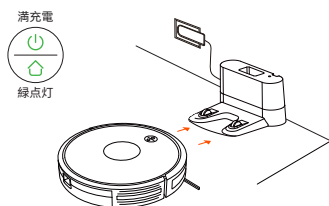


アプリQRコード

Utenic アプリをダウンロードして、説明に従ってWi-Fiの接続を完了します。そして、アプリでロボット掃除機を制御できます。詳しい情報はアプリガイドにご参考してください。




掃除する前のご注意


- ① 電源コード、ロープなど、ロボット掃除機に巻き付く可能性のあるものを取り除いてください。

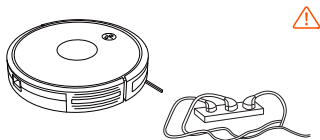


- ② 掃除中に、ロボット掃除機をぬれたエリアから遠ざけてください。

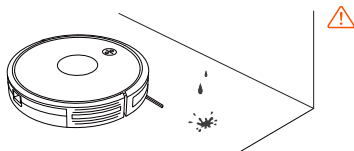


- ③ ロボット掃除機の厚さは72ミリですので、ロボット掃除機を底の空間が2.87インチ/73ミリ以下の家具から遠ざけておいてください。ロボット掃除機が誤って入ったら、引っかかる可能性があります。この場合は境界テープをご使用してください。

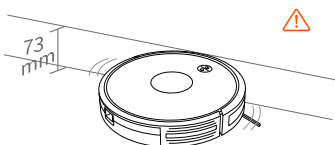


- ④ ロボット掃除機が絡まないように、カーペットの端のフリンジをたたんでください。色深いハイパイル絨毯や厚さが1.02インチ/26ミリを超える絨毯を掃除するのを避けてください、ロボット掃除機が故障する恐れがあります。

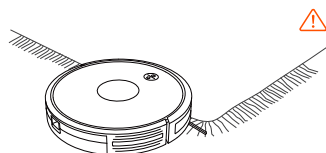



- ⑤ ロボット掃除機は高さが0.63インチ/16ミリ以下の物体に登れます。ロボット掃除機を物体の上に登りたくないなら、物体を取り除いてください。

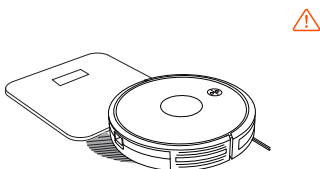

- ⑥ 強い光または直射日光の当たる場所で掃除ロボットを使用しないでください。強い光や直射日光に当たるとセンサーが故障し、設備の動作が異常になる場合があります。

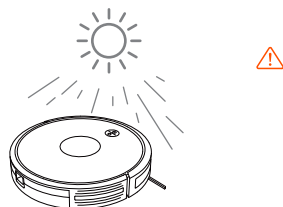




- ⑦ 掃除したくないエリアや物品からロボット掃除機を遠ざけておいてください。テープで境界テープを床にくっつけて仮想壁を形成します。境界テープを床に平らに置くことを確保します。

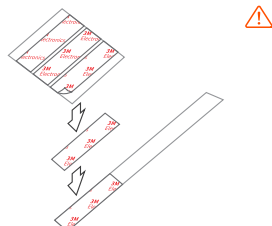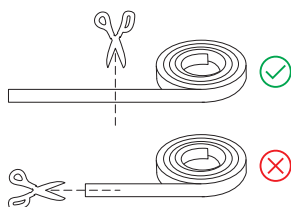

Quick Start Guide




For D5 Series

- 1 Remove the protective film before use.
- 2 Attach the side brushes.
- 3 Install AAA batteries into the remote control.

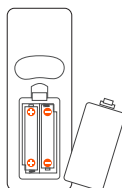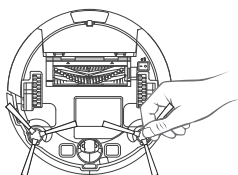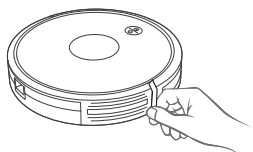


- 4 Place the charging base on a flat surface against the wall with enough room around.

***Always keep the charging base plugged in, otherwise the robot will not automatically return for charging.**

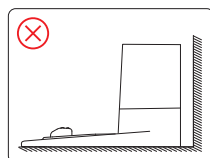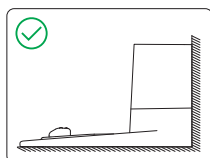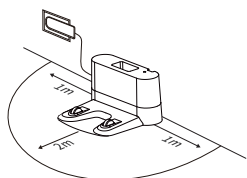


- 5 Fully charge the robot before use.

Fully charged
Solid green

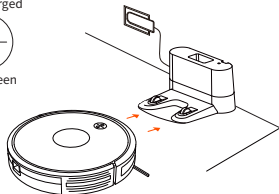

- 6 Turn on the robot and start cleaning.

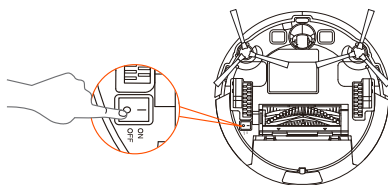



APP QR Code

Download the Utenic APP and follow the instructions in the app to complete the Wi-Fi connection. Then you can control your robot via this app. Refer to User Guide for further details.





Notes Before Cleaning



- 1 Remove any objects may entangle the robot, such as power cords, ropes, etc.
- 2 Keep the robot away from wet areas during cleaning.

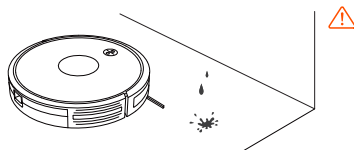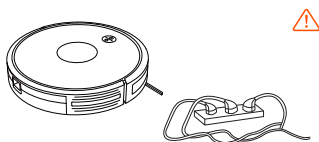

- 3 Keep the robot away from any furniture that may have the space ≤ 2.87 in/ 73mm on the bottom as the thickness of the robot is 72mm. It may get stuck if the robot goes in by accident. The **Boundary Strip(s)** could be used in this situation.
- 4 Fold tasseled edges of area rugs underneath to prevent tangling the robot. Avoid cleaning very dark-colored high-pile rugs or rugs thicker than 1.02 in/ 26mm as they may cause the robot to malfunction.

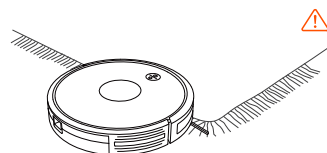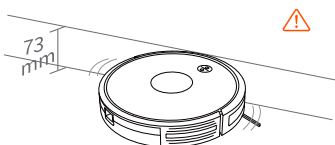

- 5 The robot may climb on top of objects less than 0.63in/ 16 mm in height. Please take the objects away if you do not want the robot to climb it.
- 6 Do not expose the robot to strong light or direct sunlight as it may cause the invalidation of se nsors and abnormality of robot.

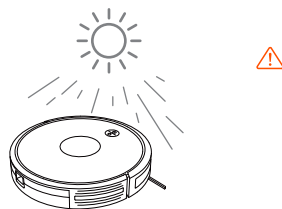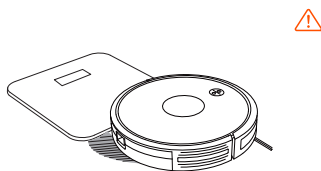

- 7 Keep the robot away from any area or item you do not want it to clean, apply the Boundary Strip(s) on the floor with adhesive tape to create a virtual barrier. Make sure the strips are placed **FLAT** on the floor.

