


MARS GAMING

G A M E R S · U N I V E R S E

MKPRO
GAMING KEYBOARD


Content / Contenido / Conteúdo / Contenuto / Contenu / Inhalt / Zawartość / inhoud



FN ❶ FUNCTION DESCRIPTION

- ❷ FN + WINDOWS = WINDOWS-LOCK FUNCTION
- ❸ FN+ ENTER = ON / OFF LIGHTING
- ❹ FN+ W = EXCHANGE AWS DIRECTION KEYS
- ❺ FN + / = PRINT SCREEN
- ❻ FN + * = SCROLL LOCK
- ❼ FN + -= PAUSE
- ❽ FN + ↑ =
- ❾ FN + ↓ =
- ❿ FN + ← =
- ⓫ FN + → =
- ⓬ FN + ✨ = LIGHTING MODE
- ⓭ FN + ✨ = LIGHTING COLOR CHANGE
- ⓮ FN + ✨ = SIDE LIGHTING COLOR CHANGE
- ⓯ FN + ✨ = KNOB LIGHTING
- ⓰ FN + Supr = WINDOWS MODE
- ⓱ FN + Insert = MAC MODE
- ⓲ FN + SPACE (5") = RESET
- ⓳ CONTROL KNOB = BRIGHTNESS - EFFECT / VOLUME - PLAY&PAUSE

Multimedia Keys / Teclas Multimedia / Teclas multimédias / Tasti multimedia / Touches multimédias / Multimedia-Tasten / Klawisze multimedia / Multimedia-toetsen / مفاتيح الوسائط المتعددة



Windows / Mac OS


• FN + Supr = Windows



• FN + Insert = Mac




Switches Swap / Cambio De Switches / Mudança De Interruptores / Cambio Di Interruttori / Changement De Commutateur / Wechsel Der Schalter / Zmiana Przełączników / wisselen Van Schakelaars / تغيير المفاتيح

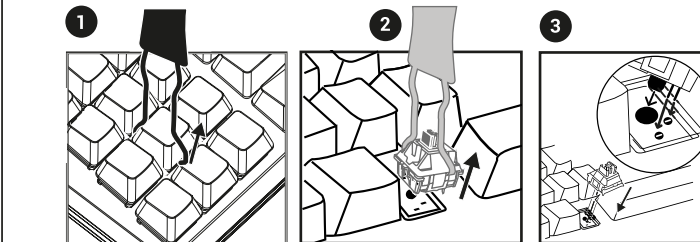

Knob Control / Rueda de control / Controle de botão / Controllo a manopola / Contrôle par bouton / Drehregler / Kontrola pokręteł / Knopbediening / عجلة التحكم

- **Control mode selection** / Selección del modo de control / Seleção do modo de controlo / Selezione della modalità di controllo / Sélection du mode de contrôle / Auswahl des Steuerungsmodus / Wybór trybu sterowania / Selectie van de besturingsmodus / اختيار وضع التحكم



A. Lighting control mode ✨



B. Multimedia control mode 🎵



EN

LIGHTING CONTROL:

- Press FN + ✨ to switch between different backlight modes
- Press FN + ✨ to switch the backlight color
- Press FN + ✨ to switch the side keyboard lighting
- Press FN + ✨ to change the knob lighting
- Press FN + ENTER to switch ON/OFF lighting
- Press FN + ⏮ to increase or decrease effect speed
- Press FN + ⏭ to increase or decrease brightness

Switches swap - Always switch OFF the keyboard before replacing key switches. Make sure the switch is in the correct position before being installed in the keyboard otherwise the metal pins might get damaged.

Do not use or install near water, moisture or hot surfaces. Unplug the cable and clean only with a dry cloth, do not use aerosol or liquid cleaning agents. Do not attempt to repair the product yourself, removing the covers will void the warranty. At the end of the product life please dispose this product at your local waste collection/recycling centre.

RECOMMENDATIONS AND REMINDERS

Do not use or install near water, moisture or hot surfaces. Please insert gently and do not bend the USB cable and USB ports otherwise they might get damaged and malfunction. Unplug the cable and clean only with a dry cloth, do not use aerosol or liquid cleaning agents.

TROUBLESHOOTING

- Keyboard not detected: Connect the product USB connector to a different port of the computer and restart the computer. Try the product in a different computer, if problem persists get in contact with our customer assistance.
- Keys not responding: Inspect the keys for any obstructions and clean if necessary. Check the language settings in your operating system to ensure they match your keyboard layout.
- Keys require excessive force or key is not working: Clean the keyboard to remove any dirt that may affect the sensitivity of the keys. If problem persist replace the key switch using the replacement switch included with the product.
- Keys lighting not working: Restart the keyboard and change the lighting effect.

WARRANTY

The original purchase receipt will be required to use the warranty service. Keep it in a safe place. Manipulations of the device, technical modifications of any kind, and damages due to external mechanical forces will void your warranty. To read the terms and conditions of the warranty visit [es.marsgaming.eu/es/terms](https://www.marsgaming.eu/es/terms)

COMPLIANCE

You can consult the European Union Declaration of Conformity of the product at www.marsgaming.eu/en/conformity For more information www.marsgaming.eu

DISPOSAL AND RECYCLING

At the end of the product's life, it should not be disposed of with regular household waste. To promote environmental sustainability and ensure proper waste management, please take the product to a designated waste collection and recycling center.

CONTACT

If you have questions or need assistance with the product, do not hesitate to contact us: attdcliente@biomag.es / +34945124598

ES

CONTROL DE ILUMINACIÓN:

- Pulse FN + ✨ para cambiar entre los distintos modos de iluminación
- Pulse FN + ✨ para cambiar el color de la retroiluminación.
- Pulse FN + ✨ para cambiar la iluminación lateral del teclado
- Pulse FN + ✨ para cambiar la iluminación de la rueda
- Pulse FN + ENTER para cambiar la iluminación ON/OFF
- Presione FN + ⏮ para aumentar o disminuir la velocidad del efecto
- Pulse FN + ⏭ para aumentar o disminuir el brillo

Intercambio de Interruptores - Siempre apague el teclado antes de reemplazar los interruptores. Asegúrese de que el interruptor esté en la posición correcta antes de instalarlo en el teclado, de lo contrario los pines metálicos podrían dañarse.

No lo utilice ni lo instale cerca de agua, humedad o superficies calientes. Desenchufe el cable y límpielo sólo con un paño seco, no utilice aerosoles ni líquidos de limpieza. No intente reparar el producto usted mismo, quitar las cubiertas anulará la garantía. Al final de la vida útil del producto, deséchelo en su centro local de recogida/reciclaje de residuos

RECOMENDACIONES Y RECORDATORIOS

No utilizar ni instalar cerca de agua, humedad o superficies calientes. Coloque el producto sobre una superficie plana y estable. Por favor, inserte suavemente y no doble el cable USB y los puertos USB, de lo contrario podrían dañarse y funcionar mal. Desenchufe el cable y límpielo sólo con un paño seco, no utilice aerosoles ni productos de limpieza líquidos.

SOLUCIÓN DE PROBLEMAS

- El teclado no es detectado: Conecte el USB del producto a un puerto USB diferente del ordenador y reinicie el ordenador. Pruebe el producto en otro ordenador, si el problema persiste póngase en contacto con nuestro servicio de atención al cliente.
- Las teclas no responden: Compruebe que las teclas no están obstruidas y límpielas si es necesario. Compruebe los ajustes de idioma de su sistema operativo para asegurarse de que coincidan con la distribución de idioma de su teclado.
- La tecla requiere una fuerza excesiva o la tecla no funciona: Limpie el teclado para eliminar cualquier suciedad que pueda afectar a la sensibilidad de las teclas. Si el problema persiste, sustituya el interruptor de la tecla utilizando el interruptor de repuesto incluido con el producto.
- La iluminación de las teclas no funciona: Reinicie el teclado y cambie el efecto de iluminación.

GARANTÍA

Se requerirá el recibo de compra original para utilizar el servicio de garantía. Guárdelo en un lugar seguro. Las manipulaciones del dispositivo, las modificaciones técnicas de cualquier tipo y los daños debido a fuerzas mecánicas externas anularán su garantía. Para leer los términos y condiciones de la garantía visite [es.marsgaming.eu/es/terms](https://www.marsgaming.eu/es/terms)

CUMPLIMIENTO

Puede consultar la Declaración de Conformidad de la Unión Europea del producto en www.marsgaming.eu/en/conformity Para más información www.marsgaming.eu

ELIMINACIÓN Y RECICLAJE

Al final de la vida útil del producto, no debe desecharse con los residuos domésticos regulares. Para promover la sostenibilidad ambiental y asegurar una gestión adecuada de los residuos, lleve el producto a un centro de recogida y reciclaje de residuos designado.

CONTACTO

Si tiene preguntas o necesita asistencia con el producto, no dude en contactarnos: attdcliente@biomag.es / +34945124598

