




Instrucțiuni de utilizare



FA14

Vă rugăm să citiți cu atenție aceste instrucțiuni înainte de utilizare. Asigurați-vă că îl utilizați în strictă conformitate cu cerințele menționate în manual și păstrați manualul în mod corespunzător pentru referințe viitoare.

Descrierea

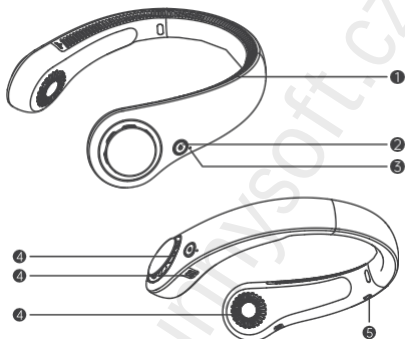

① Ieșire aer

② Buton pornire/viteză

③ Indicator luminos

④ Intrare aer

⑤ Intrare tip C

Instrucțiuni înainte de utilizare

1. Înainte de pornire, verificați dacă produsul și cablul de alimentare sunt deteriorate, asigurați-vă că sunt în bună și asamblați-le în conformitate cu instrucțiunile.

2. Înainte de a încărca produsul, verificați dacă tensiunea de alimentare utilizată corespunde cu eticheta produsului.

3. Nu dezasamblați, modificați sau reparați produsul pentru a șocurile electrice și incendiile și reparați produsul la centrul de service desemnat de distribuitorul sau producătorul original.

Utilizare

A. Cum se utilizează

Întindeți ușor paletelile ventilatorului la stânga și la dreapta, cu ieșirea de aer îndreptată în sus, atârnați

în jurul gâtului, apăsați butonul de pornire/viteză și ventilatorul începe să funcționeze, suflând aer rece spre cap pentru o experiență răcoritoare.



B. Comutator de putere/viteză

Apăsați scurt butonul power/speed pentru a intra în modul prima treaptă / a doua treaptă / a treia treaptă / a patra treaptă / a cincea treaptă / oprire; o apăsare lungă pe orice treaptă va opri direct ventilatorul.



C. Starea indicatorului

Indicator	Înțeles de
Lumina albă este încă aprinsă	Stare de încărcare completă
Lumina albă pâlpâie încet	Starea de încărcare
Lumina albă clipește o dată	Viteze de comutare
Lumina albă clipește în continuare	Bateria este prea descărcată
Lumina albă clipește de trei ori	Bateria este descărcată și nu poate funcționa

D. Curățarea produsului

1. Înainte de a curăța produsul, asigurați-vă că sursa de alimentare este deconectată.
2. Ștergeți corpul ventilatorului și ieșirea de aer cu o cârpă uscată.
3. Nu curățați niciodată componentele electrice (de ex. motor, întrerupător etc.) cu apă sau alte lichide.
4. Nu atingeți sursa de alimentare și componentele electrice cu umede sau cu o cârpă umedă.
5. Îndepărtați din timp praful sau obiectele străine din gura de evacuare pentru a preveni pătrunderea prafului în cavitatea de aer.

Scoaterea bateriei

Înainte de a arunca produsul, bateria trebuie să fie scoasă din produs. Produsul trebuie să fie oprit înainte de scoaterea bateriei. Bateriile trebuie eliminate în siguranță în conformitate cu reglementările punctului de vânzare.

1. Utilizați unealta pentru a îndepărta fișa și șurubul inferior, apoi deschideți capacul interior și îndepărtați șurubul inferior (Figura 1).
2. Utilizați unealta pentru a deschide capacul exterior (figura 2).
3. Scoateți conectorul bateriei și scoateți bateria, aruncați-o în siguranță în conformitate cu reglementările locale (Figura 3).



Figura 1



Figura 2



Figura 3

Notă privind siguranța

Pentru a asigura siguranța utilizării și pentru a preveni rănirea și deteriorarea pe proprietatea dvs. și pe proprietatea altora, vă rugăm să respectați următoarele măsuri de siguranță. Utilizarea necorespunzătoare fără respectarea avertismentelor de siguranță poate duce la accidente.

01. Acest produs nu este o jucărie pentru copii, vă rugăm să vă asigurați că bebelușii și copiii nu se joacă cu acest produs ca o jucărie. Copiii cu vârsta sub 14 ani trebuie să îl utilizeze sub supravegherea părinților.

02. Acest produs nu este destinat utilizării de către utilizatori (inclusiv copii) cu fiziologie, percepție, abilități mentale deficitare, experiență sau cunoștințe, cu excepția cazului în care îl utilizează în siguranță sub supravegherea sau cu cunoștințele persoanei responsabile de siguranța lor.

03. Nu suflați direct pe corpul uman pentru perioade prelungite de timp, în special pentru și copii, pentru a evita disconfortul fizic.

04. La utilizare, nu atașați degete, obiecte ascuțite, obiecte metalice etc., care pot cauza defectarea produsului și riscul de sau vătămare.
05. Evitați folosirea mâinilor ude, a prosoapelor ude și a altor dopuri în timpul utilizării pentru a preveni șocurile electrice.
06. Acest produs nu este rezistent la apă, nu utilizați apă pentru a clăti produsul direct sau în baie, umiditate ridicată, locuri pentru stocarea apei pentru utilizare. Vă rugăm să uscați apa de suprafață în timp util înainte de a încerca să porniți utilizarea. Nu utilizați complet înmuiat și cu apă în interior.
07. Nu acoperiți ieșirea și intrarea de , cum ar fi hainele agățate, prosoapele, hainele și alte obiecte, pentru a preveni defectarea produsului.
08. Interziceți utilizarea și depozitarea în medii cu temperaturi ridicate (mai mari de 60 ° C) și în zone închise, cum ar fi sere, șantiere de construcții, șeminee, compartimente auto expuse și alte medii care vor provoca deformarea plasticului, flacăra cu vântul va provoca incendii, explozia bateriei și alte defecțiuni și accidente.
09. Nu comprimați, dezasamblați sau instalați bateria pentru perioade lungi de timp într-un mediu cu temperaturi ridicate (60 °C sau mai mult), în caz contrar existând riscul de scurgere a lichidului sau de explozie.
10. Dacă consumatorii utilizează un adaptor de alimentare pentru încărcare, tensiunea și curentul nominale de intrare ale adaptorului de alimentare trebuie să fie în intervalul 5,0 V/2,0 A și certificările de siguranță naționale obligatorii trebuie îndeplinite înainte de utilizare.
11. Acest produs utilizează baterie litiu-ion, nu are funcție de memorie, supraîncărcarea sau supradescărcarea va afecta durata de viață a produsului, vă rugăm să încărcați la timp și să deconectați sursa de alimentare când este complet încărcată. După încărcarea dispozitivului pentru o perioadă lungă de timp (mai mult de 3 luni) nu este utilizat, vă rugăm să încărcați complet.
12. Dacă apare fum, incendiu sau alte defecțiuni în timpul utilizării, opriți imediat alimentarea pentru a opri utilizarea instrumentului și trimiteți-l dealerului sau producătorului pentru soluționare, nu îl dezasamblați singur pentru a evita pericolul.
13. Nu îndoiți și nu trageți de cablul de alimentare în timpul încărcării pentru a un contact slab.

Parametrii produsului

Marca: JisuLife

Model: FA14

Numele : Neck Fan Life3 Putere: 5.0/ 2.0A

Capacitatea bateriei: 4000 mAh (14.8Wh/3.7V)

Celula bateriei: baterie litiu-ion Timp de încărcare:

3.5 - 4.5 h

de funcționare: 2 - 13,5 h (în funcție de diferite echipamente/utilizare) Greutatea produsului: aprox. 270 g

Dimensiunea produsului: 206× 200× 60 mm

Conținutul pachetului

Ventilator de gât Life3 x1
Cablul de alimentare USB-C
x1 Manual x1

Conținutul acestui manual de utilizare și specificațiile tehnice ale produsului se pot modifica fără notificare prealabilă.


Furnizor/Distribuitor

Sunnysoft s.r.o.
Kovanecká 2390/1a
190 00 Praga 9
Republica Cehă
www.sunnysoft.cz

Producător: Shenzhen Jisu Technology Co., Ltd
Address: 301, Bui ding A, No.8, Changjiangpu 2 Road, He'ao
Community, Yuanshan Street, Longgang District, Shenzhen
URL: www.jisulife.com
Tel: 400-011-8812




User Guide

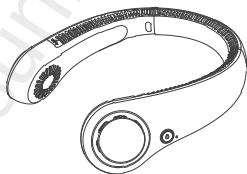

FA14

Please read this manual carefully before use. Be sure to use it in strict accordance with the requirements of the manual, and keep the manual properly for future use.

Appearance Description

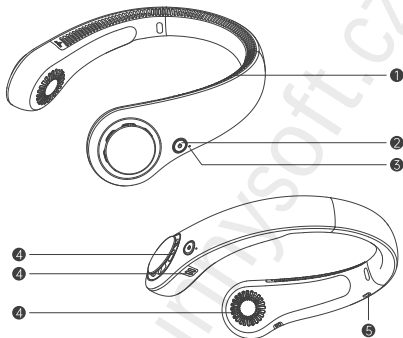

Air Outlet - - - - - ①

Switch/Gear Button - - - - - ②

Indicator Light - - - - - ③

Air Inlet - - - - - ④

Type-C Input Port - - - - - ⑤

Precautions Before Use

1. Please check the product and power cord for any damage and make sure they are in good condition and assemble them according to the instructions before powering them on.
2. Before charging the product, please check whether the voltage of the power supply used is consistent with the product label.

3. Please do not disassemble, modify or repair the product to avoid electric shock and fire accidents, and ask the service station designated by the original seller or manufacturer for repair.

How To Use


A. How To Use It

Gently spread the fan blades left and right, with the air outlet facing upwards, hang it around your neck, press the power/speed button, and the fan starts working, blowing cool air towards your head, providing a refreshing experience.



B. Power/Speed Switch

Short press the power/speed button to cycle through the first gear/second gear/third gear/fourth gear/fifth gear/shut-down mode; long press at any gear to shut down directly.

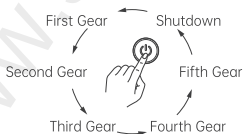

C. Indicator Status Description

Indicator Status	Meaning
White light always on	Fully charged state
White light flashes slowly	State of charge
The white light flashes once	Gears switching
White light keeps flashing	Battery is too low
White light flashes 3 times	Battery low and cannot work

D. Product Cleaning

1. Before cleaning the product, please make sure the power is disconnected.
2. Wipe the fan body and air outlet with a dry cloth.
3. Never clean electrical components (such as the motor, power switch, etc.) with water or other liquids.
4. Do not touch the power supply and electrical parts with wet hands or wet cloth.
5. Please clean up the dust or foreign objects in the air outlet in time to avoid dust falling into the air cavity.


Remove The Battery

The battery must be removed from the product before disposing of the product; The product must be powered off before removing the battery; Batteries should be safely disposed of in accordance with the regulations of the place of sale.

1. Use a tool to remove the screw plug and the lower screw, then pry open the inner casing and remove the lower screw (Figure One).
2. Use a tool to pry open the outer casing (Figure Two).
3. Pull out the battery connector and remove the battery, dispose of it safely in accordance with local regulations (Figure Three).



(Figure One)

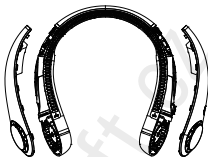

(Figure Two)



(Figure Three)

Safety Precautions

To ensure the safety of use and to avoid injury and property damage to you and others, please observe the following safety precautions; Incorrect use without observing the safety warnings may lead to accidents.

01. This product is not a child's toy, please ensure that infants and children do not play with this product as a toy; Children under 14 years of age, please use it under the supervision of a guardian.
02. This product is not intended for use by users (including children) with inadequate physiology, perception, mental

ability, experience, or knowledge, unless used safely under the supervision or knowledge of a person responsible for their safety.

03. Please do not blow directly on the human body for a long time, especially the elderly and children, to avoid physical discomfort.
04. When using, please do not put fingers, sharp objects and metal objects, etc., which will cause product failure and the risk of electric shock, or injury.
05. When using, prohibit the use of wet hands, wet towels and other plugging power to avoid electric shock.
06. This product is not waterproof, please do not use water to directly rinse the product or in the bathroom, heavy moisture, water storage places to use; surface water, please dry in time to dry before trying to turn on the use; completely soaked and internal water into the prohibition of re-use.
07. Do not cover the air outlet and air inlet, such as hanging clothes, towels, clothes, and other items, so as not to cause product failure.
08. Prohibit the use and storage in high temperature (higher than 60 °C) environments and confined spaces, such as greenhouses, construction sites, fireplaces, exposed car rooms and other environments, which will cause plastic deformation, flame with the wind to cause fire, battery explosion and other failures and accidents.
09. Do not squeeze, disassemble the battery or place the battery in a high-temperature environment (60°C and above) for a long time, otherwise there may be a risk of liquid leakage or explosion.
10. If consumers use the power adapter to charge, the power adapter input rated voltage and current should be within 5.0V== 2.0A, and the national mandatory safety certification

before use.

11. This product uses lithium-ion battery, no memory function, overcharge or overdischarge will affect the service life of the product, please charge in time and disconnect the power after full charge, long time (more than 3 months) do not use please fully charge.
12. If there is smoke, fire and other failures in use, please immediately turn off the power to stop using, and send it to the dealer or manufacturer to deal with, do not disassemble themselves to avoid danger.
13. Do not bend or pull the power cord during charging to avoid poor contact.

Product Parameters

Brand: JisuLife

Product Model: FA14

Product Name: Neck Fan Life3

Input: 5.0V== 2.0A

Battery Capacity: 4000mAh(14.8Wh/3.7V)

Battery Cell: Lithium-ion Battery

Charging Time: 3.5-4.5h

Operating Time: 2-13.5h(dependent on different gears/use scenarios)

Product Weight: about 270g

Product Size: 206×200×60mm

Packing Accessories

Neck Fan Life3 * 1

USB-C Charging Cable * 1

Manual * 1

The contents in this user manual and the technical specification of the product will be changed without prior notice.

Manufacturer: Shenzhen Jisu Technology Co., Ltd

Address: 301, Building A, No.8, Changjiangpu 2 Road, He'ao Community, Yuanshan Street, Longgang District, Shenzhen

URL: www.jisulife.com

Tel: 400-011-8812



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

"NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."