



Continental Edison



CEHB01

Mixeur plongeant 3 en 1 – Divider mixer 3in 1

Guide d'utilisation – Instruction booklet

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES A LIRE AVEC ATTENTION ET A CONSERVER POUR TOUTES FUTURES UTILISATIONS :

- Déconnectez toujours l'appareil de l'alimentation si vous le laissez sans surveillance et avant montage, démontage ou nettoyage.
- Ne laissez pas les enfants utiliser le mixeur plongeant sans surveillance.
- Cet appareil ne doit pas être utilisé par des enfants. Conservez l'appareil et son câble hors de portée des enfants.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou dont l'expérience ou les connaissances ne sont pas suffisantes, à condition qu'ils bénéficient d'une surveillance ou qu'ils aient reçu des instructions quant à l'utilisation de l'appareil en toute sécurité et dans la mesure où ils en comprennent bien les dangers potentiels.
- Les enfants ne doivent pas utiliser l'appareil comme un jouet.
- Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son agent de service ou des personnes de qualification similaire afin d'éviter un danger.
- Des précautions doivent être prises lors de la manipulation des lames tranchantes, de la vidange du bol et du nettoyage.
- Attention aux risques de blessures en cas de mauvaise utilisation.

- Mettez l'appareil à l'arrêt et déconnectez le de l'alimentation avant de changer les accessoires ou d'approcher les parties qui sont mobiles lors du fonctionnement.
- Soyez vigilant si un liquide chaud est versé dans le gobelet doseur dans la mesure où il peut être éjecté de l'appareil en raison d'une ébullition soudaine.
- Nous vous conseillons de ne pas utiliser de liquides dont la température est supérieure à 40°C.
- Assurez-vous que votre alimentation électrique est la même que celle indiquée sur le corps de l'appareil avant de brancher.
- Ne faites pas fonctionner l'appareil avec un cordon ou une prise endommagée ou après un dysfonctionnement de l'appareil ou une chute ou une détérioration de quelque manière que ce soit.
- Ne jamais mettre le corps principal avec l'unité moteur dans l'eau ou un autre liquide ou laisser le cordon ou la fiche se mouiller, vous pourriez obtenir un choc électrique.
- Ne faites pas fonctionner l'appareil avec des mains mouillées. Se sécher les mains avec un chiffon avant de brancher.
- Assurez-vous à chaque fois qu'aucun élément de l'appareil (l'arbre du mélangeur, le fouet, le hachoir ou le cordon d'alimentation ne soit endommagé avant d'utiliser l'appareil.
- Ne laissez jamais les lames face à quelqu'un pendant le fonctionnement de l'appareil.

- Faites particulièrement attention lors de la préparation des aliments pour bébés, personnes âgées et infirmes.
- Ne laissez pas le cordon pendre par-dessus le bord de la table ou du comptoir.
- Ne laissez jamais quelqu'un trébucher sur le cordon d'alimentation et le câble attaché. Ne laissez pas le cordon toucher des surfaces chaudes ou pendre là où un enfant pourrait l'attraper.
- Ne pas utiliser à l'extérieur.
- Les lames sont tranchantes. Manipulez avec soin.
- Ne touchez jamais les lames ni le fouet pendant que la machine est branchée.
- N'ajoutez jamais d'ingrédients dans le gobelet doseur ou dans le bol du hachoir pendant que le mixeur plongeant fonctionne.
- Ne placez pas d'ingrédients au delà de la graduation maximale des contenants.
- N'utilisez pas le mixeur plongeant en continu trop longtemps. Le moteur peut surchauffer.
- Laissez l'appareil reposer au moins 2 minutes entre les cycles. Après 5 cycles continus, l'appareil doit refroidir à la température ambiante pour redémarrer.
- Ne dépassez pas les quantités et le temps maximum indiqués.
- L'utilisation d'accessoires, y compris des bocaux à conserves, non recommandés par le fabricant, peut entraîner des risques de blessures corporelles.
- Évitez de toucher les pièces mobiles.
- Gardez les doigts, les cheveux, les vêtements et les ustensiles à l'écart des pièces mobiles.
- La manière de nettoyer les surfaces en contact avec les aliments est définie dans la section " ENTRETIEN ET NETTOYAGE".

NETTOYAGE ET ENTRETIEN

Toujours éteindre et débrancher avant de nettoyer.

Ne touchez pas les lames tranchantes.

Attention: Soyez prudent lorsque vous nettoyez les lames car elles sont extrêmement tranchantes.

Remarque: ne nettoyez aucune partie de l'appareil dans le lave-vaisselle.

Le corps de l'appareil et le cordon d'alimentation

Essuyez avec un chiffon humide, puis séchez.

Ne jamais plonger dans l'eau ou un autre liquide ou utiliser des abrasifs.

Le gobelet doseur

Il peut être lavé à l'eau avec un agent de nettoyage.

Laver et rincer abondamment avec de l'eau, puis sécher.

Le pied mixeur

La tête du pied mixeur ne peut être essuyée qu'avec un linge humide, puis séchée.

Débranchez, laissez refroidir.

Laver et rincer abondamment la partie avec les lames et l'enveloppe de protection avec de l'eau savonneuse, puis sécher.

Le hachoir

Le couvercle du hachoir ne peut être essuyé qu'avec un linge humide, puis séché.

Ne jamais plonger dans l'eau ou un autre liquide ou utiliser des abrasifs.

Le bol et la lame peuvent être lavés à l'eau avec un produit de nettoyage.

Laver et rincer abondamment avec de l'eau, puis sécher. Remettez le couvercle de protection sur la lame.

Le fouet

La tête du fouet ne peut être essuyée qu'avec un linge humide, puis séchée.

Ne jamais laver et rincer à l'eau ou utiliser des abrasifs.

L'autre partie du fouet peut être lavée à l'eau avec un produit de nettoyage.


Laver et rincer abondamment avec de l'eau, puis sécher.

Espace de rangement

Conserver dans un endroit frais, sec et ventilé.

Description des pièces

- 1). Tête de l'appareil
- 2). Bague décorative
- 3). Bouton vitesse (I)
- 4). Bouton vitesse (II)
- 5). Corps de l'appareil
- 6). Cordon d'alimentation
- 7). Pied mixeur
- 8). HACHOIR
- 9). FOUET
- 10). Gobelet doseur

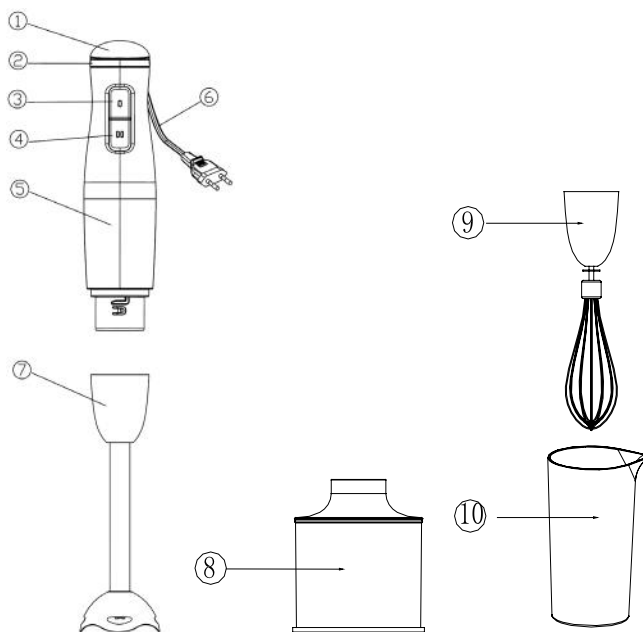

Avant d'utiliser pour la première fois

- Retirez tous les emballages et retirez la protection de la lame.
- Nettoyez tous les composants entrant en contact avec les aliments comme indiqué précédemment

Pour utiliser le mixeur plongeant

- Nettoyez l'arbre du mélangeur et le gobelet doseur.
- Alignez le repère sur la poignée d'alimentation avec le repère ▲ sur l'axe du mélangeur (figure 1), placez la poignée d'alimentation à l'intérieur de l'arbre du mélangeur. Tournez l'arbre dans le sens des aiguilles d'une montre jusqu'à ce que le repère ▲ soit aligné avec la marque avec un léger son de clic (figure 2-3). Si tel est le cas, l'arbre du mélangeur est correctement verrouillé.




Figure 1




Figure 2




Figure 3

- Assemblez le corps de l'appareil avec le pied mixeur, tournez et verrouillez jusqu'à ce que vous entendiez un léger clic.
- Les symboles sur le corps de l'appareil et sur le pied mixeur doivent maintenant être alignés les uns avec les autres. Dans ce cas, le pied mixeur est correctement verrouillé.
- Vérifiez si le cordon d'alimentation n'est pas endommagé.
- Remplissez le gobelet doseur (pas plus que le niveau maximum indiqué).

- Branchez l'appareil. Allumez l'appareil en appuyant sur l'interrupteur. (Le marquage de "I" est pour la vitesse inférieure, "II" pour la vitesse supérieure.)
- Plongez complètement le protège-lame dans les ingrédients.
- Mixez les ingrédients en déplaçant l'appareil lentement de haut en bas et en cercles.
- Après avoir terminé le mélange, relâchez l'interrupteur, puis débranchez la prise.
- Attention: Le temps de fonctionnement continu doit être inférieur à 10 secondes.
- Si votre mélangeur est bloqué, arrêtez-le d'abord et débranchez-le avant de le nettoyer.

Pour utiliser le hachoir

- Retirez la protection de la lame du hachoir.
- Nettoyez le couvercle, la lame et le bol du hachoir.
- Assemblez la lame dans le bol du hachoir.
- Remplissez le bol (pas plus que le niveau maximum indiqué).
- Assemblez le corps de l'appareil avec le hachoir, tournez et verrouillez jusqu'à ce que vous entendiez un léger clic. Les symboles sur le corps de l'appareil et le hachoir doivent être alignés. Si c'est le cas, le hachoir est verrouillé correctement.
- Vérifiez si le cordon d'alimentation n'est pas endommagé.
- Branchez l'appareil. Appuyez sur l'interrupteur pour hacher les ingrédients. (Le marquage de "I" est pour la vitesse inférieure, "II" pour la vitesse supérieure.)
- Attention: Le temps de fonctionnement continu doit être inférieur à 30 secondes. Reportez-vous aux instructions de sécurité.
- Après utilisation, débranchez et démontez l'appareil. Sortez la lame du bol en tenant l'axe en plastique, puis versez les aliments.
- Les bords de la lame sont très coupants, ne les touchez pas.
- Toujours éteindre et débrancher avant de nettoyer. Veuillez vous reporter à la section ENTRETIEN ET NETTOYAGE.

Pour utiliser le fouet

- Nettoyez le fouet et le gobelet doseur.
- Assemblez le fouet avec le corps de l'appareil jusqu'à ce que vous entendiez un léger clic. Les symboles sur le corps de l'appareil et le fouet doivent être alignés. Si c'est le cas, le fouet

est verrouillé correctement.

- Vérifiez si le cordon d'alimentation n'est pas endommagé.
- Remplissez le gobelet doseur (pas plus que le niveau indiqué).
- Branchez l'appareil. Appuyez sur l'interrupteur. (le marquage de "I" est pour la vitesse inférieure, "II" pour la vitesse supérieure.)
- Pour éviter les éclaboussures, utilisez la vitesse lente pour mélanger au démarrage.
- Plongez complètement le fouet dans les ingrédients.
- Mélangez les ingrédients en déplaçant l'appareil lentement de haut en bas et en cercles.
- Attention: Le temps de fonctionnement continu doit être inférieur à 3 min. Reportez-vous aux instructions de sécurité.
- Après utilisation, débranchez et démontez l'appareil.
- Toujours éteindre et débrancher avant de nettoyer. Veuillez vous reporter à la section ENTRETIEN ET NETTOYAGE.

Le mixeur plongeant

Aliments	La vitesse	Max. temps	Max. quantité
soupes, fruits et légumes mûrs Sauces Lait	vitesse inférieure	30 secondes	200g

Le hachoir

Aliments	La vitesse	Max. temps	Max. quantité
morceaux de boeuf (taille 20mm x 20mm x20mm), amandes	haute vitesse	30 secondes	200g

Le fouet

Aliments	La vitesse	Max. temps	Max. quantité
crème, blancs d'œufs	haute vitesse	3 minutes	200g

Mise au rebut correcte de ce produit	
	Ce marquage indique que ce produit ne doit pas être éliminé avec d'autres déchets ménagers dans toute l'UE. Pour éviter que l'élimination incontrôlée des déchets ne nuise à l'environnement ou à la santé humaine, recyclez-la de façon responsable afin de promouvoir la réutilisation durable des ressources matérielles. Pour retourner votre appareil usagé, veuillez utiliser les systèmes de retour et de collecte ou contacter le détaillant où le produit a été acheté. Ils peuvent prendre ce produit pour un recyclage sans danger pour l'environnement.

220-240V 50/60Hz 400W

Réf: CEHB01

Modèle: HB976CF08

Informations à conserver

Continental Edison

120-126 Quai de Bacalan

CS 11584

33000 Bordeaux

IMPORTE PAR :

A.M.C.

123, QUAI JULES GUESDE

94400 VITRY SUR SEINE

France

LOT # : A.M.C. MMYYYY

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:


- Read all instructions carefully before you use the appliance.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children to use the blender without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;

- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.
- Do not allow children to use the blender without supervision.
- Make sure your electricity supply is the same as the one shown on the power handle before plugging in.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Never put the power handle in water or other liquid or let the cord or plug get wet, you could get an electric shock.
- Do not operate the blender with wet hands. Make hands dry with cloth before plugging in.
- Make sure the blender shaft, whisk or chopper in place, the power cord is not damaged before using the appliance every time.
- Never let the blades face toward anybody while operating the appliance.
- Take special care when preparing food for babies, the elderly and infirm.
- Always ensure that the hand blender shaft, whisk or chopper is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufactures instructions.

- Never blend or mix hot oil, fat. Please follow the processing guide.
- Do not let the cord hang over edge of the table or counter.
- Never let anybody trip over the power cord and attached cable. Don't let the cord touch hot surfaces or hang down where a child could grab it.
- Unplug from outlet when it is not in use, before putting on or taking off parts, before moving the appliance or adding the food, and before cleaning.
- Do not use outdoors.
- Blades are sharp. Handle carefully.
- Never touch the blades or whisk while the machine is plugged in.
- Never add ingredients to the beaker or chopper bowl while the hand blender is operating.
- The capacity of the ingredient does not exceed the maximum graduation of the beaker, chopper bowl or food bowl.
- Do not continuously operate the blender too long. The motor may overheat. If the surface of the hand blender has been very hot, it may need time to cool down. After reducing to the room temperature, the appliance can be operated again.
- The continuous operating time without the load must be less than 15 seconds when using blender, furthermore, do not use the blender to mix too hard ingredients.
- Do not exceed the quantities and maximum time indicated in the operation guidelines or processing guide.
- Take the attachments off before cleaning.

- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- Avoid contacting moving parts.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Keep hands and utensils out of the beaker or chopper bowl while blending or cutting to reduce the risk of severe injury to persons or damage to the blender.
- This appliance must not be used against prescription.

Description of Parts

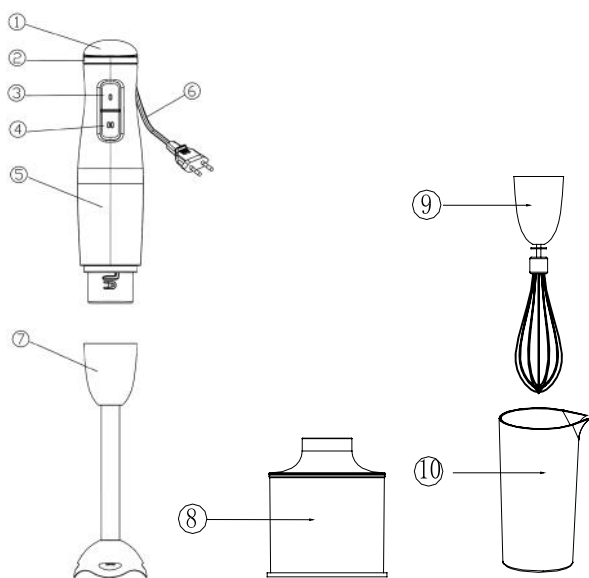

- 1).Top cover
- 2). Decorative ring
- 3).Switch button (I)
- 4).Switch button (II)
- 5).Power handle
- 6).Power cord set

- 7).Blender shaft (removable)
- 8).Chopper
- 9).Whisk
- 10).Beaker

Performance

- High speed, low noise, small vibration, inner PCB control.
- Rating: 220-240V, 50/60Hz, 400W

Operation Guidelines

Caution: Blades are sharp. Handle carefully.

Before using for the first time

- Remove all packaging and take away the blade cover.

To use the hand blender

- Clean the blender shaft and beaker.
- Align the mark on the power handle with the mark ▲ on the blender shaft (figure 1), fit the power handle inside the blender shaft. Turn the shaft clockwise until the mark ▲ is aligned with the mark with a slight sound of click (figure 2-3). If this is the case, the blender shaft is locked correctly.




Figure 1




Figure 2




Figure 3

- Check if the power cord is not damaged.
- Make sure your electricity supply is the same as the one shown on the power handle.

- Fill the food to the beaker (not more than the maximum indicated level).
- Plug in, hold the power handle steady. Switch the appliance on by pressing the switch button. (the marking of “I” is for the lower speed, “II” for the higher speed.)
- Immerse the blade guard completely in the ingredients.
- Blend the ingredients by moving the appliance slowly up and down and in circles.
- After you have completed blending, Release the switch button, then unplug from outlet.
- Warning: The continuous operating time must be less than 10 seconds. Never blend hot oil, fat or meat.
- If your blender gets blocked, first stop and unplug before clearing.
- After use, unplug and dismantle. The dismantlement is the reverse of assembly.
- Always switch off and unplug before cleaning. Please refer to the instruction in the “care and cleaning”.

To use the chopper

- Remove the protective cover from the blade of the chopper.
- Clean the lid, blade unit and bowl of the chopper.
- Fix the blade unit in the chopper bowl.
- Fill the food to the bowl (not more than the maximum indicated level).
- Fit the power handle inside the chopper, turn and lock until you hear a slight click. The marks on the power handle and the chopper should now be aligned with each other. If this is the case, the chopper is locked correctly.
- Check if the power cord is not damaged.
- Make sure your electricity supply is the same as the one shown on the power handle.
- Plug in, hold the power handle steady. Switch the appliance on by pressing the switch button. (the marking of “I” is for the lower speed, “II” for the higher speed.)
- After you have completed blending, Release the switch button, then unplug from outlet.
- Warning: The continuous operating time must be less than 30 seconds.
- If your chopper gets blocked, first stop and unplug before clearing.
- After use, unplug and dismantle the power handle and the lid unit in sequence, take the blade out of the bowl by holding the plastic shaft,

then pour out the food.

- The edges of the blade is very sharp, do not touch them.
- Always switch off and unplug before cleaning. Please refer to the instruction in the “care and cleaning”.

To use the whisk

- Clean the whisk and beaker.
- Insert the whisk into the whisk head until you hear a slight click.
- Fit the power handle inside the whisk, turn and lock until you hear a slight click. The marks on the power handle and the whisk head should now be aligned with each other. If this is the case, the whisk is locked correctly.
- Check if the power cord is not damaged.
- Make sure your electricity supply is the same as the one shown on the power handle.
- Fill the food to the beaker (not more than the maximum indicated level).
- Plug in, hold the power handle steady. Switch the appliance on by pressing the switch button. (the marking of “I” is for the lower speed, “II” for the higher speed.)
- To prevent splashing, use the Low speed to mixing when starting.
- Immerse the whisk completely in the ingredients.
- Blend the ingredients by moving the appliance slowly up and down and in circles.
- After you have completed mixing, Release the switch button, then unplug from outlet.
- Warning: The continuous operating time must be less than 3 minutes. Never blend hot oil, fat or meat.
- If your whisk gets blocked, first stop and unplug before clearing.
- After use, unplug and dismantle
- Always switch off and unplug before cleaning. Please refer to the instruction in the “care and cleaning”.

Purpose

The hand blender

- Blending fluids e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
- Mixing soft ingredients, e.g. pancake batter or mayonnaise
- Pureeing cooked ingredients, e.g. for making baby food

The chopper

- Chopping beef(less than 200g), nuts, breads, vanilla, onions e.g.

The whisk

- Beating egg whites and cream.

Processing guide

The hand blender

Food	Speed	Max. time	Max.quantity
soups, milk vegetables, mayonnaise sauces, strawberry	lower speed	30 seconds	200g
carrot pieces (size 15mm x 15mmx15mm)	higher speed	30 seconds	500g Note: take 200g Carrot pieces per 300g water.

The chopper

Food	Speed	Max. time	Max. Quantity
beef pieces (size 20mm x 20mm x20mm), almonds	high speed	30 seconds	200g

The whisk

Food	Speed	Max. time	Max. Quantity
cream, egg whites	higher speed	3 minutes	200g

Care and cleaning

- Always switch off and unplug before cleaning.
- Take the attachments off.
- Don't touch the sharp blades.

Caution: Take care when cleaning the blades as they are extremely sharp.

Note: Do not clean any part of the blender in the dishwasher

The power handle and power cord

- Wipe with a damp cloth, then dry.
- Never immerse in water or other liquid or use abrasives.

The beaker

- The beaker can be washed in water with cleaning agent.
- Wash and rinse thoroughly with water, then dry.

The blender shaft

- The shaft can be washed in water with cleaning agent.
- Unplug, let it cool down.
- Wash and rinse thoroughly with water, then dry.

The chopper

- The lid unit of the chopper can only be wiped with a damp cloth, then dry.
- Never immerse in water or other liquid or use abrasives.
- The bowl and the blade can be washed in water with cleaning agent.
- Unplug, let it cool down.
- Wash and rinse thoroughly with water, then dry.
- Reattach the protective cover to the blade.

The whisk

- The head of whisk can only be wiped with a damp cloth, then dry.

- Never wash and rinse in water or use abrasives.
- The other part of whisk can be washed in water with cleaning agent.
- Unplug, let it cool down.
- Wash and rinse thoroughly with water, then dry.

Storage

- Store in a cool, dry and ventilating place.

WARNING:

1. Any other servicing should be performed by an authorized service representative.
2. Do let the appliance rest at least 2 minutes between cycles! After operating 5 cycles continuously, the appliance needs to cool down to the room temperature to restart.
3. Never misuse this appliance. Care is needed when handling cutting blades, especially when removing the blender from the beaker, taking the blade from the bowl and during cleaning.
4. Always reattach the protective cover to the blades after cleaning.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

220-240V 50/60Hz 400W

Ref: CEHB01

Model: HB976CF08

Informations à conserver

Continental Edison
120-126 Quai de Bacalan
CS 11584
33000 Bordeaux

IMPORTE PAR :
A.M.C.
123, QUAI JULES GUESDE
94400 VITRY SUR SEINE
France
LOT # : A.M.C. MMYYYY



Continental Edison

www.continentaledison.fr

