

TORRAS User Manual

NECK FAN / 首掛け扇風機

Contents / コンテンツ

EN	
So windy, no sweat	01
Specifications	03
Overview	04
Instructions	05
Using instructions	07
Attentions	08
Battery Warning	09
JP	
風が強くても数秒で汗をかかない	11
商品仕様	13
製品仕様	14
使用説明	15
操作説明	17
注意事項	18
バッテリー製品の注意事項	19

Simple, but Unique

LANHE GROUP CO., LTD.
SHENZHEN TORRAS TECHNOLOGY CO., LTD.
Address: RM1215, BLK C, Zhintao Technology BLDG,
Minzhi Avenue, Minzhi ST, Longhua DIST, Shenzhen,
China
© Shenzhen TORRAS Technology Co., Ltd. All Rights
Reserved.
✉ support@torraslife.com

YTP01133A

So windy, no sweat

6 upgraded functions, brand-new bladeless neck fan



More windy
Four-core
strong power



More portable
Original
third fold design



More long-lasting
Ultra-long battery life



More trendy
Free your hands




More silent
Patented air duct
design



More comfortable
Skin-friendly
silicone material

Three gears of wind, one button control
Enjoy a cooling summer



***** Natural wind**
Especially for
studying and
working




***** Vally wind**
Especially for
commuting and
shopping

Specifications

Product Name	Neck Fan
Model	FG2
Input	5V = 2A
Lithium Battery Capacity	4000mAh/14.8Wh
Limit Voltage Of Lithium Battery	4.2V
Charging Operating Temperature	32°F-104°F
Package List	Neck Fan ×1, Charging Cable ×1, User Manual ×1

The parameters above are derived from the laboratory of TORRAS. The actual parameters would be different because of products and other factors. The image shown here is indicative only.



Overview

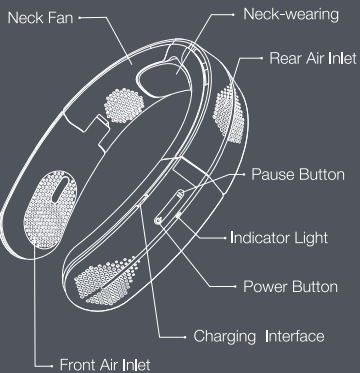

Instructions

• Wearing & Adjustment

Take out the fan and wear it around your neck with the charging interface down.

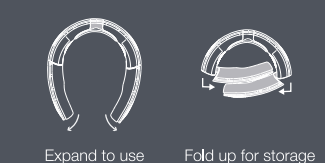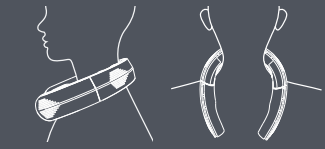


• Charging

The indicator will flash until it turns off when the battery power is low. Please charge the product in time.



• Turn on/ off

Press the power button to turn on/ off the product or adjust the gear. Press the pause button to turn on/off the rear 2 fans.

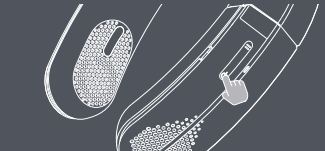

Using instructions

Button instructions

Power button	Press once	●	Gear 1 weak wind
	Press twice	●●	Gear 2 cool wind
	Press 3" times	●●●	Gear 3 strong wind
	Press 4" times	●●●●	Shut down
Pause button	Gear 1/2/3	Press once	Turn off the rear 2 fans
	Press once	Press once	Turn on the rear 2 fans

Notes: You can also long press the power button for 1.5s to shut down.

Indicator instructions

Working	○ White indicator lights on
Shut down	● Lights off
Low battery warning	⊗ Red indicator lights on (lower than 30%); Red indicator flashes until shuts down (lower than 10%)
Charging	⊗ Red indicator flashes (lower than 30%); White indicator flashes (higher than 30%)
Fully charged	○ White indicator lights on

Attentions

- Do not use this product for strollers.
- Do not put your fingers into the fan. Children under 10 years have to be assisted by a guardian.
- If an accident occurs due to improper use, please consult a doctor immediately.
- Do not disassemble or modify this product without authorization.
- It is forbidden to use the fan after being soaked in water.
- Please avoid subjecting the product to shocks such as long-distance vibration or falling from height.
- Do not place the fan in places where it is humid, high temperature and other extreme conditions.
- Do not use it near the heating equipment and other places with hot air or fireworks, (in places such as swimming pool, hot spring, kitchen, etc.) that are prone to generating a lot of dust, fog, and oil smoke.
- When the fan is working, please do not put your fingers or other objects into the protective net, beware of injury.
- Please use a charger that has obtained certification and meets standard requirements for charging.
- When this fan is not in use, please remove the oil stain on the surface of the fan, clean up the dust, and place it in a dry and airy place to avoid being squeezed.

Battery Warning

This product is equipped with a built-in lithium battery, and please pay attention to the following:
1. Please charge the product in time when the battery power is low. To save the battery, please turn on the product every 3 months until the battery power runs out and then fully charge the product, when not in use for a long time, it is recommended to use and store it in a suitable environment.
2. It is forbidden to disassemble, hit, squeeze or throw it into fire. If severe swelling occurs, stop using it. Do not place it in a high temperature environment. If the battery life is seriously shortened, stop using it and handle it for professional maintenance.
3. There is a risk of explosion if the battery is improperly replaced, and it can only be replaced with a battery of the same or equivalent type.
4. The battery (battery pack or assembled battery) shall not be exposed to an overheated environment such as sunlight or fire.
5. Please dispose of products with lithium batteries separately from the household waste, if the product is damaged, it is needed to remove the battery and pack the positive and negative ends separately, put it into the designated recycling location or hand it over to the environmental protection recycling department for disposal, and cannot be discarded at will.
6. Steps for disassembling the battery: ① Remove the four screws on the inner side of the fan folding connection with a screwdriver; ② Remove the cover of the rear fan; ③ Unscrew the 2 screws of the motor seat and remove the motor seat;

④ Unscrew the screws at the folding connection of the front fan on the right side, and then open the top cover; ⑤ Remove the battery wiring base, you can remove the battery; ⑥ The battery on the left side can be removed in the same way. (Special warning: Do not cut off all the cables between the battery and the circuit board at the same time.)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



株式会社サンユース商事

Made in China


10

風が強くても数秒で汗をかかない

6つのアップグレード、新しい羽根なしネックファンが登場



より強い風
4コアの風制御技術で、強風を提供する



より持ちやすい
全面進化3つ折り式でお持ちやすい、片手でも楽々



より大容量なバッテリー
大容量バッテリーを備えて、暑い夏でもストレスなし



よりオシャレ
両手を解放、ファッションを身につけてオシャレな人になる




より静か
特許取得済みのエアダクト設計により、吹き出しがより静かになる




より快適に
首の後ろは柔らかいシリコン素材で、肌にフィットする

3つ階段階、ワンタッチ式調整


夏をお楽しみください。いつでもどこでも涼しさを感ずる



***** 1段階弱風**
さわやかなそよ風
勉強や仕事で集中を促す



***** 2段階爽快風**
爽やかなが数倍になり、蒸し暑いお別れを告げる
運動や買い物がかっと楽に




***** 3段階強風**
強い風、数秒で汗が出ない
運動や旅行がもっと自由に

商品仕様

品名	首掛け扇風機
型番	FG2
入力	5V = 2A
内蔵電池容量	4000mAh/14.8Wh
定格電圧	4.2V
使用温度	0°C-40°C
製品リスト	首掛け扇風機 ×1, 充電ケーブル ×1, 説明書 ×1

上記のデータはTORRASの実験室から得られたものであり、実際のデータは製品またはほかの要因により異なります。ご参考いただければ、幸いですと存じます。


製品仕様

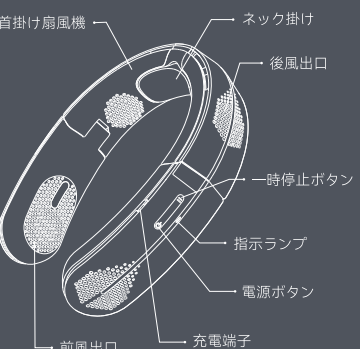

使用説明

• 掛け方と調節

首掛け扇風機の充電端子を下に向けて、首掛け扇風機が首に掛けてください。

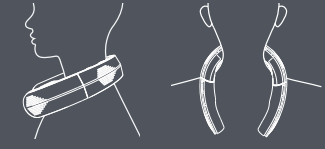


• 充電

バッテリー残量が少なくなると、インジケータライトがシャットダウンするまで点滅します。速やかに充電ケーブルを接続して充電してください。



• 電源のオン/オフ

電源ボタンを短押しすると、オン/オフモードに入ります。段階も調整できます。一時停止ボタンを短く押して、背面の2つのファンのオン/オフを切り替えます。

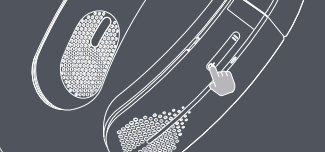

操作説明

ボタン操作説明

電源ボタン	第1回目押す	●	1段階弱風
	第2回目押す	●●	2段階爽快風
	第3回目押す	●●●	3段階強風
	第4回目押す	●●●●	電源オフ
停止ボタン	1/2/3段階風速行中	1回押す	後ろの2つファンがオフになる
	前の2つファン速行中	1回押す	後ろの2つファンがオンになる

注意: どの段階でも、電源ボタンを1.5秒間押し続けると、電源がオフします

指示ランプ説明

作業中	○	白いランプが点灯
電源オフ	●	ランプ消えた (待機)
バッテリー低ボアム	⊗	バッテリー残量が30%以下になると、赤色のライトが点灯します。10%未満の場合には赤色のライトが点滅します。
	⊗	バッテリー残量が30%以下になると、赤色のライトが点滅します。30%以上になると白い色のライトが点灯します。
充電中	⊗	バッテリー残量が30%以下になると、赤色のライトが点滅します。30%以上になると白い色のライトが点灯します。
フル充電	○	白いランプが点灯

注意事項

- 本品はリチウム電池を内蔵されているので、以下の事項に注意してください。
a. 電池容量が少なくなるときに充電してください。
b. 本品は適当な環境に使用及び保管してください。
c. 長期間使用しない場合は、バッテリーの損傷を防ぐために3ヶ月ごとに充電してください。
d. 本品を解体や改造などをしないでください。
e. 本品は電気を供給する場合は、破損を取扱、標準的な要求を満たす充電器を購入またはセットを使用してください。
f. 使用しない場合は、ファンの表面の油汚れ、ほこりをきれいに掃除し、乾燥と換気よいところに保管してください。
- 本品はリチウム電池を内蔵されているので、以下の事項に注意してください。
a. 電池容量が少なくなるときに充電してください。
b. 本品は適当な環境に使用及び保管してください。
c. 長期間使用しない場合は、バッテリーの損傷を防ぐために3ヶ月ごとに充電してください。
d. 本品を解体や改造などをしないでください。
e. 本品は電気を供給する場合は、破損を取扱、標準的な要求を満たす充電器を購入またはセットを使用してください。
f. 使用しない場合は、ファンの表面の油汚れ、ほこりをきれいに掃除し、乾燥と換気よいところに保管してください。

バッテリー製品の注意事項

- 本品はリチウム電池を内蔵されているので、以下の事項に注意してください。
a. 電池容量が少なくなるときに充電してください。
b. 本品は適当な環境に使用及び保管してください。
c. 長期間使用しない場合は、バッテリーの損傷を防ぐために3ヶ月ごとに充電してください。
d. 本品を解体や改造などをしないでください。
e. 本品は電気を供給する場合は、破損を取扱、標準的な要求を満たす充電器を購入またはセットを使用してください。
f. 使用しない場合は、ファンの表面の油汚れ、ほこりをきれいに掃除し、乾燥と換気よいところに保管してください。
- 本品はリチウム電池を内蔵されているので、以下の事項に注意してください。
a. 電池容量が少なくなるときに充電してください。
b. 本品は適当な環境に使用及び保管してください。
c. 長期間使用しない場合は、バッテリーの損傷を防ぐために3ヶ月ごとに充電してください。
d. 本品を解体や改造などをしないでください。
e. 本品は電気を供給する場合は、破損を取扱、標準的な要求を満たす充電器を購入またはセットを使用してください。
f. 使用しない場合は、ファンの表面の油汚れ、ほこりをきれいに掃除し、乾燥と換気よいところに保管してください。

- リチウム電池を含む製品は、家庭ゴミと分けて処分してください。製品を廃棄する場合は、バッテリーを取り外し、正解や負極の端子を絶縁処理し、指定回収場所に置くか、環境保護リサイクル部門に引き渡してください。勝手に捨てないでください。
2. バッテリーを分解する手順: ①ドライバーを使用して、ファンの両側の折り目の内側にあるネジを4本外してください。②ファンの外側カバーを取り外してください。③モーターシートのネジを2本外して、モーターシートを取り外してください。④右側のフロントファンの折りたたみ接続部のネジを緩め、上部カバーを取ります。⑤バッテリー端子台を抜いてバッテリーを取り外します。⑥左のバッテリーも同様に取り外すことができます。(特記事項: バッテリーと回路基板間の接続線をすべて同時に切断しないでください)

20

11

12

13

14

15

16

17

18

19