Mandis SB MEDIA PLAYER 1G Replacement Remote Control Instructions

Mandis SB MEDIA PLAYER 1G Replacement Remote Control

Contents

1 FUNCTION BUTTON
2 CUSTOMERS SUPPORT
3 Documents / Resources
3.1 References
4 Related Posts

FUNCTION BUTTON

Original	Replacement

Power	Power
EQ	Dual
Mute	Mute
Album Up	Vol +
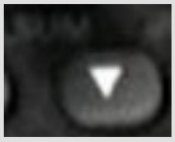 Album Down	Vol -
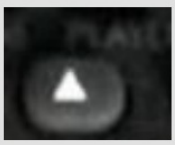 Playlist Up	Ch +
Playlist Down	Ch -
1	1
2	2

	3
	4
	5
	3
	4
	5
	6
	7
	8
	6
	7
	8
	9
	0
	9
	0

	Star		Pre Ch
	Guía		Guide
	Buscar		Smart
	Media		Media
	Grab		Options
	Info		Info
	Menu		Menu
	Salir		Exit
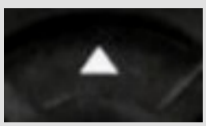	Up		Up

Right	Right
Down	Down
 Left	Left
OK	Ok
Bass	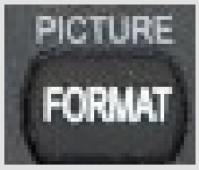 Format
Treb	3D
Red / Rec	Red
Green	Green

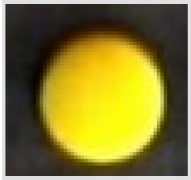 Yellow 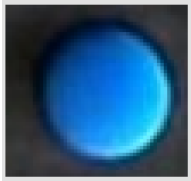 Blue Red / Rec	Yellow Blue Rec
<< 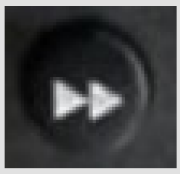 >> Play / Pause	<< >> Play

	Play / Pause
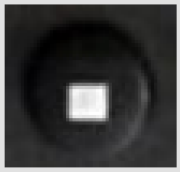	Stop
	>I

	Pause
	Stop
	>>I

	I<
	I>
	Ir A

	I<<
	Shift + Pause
	Back

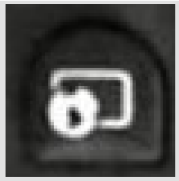 Widgets TV	Text
Top TV	AV

CUSTOMERS SUPPORT

https://all-remote-controls.co.uk/en/Oki/1058698-24702-replacement-remote-control-for-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html

Mandis shop

Documents / Resources

	Mandis SB MEDIA PLAYER 1G Replacement Remote Control [pdf] Instructions SB MEDIA PLAYER 1G Replacement Remote Control, SB MEDIA PLAYER 1G, Replacement Remote Control, Remote Control

References

- **Replacement remote control for OKI SB MEDIA PLAYER 1G (SOUNDBAR 1GB)**
- **User Manual**

Manuals+, Privacy Policy