Manuals+ — User Manuals Simplified.

naxa NAB-4001 Wireless Audio Adapter with Bluetooth for AUX Input Connectors Instruction Manual

Contents

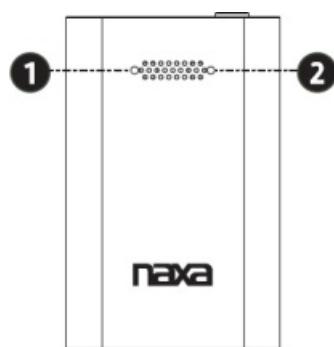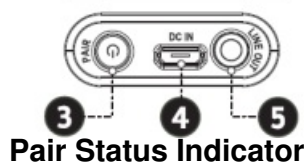**NAB-4001 Wireless Audio Adapter with Bluetooth for AUX Input Connectors**

Instruction Manual
NAB-4001
Wireless Audio Adapter with Bluetooth® for AUX Input Connectors

At a Glance

1. Pair status Indicator
2. Power Indicator
3. Power/Pair button
4. USB charge port
5. Line out jack

Press and hold the Power/Pair button to turn the unit on or off.

Pair Status Indicator

Status	Indicator
Searching	Slowly flashing light
Pair mode	Quick flashing light
Paired	Steady light

Power Indicator

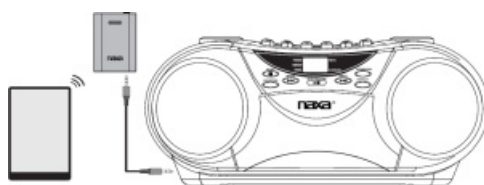| Status	Indicator
Power off	Light is off
Power on	Steady green light
Low power	Flashing green light
Charging	Slowly flashing red light

Charging

Use the included micro USB cable to connect the USB charge port [4] to the USB port of a computer (or other USB charger).
The initial charge will take approximately 2.5 hours. Charge the unit fully before use.

Connecting

Use the included 3.5mm line cable to connect the Line out jack [5] to the line input jack of a speaker system or other audio device. Then, press and hold the Power/Pair button [3] to turn the unit on.
Note: If the unit does not turn on, the battery level may be too low. Connect the USB cable and charge the unit for at least 3 hours before trying again.

Pairing

Before using a wireless player with Bluetooth(r), you will need to establish a connection between it and your Naxa device. This process is called "pairing" and you will only have to do it once. Once two devices are paired, they will automatically connect when they detect each other.

Wireless players with Bluetooth may include laptops, tablets, smartphones, and more. Make sure that your player has its Bluetooth radio enabled and that it is set to be discoverable.

1) Turn the unit on (press and hold the Power/Pair button [3]).
2) When the NAB-4001 turns on, the Pair Status indicator [1] will flash slowly (searching) and then flash quickly (pairing).

· If the indicator does not flash quickly, press the Power/Pair button once to place the unit in Pair mode.
3) While the indicator is flashing quickly, use the native controls of your Bluetooth device to select the "NAB-4001".
· If your device requires a password, enter "0000".
· Refer to the user's manual of your device for specific instructions for pairing and connecting Bluetooth devices.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.
NAXA Technical Support 2320 East 49th St. Vernon, CA 90058

Naxa Support

Naxa Electronics
2320 E 49th St Vernon, CA 90058
www.naxa.com

Documents / Resources

	naxa NAB-4001 Wireless Audio Adapter with Bluetooth for AUX Input Connectors [pdf] Instruction Manual NAB-4001, Wireless Audio Adapter with Bluetooth for AUX Input Connectors

References

- **Naxa Electronics – Naxa Electronics**
- **Naxa Support – Naxa Electronics**