Manuals+ — User Manuals Simplified.

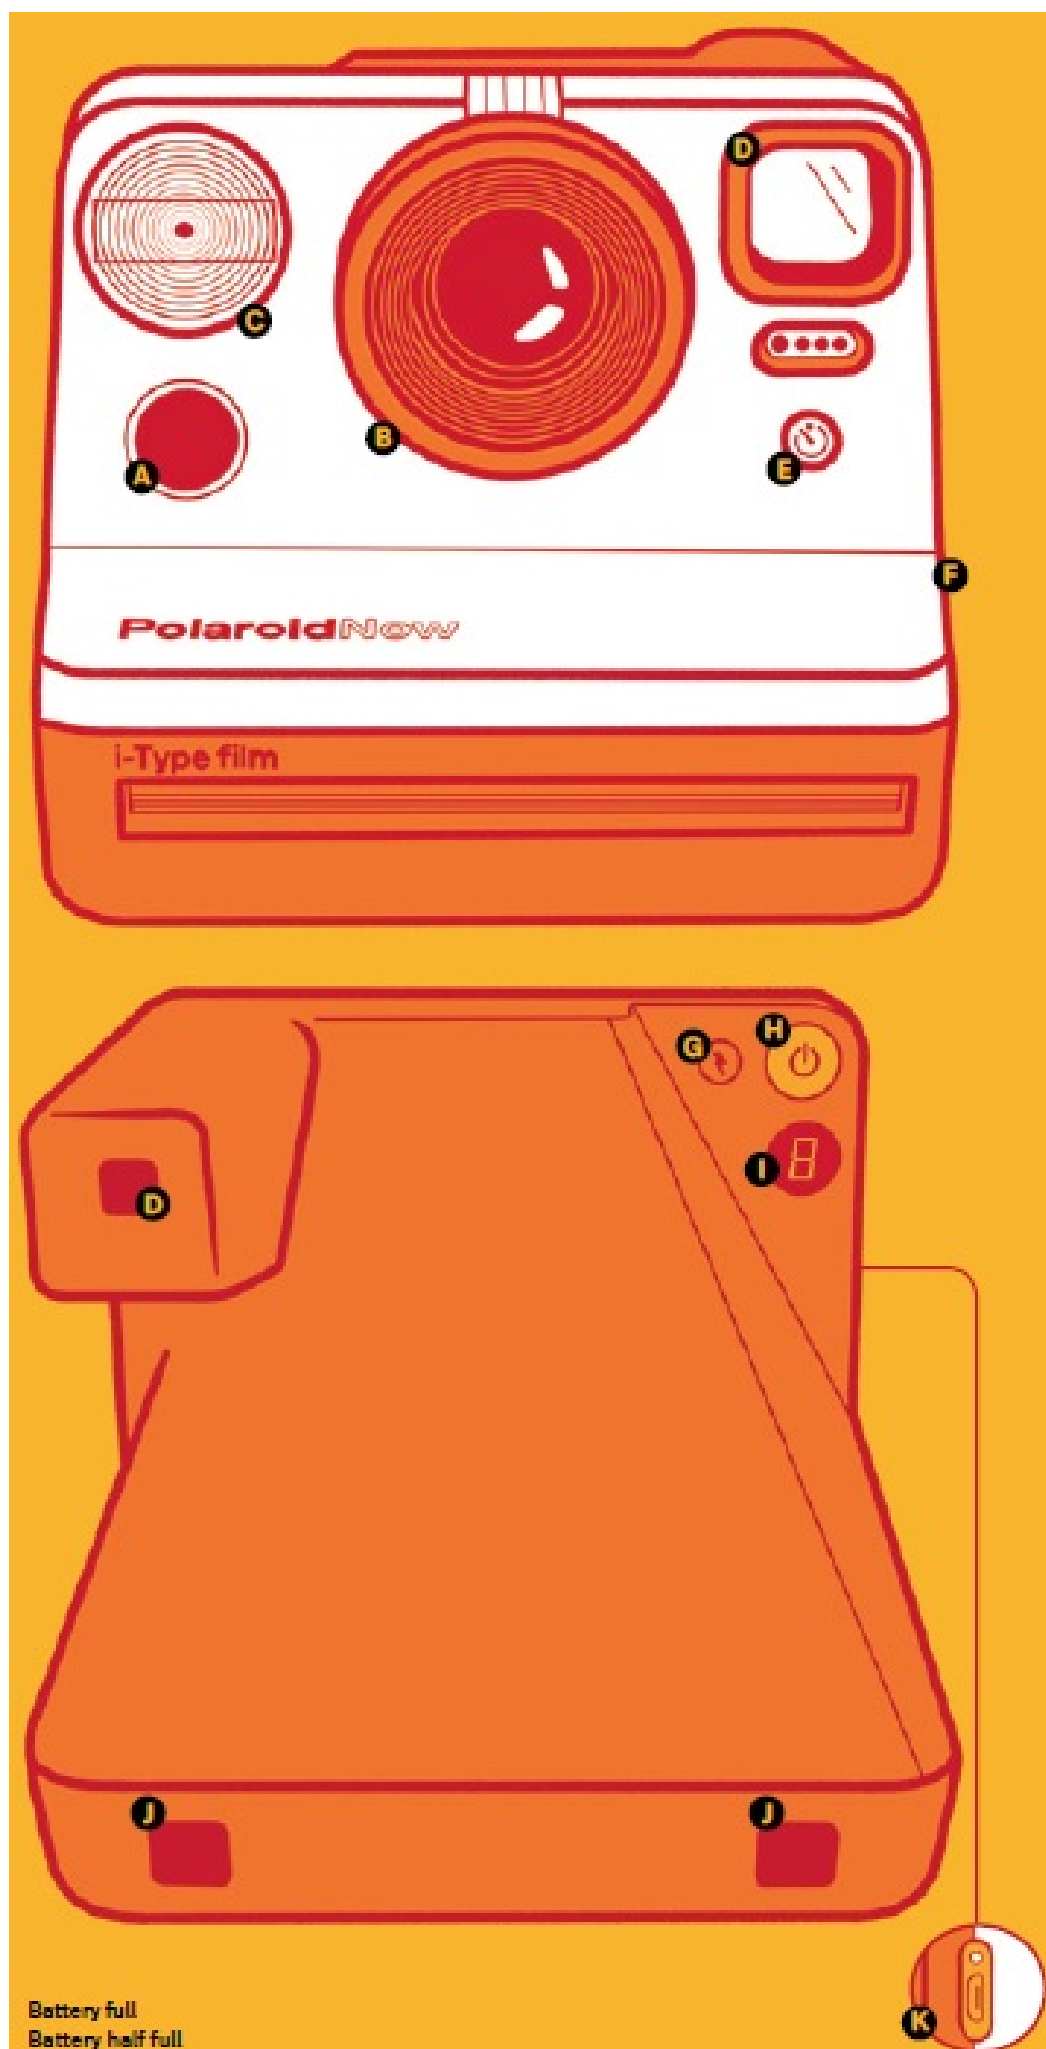# Polaroid I-Type 6151 Instant Camera User Guide

Contents
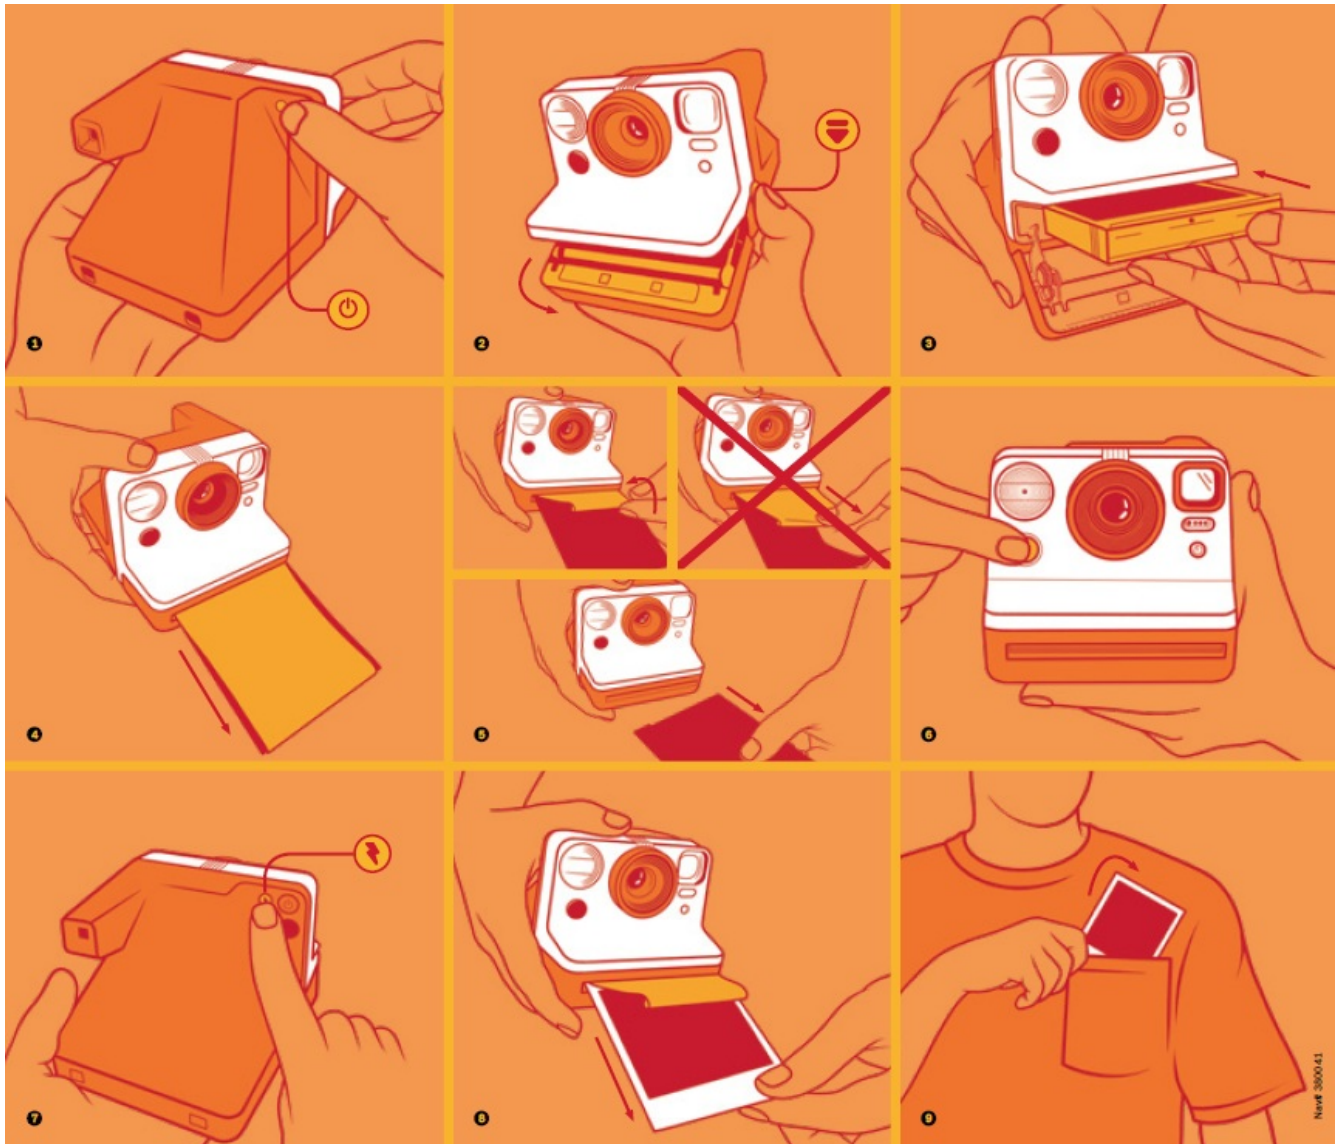
Polaroid I-Type 6151 Instant Camera

Overview

- A Shutter Button
- B Lens
- C Flash
- D Viewfinder
- E Self-timer & Double Exposure
- F Film Door Button
- G Flash ON|OFF Button*
- H ON|OFF Button
- I Film Counter LED
- J Neck Strap Loop
- K Battery Level Indicator

Polaroid Now

i-Type film

Battery full
Battery half full

How To Use

1. Turn on the Polaroid Now camera by pressing the ON|OFF button.
2. Open the film door.
3. Insert the film pack darkslide up and with the tab facing toward you.
4. Close the film door. The darkslide covered by the film shield will eject.
5. Remove the darkslide and allow the film shield to roll back in.
6. Aim at your subject and press the shutter button. The flash will trigger automatically.
7. To shoot without a flash, press the flash button before each shot. 8 The photo covered by the film shield will eject.
8. Don't shake the photo! Place your photo in a dark place or face down on a flat surface.

This camera works with

- I-TYPE FILM
- 600 FILM

Have a problem or a question you need to be answered?

USA/Canada

- **usa@polaroid.com**
- +1-212-219-3254

EU/Rest of World

- **service@polaroid.com**
- 00800 5770 1500

Contact our Customer Support Team

or visit polaroid.com/help Explore more features and download the full manual at **polaroid.com/now-manual**.

Made in China for and distributed by Polaroid International B.V., 1013 AP, Amsterdam, The Netherlands. The POLAROID word and logos (including the Polaroid Classic Border Logo) and Polaroid Now are protected trademarks of Polaroid. © 2022 Polaroid. All Rights Reserved.

Documents / Resources

	Polaroid I-Type 6151 Instant Camera [pdf] User Guide I-Type 6151 Instant Camera, I-Type 6151, Instant Camera