Manuals+ — User Manuals Simplified.

rocstor Y10C137-B1 USB 3.0 Type-A to Gigabit Ethernet Network Adapter User Manual

Contents

rocstor®

rocstor Y10C137-B1 USB 3.0 Type-A to Gigabit Ethernet Network Adapter

Congratulations
Thank you for purchasing this premium Rocstor Product. For optimum performance and safety, please read these

instructions carefully before connecting, operating or using this product. Please keep this manual for future reference.

Introduction

Rocstor Gigabit to USB 3.0 Ethernet Adapter allows your computer to instantly connect to a 10/100/1000 Mbps network through a USB port – no need to open up your computer case to add an internal Ethernet card. The adapter's compliance with USB 3.0 (5 Gbps) ensures true 10/100/1000 Mbps network speed without any compromise. Furthermore, the adapter is compact and is USB bus-powered; requires no external power adapter.

- Supports 10/100/1000BASE-T Networks
- USB 3.0 Type-A Interface
- Integrated 7.1″ USB Cable
- LED Status Indicators
- USB Bus-Powered
- Windows, Mac, Chrome & Linux Compatible

Package Contents

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the Packaging:

- Main unit x1
- User Manual x1

Package Contents

- USB enabled computer system with available USB 3.0 port
- Windows® 8 (32/64bit), 7 (32/64), Vista(32/64), XP(32/64) Windows® Server 2008 R2, 2003(32/64)
- Mac OS 10.6 – 10.8

Features

Upstream

USB(3.0) Type-A Male
(Connect to host computer)

Downstream:

RJ45 Female
Supports 10/100/1000Mbps bandwidth for RJ45 port

Features:

- Cabling Type: Ethernet 1000Base-T, Ethernet 100Base-TX, Ethernet 10Base-T

- Compliant Standards: IEEE 802.3 , IEEE 802.3u , USB 1.1 , USB 2.0 , USB 3.0

- Connectivity Technology: Wired Data Link Protocol: Ethernet, Fast Ethernet, Gigabit Ethernet

- Data Transfer Rate: 1 Gbps

- Features: Full duplex mode , Half duplex mode , USB powered

- Compatibility: Mac , PC

Specification

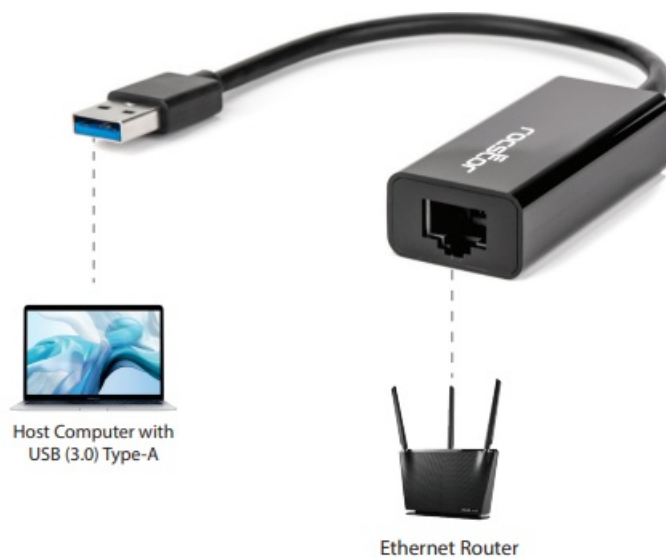| Input / Output Connector	
Input	USB(3.0) Type-A Male x1
Output	RJ45 X1
Warranty	
Limited Warranty	2 Year
Environmental	
Operating Temperature	0°C to + 45°C - (32°F to + 113°F)
Operating Humidity	10% to 85 % RH (no condensation)
Storage Temperature	-10°C to + 70°C - (14°F to + 158°F)
Storage Humidity	5% to 90 % RH (no condensation)
Mechanical	
Size (D-H-W)	(0.6"x2.6"x0.9") - 15.2x 66 x22.8 mm
Weight (Net)	30g - (1.06oz)
Accessories	
User Manual	English Version

How to Use

Windows
Connect the USB 3.0 Network Adapter to an available USB port. Insert the provided CD into your DVD/CD-ROM drive. Click on the appropriate version of your windows folder. Run the Setup.exe application from the Autoplay menu. If Autoplay is disabled on your system, browse to your CD/DVD drive and run the application. Follow the on-screen instructions to complete the installation.

Mac OS
Connect the USB 3.0 Network Adapter to an available USB port. Insert the provided CD into you DVD/Cd-Rom drive. Browse to the "USB3.0 Gigabit Ethernet Driver" folder on the CD. Open the "Mac Driver\Realtek Mac Driver" folder and run the "RTUNICv1.0.16.pkg" application to star t the install. Follow the on-screen instructions to complete the installation.

NOTE: You may be prompted to restart once the install completes.

Connection Diagram

Host Computer with
USB (3.0) Type-A

Ethernet Router

Support

Technical support is available to all the registered users of Rocstor products.

Technical Support / RMA
Hours: 9:00 am – 5:00 pm PST Monday to Friday (except holidays)

- Tell: +1 (818) 727-7000 (National and international)
- Fax: +1 (818) 875-0002
- Email: **support@Rocstor.com**

Warranty Information

Warranty Information
This product is backed by a (2)two-year warranty. Rocstor warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. Rocstor does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability
In no event shall the liability of Rocstorage, Inc. and Rocstor (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Safety Information

WARNING: Please follow these safety instructions. Failure to do so may result damages or injury.
It is normal that the Rocstor Multi-port Hub adapter becomes very warm during use.
Please note that:
continuous contact with warm surfaces for extended time may cause discomfort or injury. In order to reduce the

possibility of overheating or heat-related injuries, always allow needed ventilation around the Rocstor Multi-port Hub adapter and use care when handling it. Avoid instances where your skin is in extended contact with the hub when plugged into the host computer. It is not recommended to sleep with the adapter when plugged into a host computer. Avoid placing the hub adapter under a pillow, blanket, or your body when connected to a host computer. If you have a medical condition that affects your ability to detect heat against the body, extra care should be used. Never use the adapter in locations with water, such as a sink, bathtub, or shower stall. Never connect or disconnect the adapter with wet hands.

Documents / Resources

	[rocstor Y10C137-B1 USB 3.0 Type-A to Gigabit Ethernet Network Adapter](#) [pdf] User Manual Y10C137-B1 USB 3.0 Type-A to Gigabit Ethernet Network Adapter, Y10C137-B1, USB 3.0 Type-A to Gigabit Ethernet Network Adapter, Gigabit Ethernet Network Adapter, Ethernet Network Adapter, Network Adapter, Adapter