Manuals+ — User Manuals Simplified.

Solight PP126HDMI Pop-up Sockets with a Cable Instructions
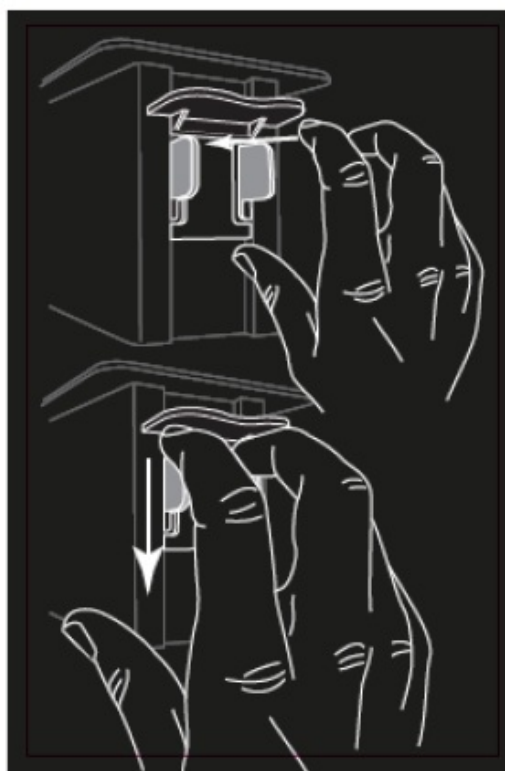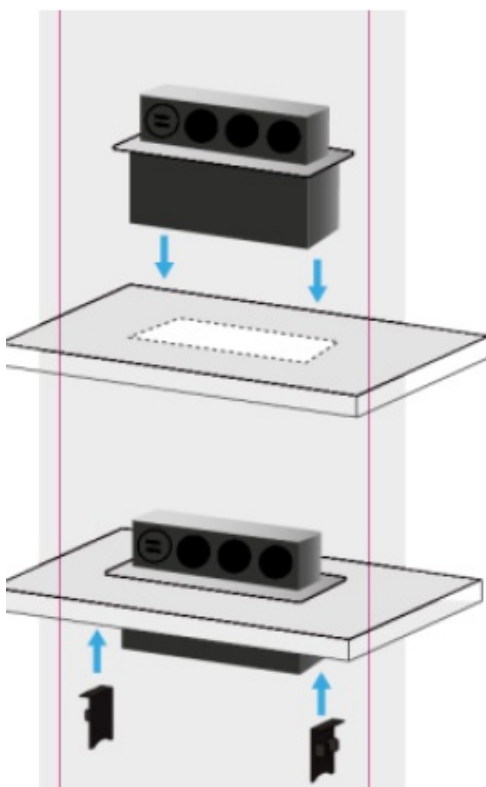
Contents

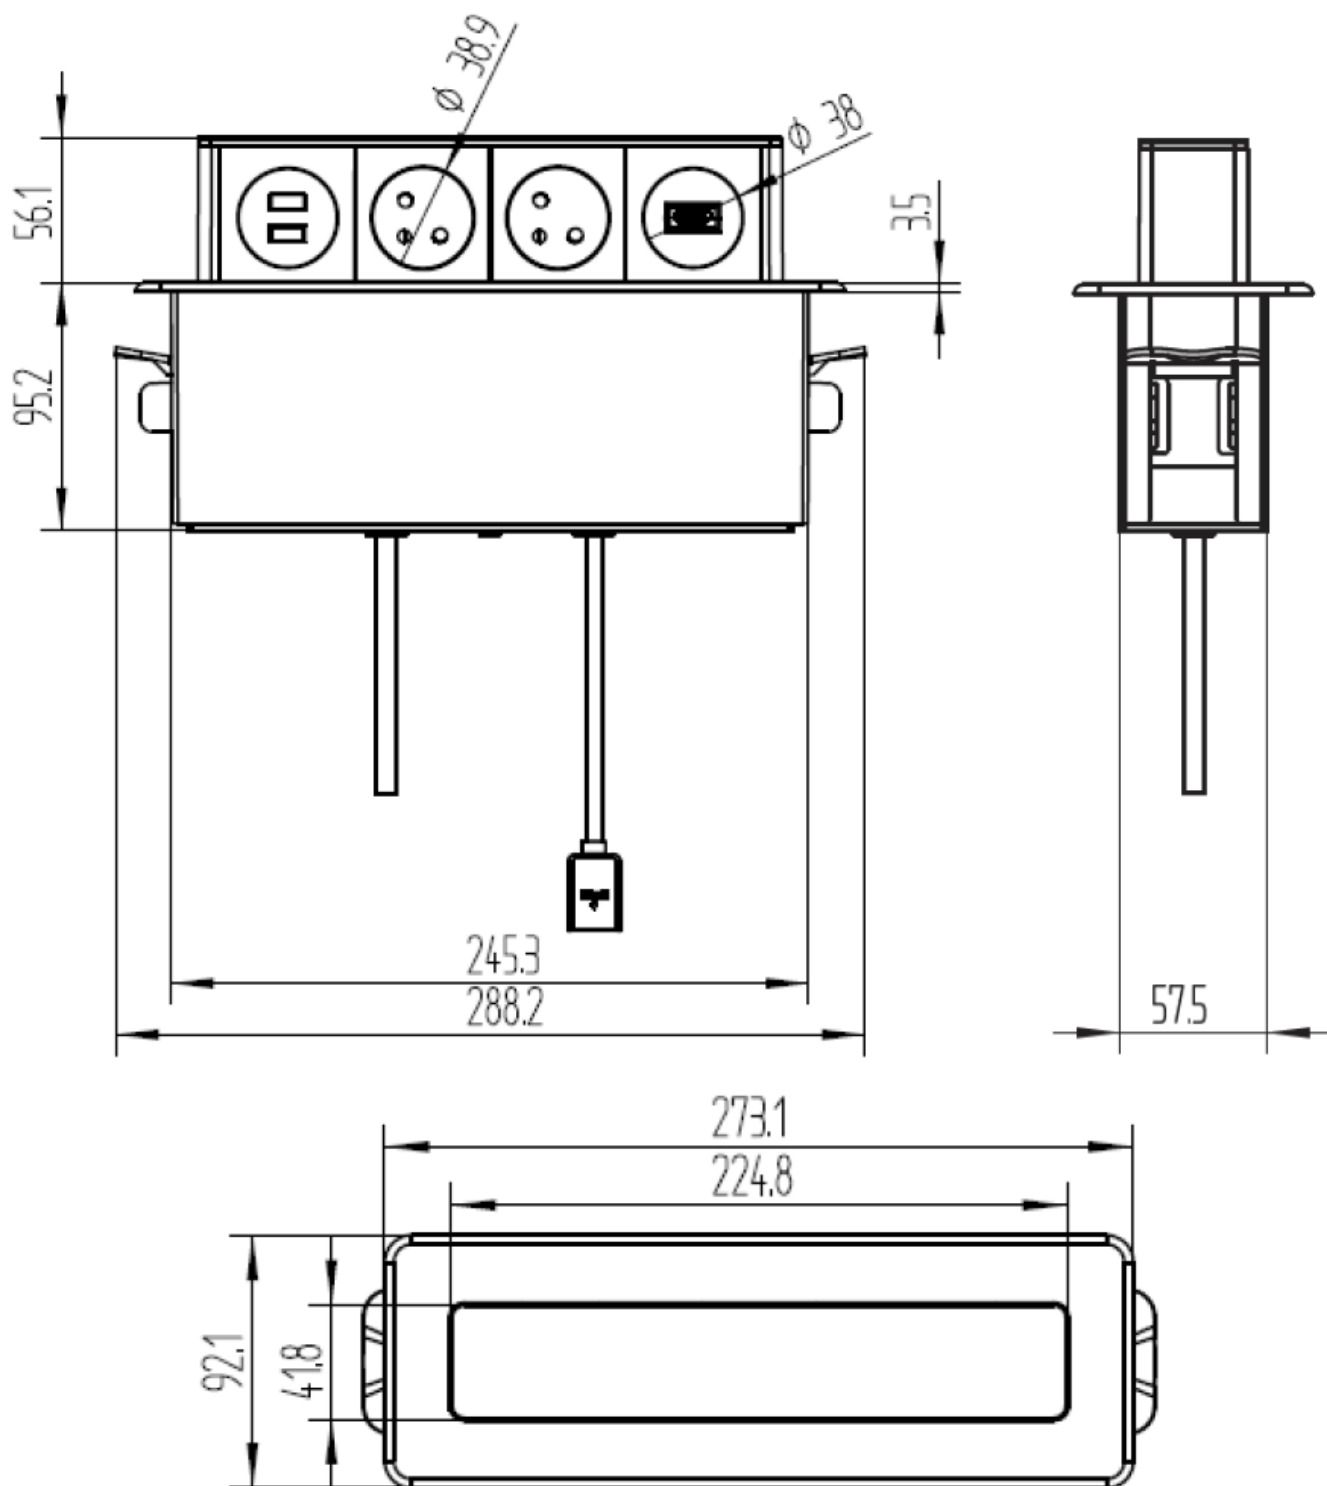**Solight PP126HDMI Pop-up Sockets with a Cable**

Installation

1. Determine the position on the table where you want to insert the module. Installation is not recommended too close to the edges to ensure board strength and load.
2. Mark and cut out a hole of max. 25,0 x 6,0 cm (min. 24,7 x 5,8 cm). For a successful installation, there must be at least 30 cm of space under the table or board.
3. Insert the socket block into the slot and push it until it snaps into place. Then insert the plastic locks from the bottom of the table and push them to the maximum possible height so that the socket block does not move. Silicone or other mounting sealants can be used under the top cover to ensure a firm fixation of the position and resistance to liquid leakage under the board.
4. Keep the power cord under the table vertically (not obliquely) to ensure smooth movement of the withdrawable block.
5. Press the socket block to eject or retract.
6. Finally, plug the device into an electrical or USB, or HDMI socket.

Solight Holding s.r.o. company is in no way liable for damage or harm caused by an improper installation.

Vstup/Input: 250V~, max. 16A; max. 3680W
Výstup/Output: 230V~, max. 16A; max. 3680W
USB výstup: 5V DC / max. 2400mA, max. 12W
HDMI I/O /Vstup-výstup:
HDMI 2.0 standard, 18Gbps, 4K/60Hz

USB charging efficiency	
Average active efficiency	80,0%
Efficiency at low load (10%)	77,2%
No-load power consumption	0,07W

Documents / Resources

	Solight PP126HDMI Pop-up Sockets with a Cable [pdf] Instructions PP126HDMI, Pop-up Sockets with a Cable
	Solight PP126HDMI Pop-up Sockets with a Cable [pdf] Instructions PP126HDMI, Pop-up Sockets with a Cable