Manuals+ — User Manuals Simplified.

TASK Power LP42HR Lighted Power Strip Instruction Manual

**LIGHTED POWER STRIP
installation instructions
Lighted Power Strip DV Series
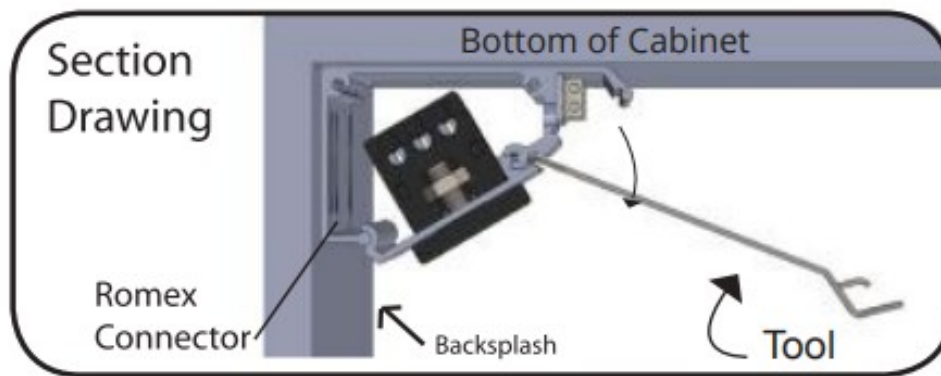Installation Instructions for LPS WITH Built-In Power Supply**

Contents

General Guidelines

- Power source MUST be a 20 amp branch circuit protected by a GFCI at the panel or GFCI prior to the connection at LPS.
- All wiring must meet NEC® and local codes.
- Light valance recommended.
- Firmly insert plug straight into receptacle, applying equal pressure to both blades at the same time. Gently rock plug, if needed.

Turn power off at panel. Carefully pry open each piece with tool (provided). Insert Romex connector into knockout hole inside of back frame. Pull wires into LPS.

Wiring for Combined Light and Receptacle Circuit – Non Dimmable
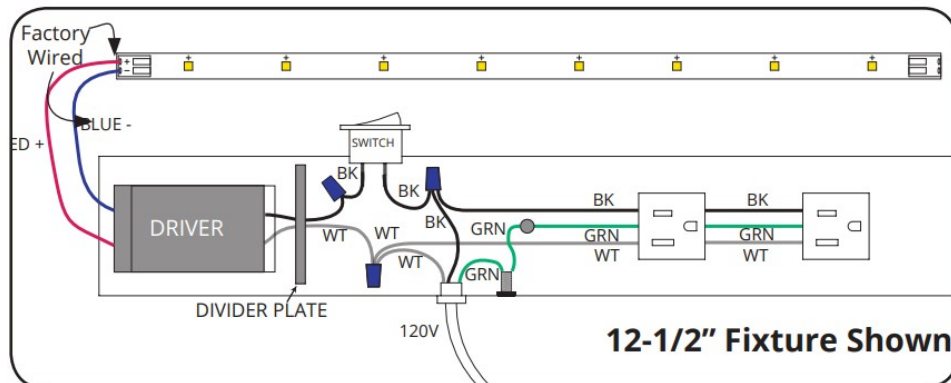
Step 1 Secure LPS to wall by screwing into wall studs or use anchors provided. Connect BLACK Romex wire to BLACK wire from receptacles and switch.
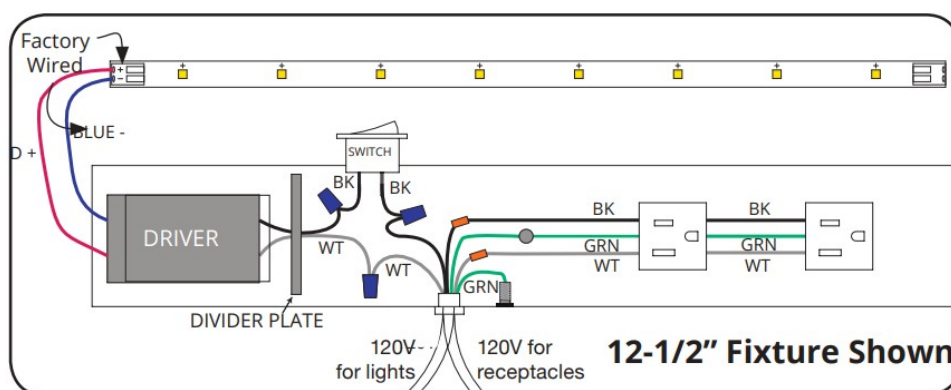
Connect WHITE Romex wire to WHITE wire from receptacles and driver. Ground all GREEN wires to PEM studs inside of back frame.

Step 2 When connecting 2 or more LPS fixtures, run Romex from fixture to fixture. Ground each section to the next.

Step 3 To terminate last LPS, use wire nuts on ends of wires.

Step 4 Snap cover in place and turn power on.

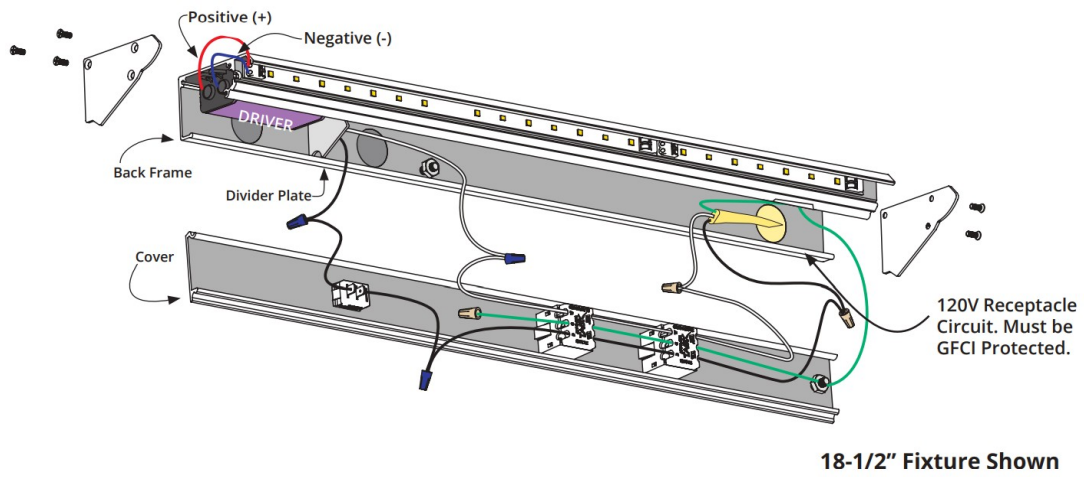## Wiring for Separate Light and Receptacle Circuits

Step 1 Secure LPS to wall by screwing into wall studs or use anchors provided. If running two circuits, one for receptacles, one for lighting, connect fixture wires to appropriate Romex wires. BLACK to BLACK. WHITE to WHITE. Ground all GREEN wires to PEM studs inside of back frame.

Step 2 When connecting 2 or more LPS fixtures, run Romex from fixture to fixture. Ground each section to the next.
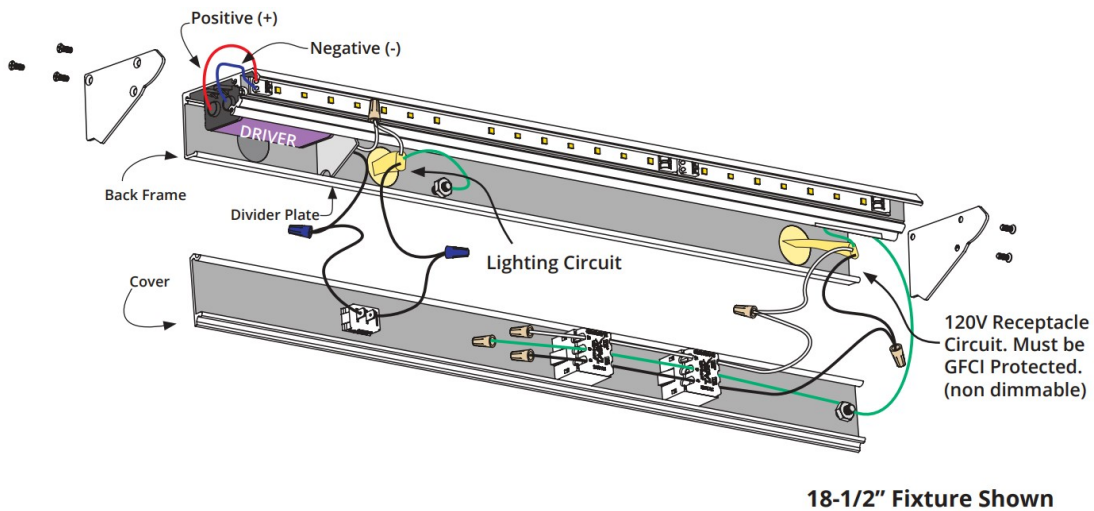
Step 3 To terminate last LPS, use wire nuts on ends of wires.

Step 4 Snap cover in place and turn power on.

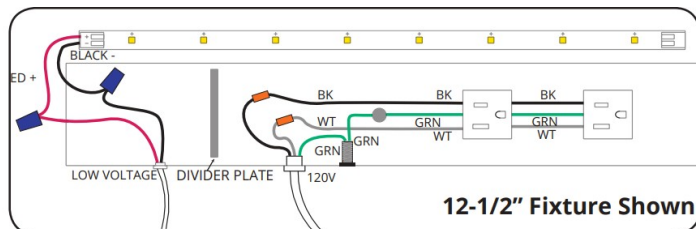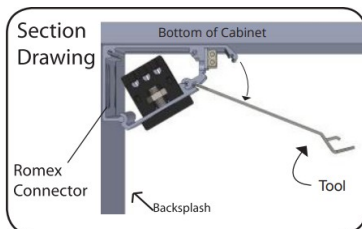## Wiring Diagram for Combined Light & Receptacle Circuit – Non Dimmable

Positive (+)
Negative (-)
DRIVER
Back Frame
Divider Plate
Cover
120V Receptacle Circuit. Must be GFCI Protected.

18-1/2" Fixture Shown

Wiring Diagram for Separate Light & Receptacle Circuits

Positive (+)
Negative (-)
DRIVER
Back Frame
Divider Plate
Lighting Circuit
Cover
120V Receptacle Circuit. Must be GFCI Protected. (non dimmable)

18-1/2" Fixture Shown

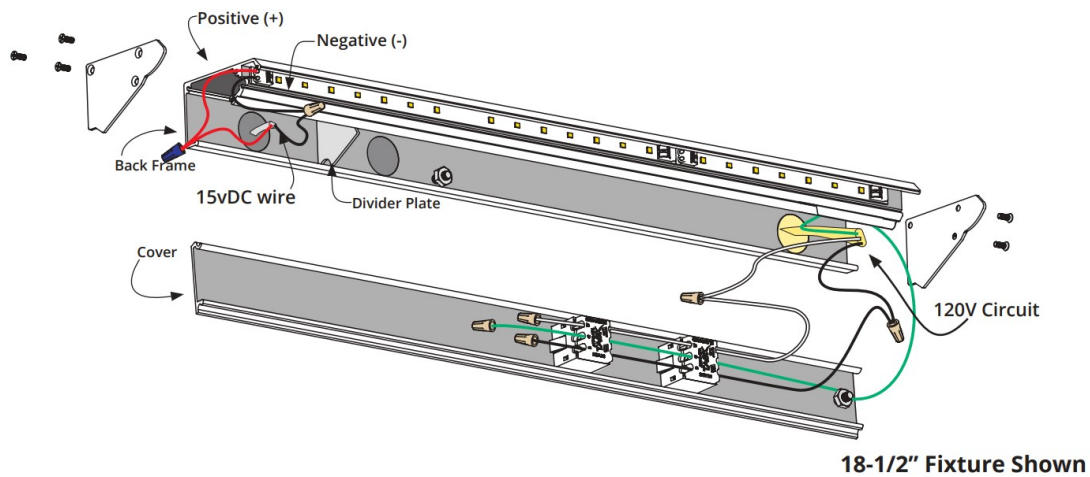## General Guidelines

- Power source MUST be a 20 amp branch circuit protected by a GFCI at the panel or GFCI prior to the connection at LPS.
- All wiring must meet NEC® and local codes.
- Light valance recommended.
- Firmly insert plug straight into receptacle, applying equal pressure to both blades at the same time. Gently rock plug, if needed.

Section Drawing
Bottom of Cabinet
Romex Connector
Tool
Backsplash

BLACK -
ED +
LOW VOLTAGE
DIVIDER PLATE
BK
WT
GRN
GRN
GRN
120V
BK
GRN
WT
BK
GRN
WT

12-1/2" Fixture Shown

Turn power off at panel. Carefully pry open each piece with tool (provided). Insert Romex connector into knockout hole inside of back frame. Pull wires into LPS.

18-1/2" Fixture Shown

Remote Power Supply- 120V Entry

Step 1 Secure LPS to wall by screwing into wall studs or use anchors provided. Connect BLACK to BLACK, WHITE to WHITE. Ground all GREEN wires to PEM studs inside of back frame.

Step 2 When connecting two LPS, run Romex from fixture to fixture. Ground each section to the next.

Step 3 To terminate last LPS, use wire nuts on ends of wires.

Remote Power Supply-Low Voltage Entry

Step 4 Using appropriate knockout hole, pull low voltage wire from remote power supply into the low voltage space, connect BLACK wire (negative) to BLACK wire from lights and RED wire (positive) to RED wire.

Step 5 Snap cover in place and turn power on.

Customer Service: 800-445-6404
Design Services & Tech Support: 866-848-9094
www.TaskLighting.com
DesignAndSupport@TaskLighting.com
January 2019

Documents / Resources

	TASK Power LP42HR Lighted Power Strip [pdf] Instruction Manual LP42HR Lighted Power Strip, LP42HR, Lighted Power Strip, Power Strip, Strip

References

- 🌐 **Task Lighting | Task Lighting Under Cabinet | Bathroom Lighting**

- **User Manual**