Manuals+ — User Manuals Simplified.

TECKNET

TECHNET TK-HS012 Wireless Headset

TECHNET TK-HS012 Wireless Headset User Manual

Contents

TECKNET

TECHNET TK-HS012 Wireless Headset

Product Specifications

- Compliance: Part 15 of FCC Rules
- RF Exposure: Meets general RF exposure requirements
- Usage: Portable exposure condition without restriction

Thank you for purchasing TECKNET wireless headset.
Please read this User Manual thoroughly before use of the product and retain it for future reference. If you have any problem using this product, please contact us by email at **support@ylinksworld.com**.
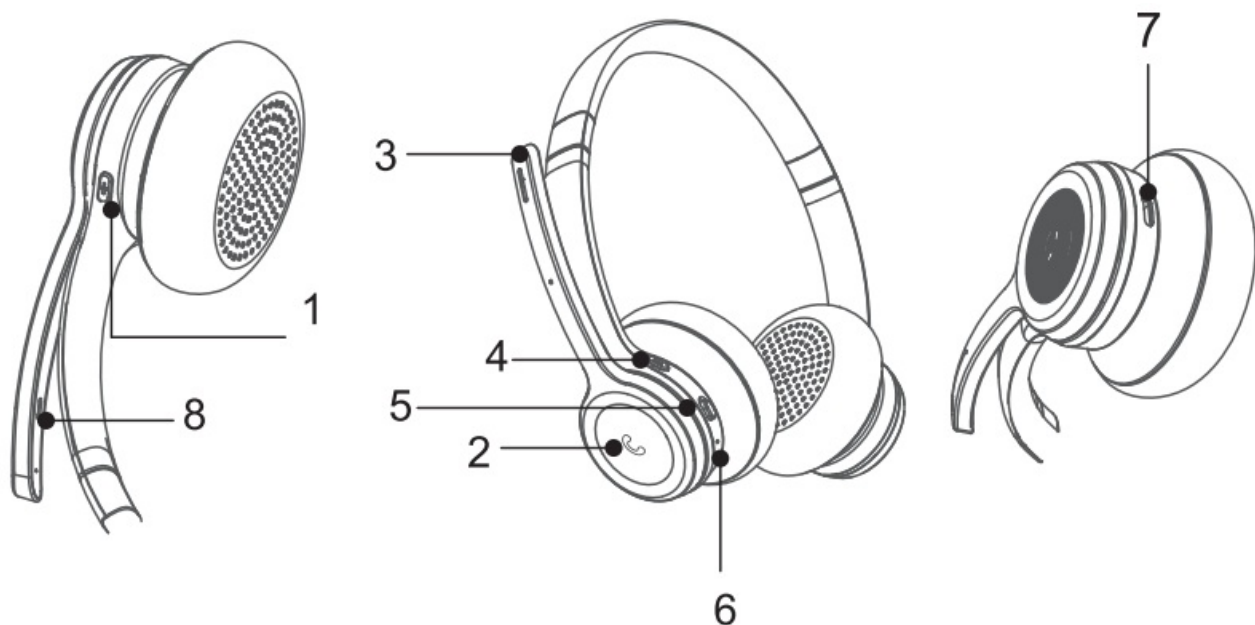
Package Contents

x 1   x 1   x 1

Product Overview

1. Volume + Button
2. MFB
3. Microphone
4. Volume – Button
5. 0n/Off Switch
6. LED Indicator Light
7. USB-C Charging Port
8. Mute Button
    "MFB: MUtl!Unatlon Button

Charging the Headset

1. When the LED indicator flashes RED, please charge the headset.
2. Connect the headset to a booted PC or a charger with the supplied charging cable. The LED indicator lights in steady RED.
3. It takes about 2 hours to fully charge the headset. The LED indicator lights in steady BLUE when the headset is fully charged.
    Note:
    Please recharge the headset at least once every 2 months if not in use.

Pairing Procedure

1. Slide the On/Off switch to the "On" position to power on the headset. The alternating flash of red and blue lights signals that the headset is in pairing mode.
2. Turn on Bluetooth on your phone and search for new devices. Select "TK-HS012" when it appears, then click to pair. Once successfully connected, the LED indicator will flash blue slowly, and your phone will display "Connected to TK-HS012". A voice prompt saying "Connected" will be audible.
    Note:
    The headset can also be connected to a Bluetooth-enabled PC by following the above steps.

Pairing with Two Devices

1. Power on the headset to enter pairing mode. Activate Bluetooth on your first device, search for "TK-HS012", and click to connect.
2. Once successfully connected, turn off Bluetooth on the first device. The headset will re-enter pairing mode. Now, activate Bluetooth on your second device, search for "TK-HS012", and click to connect.
3. Reactivate Bluetooth on the first device and click on "TK-HS012" to reconnect. Now the headset is connected with two devices.

   Note:

   Only one device can stream audio at a time. If you wish to play music from the second device, ensure that playback on the first device is stopped. The same applies when making calls.

Operation Instructions

Button	Function	Operation Instructions
On/Off Switch	Power on	Toggle the switch to the ON position. The headset automatically enters pairing mode when turned on and there is no previous connection history.
	Power off	Toggle the switch to the OFF position.
MFB	Answer a call	Short press the MFB to answer an incoming call.
	Hang up a call	Short press the MFB to hang up a call.
	Reject a call	Press and hold the MFB for 1-2 seconds to reject an incoming call.

Button	Function	Operation Instructions
MFB	Redial the last call	Double press the MFB to redial the most recent call on your cell phone.
	Audio switching	During a call, press and hold the MFB for 1-2 seconds to switch between the headset and the phone speaker.
	Call Waiting	To answer a new call and hang up the current call, short press the MFB.
		To answer a new call and keep the current call, double press the MFB.
		To keep the current call and reject the new call, press and hold the MFB for 1-2 seconds.
		To alternate between the current call and the kept call, double press the MFB.
	Voice assistant	Press and hold the MFB for 3 seconds to activate the voice assistant on your phone. (Only in the non-calling state)
	Play/Pause	Press the MFB once to play or pause music.
	EQ mode	While playing music, press the MFB three times to cycle through three EQ effects: Pop Mode, Vocal Mode, and Bass Mode.
Volume +	Volume up	Press the Volume + button. (When the volume reaches the top level, you will hear an alert.)
	Next track	Press and hold Volume + for 1-2 seconds.

Button	Function	Operation Instructions
Volume -	Volume down	Press the Volume - button.
	Previous track	Press and hold Volume - for 1-2 seconds.
	Clear pair record	Press and hold the MFB and Volume – button for 5-6 seconds to clear the pair record in the headset.
Mute Button	Mute/Unmute the microphone	During a call, press the mute button to mute the microphone. Press it again to unmute the microphone.

LED Indicator Light

Mode	Indicator Light Status
Power on	Blue light turns on for 3 seconds
Power off	Red light turns on for 1 second
Pairing mode	Red & Blue lights flash alternately
Connected standby mode	Blue light flashes once every 6 seconds
Disconnected	Red & Blue lights flash alternately
Playing music	Blue light flashes once every 6 seconds
Call status	Blue light flashes once every 6 seconds
Pair record cleared	Purple light turns on for 1 second
Low battery	Red light flashes
Charging	Steady Red light
Fully charged	Steady Blue light
Incoming Call	Blue light flashes

Voice Prompt

Status	Voice Prompt
Power on	Power on
Power off	Power off
Pairing mode	Pairing
Headset connected	Connected
Headset disconnected	Disconnected
Low battery	Battery Low
Mute the Mic	Mute on
Unmute the Mic	Mute off
Clear pair record	Clear matching record
Pop Mode	Pop Mode
Vocal Mode	Vocal Mode
Bass Mode	Bass Mode

Correct Disposal of This Product

(Waste Electrical& Electronic Equipment)

- This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

- Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS

1. RETAIN THESE INSTRUCTIONS – This sheet contains important safety and operating instructions.
2. Before using the product, read all instructions and caution markings on the product, accessories, and device.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Keep the product away from the fire to avoid an explosion.
6. Do not place the product in or near an inflammable, explosive, or hazardous object.
7. Do not operate the product with a damaged cord or plug.
8. Do not operate the product if it has been damaged in any way.
9. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
10. Do not throw or shake the product.
11. Do not place the product in or near water, rain, excess moisture, or extreme heat.

SIMPLIFIED EU DECLARATION OF CONFORMITY
Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type TK-HS012 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
https://teckneteu.com/

Limited 12-Month Warranty

What this warranty covars

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.
Unichain warrants the TECKNET product for 12 Months.

What will we do to correct problems?
Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?
All above warranties are null and void if the TECKNET product is not provided to Unichain for inspection upon Unchain's request at the sole expense of the purchaser, or if Unichain determines that the TECKNET product has been improperly installed, altered in any way, or tampered with. The TECKNET Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty
Please contact retailers or visit TECKNET website or email **support@ylinksworld.com** for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase.

Disclaimer
Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

FCC STATEMENT:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Frequently Asked Questions

How to reconnect? What should I do when the connection fails or after a long-distance disconnection?

When the headset successfully pairs with your mobile phone, it automatically reconnects each time its turned on. If it does not auto-connect please manually connect the headset following the Pairing Procedure. The headset will automatically turn off if it does not reconnect within 10 minutes.

How do I delete pairing records?

Press and hold the MFB and Volume- buttons for 5-6 seconds to delete the pairing record of the headset. If you delete the pairing records, the headset will not be able to reconnect to the devices it was previously connected to. You will need to establish a connection again.

What is the password for pairing?

If the device prompts for a password/PIN, try entering one of the following: 0000, 8888, 1111, or 1234. Note: Most devices will not require you to enter a password.

What devices can be used to charge the headset?

The headset can be charged using car chargers, travel chargers, computer USB ports, etc., provided that the DC voltage is 5V and the current exceeds 500mA.

What should I do if I encounter issues such as the headset not turning on or failing to connect?

You can try resetting the headset by plugging in the charging cable to charge it. After it turns off, restart it and see if it operates normally. If problems persist, please reach out to our customer service for technical support.

When will the headset automatically shut down?

The headset will automatically shut down if it remains unconnected for more than 10 minutes or when the battery level is low.

Can I use the headset while it's charging?

No, the headset will automatically power off and cannot be turned on during charging

Can I make modifications to the device?

No, any changes or modifications not approved may void your authority to operate the equipment.

Is there any restriction on the usage conditions?

The device can be used in portable exposure conditions without any restrictions.

Documents / Resources

TECHNET TK-HS012 Wireless Headset [pdf] User Manual
2AK8Q-TKHS012, 2AK8QTKHS012, TK-HS012 Wireless Headset, TK-HS012, Wireless Headset, Headset

References

- **User Manual**