Manuals+ — User Manuals Simplified.

A3002RU Wireless SSID password setting

Contents

A3002RU Wireless SSID password setting

It is suitable for: **A702R, A850R, A3002RU**
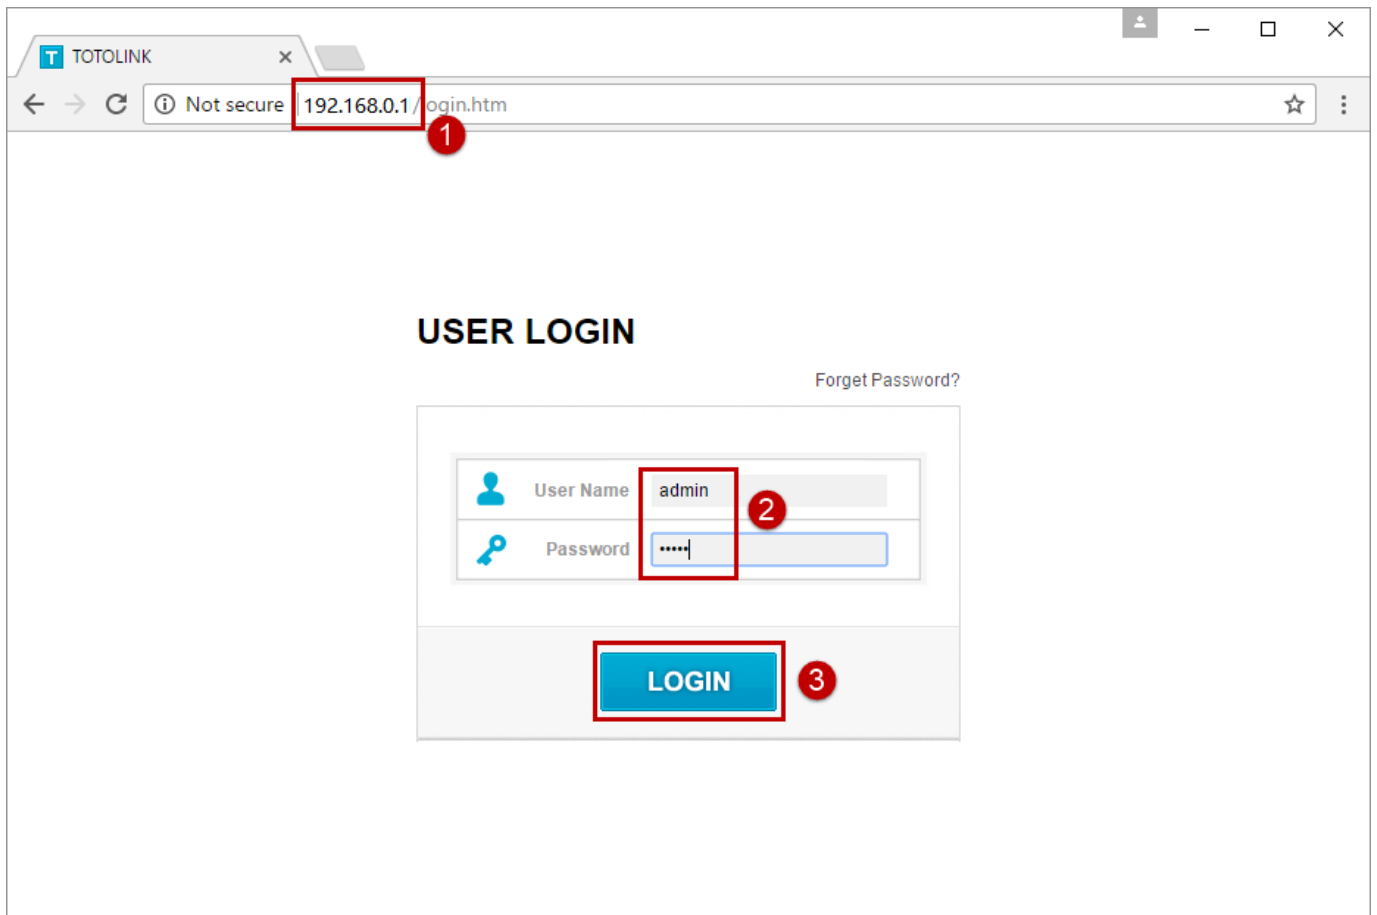
Application introduction:

The Wireless SSID and password are the basic information for you to connect Wi-Fi network. But sometimes you may forget or want to change them regularly, so here we will guide you how to check or modify the wireless SSID and password.

Settings

STEP-1: Enter the setup interface

Open a browser, enter **192.168.0.1.** Input User Name and password (default **admin**/**admin**) on login management interface, as follows:

Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2: View or modify the wireless parameters

2-1. Check or modify in Easy Setup page.

Login management interface, first enter the **Easy Setup** interface, you can see **5G and 2.4G wireless settings,** as follows:

2-2. Check and modify In the Advanced Setup

If you also need to set more parameters for WiFi, you can enter the **Advanced Setup** interface to set up.

Set the SSID and password according to the following procedure.

You are also able to set the **Channel Width, Date Rate, RF Output Power.**

Questions and Answers

Q1: Should I restart the router after setup wireless information?

A: After setting, you need to wait a few seconds for the wireless information to take effect.

DOWNLOAD

A3002RU Wireless SSID password setting – [**Download PDF**]

A3002RU Wireless SSID password setting – [**Download PDF**]