Manuals+ — User Manuals Simplified.

whisker Litter Robot 4 WiFi Enabled Covered Automatic Instruction Manual

Contents

whisker

whisker Litter Robot 4 WiFi Enabled Covered Automatic

Product Information

Specifications:

- **Product Name:** Litter-Robot 4
- **Compatible Fence Versions:** Older Fence (with plastic shield), Newer Fence (without plastic shield)
- **Parts Included:** Installation guide, Ramp, Ramp Hinge, Ramp Fence Hinge
- **Manufacturer:** Whisker

Product Usage Instructions

Installing the Ramp Hinge and Ramp (no fence)

1. Remove the fence by pulling up to disengage the snaps. If you do not have a fence, skip to the next step.
2. Snap the Ramp Hinge onto the bezel by pressing down at the locations shown until you hear a click. Make sure both ends of the Hinge are resting tightly against the surface of the bezel.
3. Orient the Ramp so it is parallel to the floor, then snap the Ramp onto the Hinge by pressing down.
4. Rotate the Ramp down to the floor. The Ramp is now ready to use!
5. If litter collects on the steps of the Ramp, it can be rotated upwards to dump the litter back inside the globe. (Not applicable if fence is installed.)
6. Press the Reset button to zero the weight sensors.

Installing the Ramp Fence Hinge and Ramp
If the newer fence is not installed on your Litter-Robot 4, follow the steps below to install it. If your Litter-Robot 4 has the fence already installed, please skip the first three steps.

1. Hold the fence upright inside the globe.
2. Tilt the top of the fence toward you to align the front of the fence with the bezel.
3. Gently press down on the back of the fence to snap it onto the bezel. Make sure the fence is level.
4. Place the Ramp Fence Hinge over the top of the fence as shown. Adjust the location left-to-right until centered. Press the area behind the two small protrusions to snap it onto the edge of the fence.
5. Align the Ramp with the Hinge and press down to snap in place. Rotate the Ramp down to the floor. The Ramp is now ready to use!
6. Press the Reset button to zero the weight sensors.

FAQ

- **Q: What should I do if I have an older version of the Litter-Robot 4 fence?**
  A: If you have the older (mini) version of the Litter-Robot 4 fence with a plastic shield, you need to remove it and follow the instructions for installing the Ramp Hinge. The Litter-Robot 4 Ramp is not compatible with the older fence.
- **Q: What should I do if I have the newer version of the Litter-Robot 4 fence?**
  A: If you have the newer version of the Litter-Robot 4 fence without a plastic shield, you have two options. You can either remove the fence and follow the instructions for installing the Ramp Hinge, or you can keep the fence on and follow the instructions for installing the Ramp Fence Hinge.
- **Q: How do I zero the weight sensors?**
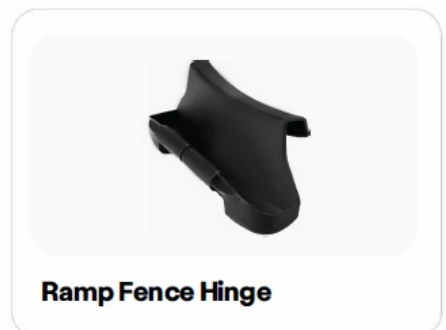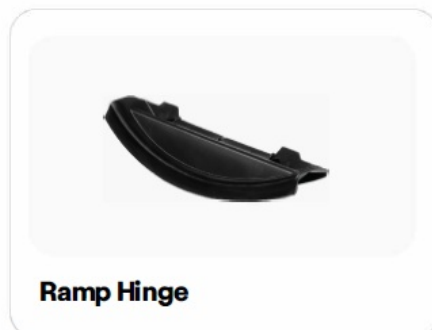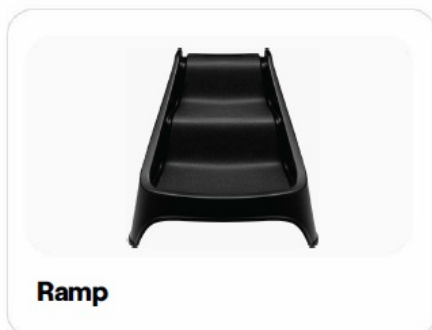 A: To zero the weight sensors, press the Reset button on the Litter-Robot 4.
- **Q: Where can I find more information or get support?**
  A: For more information or support, please visit **whiskersupport.com** .

Installation guide

Ramp installation Instruct1ons

Parts required:

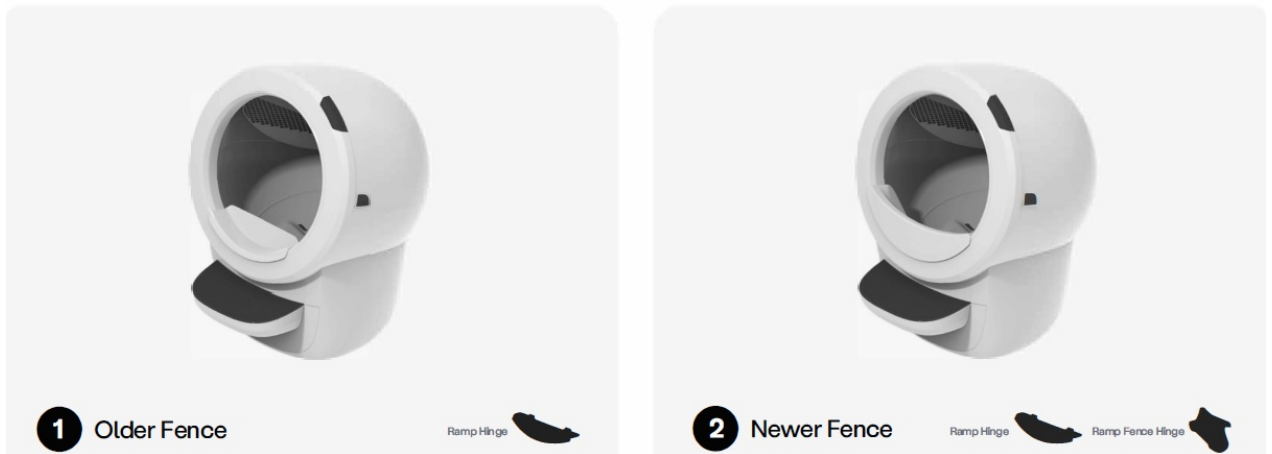
Ramp

Ramp Hinge

Ramp Fence Hinge

Please note
Before starting, please note: Your Litter-Robot 4 was shipped with one of the two fences shown below. Please identify which one you have and follow the directions for that version.

1. If you are using the older (mini) version of the Litter-Robot 4 fence (with a plastic shield), remove it and follow
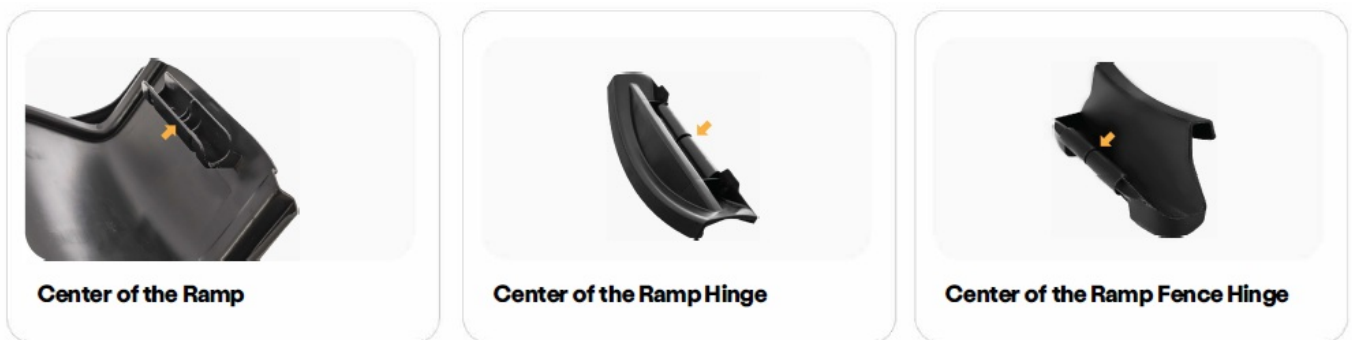
the instructions for the Ramp Hinge. The Litter-Robot 4 Ramp is not compatible with the Litter-Robot 4 older fence.

2. If you are using the newer version of the Litter-Robot 4 fence (without a plastic shield), you can either
    1. Remove it and follow the instructions for the Ramp Hinge.
    2. keep the fence on and follow the instructions for the Ramp Fence Hinge.

Note

There is a rib in the center of the Ramp which aligns with a groove in the middle of each Hinge to ensure the Ramp is centered correctly during installation.

Installing the Ramp Hinge and Ramp (no fence)

How to install

1. Remove the fence by pulling up to disengage the snaps. If you do not have a fence, skip to the next step.
2. Snap the Ramp Hinge onto the bezel by pressing down at the locations shown until you hear a click. Make sure both ends of the Hinge are resting tightly against the surface of the bezel.
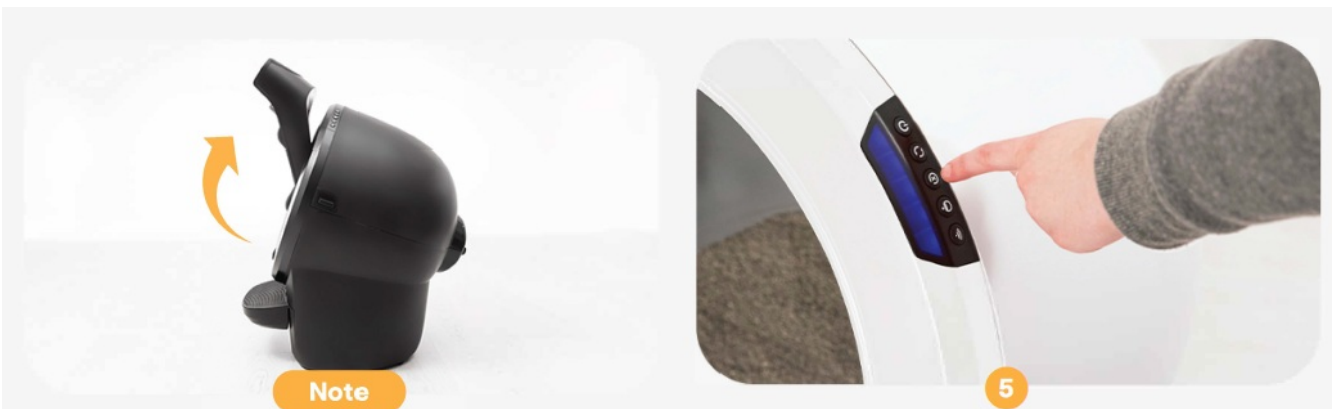
3. Orient the Ramp so it is parallel to the floor, then snap the Ramp onto the Hinge by pressing down.

4. Rotate the Ramp down to the floor. The Ramp is now ready to use!

1. **Note** If litter collects on the steps of the Ramp, it can be rotated upwards to dump the litter back inside the globe. (Not applicable if fence is installed.)

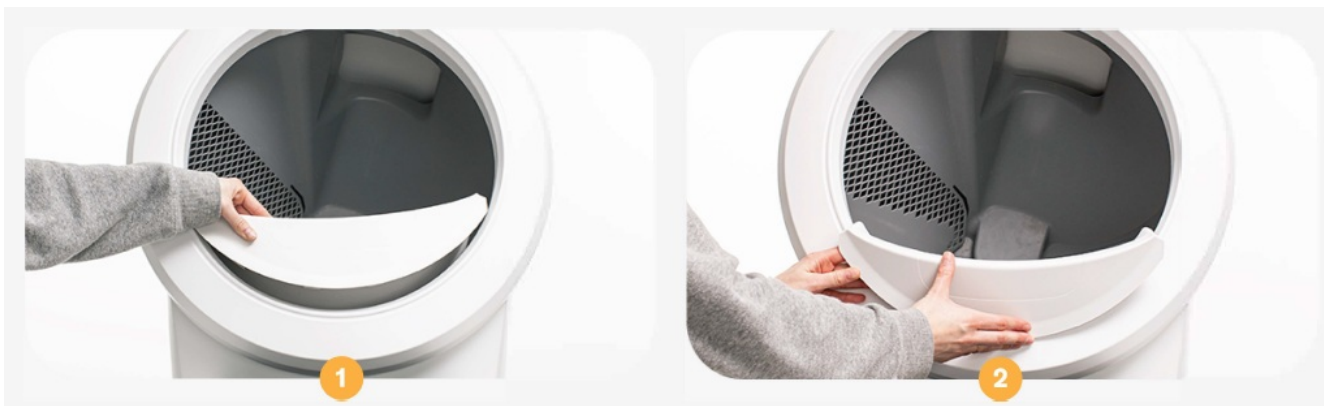5. Press the Reset button 🅧 to zero the weight sensors.

Installing the Ramp Fence Hinge and Ramp

If the newer fence is not installed on your Litter-Robot 4, follow the steps below to install it. If your Litter-Robot 4 has the fence already installed, please skip the first three steps.
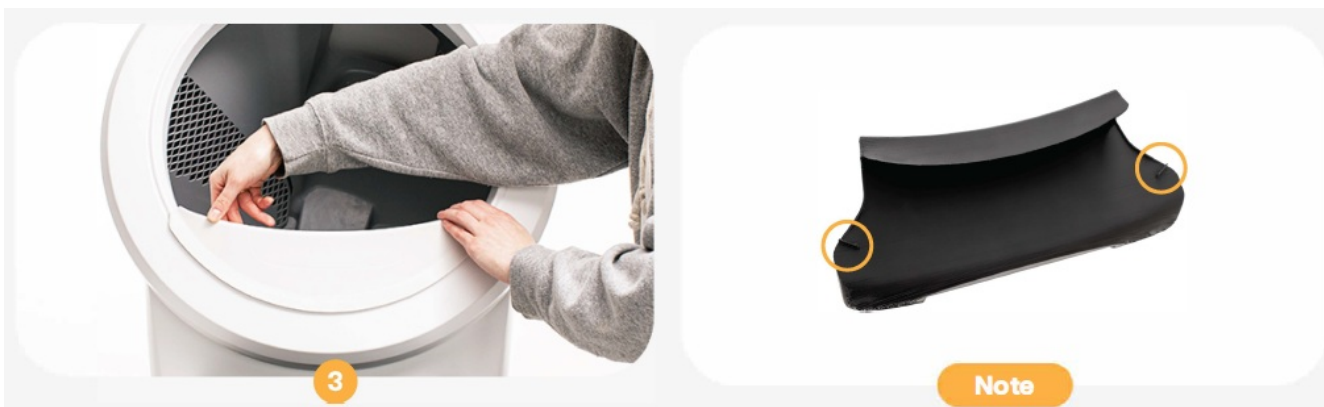
How to install

1. Hold the fence upright inside the globe.
2. Tilt the top of the fence toward you to align the front of the fence with the bezel.

3. Gently press down on the back of the fence to snap it onto the bezel. Make sure the fence is level.
   Note The back of the Ramp Fence Hinge has two small protrusions, one on each side. These are used to secure the Hinge to the edge of the fence.

4. Place the Ramp Fence Hinge over the top of the fence as shown. Adjust the location left-to-right until centered. Press the area behind the two small protrusions to snap it onto the edge of the fence.
5. Align the Ramp with the Hinge and press down to snap in place. Rotate the Ramp down to the floor. The Ramp is now ready to use!

6. Press the Reset button ⊗ to zero the weight sensors.

Questions? Visit
whiskersupport.com

Documents / Resources

[whisker Litter Robot 4 WiFi Enabled Covered Automatic](#) [pdf] Instruction Manual
Litter Robot 4 WiFi Enabled Covered Automatic, Litter Robot 4, WiFi Enabled Covered Automatic, Enabled Covered Automatic, Covered Automatic

References

- 🖥 **[Litter-Robot Support - Answers and Solutions](#)**
- 🄼 **[Manual-Hub.com - Free PDF manuals!](#)**
- **[User Manual](#)**