

User Guide

Adjusting Date & Time:


1. Press button "A" once, Month & Day will be shown, Press button "A" twice to adjust the Month; press button "B" to set.
2. Press button "A" three times, Day will be shown. To adjust the Day ; press button "B" to set.
3. Press button "A" four times, Hour will be shown. To adjust the Hour ; press button "B" to set.
4. Press button "A" a fifth times, Minutes will be shown. To adjust the Minutes ; press button "B" to set.
5. Press button "A" again, to finalize adjustments; confirm adjustments by pressing button "B" to cycle through Time, Date & Seconds.

Displaying Date & Time:

1. Press button "B" once, Month & Day will be shown; the proper Month & Day can be adjusted by pressing button "A"
2. Press button "B" twice, Seconds will be shown, Reset Seconds to "00" by pressing button "A".
3. Press button "B" once more to return to normal time display.

How to Light Up :

1. Press button "C" once, Flashing lights will be shown.

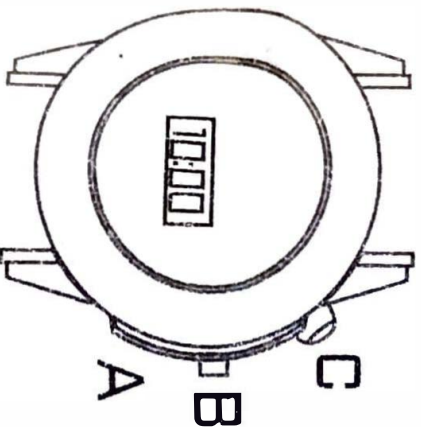

DO NOT IMMERSE IN WATER.
DO NOT WEAR IF CASEBACK IS MISSING OR DISASSEMBLED.
DO NOT MIX NEW AND OLD BATTERIES.
MADE IN CHINA.

HOW TO START YOUR WATCH

If your watch has a plastic guard, start your watch by removing the plastic guard from under the crown, then press the crown in against the case. The second hand will begin advancing.

REPLACING YOUR BATTERY

When the watch no longer functions (first check that the crown is not extended out in the time setting position), have the battery immediately replaced. Weak or dead batteries left in the watch for an extended time may damage the movement. To change the battery, your watch may be sent to our service center. We strongly recommend that a retailer or jeweler replace your battery. DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE.

DO NOT MIX OLD AND NEW BATTERIES. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

FOLLOW THESE INSTRUCTIONS FOR PROMPT SERVICE.

If your watch needs service, wrap it carefully with protective material inside a mailing carton. We advise you to send your watch insured mail. Never include any special watchband or any other article of personal value in your shipment.

1. Do not return the watch to the store. Return for service to address below.
2. Pack carefully, but not in the watch box. Boxes cannot be returned.
3. Fill in all the information and enclose this certificate in the package with a \$8.50 handling payment.
4. Print the address clearly on the package. Be sure to include your name and return address.
5. SEND YOUR WATCH INSURED PARCEL POST SINCE ACCUTIME WATCH CANNOT BE RESPONSIBLE FOR WATCHES LOST OR DAMAGED IN TRANSIT. SEND TO:

ACCUTIME WATCH CORP./ SERVICE CENTER
1001 AVENUE OF THE AMERICAS 6th FL. NY, NY 10018
LIMITED WARRANTY AND SERVICE INFORMATION

Accutime Watch warrants to the original consumer purchaser that the movement of your new watch will be free from original defects in workmanship and material for one year from the date of purchase. Your watch movement will be either replaced or repaired, or the watch will be replaced with one of an equal or greater value at our option.

ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PURPOSE ARE EXPRESSLY DISCLAIMED, COMMENCING ONE YEAR FROM DATE OF ORIGINAL PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

YOU WILL BE REQUIRED TO PROVIDE PROOF OF PURCHASE TO ESTABLISH THE FACT THAT YOUR WATCH IS WITHIN THE WARRANTY PERIOD. During the warranty period, there is no charge for the repair or replacement of your watch movement. However, there is a \$8.50 charge for handling. This handling charge may be changed without notice by Accutime Watch Corp. For repair or replacement of parts not covered by this warranty or after the warranty expires you will be notified of the cost of repairs. Enclose a note stating why the watch needs repair. Remember to include a check or money order for \$8.50. Do not send Cash. **A BILL OF SALE, CANCELED CHECK OR PAYMENT RECORD SHOULD BE KEPT (AND COPY SUBMITTED WITH WARRANTY WORK) TO ESTABLISH THE WARRANTY PERIOD.**

(PRINT CLEARLY)

YOUR NAME:		
ADDRESS:		
CITY:	STATE:	Zip Code:
REASON:		
EMAIL:		

Removing the Band from Your Watch:

Lay your watch with the face down (preferably on a cloth to prevent scratching your watch) You will need a sharp point or "spring bar tool" to perform the following steps.



- A. To Remove Links from Your Bracelet Watch:
1. Push Pin forcefully in direction of arrow until link is detached. Repeat until desired numbers of links are removed.
 2. To reattach, push pin back into link in opposite direction of arrow until it is flush with band.



B. Changing Your Strap on your Watch:

1. Insert the sharp point between the strap and watch lug to release strap from case
2. Once the spring bar is detached you can remove your strap. To reattach, depress spring bar and insert into hole on the inside of the watch case lug.



 **ACCUTIME**
WATCH CORPORATION

www.accutimewatch.com

WM-1-BSIN

CÓMO PONER EN MARCHA EL RELOJ

Si el reloj tiene un protector de plástico, póngalo en marcha quitándolo de debajo de la corona y a continuación empúje la corona. La segunda manecilla seguirá avanzando.

CAMBIO DE LA PILA

Cuando el reloj deje de funcionar (compruebe primero que la corona no esté extendida en la posición de ajuste de hora), reemplácese la pila inmediatamente. Dejar pilas débiles o agotadas en el reloj por un período prolongado puede dañar el mecanismo. Para cambiar la pila del reloj, podría ser necesario enviarlo a nuestro servicio técnico.

Recomendamos encarecidamente que la pila la reemplace el vendedor o un joyero. NO TIRES LA PILA AL FUEGO.

NO LA RECARGUE

NO MEZCLE LAS PILAS NUEVAS Y USADAS. MANTENGA LAS PILAS SUELTAS FUERA DEL ALCANCE DE LOS NIÑOS. SIGA ESTAS INSTRUCCIONES PARA RECIBIR SERVICIO OPORTUNAMENTE.

Si el reloj debe recibir servicio, envíelo con cuidado con un material protector y métalo en una caja apta para envíos postales. Recomendamos hacer el envío por correo asegurado.

No incluya ninguna pulsera especial ni ningún otro artículo personal de valor con el envío.

1. No devuelva el reloj a la tienda. Envíelo a la dirección de servicio que se indica a continuación.

2. Empáquelo con cuidado, pero no en la caja del reloj. Las cajas no se devuelven.

3. Llene toda la información e incluya este certificado en el paquete con \$8.50 para gastos de manipulación.

4. Escriba claramente la dirección en el paquete, junto con su nombre y la dirección de devolución, y envíelo por correo asegurado a:

5. ENVÍE EL RELOJ POR CORREO ASEGURADO. YA QUE ACCUTIME NO SE RESPONSABILIZA POR LA PÉRDIDA O LOS DAÑOS DURANTE EL TRANSPORTE. HAGGA EL ENVÍO A:

ACCUTIME WATCH CORP. / SERVICE CENTER
1001 AVENUE OF THE AMERICAS 6th FL. NY, NY 10018

GARANTÍA LIMITADA E INFORMACIÓN DE SERVICIO

Accutime Watch garantiza al comprador original de este producto que el movimiento del nuevo reloj estará libre de defectos de fabricación y materiales por un año a partir de la fecha de compra.

El movimiento del reloj se reemplazará o reparará, o el reloj se reemplazará por uno de igual o mayor valor a nuestra discreción.

TODAS LAS DEMÁS GARANTÍAS, EXPRESAS O IMPLÍCITAS, INCLUIDAS LAS GARANTÍAS DE COMERCIABILIDAD E IDONEIDAD PARA EL USO, QUEDAN EXPRESAMENTE EXCLUIDAS A PARTIR DE UN AÑO DESPUÉS DE LA FECHA DE COMPRA ORIGINAL.

Algunos estados no permiten limitaciones en cuanto a la duración de una garantía implícita, por lo que es posible que esta limitación no corresponda en su caso. Esta garantía le otorga derechos legales específicos, y también puede tener otros derechos que varían de un estado a otro.

SE LE REQUERIRÁ QUE PROPORCIONE UN COMPROBANTE DE COMPRA PARA ESTABLECER EL HECHO DE QUE SU RELOJ SE ENCUENTRA DENTRO DEL PERÍODO DE GARANTÍA. Durante el período de garantía, no hay cargo para la reparación o reemplazo del mecanismo de movimiento de su reloj. Sin embargo, hay un cargo de \$8.50 por la manipulación. Este cargo de manipulación puede cambiar sin previo aviso por parte de Accutime Watch Corp. Para la reparación o el reemplazo de piezas no cubiertas por esta garantía o después de que la garantía venza, se le notificará el costo de las reparaciones.

Incluya una nota con una explicación de por qué debe repararse el reloj. Recuerde incluir un cheque o giro postal por \$8.50. No envíe dinero en efectivo. SE DEBE CONSERVAR UN RECIBO DE VENTA, UN CHEQUE CANCELADO O UN REGISTRO DE PAGO (Y SE DEBE PRESENTAR UNA COPIA JUNTO CON EL TRABAJO EN GARANTÍA) PARA ESTABLECER EL PERÍODO DE GARANTÍA. (ESCRIBA CON LETRA CLARA)

SU NOMBRE: _____

DIRECCIÓN: _____

CIUDAD: _____

ESTADO: _____

CÓDIGO POSTAL: _____

RAZÓN: _____

CORREO ELECTRÓNICO: _____

Cómo quitar la pulsera del reloj

Ponga el reloj plano boca abajo (a ser posible, sobre un paño para evitar que se raye).

Necesitará un objeto puntiagudo o una "herramienta para resortes" para completar los pasos siguientes

A. Para quitar eslabones de la pulsera del reloj:

1. Empuje el pasador con fuerza en la dirección de la flecha hasta que el eslabón se suelte. Repita este paso hasta soltar el número de eslabones deseado

2. Para volver a conectarlos, empuje el pasador en el sentido contrario de la flecha para introducirlo en el eslabón hasta que quede al ras de la pulsera.

B. Cómo cambiar la correa del reloj:

1. Inserte el extremo puntiagudo entre la correa y las patas de la caja para separar la correa de la caja

2. Una vez quitado el pasador con resorte, la correa puede desmontarse. Para volver a instalarla, comprima el pasador con resorte e insértelo en los orificios de las patas de la caja.

