Manuals+ — User Manuals Simplified.

Yale MD-05 Access Smart Module Installation Guide

Yale® Access Smart Module MD-05
OEM Installation Guide

Contents

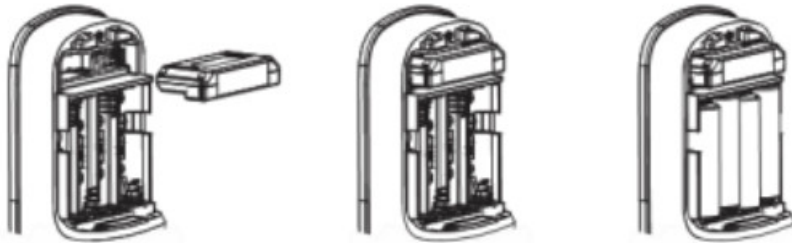## Adding a Yale Access Smart Module to the Assure Lock

1. Install Yale Smart Module into the slot above the battery compartment.

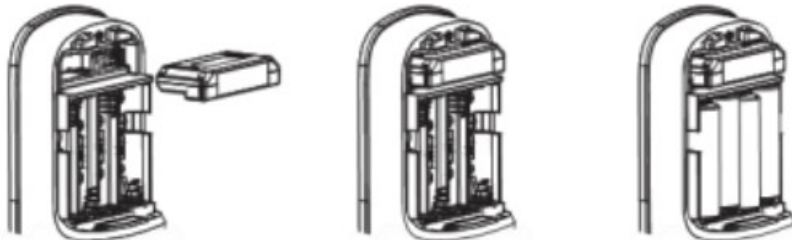   **IMPORTANT:** Batteries must be removed before inserting Yale Smart Module:

- Remove battery cover
- Remove batteries
- Insert Yale Smart Module
- Reinstall batteries
- Reinstall battery cover

Removing a Yale Access Smart Module from the Assure Lock

1. Open the Yale Access app and follow instructions to remove the device (if it is enrolled in a network).
2. Remove Yale Smart Module from slot above the battery compartment.

   IMPORTANT: Batteries must be removed before removing Yale Smart Module:

- Remove the battery cover
- Remove batteries
- Remove Yale Smart Module
- Reinstall batteries
- Reinstall battery cover
- FOR OEM INSTALLATION ONLY
- FOR USE ONLY IN A YALE/ASSA ABLOY FIXED LOCATION LOCK
- ANY OTHER USE REQUIRES SEPARATE APPROVAL

⚠ **Warning:** Changes or modifications to this device, not expressly approved by Yale Home could void the user's authority to operate the equipment.

FCC:

FCC ID: U4A-WF1MRUS
Class B Equipment This equipment
has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS. (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Industry Canada:

IC: 6982A-WF1MRUS

Section 7.1.2 of RSS-GEN Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Section 7.1.3 of RSS-GEN This Device complies with Industry Canada Licenseexempt RSS standard(s). Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil est conforme avec Industrie Canada RSS standard exemptes de licence(s). Son fonctionnement est soumis aux deux conditions suivantes: 1) ce dispositif ne peut causer des interférences, et 2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.
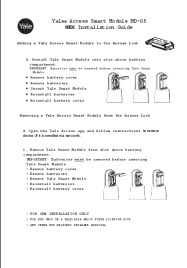
CAN ICES-3B/NMB-3B

Yale Locks & Hardware

24/7 Tech Support: 1-855-492-0505 • **US.YaleHome.com**

Documents / Resources

Yale MD-05 Access Smart Module [pdf] Installation Guide
WF1MRUS, U4A-WF1MRUS, U4AWF1MRUS, MD-05 Access Smart Module, Access Smart Module

Manuals+,