ABYSM GAMING AB123011 DANUBE Computer Case User Manual

ABYSM GAMING AB123011 DANUBE Computer Case User Manual

Contents

PRODUCT FEATURES

- 230 mm ultra-wide rack and ultra-strong compatibility
- Standard TYPE-C interface, which ensures quick transmission speed
- 3 mm tempered glass door, which is both convenient and safe.
- 280 mm water cooling design at the top; reasonable heat dissipation system.
- Support 20 cm fan, with strong heat dissipation effect and colorful lights,

230mm

390mm

390mm
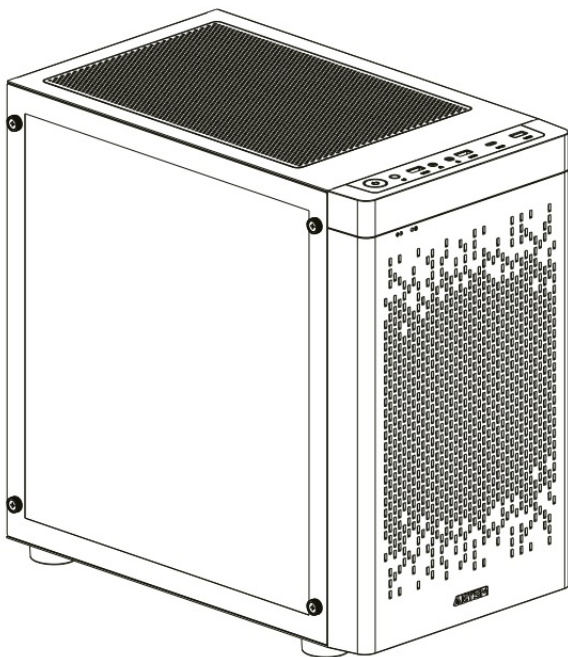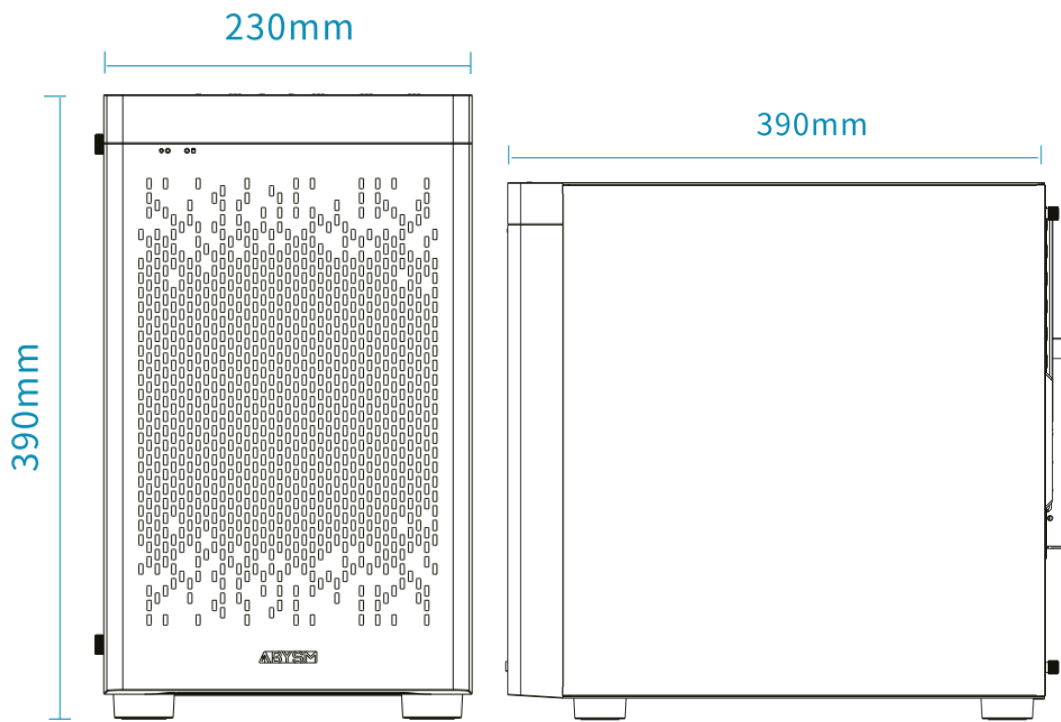
Product design and specifications may be revised to improve qualty and performance without notice.

CASE STRUTURE
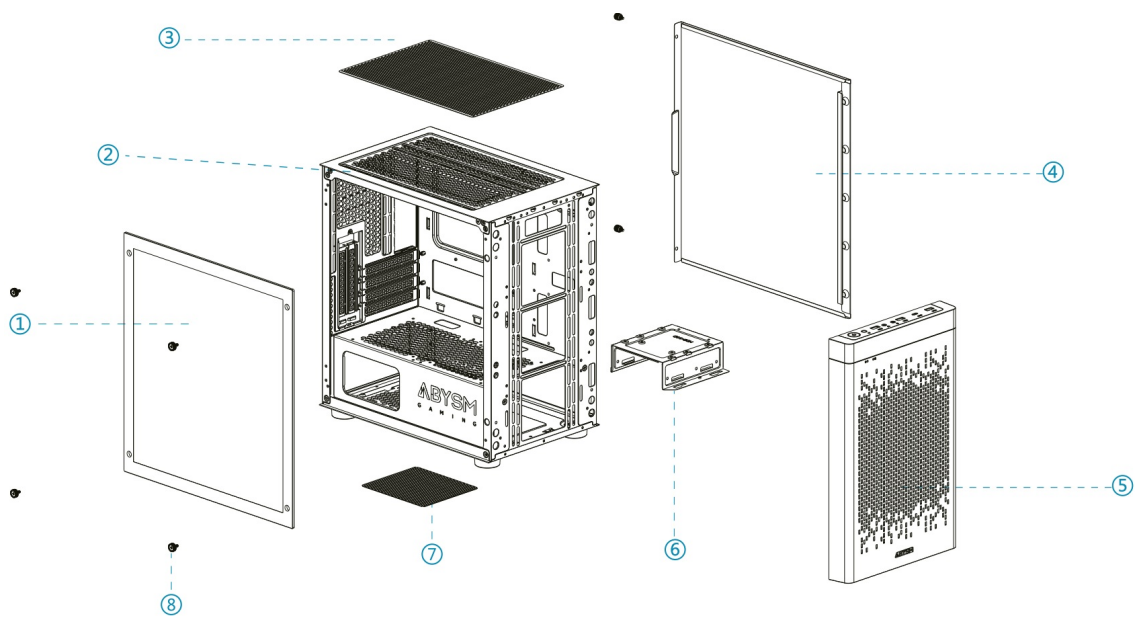
1. Glass side plate

2. Main rack

3. Top dustproof mesh

4. Hardware side plate

5. Panel components

6. Hard disk rack

7. Bottom dustproof mesh ®

8. Side plate screws

## ACCESSORIES

- Copper column x2

- Power supply screw X6
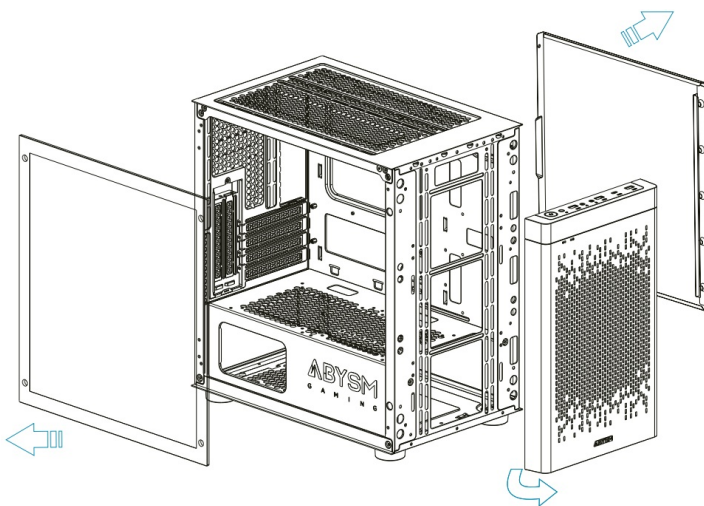
- Hard disk screw x6

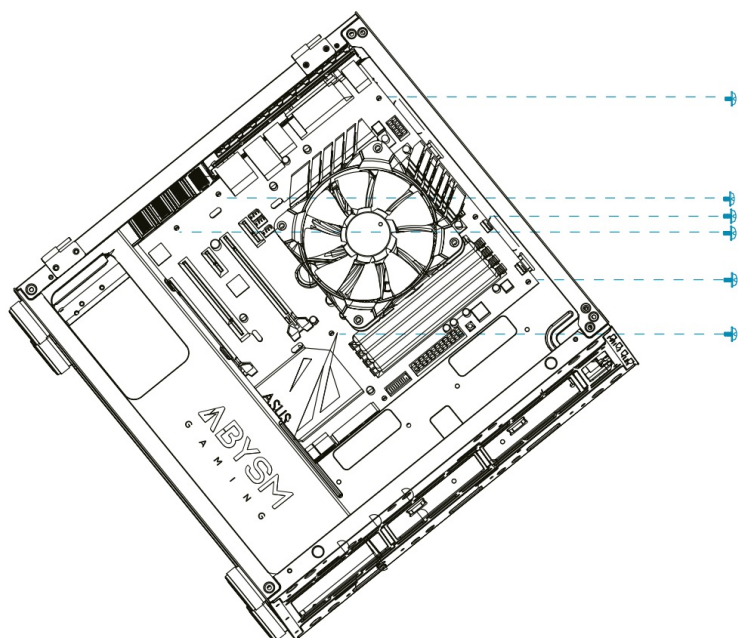- Mainboard screw x12

ASSEMBLY & DISASSEMBLY STEP

- Remove the screws to dismantle the glass side plate
- Remove the screws to dismantle the Rardware side plate; removal panel
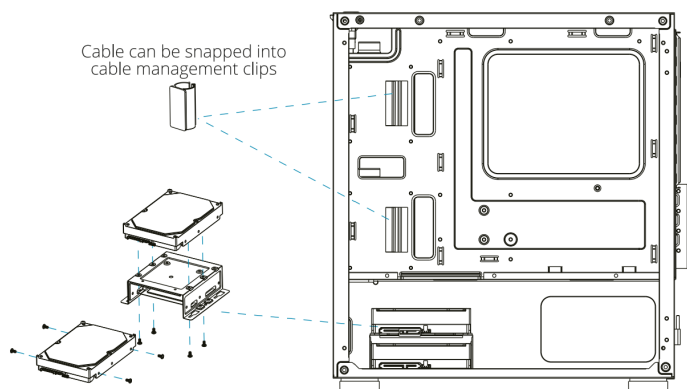
INSTALL MAINBORAD

- Mount copper columns based on mainboard hole mainboard into crate mounting site and fix it with screw

INSTALL HDD

Unscrew the screw to dismantle hard disk bracket and mount HDD; put back the hard disk bracket to rack and tighten it with screw.

Cable can be snapped into cable management clips

INSTALL SSD

1. Unscrew the screw to dismantle SSD bracket and mount SSD; put back the SSD bracket to rack and tighten it with screw;
2. Unscrew the screw to dismantle hard disk bracket and mount SSD; put back the hard disk bracket to rack and tighten it with screw;
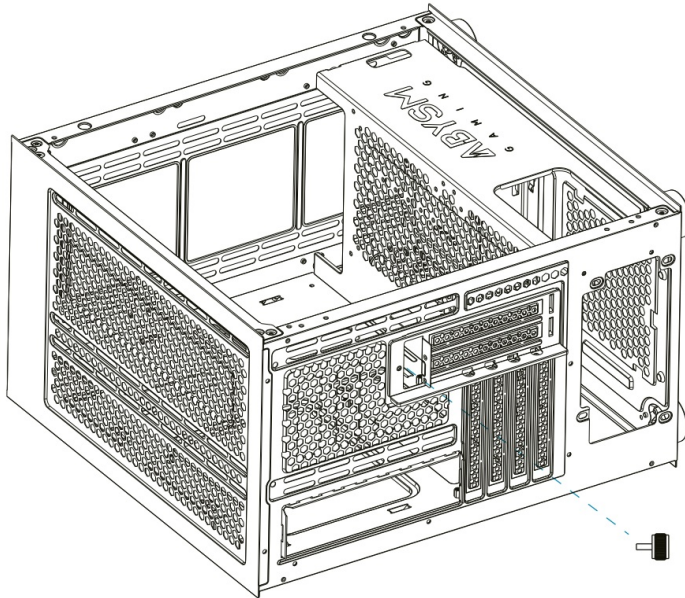3. Put SSD into rack mounting position and tighten it with screw,
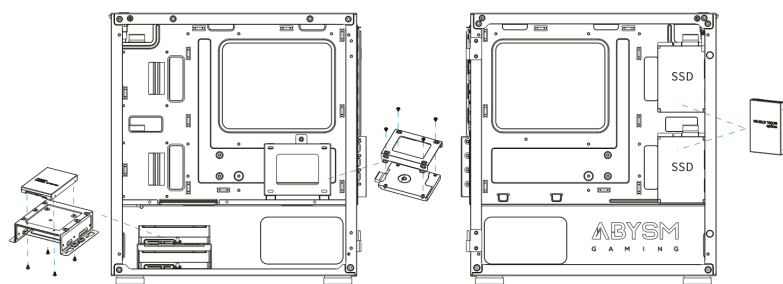
INSTALL POWER SUPPLY

Put the power supply at the crate installation position and fix it with 4 power supply screws,
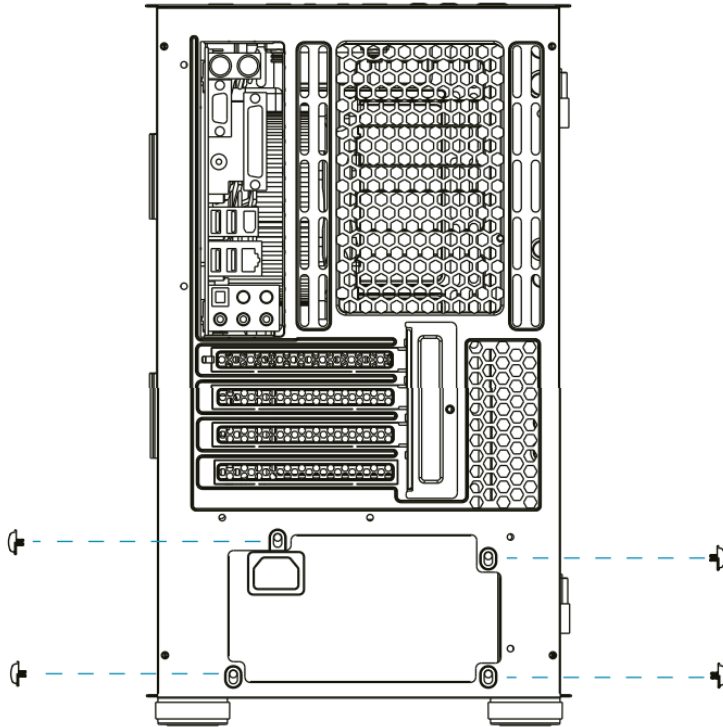
INSTALL DISPLAY CARD

Unscrew the screw to lift the baffle plate, set display card into crate installation site, tighten it with screw and then assemble and lock the baffle plate.

INSTALL CASE FAN

Installation configuration of fan and water cooling of the case:

Front:
120mm fan x 2; 140mm fan x 2; 200mm fan x1
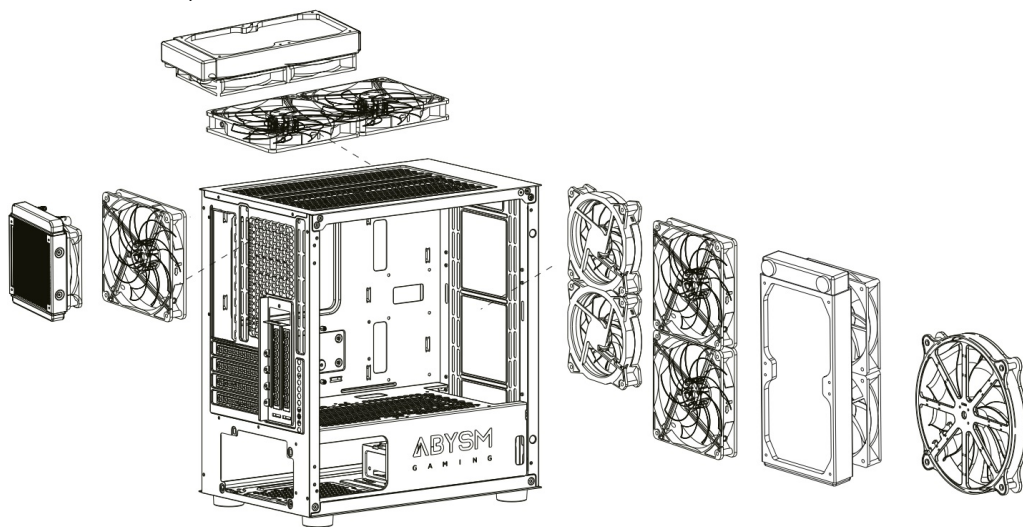240mm cold exhaust fan x 1; 280mm cold exhaust fan x 1 Top:
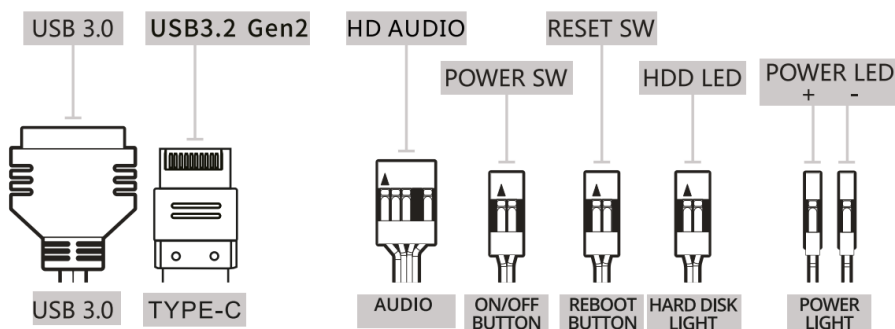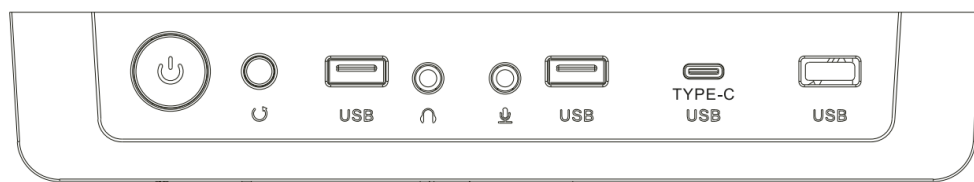120mm fan x 2; 140mm fan x 2
240mm cold exhaust fan x 1; 280mm cold exhaust fan x 1

Rear:

120mm fan x 1; 140mm fan x 1

1/0 PANEL

*Note: Settings are subject to change.

MEANING OF THE DUSTBIN SYMBOL

*Protect our environment: do not dispose of clectical eq Impend in your domestic waste. USB30 USB3.2 Gen2 HDAUDIO RESETSW Biela's retin any dentalcare escarpment dat you willno longer use to the colection points POWER SW HDDLED POWER LED provided for their disposal. These simple steps can help to avoid the potential effects that incorrect waste disposal can cause on the environment and human health. This will contribute to recycling and other forms of re-use. of electrical and electronic equipment. = Information concerning where the equipment can be disposed of can be brained from your local WK authorities.*

Documents / Resources
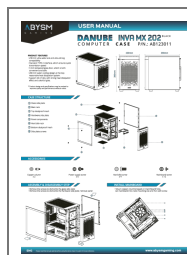
ABYSM GAMING AB123011 DANUBE Computer Case [pdf] User Manual
AB123011, AB123011 DANUBE Computer Case, AB123011 Computer Case, DANUBE
Computer Case, Computer Case, DANUBE Case, Case

Manuals+,