AKKO 5108B Multi Nodes Keyboard User Manual

Contents

AKKO 5108B Multi Nodes Keyboard

Technical Specification

Dimensions	Weight	Country of Origin	Type
Approximately 442*132*41mm	Approximately 1.2kg	China	Mechanical Keyboard

Keycap	Connection	Interface	Battery Capacity
PBT Material	Bluetooth/USB/2.4Ghz	Type-C To USB	3000mAh

Multimedia Keys	N-Key Rollover	Key/Lighting Effects Customization
YES	YES	The keyboard can only be customized with driver in wired mode

Hot Keys
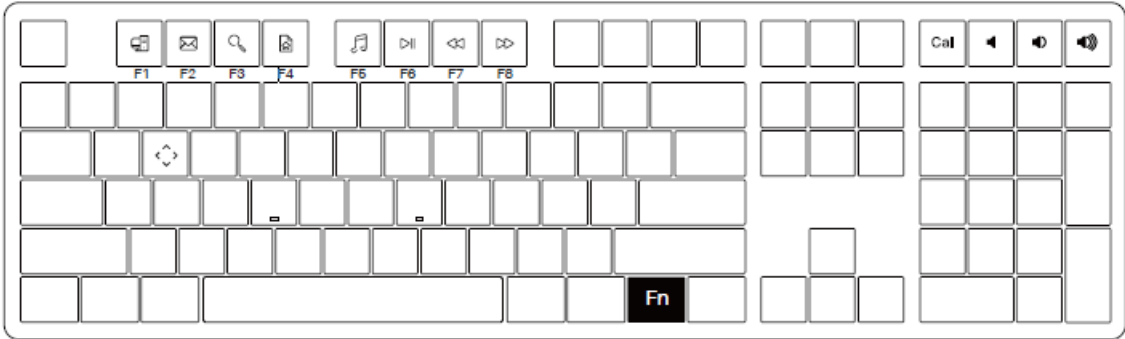
Fn	F1			File Explorer
	F2			E-mail
	F3	=		Windows Search
	F4			8rowser Homepage

	F5		Media
	F6	=	Pause / Playback
Fn	F7		Previous Song
	F8		Next Song

The key combinations below are applicable to Windows system. The combination might change with respect to different Windows systems or along with system updates. Please follow Akko website for the latest hotkeys.

System Commands (Mac)
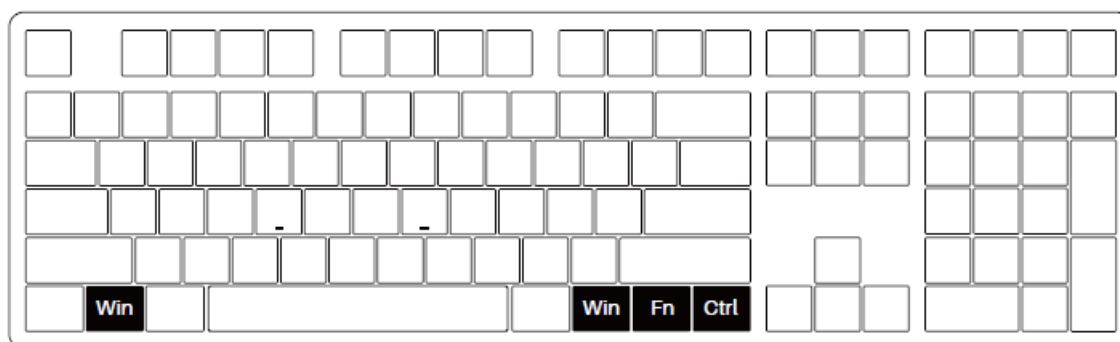
Lock Windows Key	Restore Factory Settings	Revert Ctrl into Menu (APP) key
Fn + left Win / right Win	Press and hold the left Win + right Win together for 5 seconds.	Hold down Fn and press right Ctrl

Black light Setting
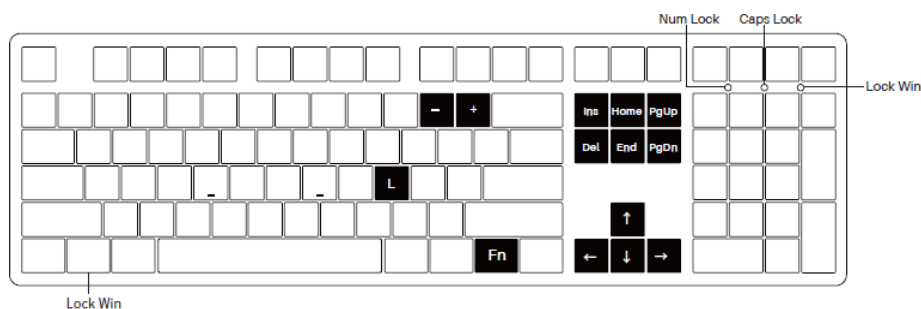
| Fn	ns		Effect 1 / Effect 2 / Effect 3
	Home		Effect 4 / Effect 5 / Effect 6
	PgUp		Effect 7 / Effect 8 / Effect 9 / Effect 10
	Del	=	Effect 11 / Effect 12 / Effect 13
	End		Effect 14 / Effect 15 / Effect 16
	PgDn		Effect 17 / Effect 18/ Effect 19 / Effect 20
	L		Light On / Off

Fn	↑""		8right
	↓""		Dim
	"←"		Set animation direction to left
	→""	=	Set animation direction to right
	"-"		Slower Animation
	"+"		Faster Animation

8luetooth Feature Overview
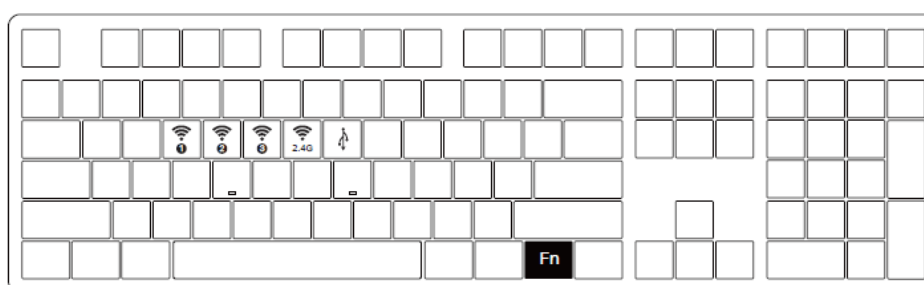
Fn+	E		Bluetooth device 1	Short press to connect with slow flashing blue LED; Press and hold to pair device with fast flashing blue LED.
	R		Bluetooth device 2	
	T	=	Bluetooth device 3	
	Y		2.4G wireless device	Short press to connect with slow flashing green LED; The lighting effect will be restored when pairing succeeds.
	U		Wired mode	

Back Switch Indicator

Left: Windows
Middle: Switch to USB mode and
            stop charging. (Windows)
Right: Mac

5108B Bluetooth Setup Instruction 1

Switch to Bluetooth mode

When the keyboard remains unplugged, users can push the: correspondingly. Then long press and hold Fn+ E/R/T to start pairing with Bluetooth devices. The keyboard will enter Bluetooth pairing vetch on the back to the left/right to enter Windows/Mar mode mode when the blue LEDS under E/ R/T keys flash quickly. When the Keyboard is plugged into the computer through USB interface, it will enter Bluetooth mode automatically without having to push the switch on the back. Users can directly long press and hold Fn+ E/R/Tto enable Bluetooth pairing. The keyboard will enter Bluetooth pairing mode when the blue LEDS under E/ R/T keys flash quickly.

Set the Bluetooth profile

To help user recognize individual Bluetooth device, the keyboard is equipped with both Bluetooth 5.0 and 3.0 frameworks. The device name under the Bluetooth 5.0 framework is Akko 5108 BT-1/Akko 5108 BT-2/ Akko 5108 BT-3 while the device name under Bluetooth 3.0 is AKKO 5108s BT3.0. Once the devices are paired through Fn E/R/T, the system will by default memorize the last connected device before you tum off the Bluetooth mode

5108B Bluetooth Setup Instruction 2

.Bluetooth Pairing

The keyboard can be paired with PC, Pad, smartphone and other devices with Bluetooth turned on. When you first try to search Bluetooth devices, two groups of device names shall appear with Akko 5108 BT3.0 (Bluetooth 3.0) and Akko 5108-1 (Bluetooth 5.0). Select a Bluetooth group based on your preferences (Note: some devices can only search for the Bluetooth 5.0 group).

Switch the Bluetooth device

After 4 Bluetooth devices have been paired with the keyboard, press Fn+E/ Fn+R/Fn+T/ Fn+Y for at least 3 seconds to quickly switch between them

Shut off the keyboard

Turn the power off on the keyboard back panel while unused for power saving: f the keyboard remains unused for over 10 mins, R would go to sleep mode and you can activate it by pressing any key.
Note: The battery saver mode for Windows system would affect/delay the sleep activation time of the keyboard.

Reset the keyboard

If you forgot the speciate paired front-end device or if there remains disorder in Bluetooth connection and communication, you ill need to clear the computer's Bluetooth cache by removing the 5108 keyboard from the list of connected device.

Key/Lighting Effects Customization Instruction

1. .The key/lighting effects customization must be completed in wired mode with Akko driver. niece music rhythm effects with Akko driver.

2. In wired mode, the lighting effects can also a

3. Please download the Akko Cloud driver on our website.

4. Users can download the driver via en.akkogear.com

Akko Warranty and service Statement

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during selfrepair.
3. Dissembling the keyboard without manufacturer/seller's instruction will immediately void the warranty
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Precaution Man-made damage is not united to immersion, falling o, and pulling or the wires wires excessive forces, etc.-

Documents / Resources

AKKO 5108B Multi Nodes Keyboard [pdf] User Manual
5108B, Multi Nodes Keyboard, 5108B Multi Nodes Keyboard, Keyboard, Cinnamoroll 20th Anniversary 5108

References

- **AKKO Mechanische Tastaturen (@akkogear.de) • Instagram photos and videos**
- **Akkoè‰¾é…·å®˜æ–¹ç½'ç«™™ | æ½®æµ—¶å°šå¤è®¾_Akkoæœºæ¢°é''®ç›˜å®˜ç½'**