Alecto ADB30WT, ADB30ZT Self Powered Wireless Doorbell User Guide

Self Powered Wireless Doorbell
User Guide

Contents

1 ADB30WT, ADB30ZT Self Powered Wireless Doorbell
2 Specifications
3 Documents / Resources
3.1 References
4 Related Posts

ADB30WT, ADB30ZT Self Powered Wireless Doorbell

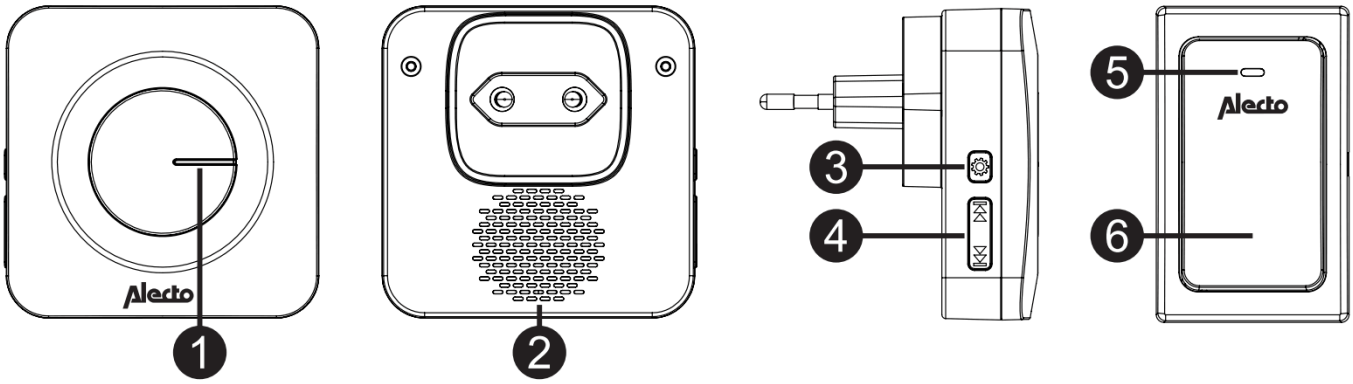

1. Indoor bell LED
2. Speaker
3. Pairing and volume setting button
4. Ringtone change button
5. Doorbell LED
6. Doorbell button

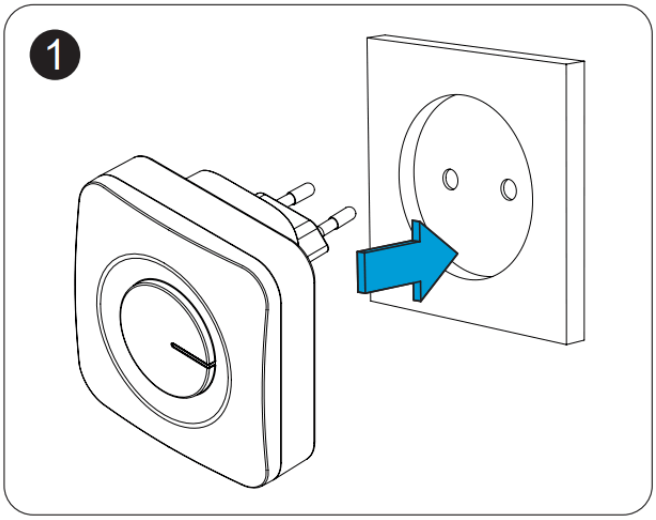

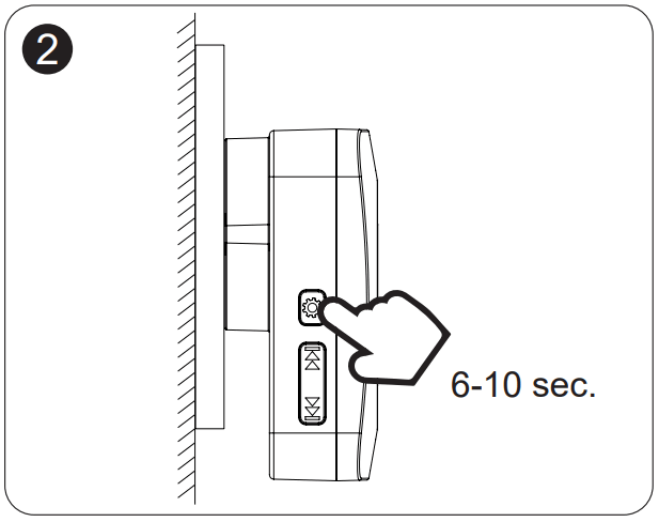

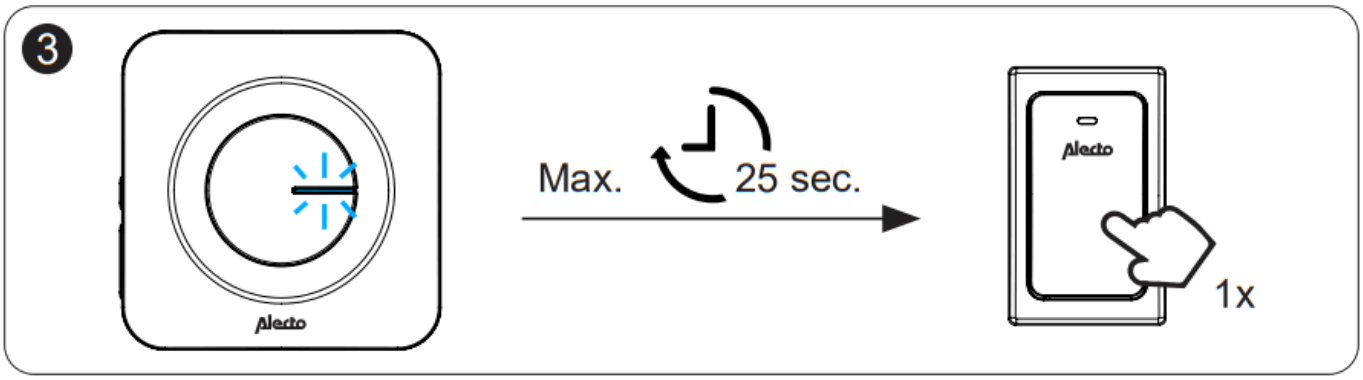

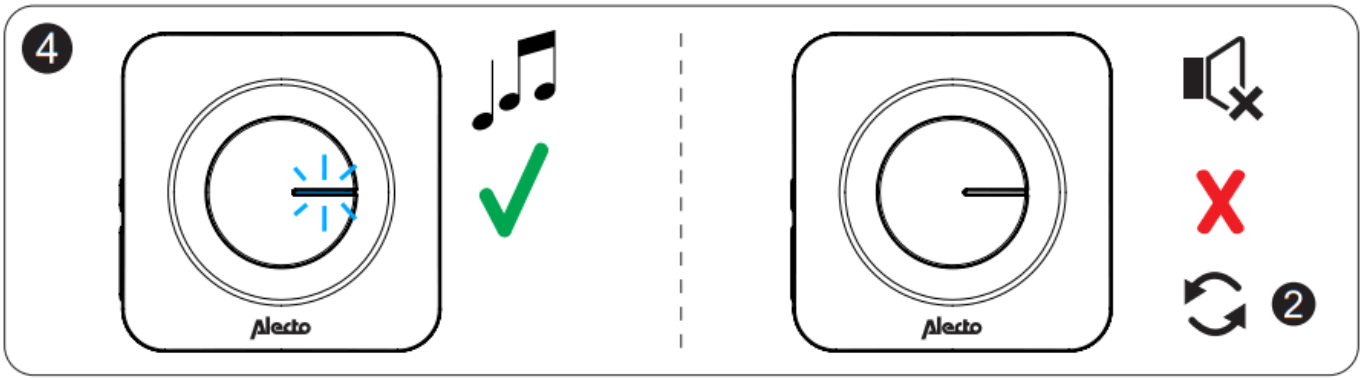

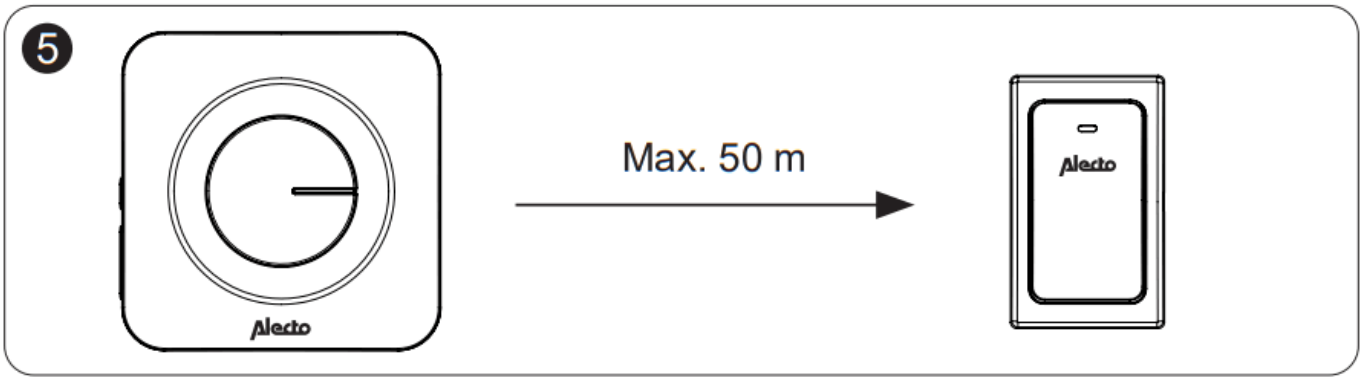

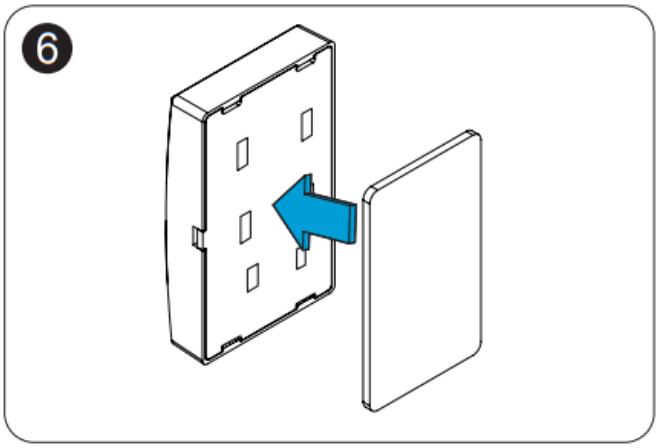

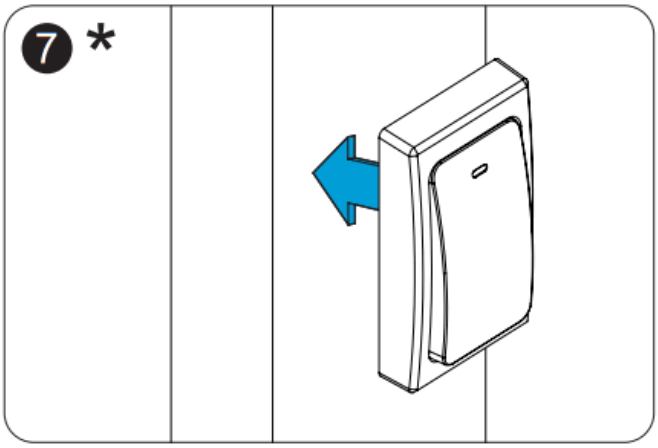

* Do not place the doorbell directly on a metal surface or on a surface containing metal.
This will have a negative effect on the doorbells operation.

Extra

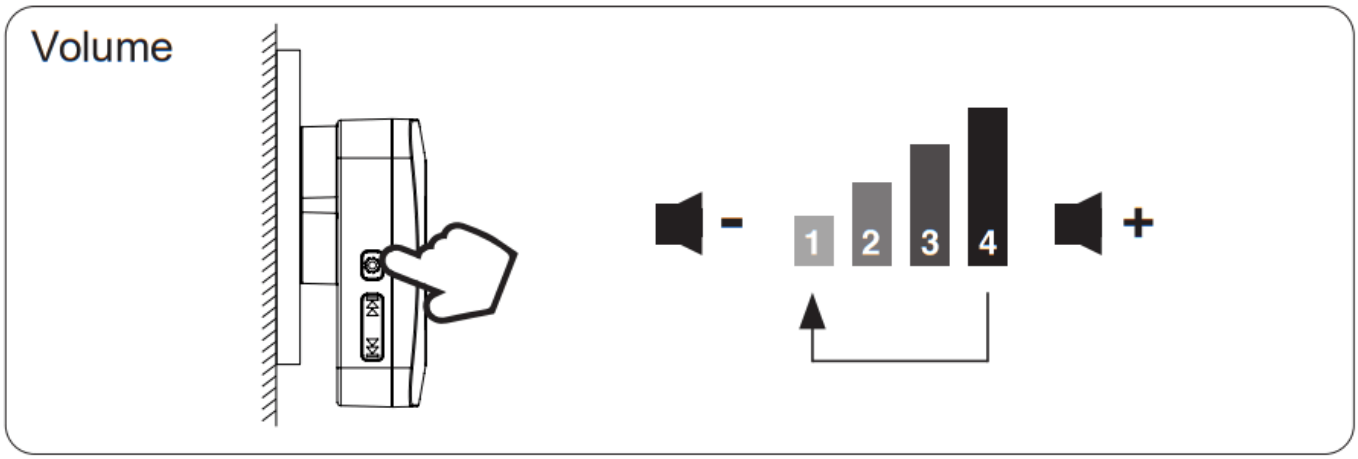

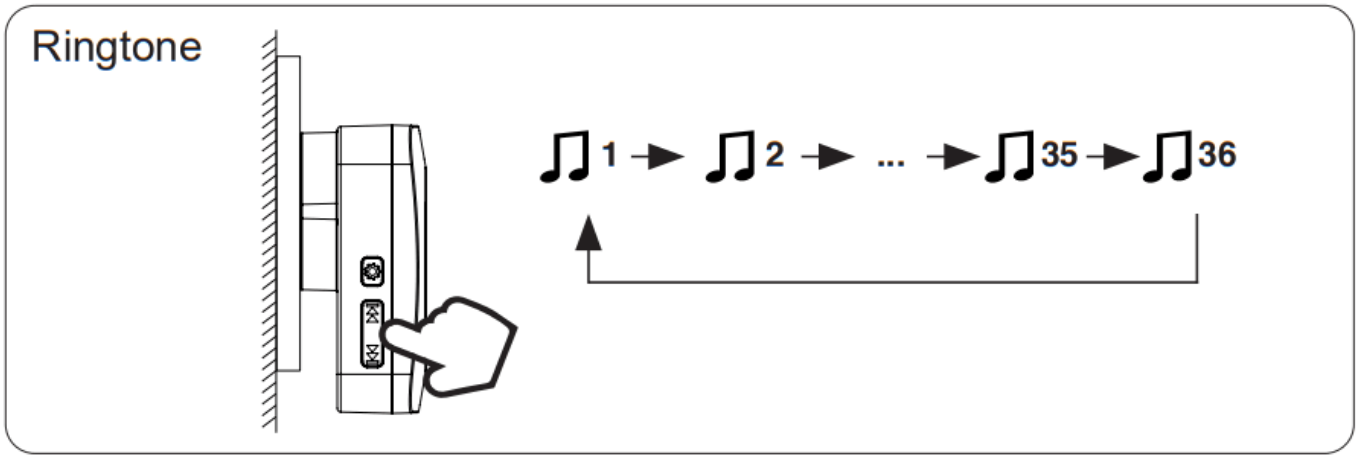

Multiple indoor bells

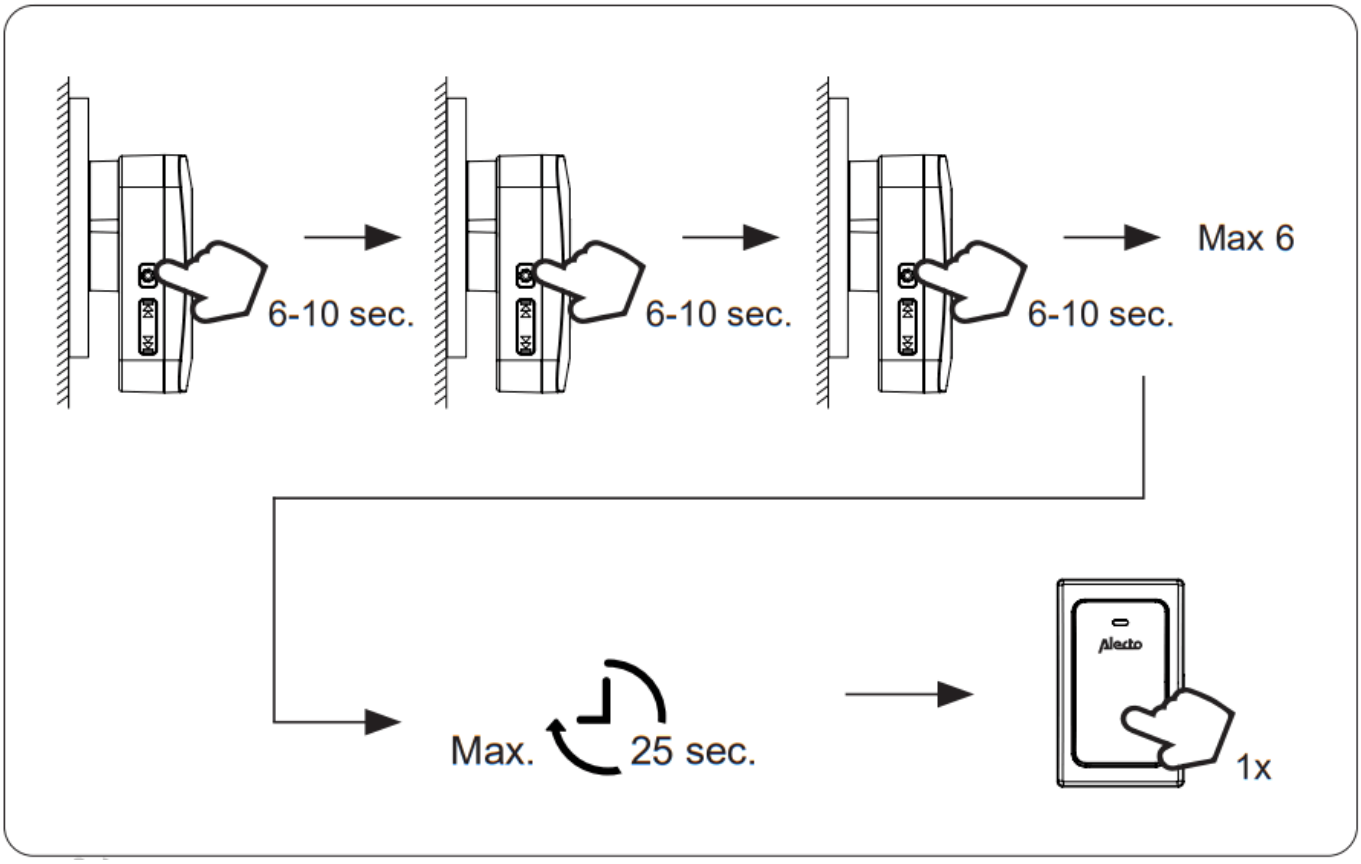

Disconnect indoor bell

1. Unplug the inner bell.
2. Press and hold button while putting the inner door bell back into the socket.
3. Wait until the blue light goes out.
4. The inner doorbell is now disconnected.

Specifications

Indoor bell power supply:	220-240V AC, 50Hz
Outdoor bell power supply:	Battery-free
Transmission range:	Up to 200 meter (depending on the environment)
Transmission frequency:	433.92 MHz
Transmission power:	<20 dBm
Number of ringtones:	36
Volume levels:	4
Water resistant:	IP44

DECLARATION OF CONFORMITY
Hereby, Commaxx declares that the radio equipment type Alecto ADB30 is in compliance with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: **http://DOC.hesdo.com/ADB30-DOC.pdf**

Commaxx B.V.
Wiebachstraat 37
6466 NG Kerkrade
The Netherlands
www.alecto.nl

v1.1

Documents / Resources

	Alecto ADB30WT, ADB30ZT Self Powered Wireless Doorbell [pdf] User Guide ADB30WT ADB30ZT Self Powered Wireless Doorbell, ADB30WT, ADB30ZT, ADB30WT Self Powered Wireless Doorbell, ADB30ZT Self Powered Wireless Doorbell, Self Powered Doorbell, Wireless Doorbell, Doorbell

References

- Alecto.nl | alectonl

Manuals+.