Amada AMPS04 Height Adjustable Projector Stand Instruction Manual

ΛMΛDΛ
H O M E F U R N I S H I N G
INSTRUCTION
MANUAL
AMPS04
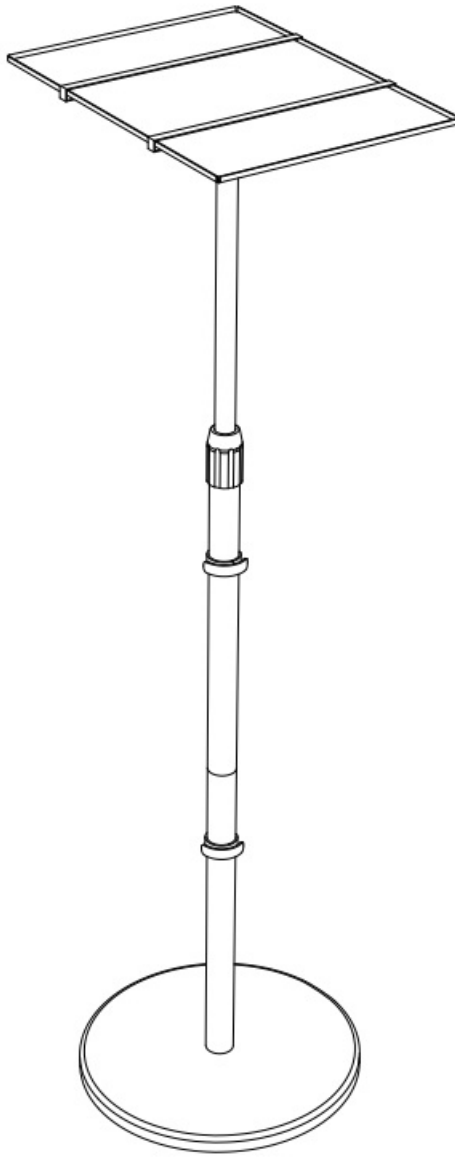
Projector Stand

Contents

Choose Your Configuration

A Projector Without Threaded Hole

Page 06

NOT Included
Non Inclus

Max: 45.1" (1145mm)

Min: 33.9" (860mm)
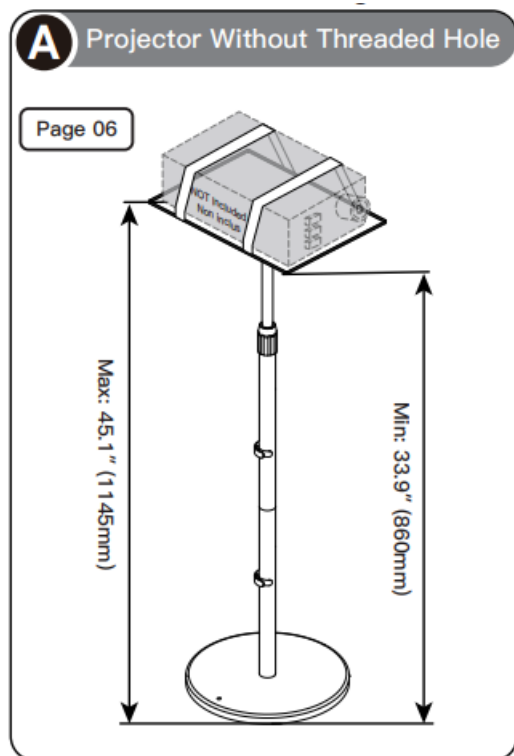
Pages 04, 05, 06

Pages 04, 05, 07

Pages 04, 05, 08

B Projector With Threaded Hole

Page 07

NOT Included
Non Inclus

· Centered

C Projector With Threaded Hole

Page 08

NOT Included
Non Inclus

· Off Centered
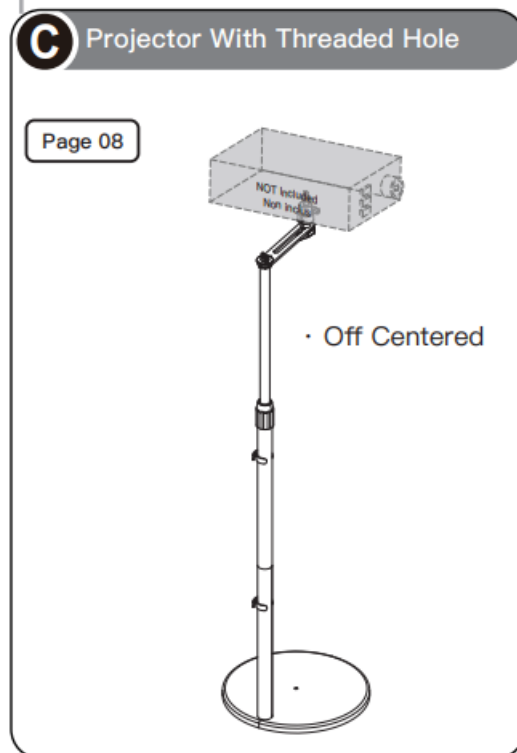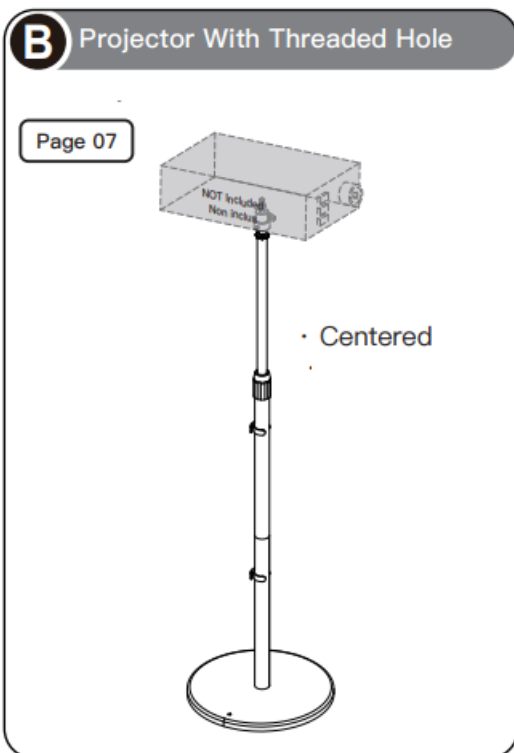
IMPORTANT SAFETY INFORMATION

Projector Stand Weight Capacity
Do not exceed weight capacity.
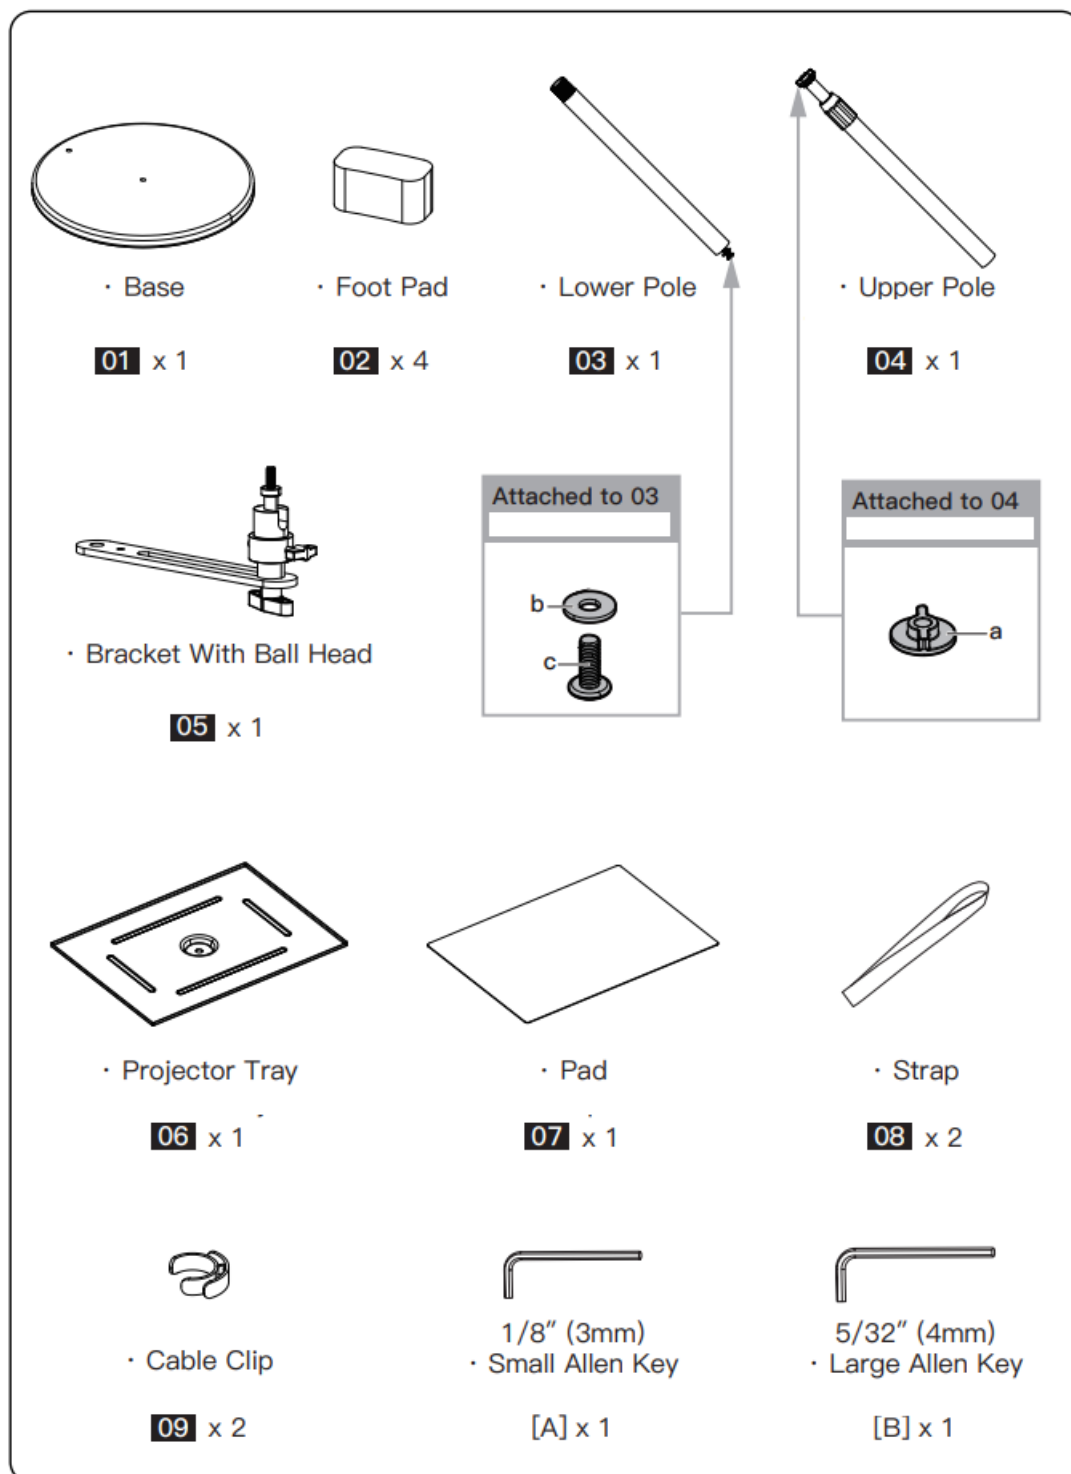

11 lbs
(5kg)

- Check package contents against supplied parts and hardware list to ensure that all components were received and undamaged. DO NOT use damaged or defective parts.
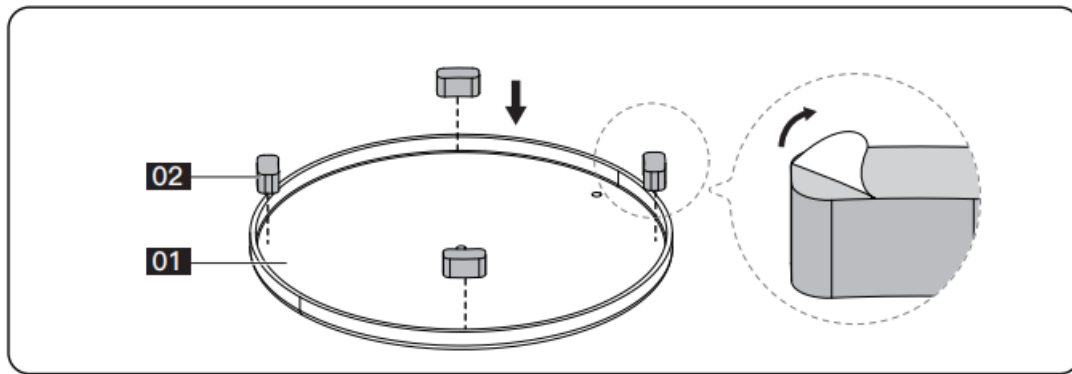
If you require replacement parts, please contact technical support at 877-200-3259 (US/CA) / 44-808-178-0934 (UK) or customer service at **support@amadahome.com**.

- Carefully read all instructions before attempting installation. If you have any questions or concerns, please contact please contact technical support at 877-200-3259 (US/CA) / 44-808-178-0934 (UK) or customer service at **support@amadahome.com**.
- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. We are not liable for damage or injury caused by incorrect assembly or inappropriate use. Thank you for your understanding.
- WARNING: For use on flat, level surfaces only. Do not use on surfaces that are uneven or sloping.
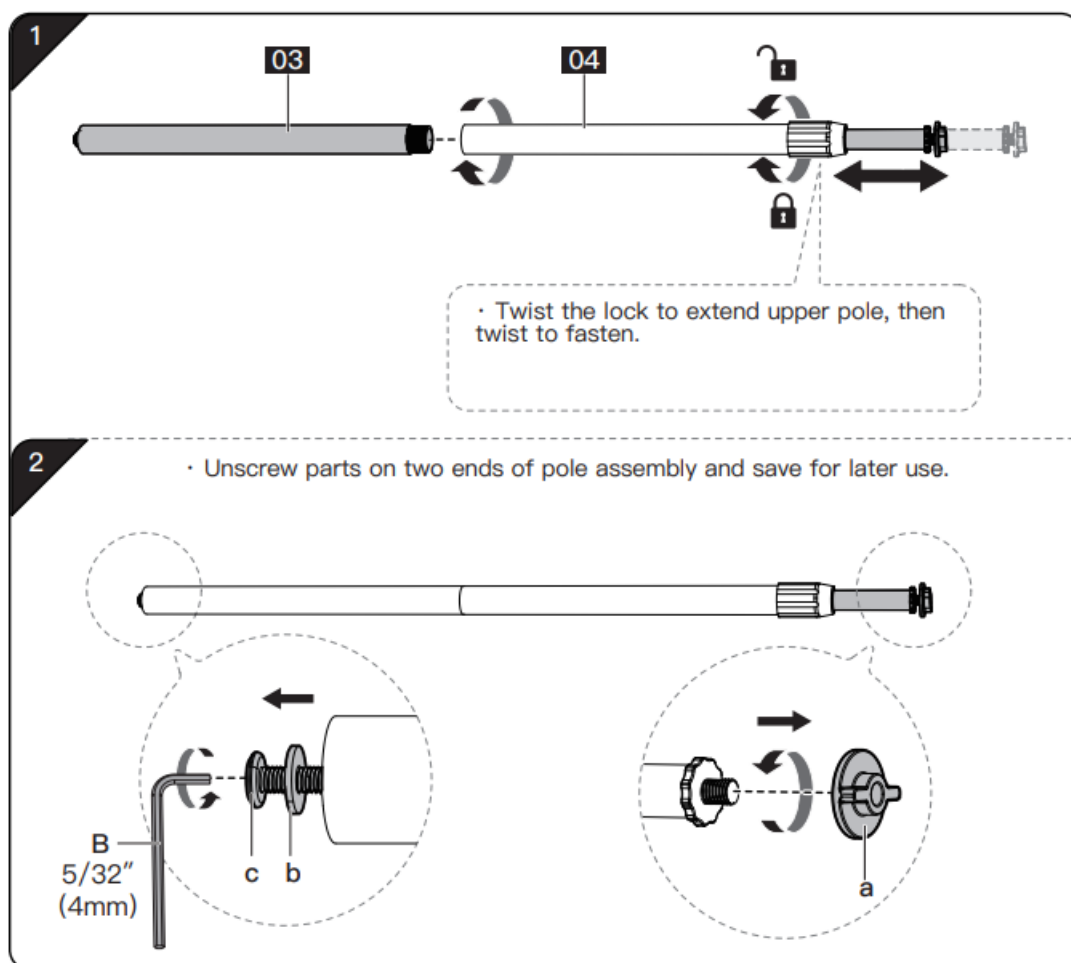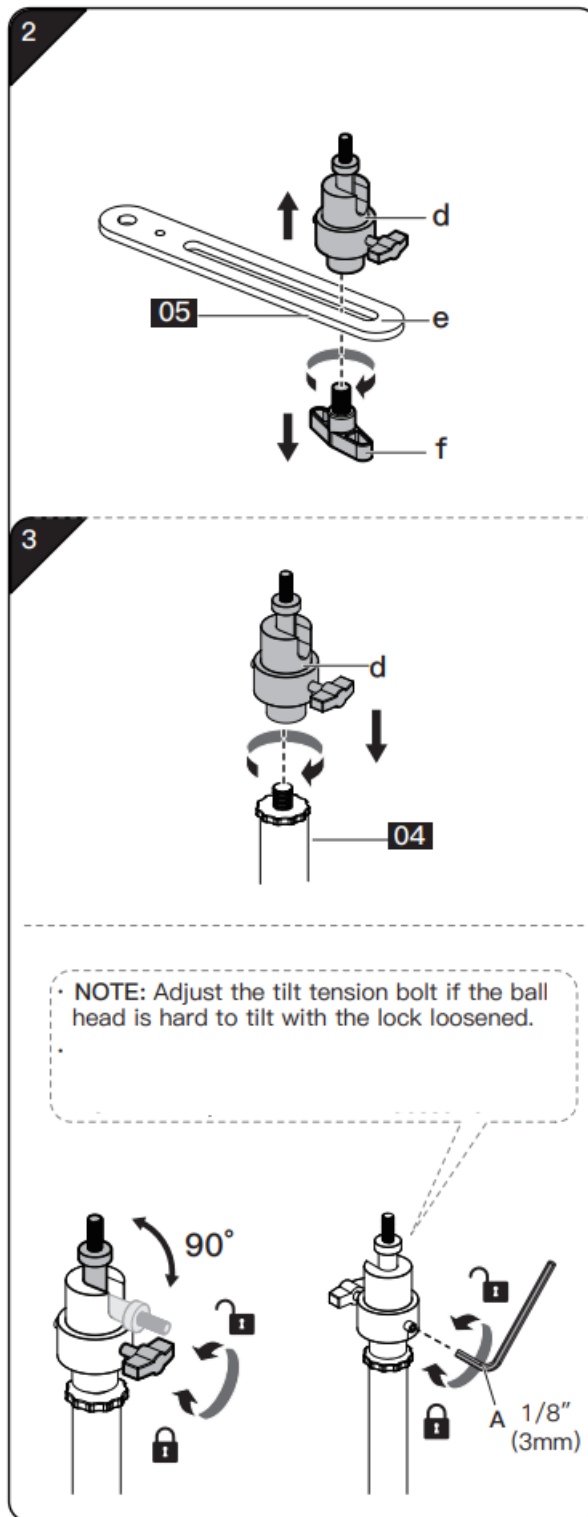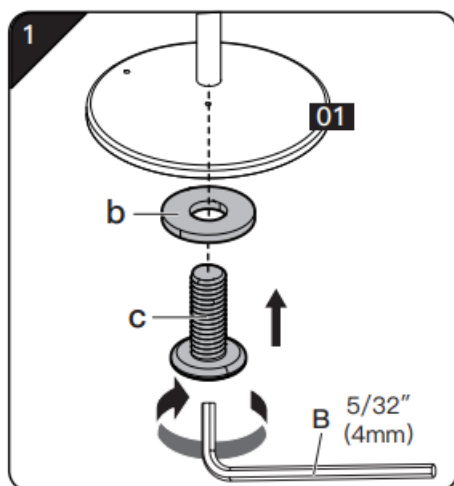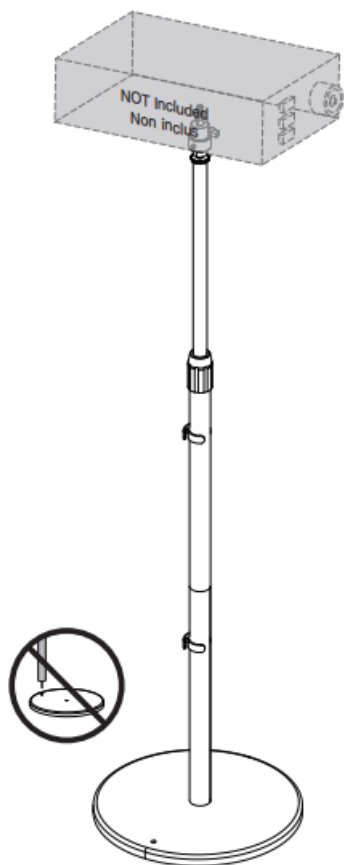
Supplied Parts and Hardware

· Base	· Foot Pad	· Lower Pole	· Upper Pole
01 x 1	02 x 4	03 x 1	04 x 1

· Bracket With Ball Head	Attached to 03	Attached to 04
05 x 1	b, c	a

· Projector Tray	· Pad	· Strap
06 x 1	07 x 1	08 x 2

· Cable Clip	1/8" (3mm) · Small Allen Key	5/32" (4mm) · Large Allen Key
09 x 2	[A] x 1	[B] x 1

Step 1 Attach Foot Pads to Base

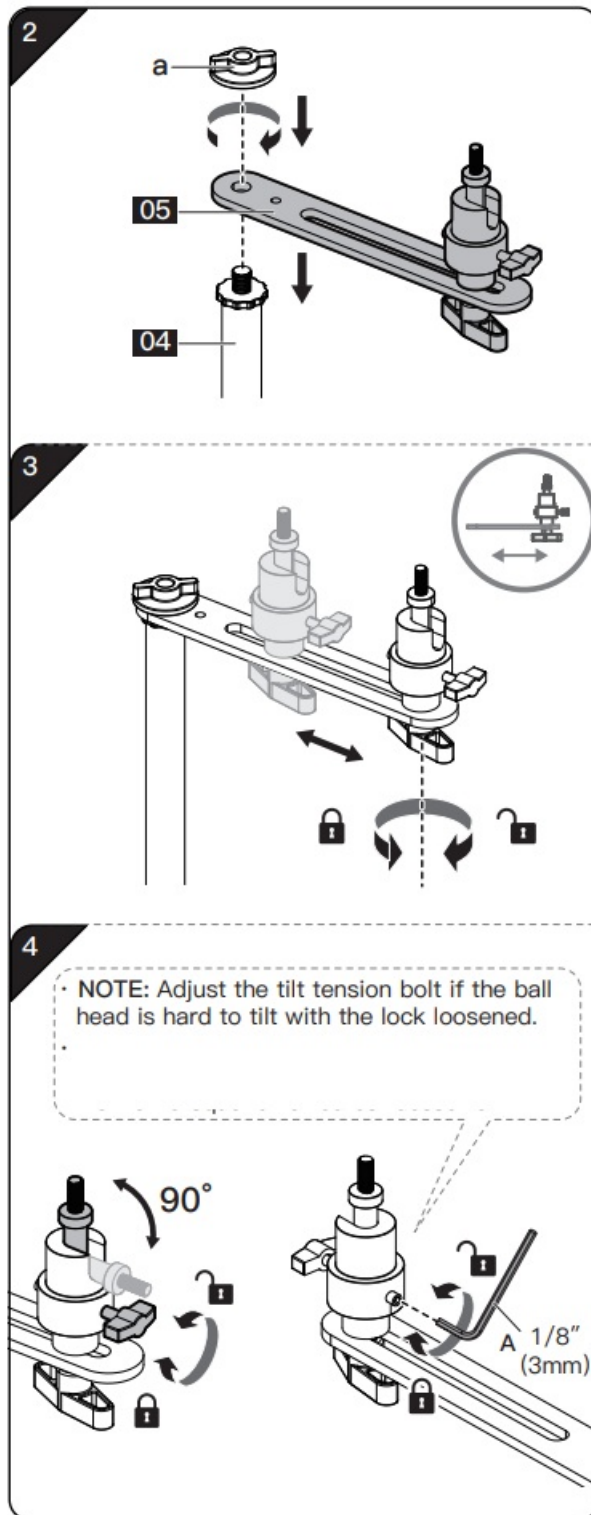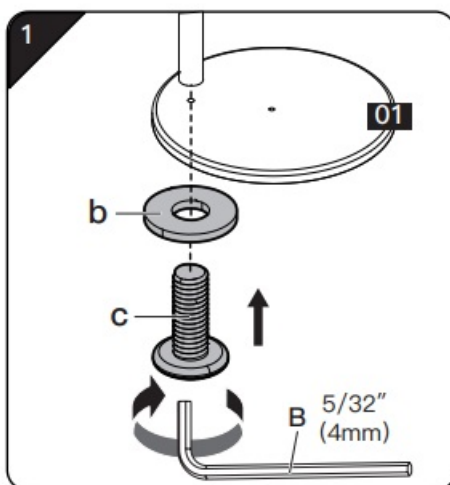**Step 2 Connect Poles to Base and Attach Other Parts to Pole End**

1

03   04

· Twist the lock to extend upper pole, then twist to fasten.

2   · Unscrew parts on two ends of pole assembly and save for later use.

B
5/32"
(4mm)

c   b

a

Projector Without Threaded Hole

NOT Included
Non inclus

2

05

d

e

f

3

d

04

NOTE: Adjust the tilt tension bolt if the ball head is hard to tilt with the lock loosened.

90°

A 1/8"
(3mm)

1

01

b

c

B 5/32"
(4mm)

Projector With Threaded Hole

NOT Included
Non inclus
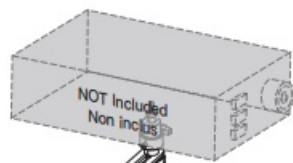
· **NOTE:** Position the bracket with ball head toward the center of base for stability.

2
a

05

04

3

4
· **NOTE:** Adjust the tilt tension bolt if the ball head is hard to tilt with the lock loosened.
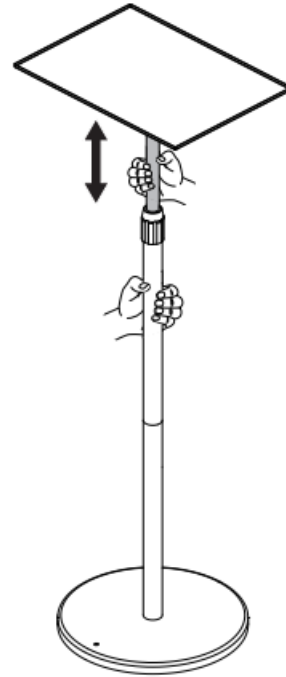
90°

A 1/8"
(3mm)

1
01

b

c

B 5/32"
(4mm)

Step 3 Adjust the Height
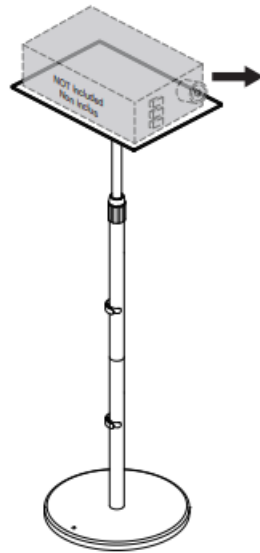
· **NOTE:** Remove the projector before height adjustment.
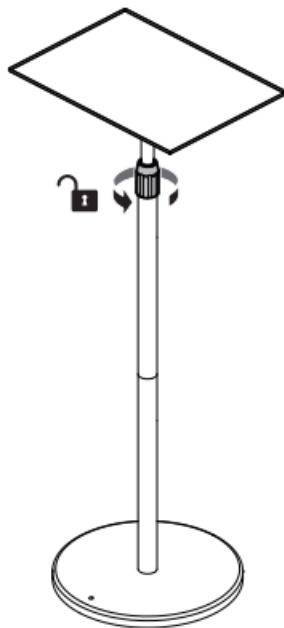
Step 4 Atta**ch Cable Clips**

Documents / Resources

Amada AMPS04 Height Adjustable Projector Stand [pdf] Instruction Manual
AMPS04 Height Adjustable Projector Stand, AMPS04, Height Adjustable Projector Stand, Adjustable Projector Stand, Projector Stand, Stand

References

- **User Manual**