Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun KF47

Braun KF 47 Aromaster Classic Coffee Maker User Manual

Model: KF47

Introduction

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your Braun KF 47 Aromaster Classic Coffee Maker. Please read all instructions carefully before first use and keep this manual for future reference.

Safety Instructions

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the appliance in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Use only with cold, fresh water.
- Do not open the filter basket during the brewing cycle.

Setup

Unpacking and Initial Cleaning

Carefully remove all packaging materials. Before first use, wash the carafe, lid, and filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.

Placement

Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the countertop. Ensure there is adequate ventilation around the unit.



Image: The Braun KF 47 Aromaster Classic coffee maker positioned on a kitchen counter, ready for use. The glass carafe is empty, and the unit is clean, highlighting its compact design.

Operating Instructions

Brewing Coffee

1. **Fill the Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water up to the desired level indicated on the water level indicator. The maximum capacity is 10 cups.
2. **Insert Filter and Coffee Grounds:** Swing out the filter basket. Place a paper filter (size 4) into the filter basket. Add the desired amount of ground coffee into the filter. For best results, use approximately one tablespoon of ground coffee per cup. Close the filter basket securely.
3. **Place Carafe:** Ensure the glass carafe with its lid is correctly placed on the warming plate.
4. **Start Brewing:** Plug the coffee maker into a power outlet. Press the ON/OFF switch to begin the brewing cycle. The indicator light will illuminate.
5. **Serving:** Once brewing is complete, the coffee maker will automatically keep the coffee warm. You can remove the carafe to pour coffee at any time; the drip-stop feature will prevent dripping.



Image: The Braun KF 47 Aromaster Classic coffee maker in operation, with freshly brewed coffee visible in the glass carafe. The

water level indicator is visible on the side.

Aroma Protection System

The Braun KF 47 features an OptiBrew System, which ensures an optimal ratio of temperature, brewing time, and coffee powder extraction for a consistent coffee flavor. The special aroma protection lid on the carafe helps to maintain the coffee's temperature and flavor by minimizing air exposure.



Image: A diagram highlighting the OptiBrew System, showing the precise control over water temperature, brewing time, and extraction to achieve optimal coffee flavor.

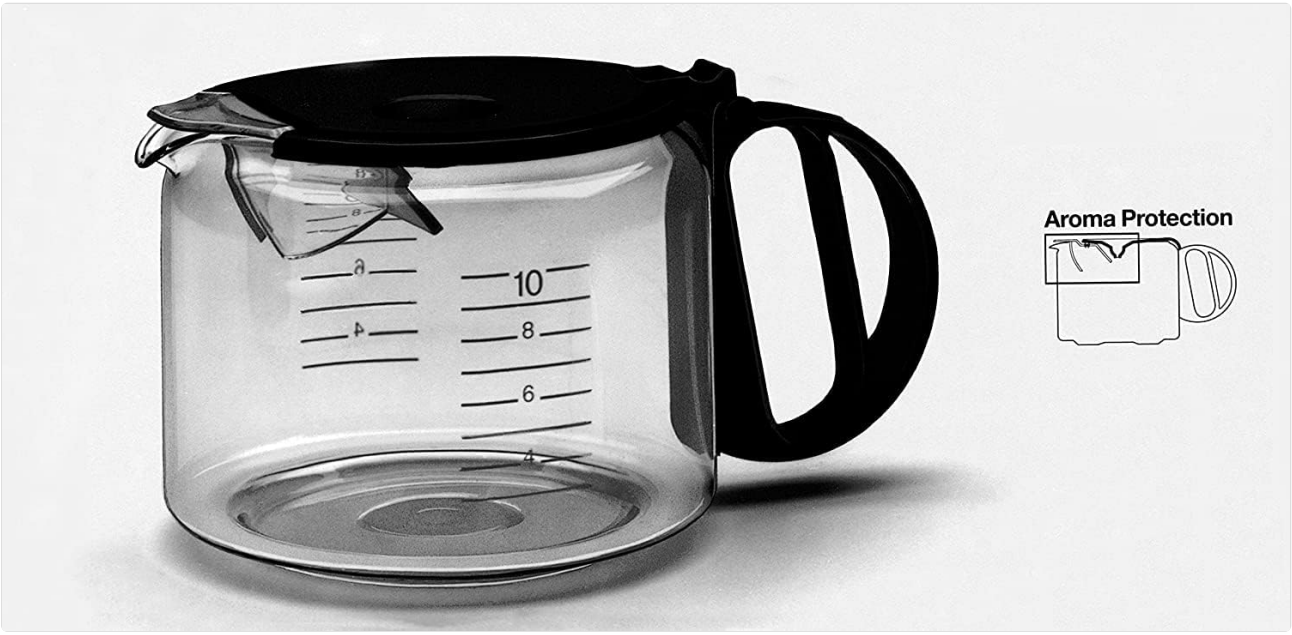


Image: The glass carafe designed for the Braun KF 47 Aromaster Classic, featuring a lid labeled "Aroma Protection" to preserve coffee freshness and temperature.

Maintenance

Daily Cleaning

- **Carafe and Lid:** The glass carafe and its lid are dishwasher-safe. Alternatively, wash them in warm, soapy water after each use.
- **Filter Basket:** The swing-out filter basket can be easily removed for cleaning. Wash it with warm, soapy water.
- **Exterior:** Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling

Mineral deposits from water can build up in your coffee maker over time, affecting performance and coffee taste. Descale your coffee maker regularly, depending on water hardness and frequency of use. Follow these general steps:

1. Prepare a descaling solution according to the manufacturer's instructions (e.g., white vinegar and water, or a commercial descaling agent).
2. Pour the solution into the water reservoir.
3. Run a brewing cycle without coffee grounds.
4. After the cycle, discard the solution and run two full cycles with fresh, clean water to rinse the system thoroughly.

Troubleshooting

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; power switch off; water reservoir empty.	Ensure appliance is plugged in and power switch is ON. Fill water reservoir.
Coffee tastes weak.	Not enough coffee grounds; coffee too coarsely ground; appliance needs descaling.	Add more coffee grounds. Use finer ground coffee. Descale the appliance.
Coffee overflows from filter.	Too much coffee grounds; filter clogged; carafe not properly placed.	Reduce coffee grounds. Ensure filter is not clogged. Place carafe correctly on warming plate.

Specifications

Feature	Detail
Brand	Braun
Model Number	KF47 White
Color	White
Dimensions (L x W x H)	12 x 10 x 15.4 cm (4.7 x 3.9 x 6.1 inches)
Capacity	10 cups

Feature	Detail
Power	1000 Watts
Material	Plastic
Special Features	OptiBrew System, AromaCarafe, Drip-stop function, External water level indicator, Cable storage
Weight	1.98 Kilograms (4.37 lbs)



Image: A visual representation of the Braun KF 47 Aromaster Classic coffee maker with its key dimensions indicated, showing a height of approximately 14 inches (34 cm).

Warranty and Support

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact Braun customer service or visit the official Braun website.

Note: Information regarding spare parts availability is not provided in the product details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00008K5XZ

More documents and user manuals: **https://manuals.plus/**