**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Magic Wand 07N7162

# Magic Wand Original Massager User Manual

Model: 07N7162

### 1. Product Overview

The Magic Wand Original Massager, Model 07N7162, is an electric massager designed for external use. It features a soft, vinyl head and operates via a six-foot cord that plugs into a standard wall outlet, providing continuous power. The device offers two power settings, high and low, controlled by an intuitive switch. It is designed to deliver vibrations for massage purposes.






Image 1: Magic Wand Original Massager. This image displays the white massager with its blue control switch and attached power cord.

## 2. Safety Information

Please read and understand all safety instructions before using the Magic Wand Original Massager. Failure to follow these instructions may result in injury or damage to the product.

- For adult use only.
- Do not use the massager in water or immerse it in any liquids.
- Unplug the massager from the electrical outlet when not in use.
- Keep the power cord away from heated surfaces.
- Do not operate the massager if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Do not attempt to repair the massager yourself. Contact qualified service personnel for repairs.

## 3. Setup and Initial Use

1. Carefully remove the massager from its packaging.
2. Before first use, wipe the massager head with a damp cloth to ensure cleanliness.
3. Ensure the control switch is in the 'OFF' (O) position.

4. Plug the power cord into a standard electrical outlet.

## 4. Operating Instructions

To operate your Magic Wand Original Massager:

1. With the massager plugged in, slide the control switch to the 'LOW' (-) position for a gentle massage.
2. For a more intense massage, slide the control switch to the 'HIGH' (=) position.
3. Apply the soft vinyl head of the massager to the desired area of the body.
4. Move the massager in a circular or back-and-forth motion as preferred.
5. To turn off the massager, slide the control switch back to the 'OFF' (O) position.
6. Always unplug the massager from the electrical outlet after each use.

## 5. Maintenance and Care

- Always unplug the massager before cleaning.
- Clean the massager head and body with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Store the massager in a cool, dry place, away from direct sunlight and out of reach of children.
- Do not wrap the power cord tightly around the massager, as this may damage the cord.

## 6. Troubleshooting

If the massager does not operate:

- Ensure the power cord is securely plugged into a functional electrical outlet.
- Check that the control switch is set to either 'LOW' (-) or 'HIGH' (=) position.
- If the issue persists, discontinue use and contact customer support.

## 7. Specifications

| Feature | Detail |
|---|---|
| Model Number | 07N7162 |
| Brand | Magic Wand |
| Power Source | Corded Electric |
| Material | Plastic |
| Product Dimensions | 3.94 x 2.76 x 0.37 inches |
| Item Weight | 100 Grams (3.53 ounces) |
| Manufacturer | Drugstore |
| Date First Available | October 2, 2003 |

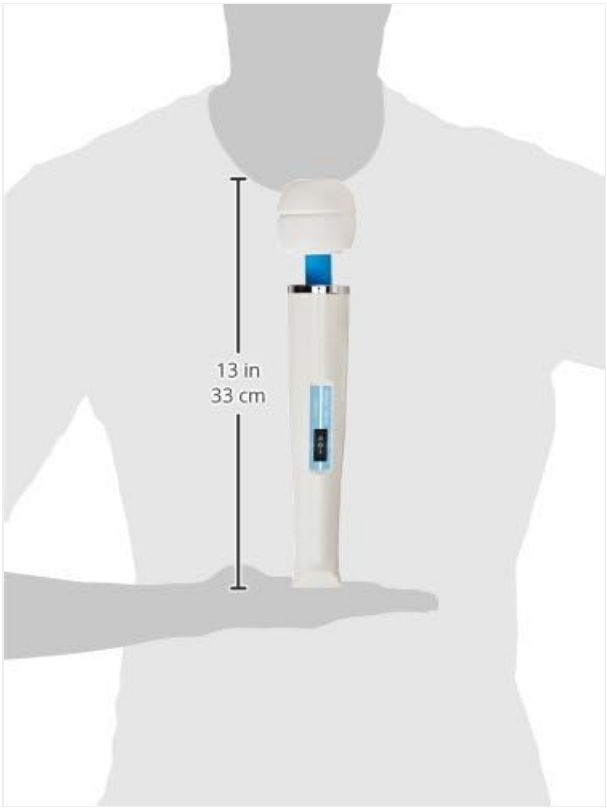


Image 2: Magic Wand Original Massager with a visual representation of its 13-inch (33 cm) length.

## 8. Warranty Information

The Magic Wand Original Massager comes with a 1-year manufacturer's warranty, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For warranty service or support, please contact the manufacturer or authorized retailer.

## 9. Legal Information

This product is subject to shipping restrictions. It can only be shipped to the following countries: Canada, Mexico, United States.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B000122H6M**

More documents and user manuals: **https://manuals.plus/**