Manuals+

Q & A | Deep Search | Upload

Wahl Professional 1006

Wahl Professional 2-Hole Standard Clipper Blade (Model 1006)

Instruction Manual

Introduction Compatibility Package
Contents Installation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential instructions for the installation, maintenance, and proper use of your Wahl Professional 2-Hole Standard Clipper Blade, Model 1006. Designed for professional precision, this replacement blade ensures accurate and sharp performance for various Wahl clippers. Please read this manual thoroughly before use to ensure optimal performance and longevity of your blade.

Image 1: Wahl Professional 2-Hole Standard Clipper Blade, Model 1006.

2. Compatibility

The Wahl Professional 2-Hole Standard Clipper Blade (Model 1006) is compatible with the following Wahl clipper models:

- Wahl Super Taper
- Wahl Super Taper II
- Wahl Icon
- Wahl Pro Basic
- Wahl Sterling 9

Image 2: Various Wahl clipper models compatible with the 2-Hole Standard Clipper Blade.

3. Package Contents

Your Wahl Professional 2-Hole Standard Clipper Blade package includes:

- 1mm-3mm Standard Clipper Blade
- Blade Oil
- Mounting Screws
- Installation Instructions (this manual)

4. Blade Installation

Follow these steps to properly install your new clipper blade:

1. **Power Off:** Ensure your clipper is turned off and unplugged from the power source before beginning installation.
2. **Remove Old Blade:** Using a screwdriver, carefully loosen and remove the two screws holding the old blade assembly to the clipper housing. Set aside the old blade and screws.
3. **Clean Clipper:** Clean any hair or debris from the clipper's blade area using a brush.
4. **Position New Blade:** Place the new Wahl Professional 2-Hole Standard Clipper Blade onto the clipper, aligning the holes in the blade with the screw holes on the clipper. Ensure the small moving blade is correctly seated on the drive

lever.

5. **Secure Blade:** Insert the screws and tighten them just enough to hold the blade in place, allowing for slight adjustment.
6. **Align Blades:** Adjust the blade to ensure the top blade (cutter) is perfectly aligned with the bottom blade (comb), with the teeth of the top blade slightly behind the teeth of the bottom blade. This prevents cutting the skin.
7. **Final Tightening:** Once aligned, firmly tighten both screws. Do not overtighten.
8. **Lubricate:** Apply a few drops of Wahl clipper oil to the teeth of the new blade.

Image 3: Detailed view of the 2-Hole Standard Clipper Blade, highlighting its design and dimensions.

5. Maintenance

Proper maintenance is crucial for extending the life and performance of your clipper blade.

5.1 Oiling the Blades

Regular oiling reduces friction, prevents rusting, and ensures smooth cutting performance. Wahl's high-carbon blades benefit significantly from consistent lubrication.

1. **Apply Oil:** With the clipper turned off, apply a drop of Wahl clipper oil to each corner of the top blade and one drop to the foot of the blade.
2. **Distribute Oil:** Turn the clipper on for a few seconds to allow the oil to work its way into the blades.
3. **Wipe Excess:** Wipe off any excess oil with a clean cloth.

It is recommended to oil your blades before or after each use, especially if the clipper feels sluggish or pulls hair.

Your browser does not support the video tag.

Video 1: Demonstrates how to oil clipper blades to prevent pulling and ensure smooth operation.

5.2 Cleaning the Blades

After each use, brush off any loose hair from the blades. For a deeper clean, especially after prolonged use or if hair buildup is noticeable:

1. **Brush Off Hair:** Use a small cleaning brush to remove hair from between the blade teeth.
2. **Disinfect (Optional):** For professional use, consider using a clipper disinfectant spray (e.g., Wahl Clini-Clip Spray) to sanitize the blades. Follow the product's instructions.
3. **Re-oil:** Always re-oil the blades after cleaning or disinfecting to prevent rust and maintain lubrication.

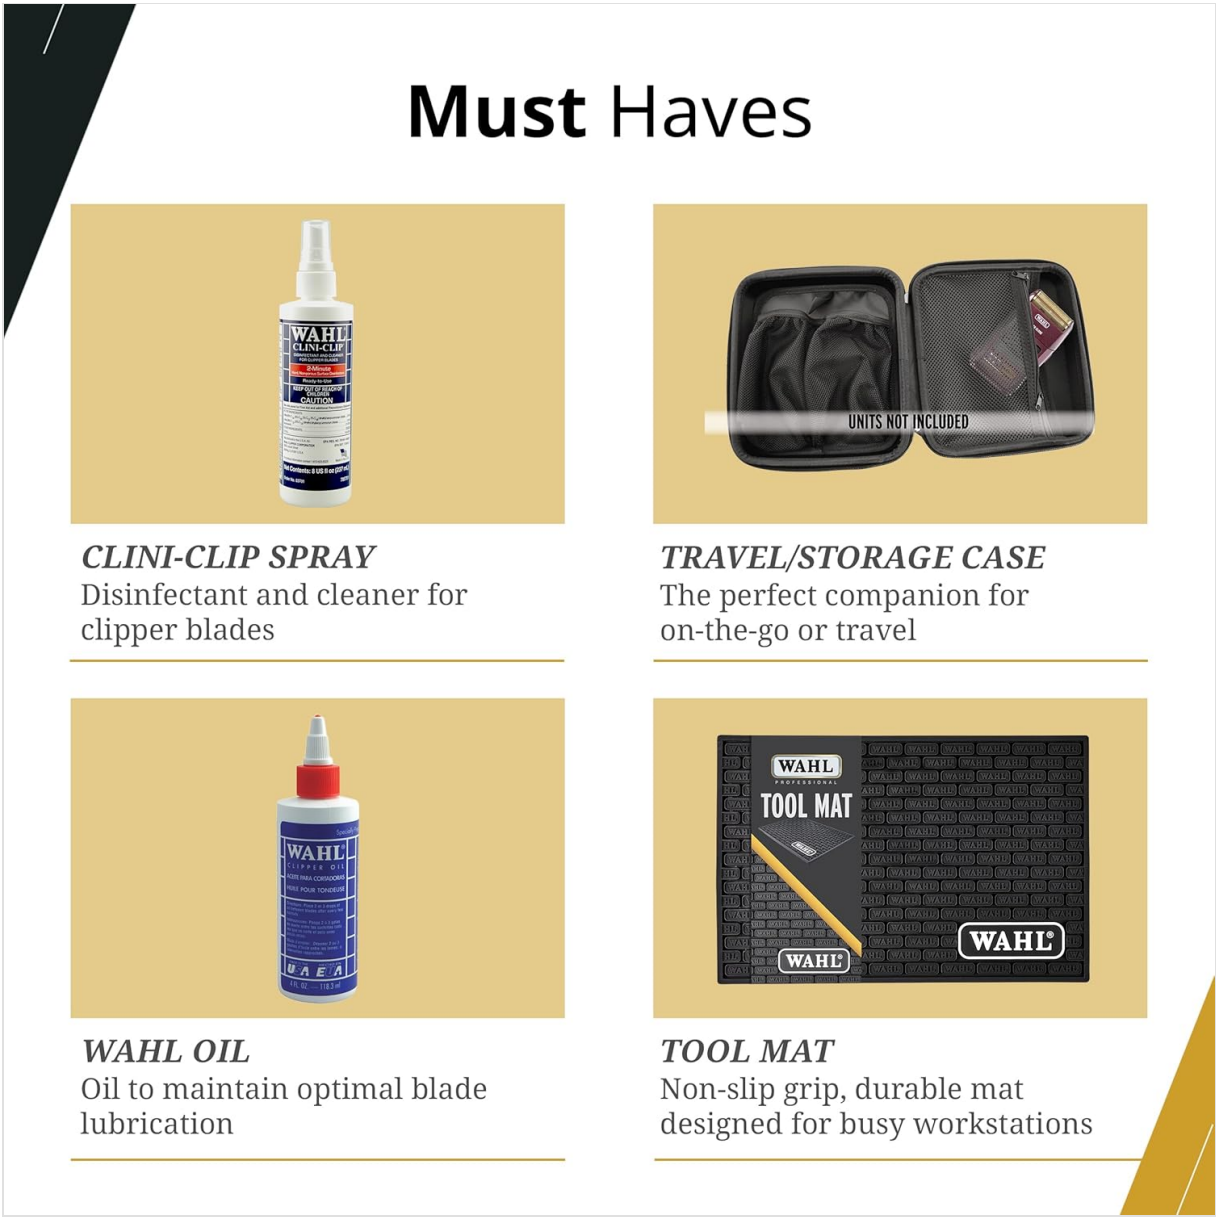

Image 4: Essential maintenance products for Wahl clippers, including blade oil and disinfectant spray.

6. Troubleshooting

Problem	Possible Cause	Solution
Clipper pulls or snags hair	Blades are dull, dirty, or not properly oiled.	Clean and oil the blades. If the problem persists, the blades may need sharpening or replacement.
Blades are rusting	Insufficient oiling or exposure to moisture.	Ensure blades are thoroughly dried after cleaning and regularly oiled, especially in humid environments.
Blade not cutting effectively	Improper blade alignment or worn blades.	Check blade alignment as per installation instructions. If blades are old, consider replacing them.

7. Specifications

- **Product Name:** 2-Hole Standard Clipper Blade
- **Model Number:** 1006
- **Brand:** Wahl Professional
- **Cutting Length:** 1mm-3mm (Standard)
- **Material:** High-carbon steel

- **Dimensions:** 2 x 0.1 x 3 inches
- **Item Weight:** 0.8 ounces
- **UPC:** 785085010068, 043917100609
- **Manufacturer:** Wahl Professional
- **Origin:** Made in the USA

8. Warranty & Support

For warranty information, product support, or to purchase additional accessories, please visit the official Wahl Professional website or contact their customer service. Keep your purchase receipt as proof of purchase for any warranty claims.
Wahl Professional Website: www.wahlpro.com

© 2026 Wahl Professional. All rights reserved.