BLACK+DECKER CD601

BLACK+DECKER CD601 Circular Saw User Manual

Model: CD601

Introduction

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your BLACK+DECKER CD601 Circular Saw. Please read this manual thoroughly before using the tool to ensure proper function and safety.

Safety Instructions

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Keep your work area clean and well-lit. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Keep children and bystanders away while operating a power tool.

- Wear appropriate personal protective equipment (PPE) including safety glasses, hearing protection, and gloves.
- Ensure the blade is sharp and correctly installed.
- Secure the workpiece firmly before cutting.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in.
- Do not overreach. Maintain proper footing and balance at all times.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.

Product Overview

The BLACK+DECKER CD601 is a powerful circular saw designed for efficient cutting of wood. Key features include an 1100W motor, 55mm cutting depth, and bevel cutting capability.

Figure 1: Overview of the BLACK+DECKER CD601 Circular Saw.

Key Components:

- **Motor Housing:** Contains the 1100W motor.
- **Handle:** Ergonomically designed for comfortable grip.
- **Blade Guard:** Retracts during cutting, covers blade when not in use.
- **Blade:** 170mm Tungsten Carbide Tipped (TCT) blade.
- **Depth Adjustment Lever:** For setting cutting depth up to 55mm.
- **Bevel Adjustment:** Allows for angled cuts (0-45 degrees).
- **Parallel Guide:** For straight and accurate cuts.
- **Safety Switch:** Prevents accidental startup.
- **Dust Extraction Port:** For connecting a dust collection system.

Setup

1. Blade Installation

1. Ensure the saw is unplugged from the power source.
2. Press the spindle lock button to secure the blade.
3. Use the provided wrench to loosen the blade retaining screw.

4. Remove the outer flange and old blade.
5. Install the new 170mm TCT blade, ensuring the teeth point in the direction of rotation indicated on the saw.
6. Replace the outer flange and tighten the blade retaining screw securely.

2. Adjusting Cutting Depth

1. Loosen the depth adjustment lever.
2. Raise or lower the saw base to achieve the desired cutting depth. The maximum depth is 55mm.
3. Ensure the blade extends approximately 3-6mm below the workpiece for optimal cutting.
4. Tighten the depth adjustment lever firmly.

3. Adjusting Bevel Angle

1. Loosen the bevel adjustment knob.
2. Tilt the saw base to the desired angle (0-45 degrees).
3. Tighten the bevel adjustment knob securely.

Operating Instructions

1. General Cutting

1. Ensure the workpiece is securely clamped.
2. Plug the saw into a suitable power outlet (230V).
3. Hold the saw firmly with both hands.
4. Press the safety switch and then the trigger to start the saw. Allow the blade to reach full speed before contacting the workpiece.
5. Guide the saw smoothly along the cutting line, applying steady, even pressure. Do not force the saw.
6. Once the cut is complete, release the trigger and allow the blade to stop completely before lifting the saw from the workpiece.

Figure 2: Proper operation of the circular saw, demonstrating a straight cut on a wooden board.

2. Using the Parallel Guide

The parallel guide helps achieve straight cuts parallel to the edge of the workpiece.

1. Insert the parallel guide into the slots on the front of the saw base.
2. Adjust the guide to the desired width from the blade and tighten the locking screw.
3. Rest the guide against the edge of the workpiece and proceed with cutting as described above.

Figure 3: The circular saw positioned for a cut, illustrating the use of the parallel guide for accuracy.

Maintenance

1. Cleaning

- Always unplug the tool before cleaning.
- Regularly clean the ventilation slots to prevent motor overheating.
- Remove sawdust and debris from the blade guard and base plate.
- Use a soft brush or compressed air for cleaning. Do not use water or chemical cleaners.

2. Blade Care

- Inspect the blade regularly for sharpness and damage. Replace dull or damaged blades immediately.
- Ensure the blade is clean and free of resin buildup.

Troubleshooting

Problem	Possible Cause	Solution
Saw does not start	No power supply; Safety switch not engaged; Faulty power cord	Check power connection; Ensure safety switch is pressed; Inspect power cord for damage.
Poor cutting performance / Blade binds	Dull or incorrect blade; Incorrect cutting depth; Workpiece not secured	Replace blade; Adjust cutting depth; Secure workpiece firmly.
Excessive vibration	Loose blade; Damaged blade; Motor issue	Check blade tightness; Replace damaged blade; Contact service center if motor issue suspected.

Specifications

Feature	Value
Brand	BLACK+DECKER
Model	CD601
Power	1100 Watts
Voltage	230 Volts
No-load Speed	4700 rpm
Blade Diameter	170 mm
Max. Cutting Depth (90°)	55 mm
Bevel Capacity	0-45 degrees
Power Source	Corded Electric
Weight	4.7 Kilograms
Dimensions (L x W x H)	29 x 20 x 50 cm
Included Components	Circular Saw, Tungsten Carbide Tipped Blade, Parallel Guide

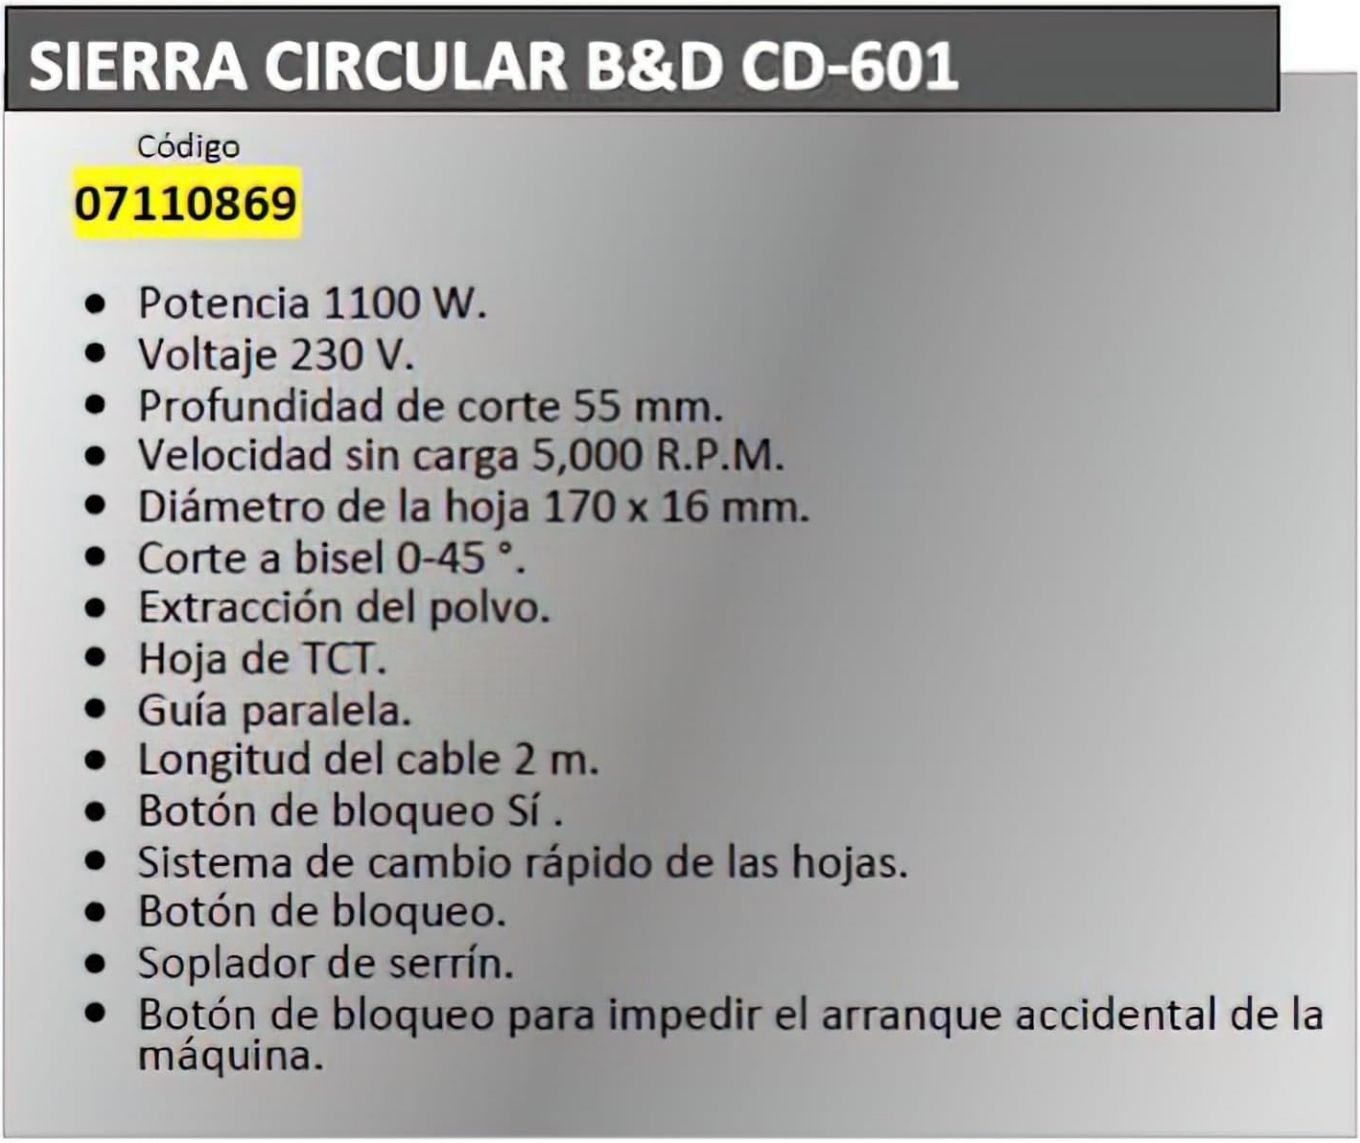

Figure 4: Technical specifications and features of the BLACK+DECKER CD601 Circular Saw.

Warranty and Support

For warranty information, technical support, or service, please refer to the official BLACK+DECKER website or contact their customer service department. Keep your purchase receipt as proof of purchase.
Manufacturer: Stanley Black & Decker France

© 2023 BLACK+DECKER. All rights reserved.