Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lionsgate ANCH80008DVD

The Visitor DVD Instruction Manual

Model: ANCH80008DVD

Introduction

This instruction manual provides comprehensive guidance for the use and care of 'The Visitor' DVD. It covers essential information regarding setup, playback, maintenance, and product specifications to ensure an optimal viewing experience. Please read this manual thoroughly before using the product.

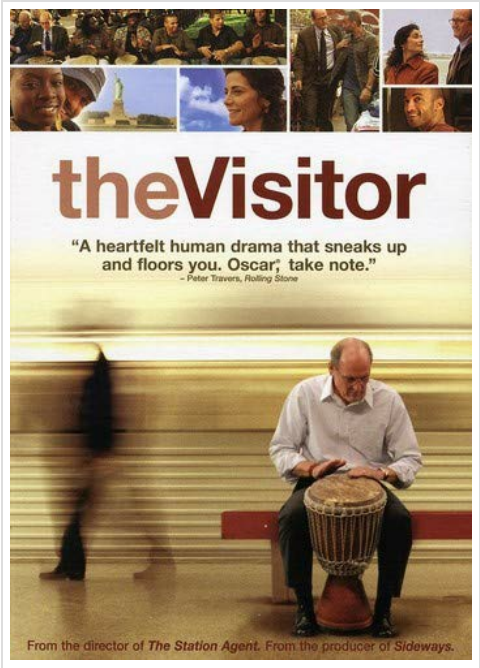

This image displays the official DVD cover for 'The Visitor', showing key actors and promotional text.

Setup

1. **Connect Your DVD Player:** Ensure your DVD player is correctly connected to your television or display device according to its manufacturer's instructions. This typically involves using HDMI, component, or composite cables.
2. **Power On:** Turn on your television and DVD player. Select the correct input source on your television that corresponds to your DVD player's connection.
3. **Insert the DVD:** Gently open the DVD player's disc tray. Hold 'The Visitor' DVD by its edges to avoid touching

the playback surface. Place the disc label-side up into the tray and close the tray.

4. **Automatic Playback:** Most DVD players will automatically load the disc and display the main menu or begin playback. If not, follow the on-screen prompts or press the 'Play' button on your remote control.

Operating Instructions

Basic Playback Controls

- **Play/Pause:** Press the **Play** button to start playback. Press **Pause** to temporarily stop and **Play** again to resume.
- **Stop:** Press the **Stop** button to end playback and return to the main menu or disc start.
- **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **RW (Rewind)** buttons to quickly scan through the movie.
- **Chapter Skip:** Use the **Next Chapter** and **Previous Chapter** buttons to jump between scenes.

Menu Navigation

Use the arrow keys (**Up, Down, Left, Right**) on your remote control to navigate through the DVD menu options. Press the **Enter** or **OK** button to select an option.

Language and Subtitle Selection

From the main menu, or by pressing the **Audio** or **Subtitle** button on your remote during playback, you can select your preferred audio language (English) and subtitle options.

Maintenance

Disc Handling and Storage

- **Handle with Care:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Proper storage helps prevent warping and damage to the disc.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

Troubleshooting

- **Disc Not Playing:**
  - Ensure the disc is inserted correctly, label-side up.
  - Check if the disc is clean and free of scratches. Clean if necessary.
  - Verify your DVD player is functioning correctly by trying another known-good DVD.
- **Skipping or Freezing:**
  - Clean the disc thoroughly.
  - Check for deep scratches on the disc surface. Severe scratches may prevent proper playback.
- **No Audio or Video:**
  - Ensure all cables connecting your DVD player to your TV are securely attached.

- Verify your TV is set to the correct input source.
- Check the audio settings on your DVD player and TV.

Specifications

Title	The Visitor
Model Number	ANCH80008DVD
Brand/Studio	Lionsgate
ASIN	B0015OKWKI
Genre	Drama
Director	Tom McCarthy
Actors	Richard Jenkins, Hazz Sleiman, Hiam Abbas
Run Time	1 hour and 44 minutes
Release Date	October 7, 2008
MPAA Rating	PG-13 (Parents Strongly Cautioned)
Aspect Ratio	1.33:1
Media Format	Anamorphic, Color, Dolby, HiFi Sound, Multiple Formats, NTSC, Surround Sound, THX, Widescreen
Number of Discs	1
Product Dimensions	0.7 x 7.5 x 5.4 inches; 2.72 ounces

Warranty and Support

Information regarding product warranty and customer support for 'The Visitor' DVD is not provided within this manual. Please refer to the packaging or contact the retailer for details on warranty coverage and support options.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0015OKWKI

More documents and user manuals: **https://manuals.plus/**