**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**DURACELL D301/386B**

# DURACELL D301/386B 1.5V Silver Oxide Watch/Calculator Battery Instruction Manual

Model: D301/386B (OP-43857)

## 1. Introduction

This manual provides essential information for the safe and effective use of your DURACELL D301/386B 1.5V Silver Oxide button cell batteries. Please read these instructions carefully before installation and retain them for future reference. These batteries are designed for use in various small electronic devices such as watches and calculators.

## 2. Product Overview

The DURACELL D301/386B is a 1.5-volt silver oxide button cell battery, also known by model numbers SR43 and SR43W. This battery is specifically engineered to provide reliable power for devices requiring a compact, long-lasting energy source. This product typically comes in a pack of six batteries.

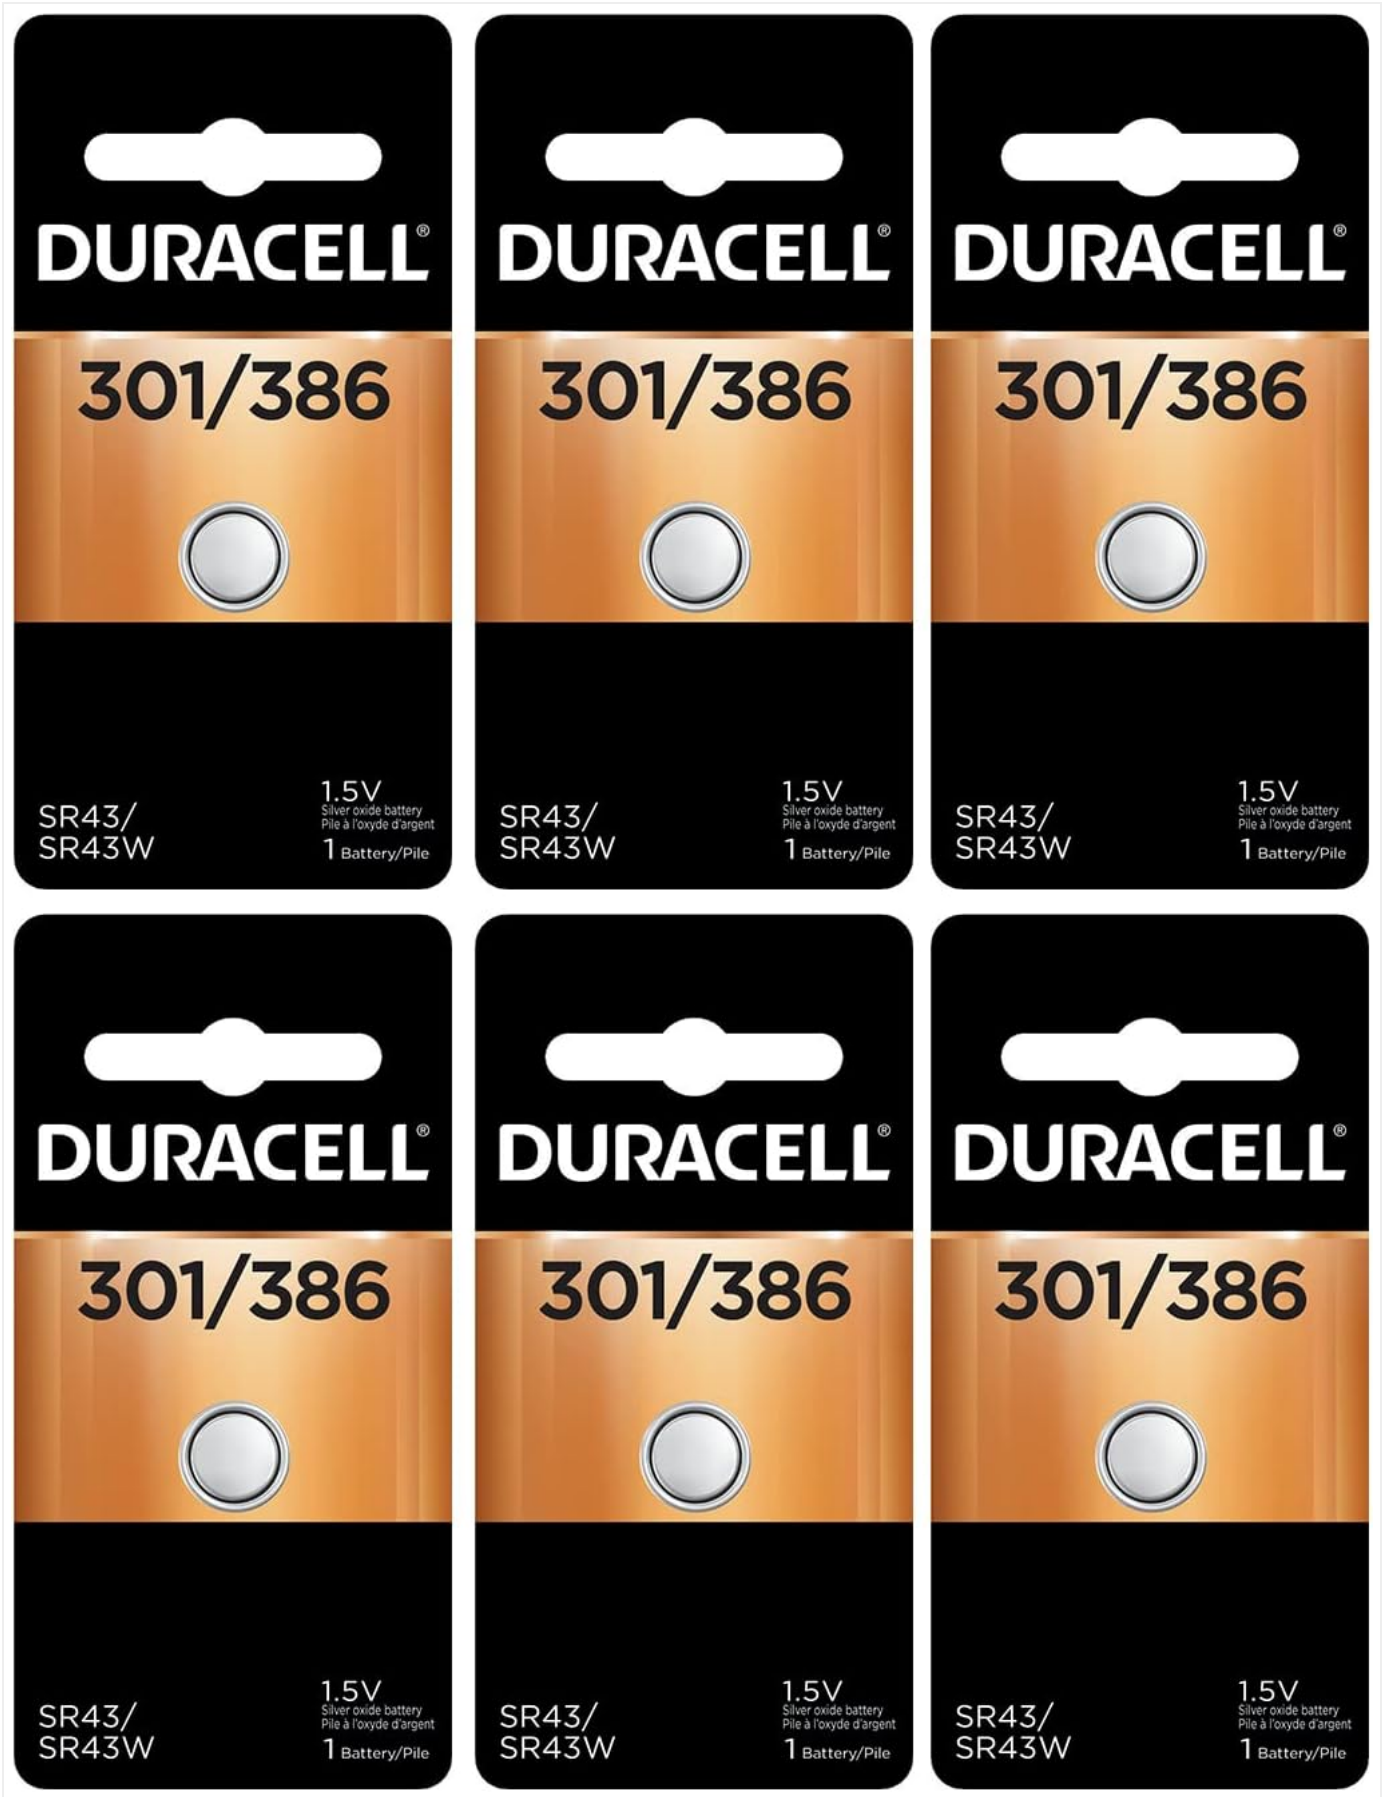


*This image displays a pack of six Duracell D301/386B 1.5V Silver Oxide button cell batteries, each individually packaged. The packaging clearly shows the Duracell brand, battery model numbers 301/386 and SR43/SR43W, and the 1.5V silver oxide composition.*

## 3. Safety Information

Please observe the following safety precautions to prevent injury or damage:

- **Keep out of reach of children:** Button cell batteries can be swallowed and cause serious injury or death. Seek immediate medical attention if ingested.
- **Do not recharge:** These batteries are not rechargeable. Attempting to recharge them may cause leakage, fire, or explosion.
- **Do not disassemble or expose to fire:** Disassembly or exposure to high temperatures can lead to leakage, fire, or explosion.
- **Observe correct polarity:** Always insert batteries with the correct positive (+) and negative (-) terminals aligned as indicated in your device. Incorrect insertion can cause damage.
- **Avoid short-circuiting:** Do not short-circuit the battery terminals.
- **Proper disposal:** Dispose of used batteries according to local regulations. Do not dispose of in household waste.
- **Avoid contact with skin and eyes:** In case of leakage, avoid contact with skin and eyes. If contact occurs, rinse immediately with plenty of water and seek medical advice.

## 4. Installation and Setup

To install or replace the DURACELL D301/386B battery in your device, follow these general steps. Always refer to your device's specific instruction manual for detailed guidance, as procedures may vary.

1. **Identify Battery Compartment:** Locate the battery compartment on your device. This is often on the back or underside and may be secured with small screws or a latch.
2. **Open Compartment:** Carefully open the battery compartment using the appropriate tool (e.g., a small screwdriver for screws, or a thin tool to pry open a latch).
3. **Remove Old Battery:** Gently remove the old battery, noting its orientation (positive and negative terminals).
4. **Insert New Battery:** Insert the new DURACELL D301/386B battery, ensuring the positive (+) side faces the correct direction as indicated by your device's markings. The positive side is typically the flat, wider side of the button cell.
5. **Close Compartment:** Securely close the battery compartment. If screws were removed, fasten them back in place.
6. **Test Device:** Power on your device to confirm proper battery installation and functionality.

*Note: Some devices, such as certain fitness trackers or watches, may require specialized tools or professional assistance for battery replacement.*

## 5. Operating Instructions

Once installed, the DURACELL D301/386B battery will power your device. These silver oxide batteries are known for their stable voltage output and long shelf life, making them suitable for devices requiring consistent power.

- **Expected Lifespan:** The lifespan of the battery will vary depending on the device and its usage patterns. For example, in fitness trackers, these batteries typically last between 4 to 6 months, while in some bike computers, they may last up to 1 year.
- **Storage:** Store unused batteries in their original packaging in a cool, dry place at room temperature. Avoid extreme temperatures and humidity.
- **Disposal:** Replace batteries when your device indicates low power or ceases to function correctly. Dispose of used batteries responsibly.

## 6. Maintenance

Minimal maintenance is required for these batteries. However, following these guidelines can help ensure optimal performance and longevity of your device:

- **Clean Contacts:** Periodically inspect the battery contacts in your device. If they appear dirty or corroded, gently

clean them with a dry cloth or a cotton swab. Do not use abrasive materials or liquids.

- **Check for Leakage:** If you notice any leakage from the battery, remove it immediately and dispose of it safely. Clean the battery compartment thoroughly before installing a new battery.
- **Avoid Extreme Conditions:** Do not expose your device or batteries to extreme temperatures (hot or cold) or high humidity, as this can affect battery performance and lifespan.

## 7. Troubleshooting

If your device is not functioning correctly after battery installation, consider the following troubleshooting steps:

- **Device Not Powering On:**
  - Ensure the battery is inserted with the correct polarity (+/-).
  - Check that the battery compartment is securely closed.
  - Verify that the battery contacts in the device are clean and free of debris or corrosion.
  - Confirm that the battery is new and not depleted.
- **Short Battery Life:**
  - The battery may be old stock. Check the manufacturing or expiry date on the packaging if available.
  - The device itself might be consuming more power than expected. Consult your device's manual.
  - Ensure the battery is stored correctly before use.
- **Intermittent Functionality:**
  - Re-open the battery compartment and re-seat the battery to ensure a firm connection.
  - Clean battery contacts as described in the Maintenance section.

## 8. Specifications

| | |
|---|---|
| **Brand** | DURACELL |
| **Model Numbers** | D301/386B, SR43, SR43W (Item model number: OP-43857) |
| **Battery Cell Composition** | Silver Oxide |
| **Voltage** | 1.5 Volts |
| **Unit Count** | 6 Count (Pack of 1) |
| **Recommended Uses** | Watches, Calculators, Fitness Trackers, and other small electronic devices |
| **Item Weight (Pack)** | 0.48 ounces |
| **Package Dimensions** | 3.58 x 2.05 x 1.06 inches |

## 9. Warranty and Support

For warranty information or product support, please refer to the official DURACELL website or contact your retailer. Specific warranty terms may vary by region and purchase location.
You can visit the official DURACELL store for more information:DURACELL Store

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0017UEK4E**

More documents and user manuals: **https://manuals.plus/**