Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NOMA/INLITEN-IMPORT 4036-88

NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set

Model: 4036-88 | Indoor/Outdoor Use

Introduction

This instruction manual provides important information for the safe and effective use of your NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set. Designed for both indoor and outdoor applications, this light set offers vibrant illumination for various decorative purposes. Please read this manual thoroughly before installation and retain it for future reference.

Important Safety Instructions

When using electrical products, basic precautions should always be followed, including:

- Read and follow all safety instructions.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure product wiring with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Disconnect the product from power when leaving the house, when retiring for the night, or if left unattended.
- This is an electrical product, not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the

fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit condition may be present and the product should be discarded.

Package Contents

Verify that all components are present and in good condition:

- 1 x NOMA/INLITEN-IMPORT 35-Count Multi Color Light Set (Model: 4036-88)
- Spare Bulbs
- Spare Fuse



Image: The product packaging for the NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set, displaying the brand, count, and multi-color description.



Image: The coiled light string, power plug, and a small plastic bag containing spare bulbs and a fuse, as included in the package.

Setup and Installation

Follow these steps to set up your light set:

1. **Unpack:** Carefully remove the light set from its packaging.
2. **Inspect:** Examine the light set for any damage to the bulbs, wires, or plug. Do not use if damaged.
3. **Placement:** Determine the desired location for your lights. Ensure the location is suitable for either indoor or outdoor use as marked on the product.
4. **Secure:** Secure the light string using appropriate clips or ties. Avoid using staples or nails that could damage the wiring. Ensure bulbs are not resting on the supply cord.
5. **Connect:** Plug the light set into a standard electrical outlet. For outdoor use, ensure the outlet is GFCI protected.

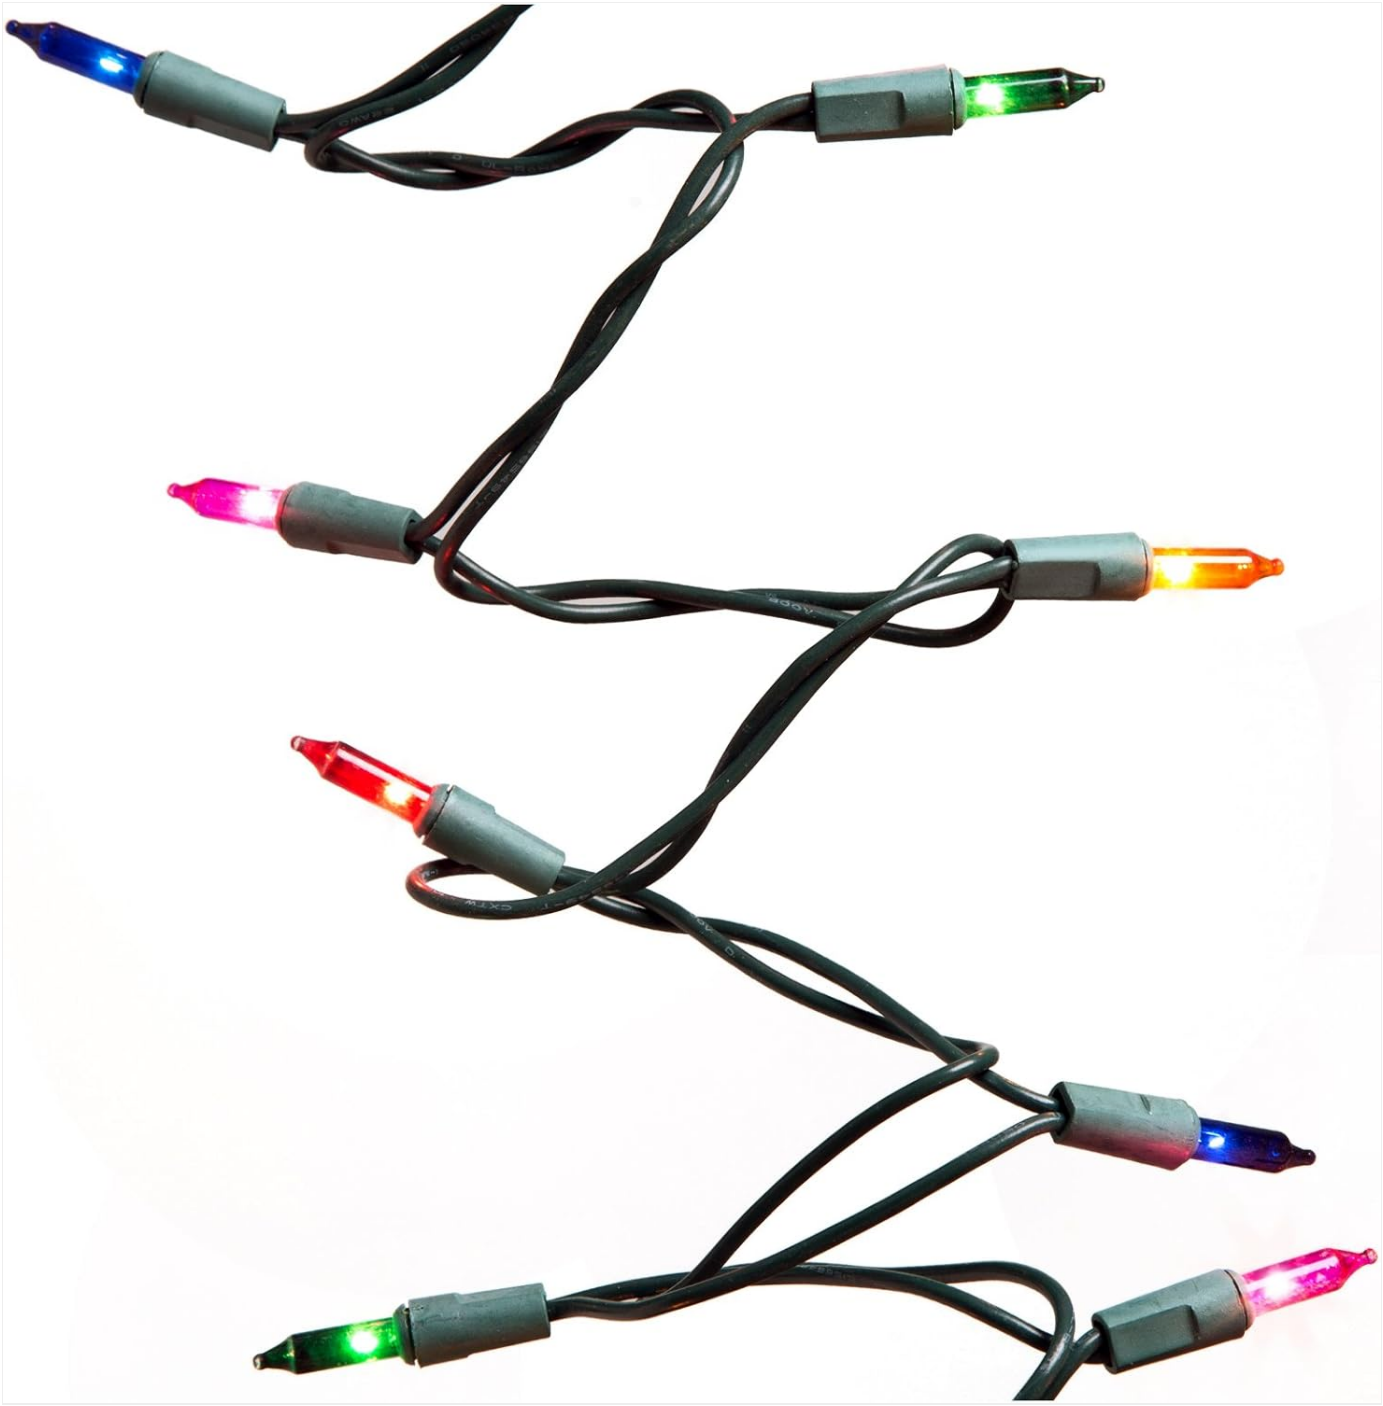


Image: A segment of the multi-color light string, showing the individual bulbs spaced along the green wire, ready for installation.

Operating Instructions

The NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set operates simply by plugging it into a power source. There are no complex controls.

- **Power On:** Plug the light set into a compatible electrical outlet. The lights will illuminate.
- **Power Off:** Unplug the light set from the electrical outlet to turn off the lights.



Image: A close-up view of five illuminated mini-bulbs in various colors (green, orange, red, blue, pink), demonstrating the product's multi-color output.



Image: Another detailed view of five brightly lit mini-bulbs, showcasing the vibrant colors and standard bulb design.

Maintenance

Proper maintenance ensures the longevity and safe operation of your light set.

- **Bulb Replacement:** If a bulb burns out, unplug the light set. Gently pull the faulty bulb straight out from its socket. Insert a new spare bulb (provided) into the socket. Ensure the replacement bulb has the correct voltage and wattage.
- **Fuse Replacement:** If the entire string goes out, the fuse may have blown. Unplug the light set. Locate the fuse access cover on the plug. Slide the cover open and carefully remove the old fuse. Insert a new spare fuse (provided) of the correct rating (refer to product marking). Close the fuse cover.
- **Cleaning:** Disconnect from power before cleaning. Wipe the lights and wires with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Before storing, carefully coil the light set to prevent tangling and damage to the wires and bulbs. Store in a cool, dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet.	Check the power outlet with another device. Ensure the plug is fully inserted.
Lights do not turn on.	Blown fuse in the plug.	Replace the fuse as described in the Maintenance section.
Some lights are out.	One or more bulbs are burnt out or loose.	Replace burnt-out bulbs with spare bulbs. Ensure all bulbs are securely seated in their sockets.
Lights flicker.	Loose connection or faulty bulb.	Check all bulb connections. Replace any flickering bulbs.

Specifications

Technical details for the NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set:

Feature	Detail
Model Number	4036-88
Brand	NOMA/INLITEN-IMPORT
Light Count	35
Light Color	Multicolor
Indoor/Outdoor Usage	Indoor, Outdoor
Light Source Type	Mini Incandescent
Power Source	Corded Electric
Voltage	14 Volts
Wattage	7 watts
Lighted Length	8.5 feet (2.59 meters)
Total Length	10.5 feet
Item Weight	3.2 ounces (0.2 pounds)
UPC	798167709132, 052088054505

Warranty and Support

For information regarding warranty coverage or technical support for your NOMA/INLITEN-IMPORT 35-Count Multi Color Christmas Light Set, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Specific warranty terms may vary by region and retailer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B001AW2DAW

More documents and user manuals: **https://manuals.plus/**