Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Briggs & Stratton 691340

Briggs & Stratton 691340 Screw Instruction Manual

Genuine OEM Replacement Part for Small Gasoline Engines

1. Product Overview

The Briggs & Stratton 691340 Screw is a genuine Original Equipment Manufacturer (OEM) replacement part designed for use in various small gasoline engines. This screw is engineered to provide a precise fit and reliable performance, ensuring the longevity and proper function of your Briggs & Stratton engine. It directly replaces older part numbers such as 94231 and 691340.



Figure 1: The Briggs & Stratton 691340 Screw, a genuine OEM replacement part.

Key Features:

- Briggs & Stratton 691340
- Screw Replacement
- Genuine Briggs & Stratton Part
- New OEM Part
- Replaces Old Briggs # 94231, 691340

2. Specifications

Model Number	691340
Manufacturer	Briggs & Stratton
Product Dimensions	4 x 5 x 0.25 inches

Item Weight	0.8 ounces
Material	Stainless Steel (Exterior Finish)
Head Style	Flat
Thread Size	1/4-20 UNC

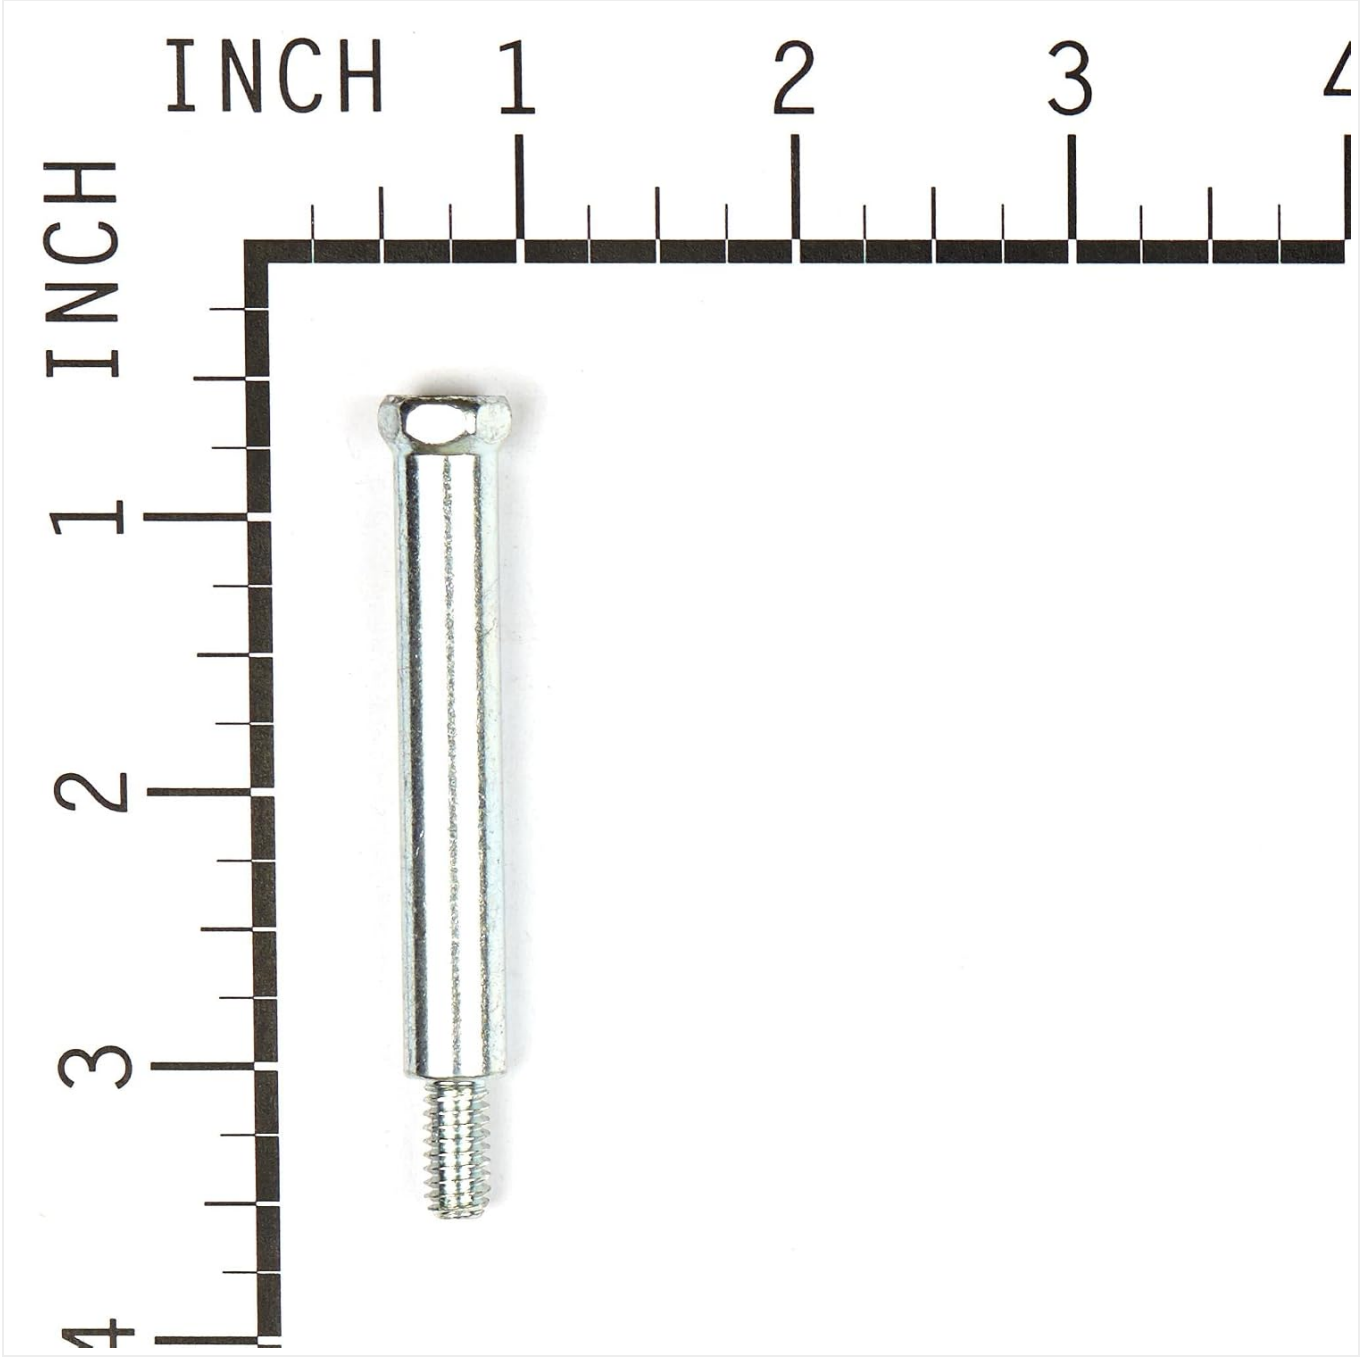


Figure 2: Dimensions of the Briggs & Stratton 691340 Screw.

3. Installation Guidelines

This screw is a direct replacement part. Proper installation is crucial for the safe and effective operation of your equipment. Always refer to your specific engine or equipment's service manual for detailed, model-specific instructions and torque specifications.

General Replacement Steps:

1. **Safety First:** Ensure the engine is turned off, cooled down, and any spark plug wires are disconnected to prevent accidental starting.
2. **Identify the Location:** Locate the screw that needs replacement on your engine or equipment. This screw is commonly used for muffler attachment or other structural components.
3. **Remove Old Screw:** Carefully remove the old or damaged screw using appropriate tools. If the screw is seized, apply penetrating oil and allow it to work before attempting removal.
4. **Clean Area:** Clean any debris, rust, or old threadlocker from the threaded hole and surrounding area.
5. **Install New Screw:** Insert the new Briggs & Stratton 691340 screw into the clean threaded hole. Hand-tighten first to ensure proper thread engagement.
6. **Tighten to Specification:** Using a torque wrench, tighten the screw to the torque specification provided in your equipment's service manual. Overtightening can strip threads, while undertightening can lead to loosening during operation.
7. **Verify Fit:** After tightening, ensure the component secured by the screw is firmly in place and there is no wobble or excessive play.

If you are unsure about the installation process, it is recommended to consult a qualified service technician.

4. Maintenance and Care

While the screw itself requires minimal maintenance, it is good practice to periodically inspect all fasteners on your engine and equipment. Vibrations during operation can cause screws to loosen over time. Regularly check the tightness of the 691340 screw and other critical fasteners to prevent components from becoming loose or detached, which could lead to damage or unsafe operating conditions.

5. Importance of Genuine Parts

Using genuine Briggs & Stratton OEM parts ensures compatibility, reliability, and optimal performance for your engine. Counterfeit or non-OEM parts may not meet the same quality standards, potentially leading to premature wear, improper fit, or even damage to your equipment.



Figure 3: Briggs & Stratton emphasizes the use of genuine OEM parts for quality assurance.



Figure 4: Illustration highlighting the difference between genuine and non-genuine parts.



Figure 5: Official logo for Genuine Briggs & Stratton Parts.

6. Support and Warranty

For further assistance, technical support, or information regarding warranty coverage for genuine Briggs & Stratton parts, please visit the official Briggs & Stratton website or contact their customer service department. Always provide your engine model and serial number when seeking support to ensure accurate assistance.

Official Briggs & Stratton Website: www.briggsandstratton.com

© 2024 Briggs & Stratton. All rights reserved.
This manual is for informational purposes only. Always consult a qualified technician for complex repairs.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B002WNWCCW

More documents and user manuals: **https://manuals.plus/**