Manuals+
Q & A | Deep Search | Upload

Logitech 910-001799

Logitech M570 Wireless Trackball Mouse User Manual

Model: 910-001799 | Brand: Logitech

Introduction

The Logitech M570 Wireless Trackball Mouse offers an ergonomic design with a sculpted right-hand shape, providing comfortable control for extended periods. This trackball mouse eliminates the need to move your arm to control the cursor, as control is placed conveniently under your thumb. It is compatible with both Apple Mac and Microsoft systems, utilizing a USB Unifying Receiver for seamless wireless connectivity.

Image: Top-down view of the Logitech M570 Wireless Trackball Mouse, showcasing its ergonomic shape and blue trackball.

What's in the Box

- Logitech M570 Wireless Trackball Mouse
- Logitech Unifying Receiver
- 1 AA Battery (pre-installed or included)
- User Documentation

Setup

1. Install Battery

The Logitech M570 requires one AA battery. The battery compartment is located on the underside of the mouse. Open the compartment, insert the AA battery, and close the cover. The mouse is designed for long battery life, up to 18 months, with a convenient battery indicator to alert you when replacement is needed.

2. Connect USB Unifying Receiver

Locate the tiny Logitech Unifying Receiver. This receiver is designed to stay in your laptop's USB port. Plug the receiver into an available USB port on your computer. The mouse should automatically connect. If not, ensure the mouse's power switch (located on the underside) is in the "ON" position.

3. Compatibility

The Logitech M570 is compatible with a wide range of operating systems, including Apple Mac and Microsoft Windows. No additional drivers are typically required for basic functionality, but Logitech's software can be downloaded for advanced customization of buttons.

Operating Instructions

1. Trackball Control

Unlike traditional mice, the M570's cursor movement is controlled by the blue trackball located on the left side, operated by your thumb. Simply roll your thumb across the trackball to move the cursor on the screen. This allows your hand to remain stationary, reducing arm and wrist movement.

2. Button Functions

- **Left-Click Button:** Standard primary click function.
- **Right-Click Button:** Standard secondary click function.
- **Scroll Wheel:** Located between the left and right-click buttons, used for vertical scrolling through documents and web pages.
- **Back/Forward Buttons:** Two easy-to-reach buttons located near the trackball, typically used for navigating back and forward in web browsers or file explorers. These can often be customized via Logitech software.

3. Ergonomic Benefits

The sculpted shape of the M570 supports your hand in a natural, relaxed position, minimizing strain on your wrist and forearm. This design is particularly beneficial for users who experience discomfort with traditional mice or spend long hours at the computer.

Maintenance

1. Battery Replacement

When the battery indicator light (usually located near the scroll wheel) signals low power, it's time to replace the AA battery. Open the battery compartment on the underside, remove the old battery, insert a new AA battery, and close the cover. Ensure the mouse is switched off before replacing the battery to conserve power.

2. Cleaning the Trackball

Over time, dust and debris can accumulate around the trackball, affecting its smoothness and precision. To clean, gently push the trackball out from the underside of the mouse. Use a soft, lint-free cloth or a cotton swab to clean the trackball itself and the three small sensor points inside the trackball cavity. Reinsert the trackball until it clicks securely into place.

Troubleshooting

- **No Cursor Movement:**
  - Ensure the mouse is powered on (switch on underside).
  - Check battery level; replace if necessary.
  - Verify the USB Unifying Receiver is securely plugged into a working USB port.
  - Try plugging the receiver into a different USB port.
  - Clean the trackball and sensor points as described in the Maintenance section.
- **Intermittent Connection:**
  - Ensure the mouse is within range of the receiver (typically up to 10 meters).
  - Avoid placing the mouse or receiver near large metal objects or other wireless devices that might cause interference.
  - Re-pair the mouse with the Unifying Receiver using Logitech's Unifying Software (available for download from Logitech's website).
- **Buttons Not Responding:**
  - Check battery level.
  - Ensure the mouse is connected.
  - If using custom settings, check Logitech Options software for configuration issues.

Specifications

Feature	Detail
Brand	Logitech
Model Number	910-001799
Product Dimensions	5.71 x 1.77 x 3.74 inches
Item Weight	5 ounces
Connectivity Technology	USB Wireless (Unifying Receiver)
Movement Detection Technology	Trackball
Color	Dark Gray
Batteries Required	1 D battery (included)
Special Features	Wireless, Programmable Buttons, Ergonomic Design, Battery Indicator

Warranty and Support

The Logitech M570 Wireless Trackball Mouse comes with a 3-year limited hardware warranty. For detailed warranty information, technical support, or to download the latest software and drivers, please visit the official Logitech support website.
An official user manual in PDF format is available for download:Download User Manual (PDF)

© 2023 Logitech. All rights reserved.

Related Documents - 910-001799

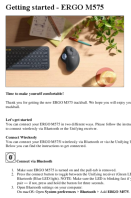	Logitech ERGO M575 Trackball: Getting Started Guide A comprehensive guide to setting up and using the Logitech ERGO M575 ergonomic trackball. Learn about Bluetooth and Unifying Receiver connectivity, key features like trackball navigation and custom buttons, and power management.
	Logitech Marathon Mouse M705: Getting Started Guide & Features Comprehensive guide to setting up and using the Logitech Marathon Mouse M705, including features, troubleshooting, and Unifying receiver setup.
	Logitech MX Vertical Advanced Ergonomic Mouse - Getting Started Guide A comprehensive guide to setting up and using the Logitech MX Vertical advanced ergonomic mouse, covering connection methods, key features, power management, and additional information.
	Logitech Wireless Wave Combo MK550: Getting Started Guide Comprehensive guide to setting up and using the Logitech Wireless Wave Combo MK550. Learn about keyboard and mouse features, battery management, and troubleshooting for this ergonomic wireless set.
	Logitech Wireless Mouse M705 Getting Started Guide User guide for the Logitech Wireless Mouse M705, covering setup, features, and troubleshooting. Learn how to connect your mouse and optimize its performance with the Unifying receiver.
	Logitech Lift Vertical Ergonomic Mouse: User Manual and Features A comprehensive user manual for the Logitech Lift Vertical Ergonomic Mouse. Learn about its ergonomic design, connectivity options (Bluetooth, Logi Bolt), SmartWheel functionality, Logitech Options+ software, and how to set it up for Windows, macOS, and iPadOS. Covers both standard and left-handed variants.